

# IMPORTANT SAFETY INSTRUCTIONS



**READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE**



Adult assembly required. Keep unassembled parts out of reach of children.



This ride-on truck is intended for use by children age from 3 to 8 years old. Not suitable for children under 3 years old.



Adult supervision required. On site adult supervision must be provided for children of all ages and at all times when riding. Never leave a child unattended.



Charge for 12 hours before first use. Use only the battery and charger from or approved by the manufacturer.



Max rider weight:  
132 lbs / 60 kg.

## SAFETY PRECAUTIONS & WARNINGS

- Parental and adult responsibility and supervision necessary. Make sure that young riders understand all warnings, cautions and instructions, and assure that they are able to safely use the car. We do not cover physical damage due to negligent care and extreme riding. Use caution and ride at your own risk.
- **DO NOT** use in wet or icy weather and never immerse in water, as the electrical and drive components could be damaged or create other possibly unsafe conditions and void the warranty.
- **DO NOT** use on roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water.
- **DO NOT** use at night or when visibility is limited.
- **DO NOT** allow hands, all body parts, clothing, or similar articles to come in contact with moving parts or wheels while the motor is running.

- Use in open spaces and flat areas, avoid sudden surface changes or high traffic areas. Keep safely away from motor vehicle traffic at all times.
- Use on level ground only. Do not drive into loose dirt, mud, sand, fine gravel, or on wet surfaces.
- Follow all local road laws. Use only where permitted. Never behave in a way that could cause danger to yourself or other road users.
- Never use the car if any components are damaged or show signs of fatigue, as they can cause sudden failure, posing very high safety risks.
- Carefully inspect the car components for early signs of wear or fatigue, such as cracks, scratches, deformed shape or altered paint.
- Before using, check and make sure that the braking system is functioning properly, and that you understand the safety warnings.
- Make sure that all parts of the car are properly installed and not damaged.
- Prolonged exposure to UV rays and rain may damage the enclosure materials. store indoors when not in use.
- Limbs, hair, and clothing can get caught in moving parts. Always wear shoes, keep limbs away from moving parts. Never ride barefooted or in sandals.
- Never modify the electric circuit system. Tampering with the electric system may cause a shock, fire or explosion or may permanently damage the system.
- Never attempt any maintenance or repair on the car unless you are experienced and fully informed in what you are doing. Mistaken actions can pose serious risks to your safety.
- Use good common sense at all times.
- Contains small parts. Keep children away during assembly.
- Dispose of all packaging materials properly. Keep away from children and pets.
- **DO NOT** use the car in any other manner than the way intended as described in this User Manual.

## BATTERY SAFETY

- **DO NOT** incinerate or expose the battery to high temperatures, as they may explode in a fire.
- **DO NOT** submerge the battery in water, and do not allow the battery terminals to get wet. Doing so may cause overheating, bursting, or ignition of the battery.
- **DO NOT** deform, modify, disassemble or apply solder directly to the battery.
- **DO NOT** charge, discharge, or use the battery if any battery or battery cell is damaged in any way.
- **DO NOT** crush, short circuit, or expose the battery to any other source of ignition.
- **DO NOT** reverse connection, disassemble, repair, or try to open the battery.
- **DO NOT** allow direct contact between battery terminals. Fire or explosion can occur.
- **DO NOT** try to open the charger. Exposed wiring and circuitry inside case may cause electric shock.

 
- **DO NOT** drop the battery. Permanent damage to the battery could occur or cause serious injury.
- **DO NOT** allow children to handle or charge the battery.
- Always secure the battery with the bracket. Battery can fall out and cause injury if tipped over.
- Use only the provided battery and charger. Observe the specified charging conditions when charging.
- Before charging, check for wear or damage to the battery, charger, its supply cord and connectors. Do not charge if any part is damaged.
- Charge the battery before first use. When charging, keep away from heat or flammable materials. Charge in a well-ventilated, dry area only.
- The battery is intended to be charged when the ambient temperature is between 32°F~113°F/ 0°C~45°C.
- When not using for an extended period of time, charge the battery periodically. Do not allow the battery to drain completely. Store indoors when not in use.
- Remove the battery from the car before disposal. Dispose of the battery in accordance with local regulations.
- Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

# SAVE THESE INSTRUCTIONS

## Specifications

Battery Type	24V 7Ah Rechargeable
Speed	1.2~ 5.0mph / 2-8 km/h
Max Rider Weight	132 lbs / 60 kg
Charger	Input: AC 120V / Output: DC 24V 1A
Charging Time	8-12 hours
Runtime at Max. Speed	≥ 120min (under max weight of 132 lbs)
Remote Control Battery	2 x AAA batteries
Applicable Age	3 to 8 years old
Fuse	20A

# PARTS DIAGRAM

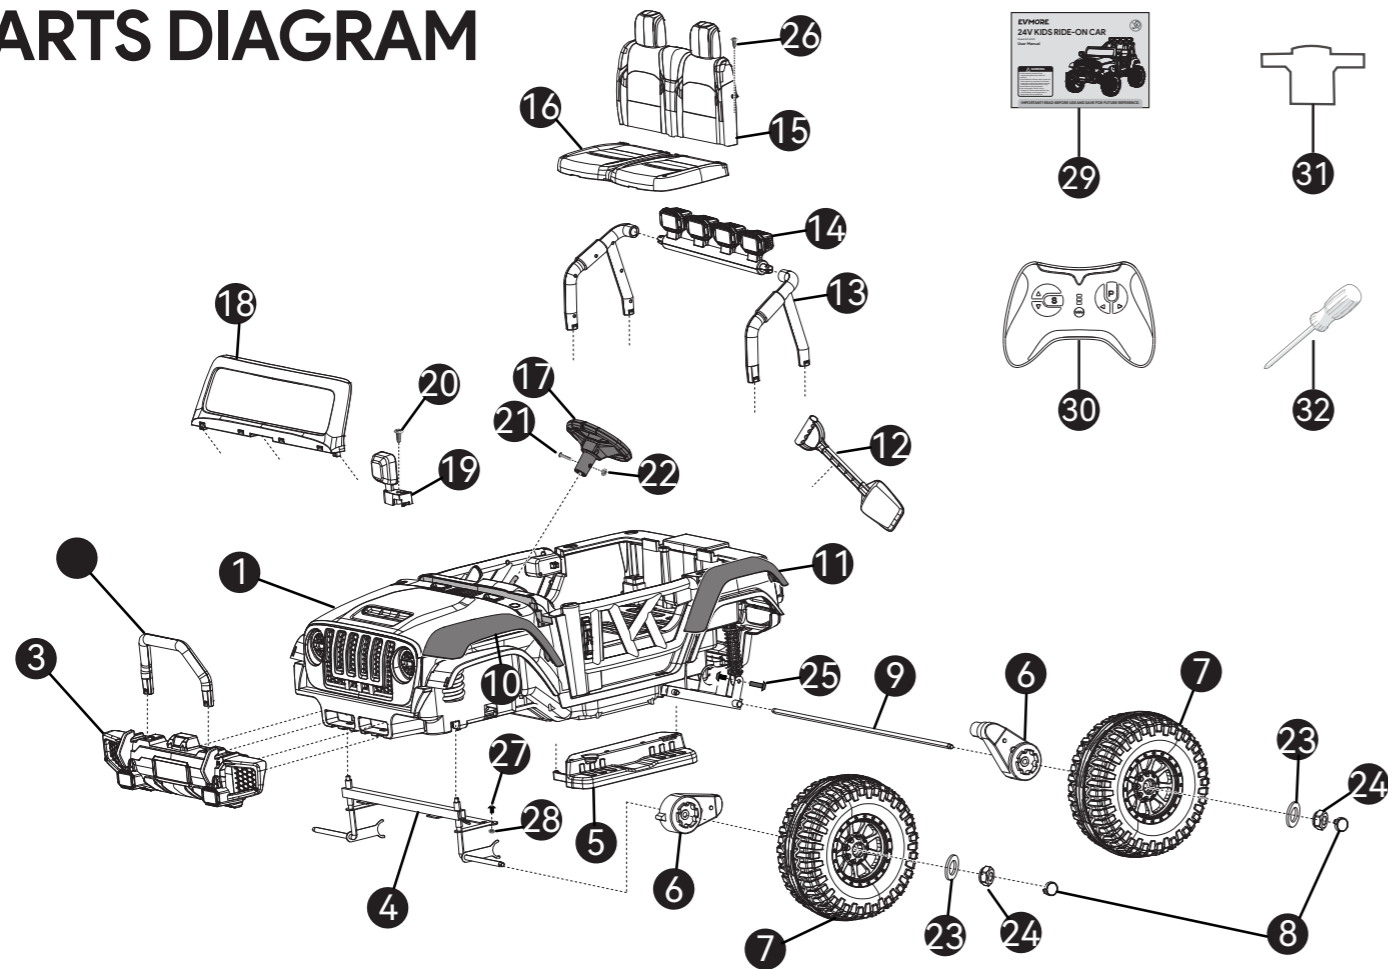

No.	Part Name	Qty.
1	Car Body	1
2	Front Bumper Bar	1
3	Front Bumper	1
4	Front Axle	1
5	Pedal (Left & Right)	1
6	Front & Rear Gearbox	4
7	Wheel	4
8	Hubcap	4
9	Backshaft	1
10	Front Mudguard (Left & Right)	2
11	Rear Mudguard (Left & Right)	2


No.	Part Name	Qty.
12	Scoop	1
13	Fog Light Frame (Left & Right)	2
14	Rear Fog Light	1
15	Backrest	1
16	Cushion	1
17	Steering Wheel	1
18	Windshield	1
19	Side Mirror (Left & Right)	2
20	M3.5*12 Flat Head Screw	2
21	M5*30 Bolt	1
22	M5 Nut	1

No.	Part Name	Qty.
23	M10 Washer	4
24	M10 Nut	4
25	M8*28 Flat Head Screw	2
26	M3*12 Flat Head Screw	2
27	M6*12 Bolt	1
28	M6 Nut	1
29	User Manual	1
30	Remote Control	1
31	Spanner	2
32	Screwdriver	1

# ASSEMBLY




 Any questions concerning assembly, contact our Customer Support via email: [support@evmorehome.com](mailto:support@evmorehome.com) for video tutorial.

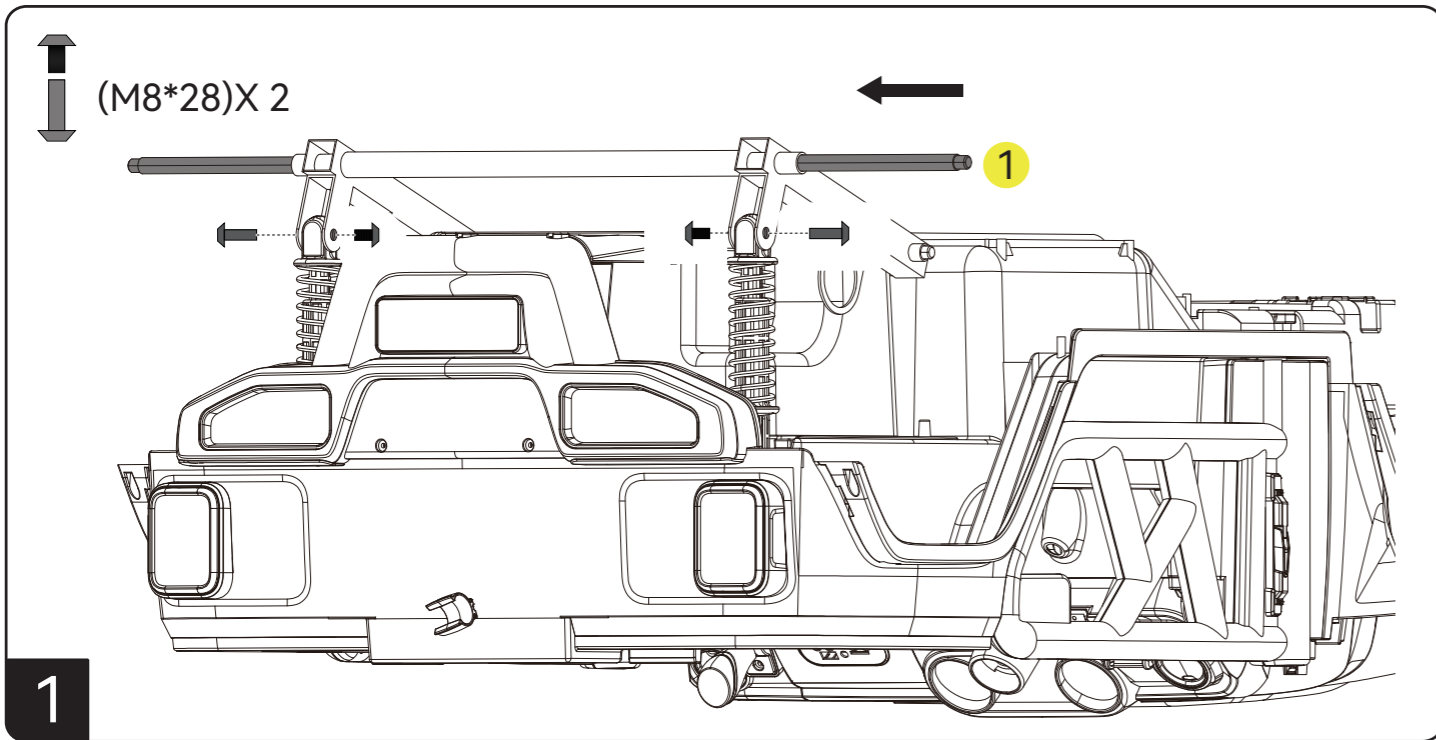

 (M3.5\*12)X 14

 
2

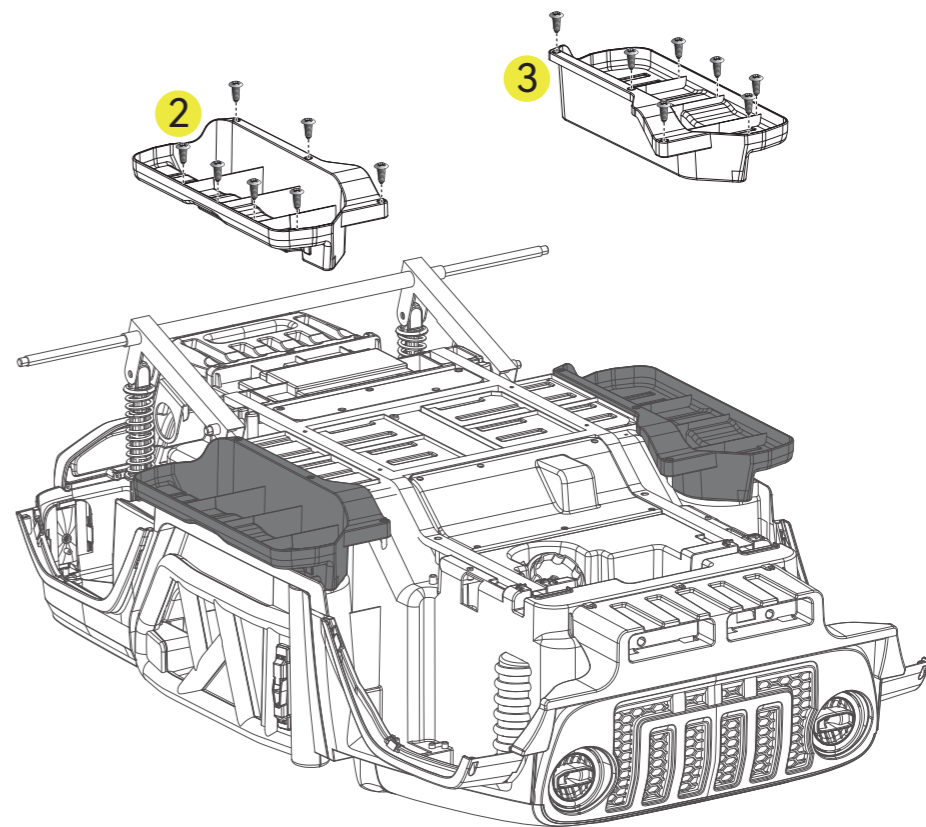

(M3.5\*12) X 8

M6\*12

 
M6

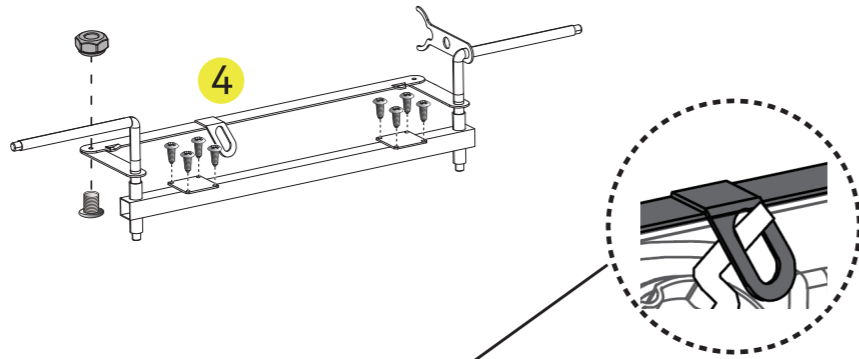


3



 
$\Phi 10 \times 4$


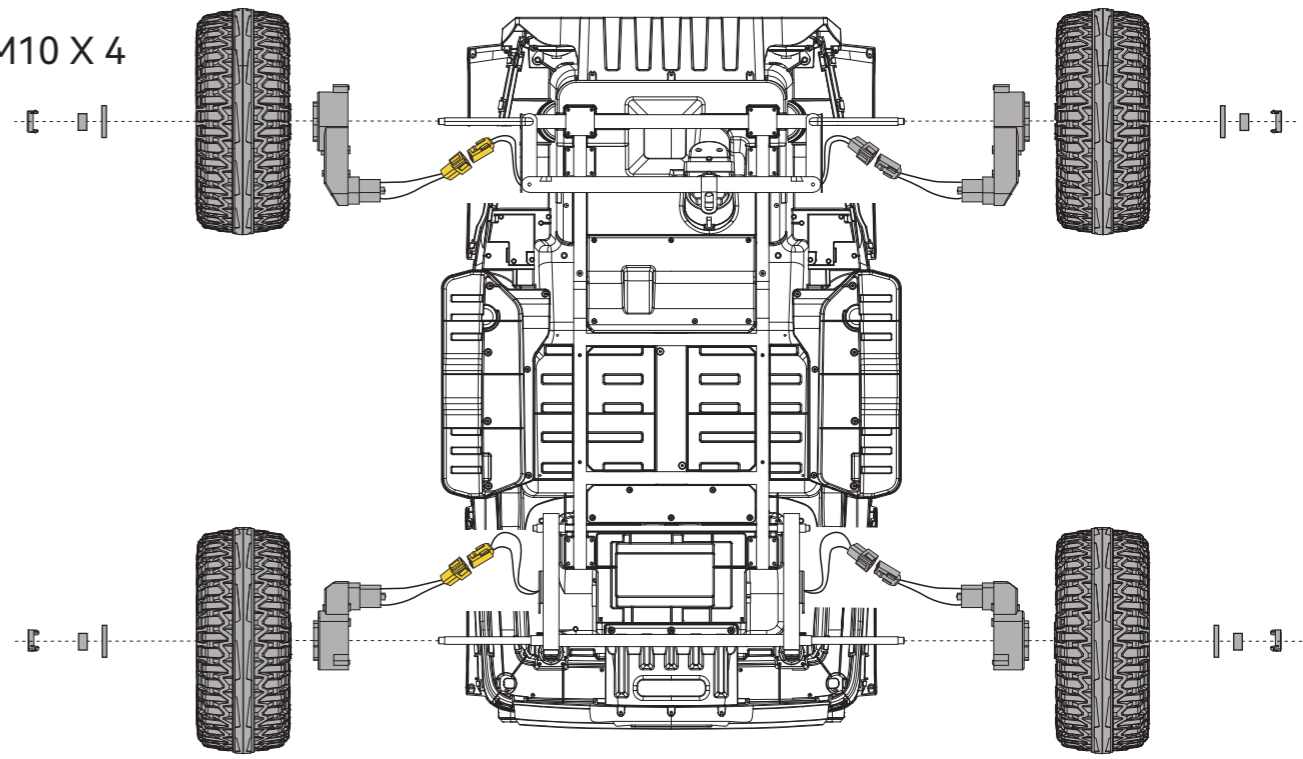
M10 X 4



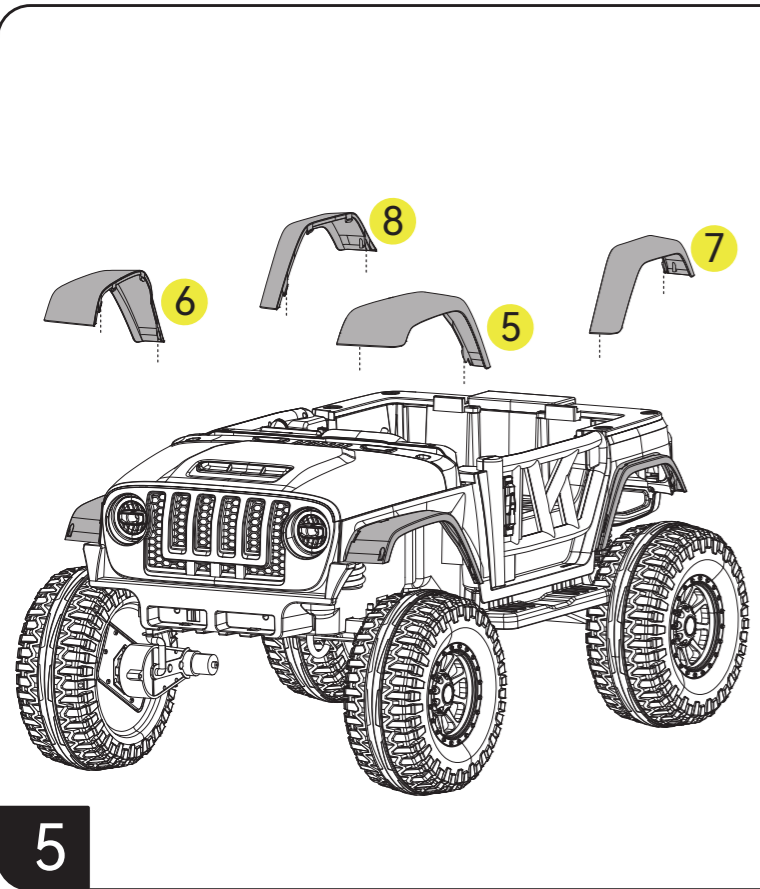 



4



      -  (3.5\*12) X 2
-  M5 X 30
-  M5

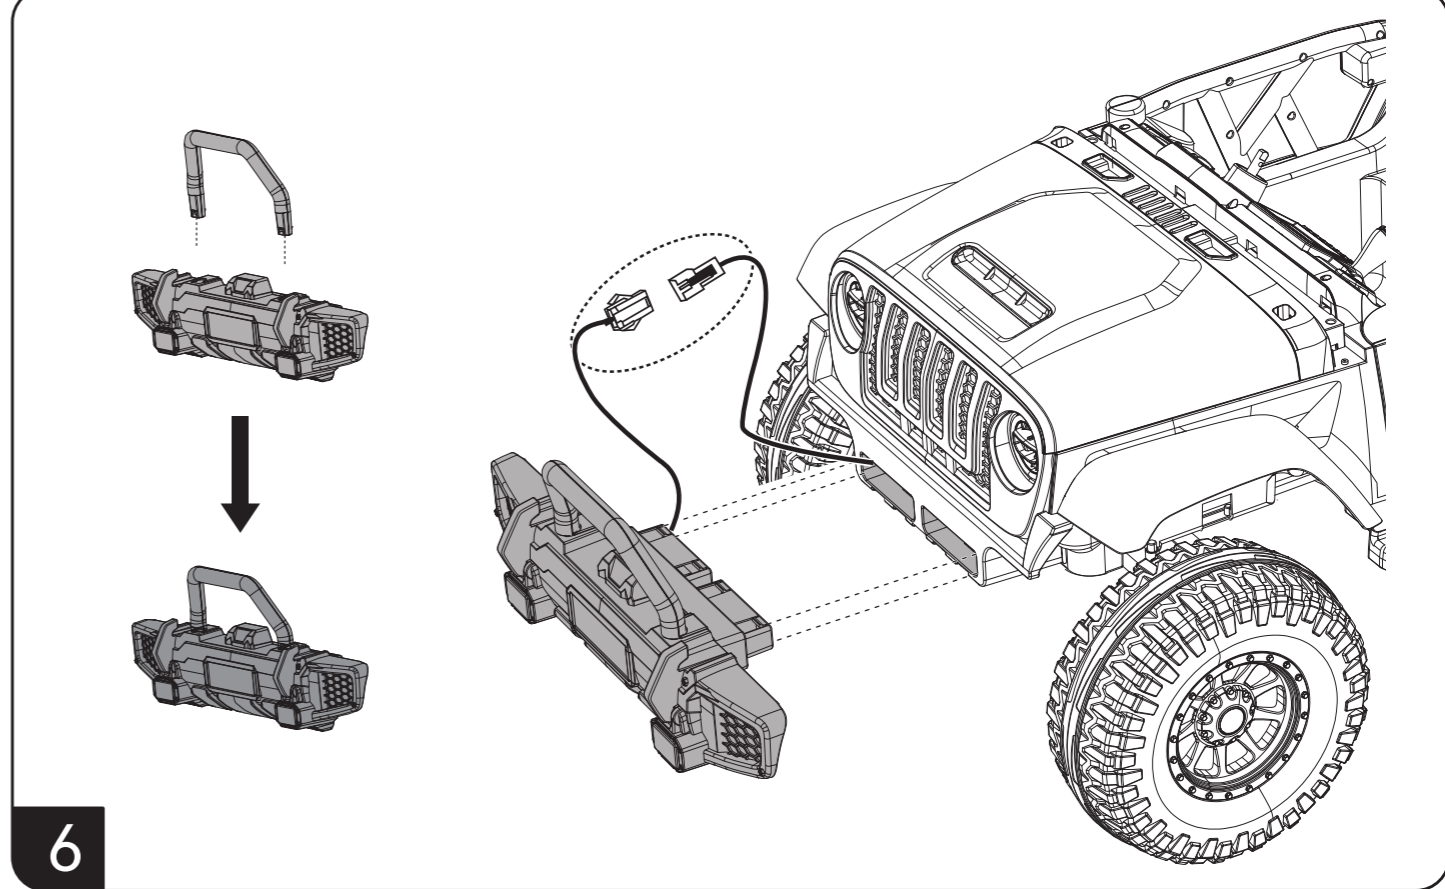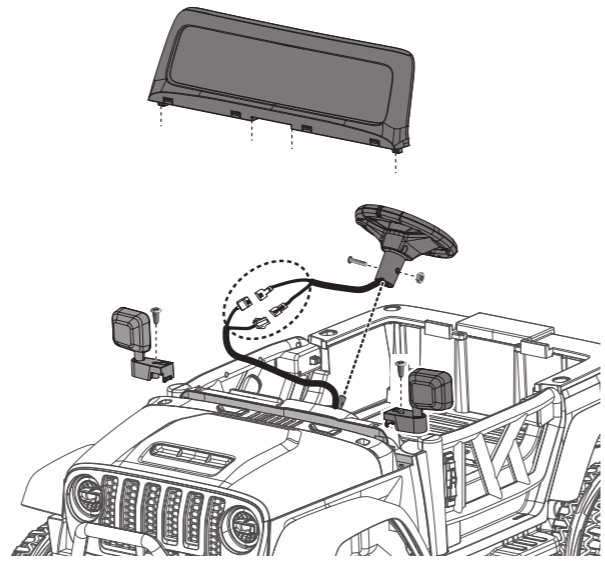

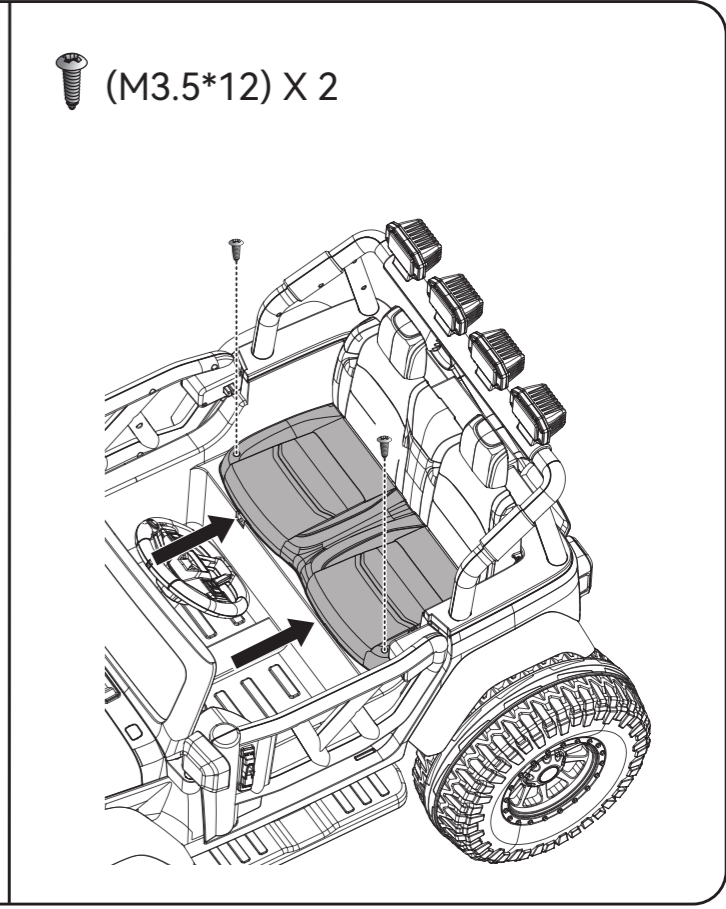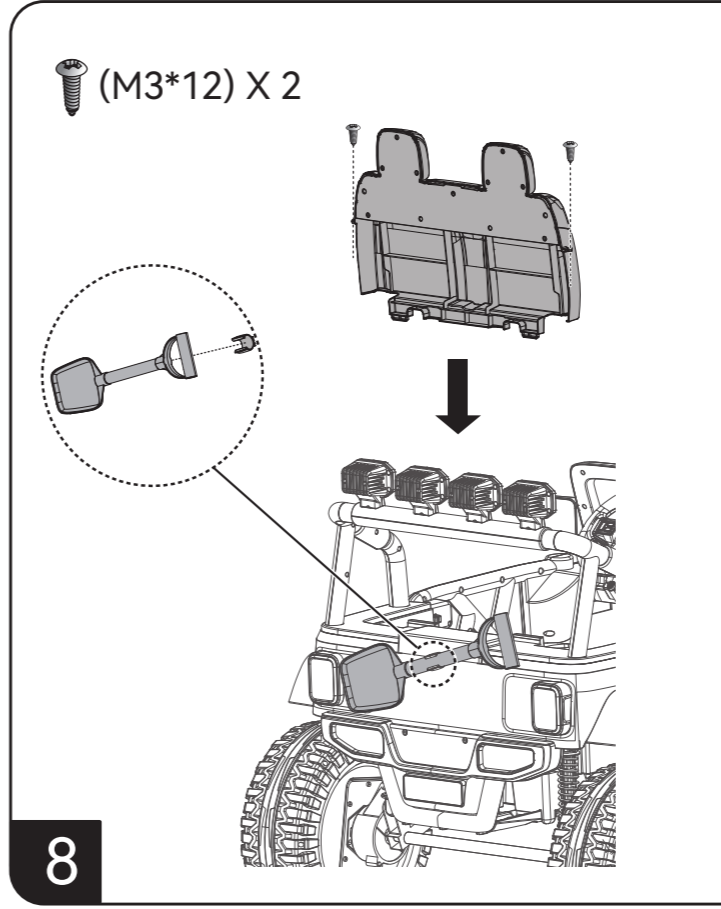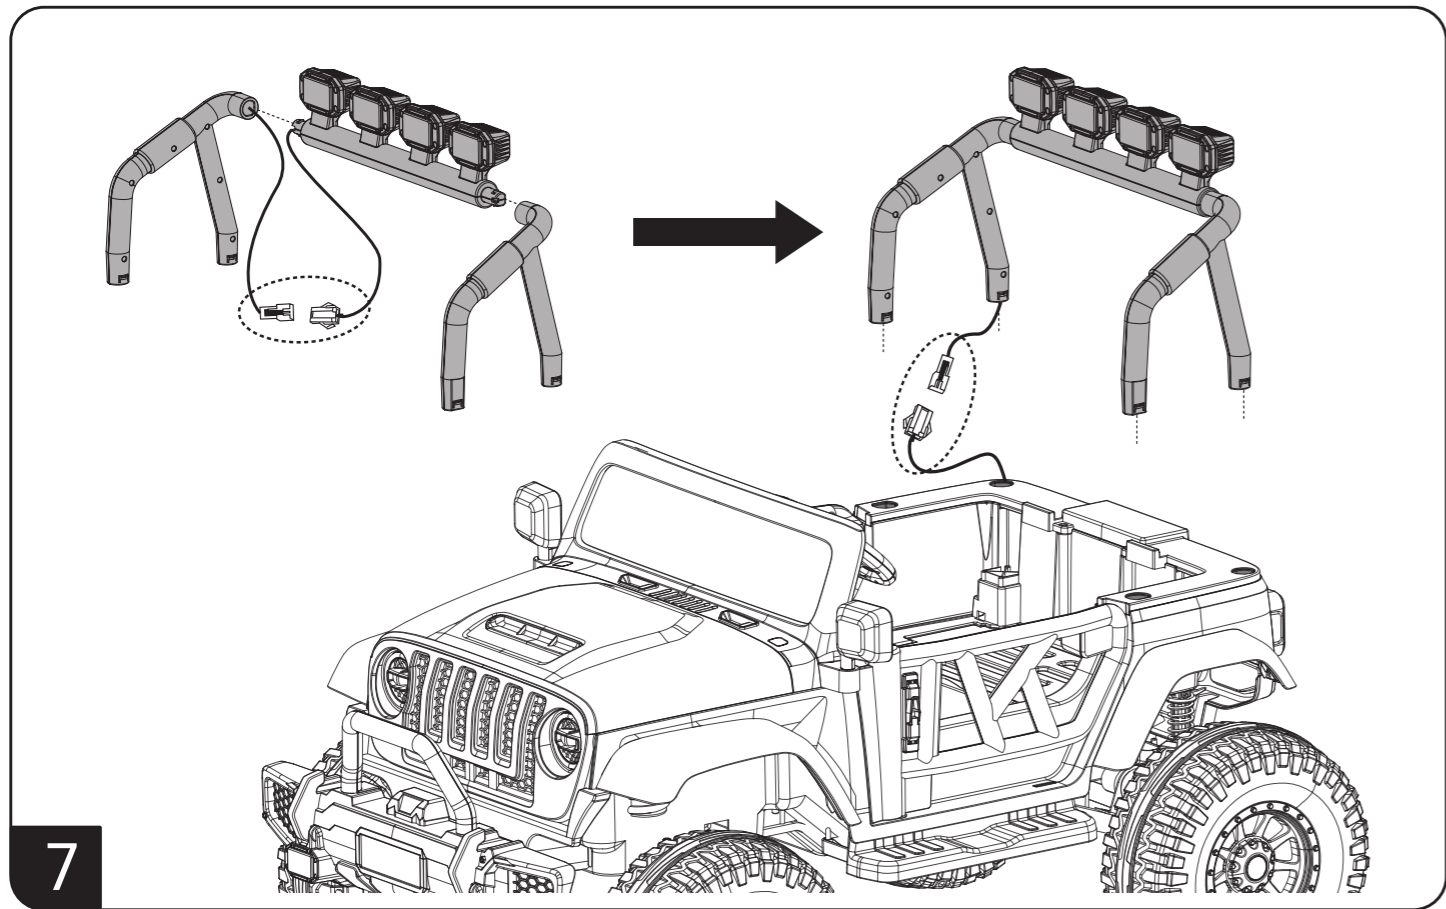


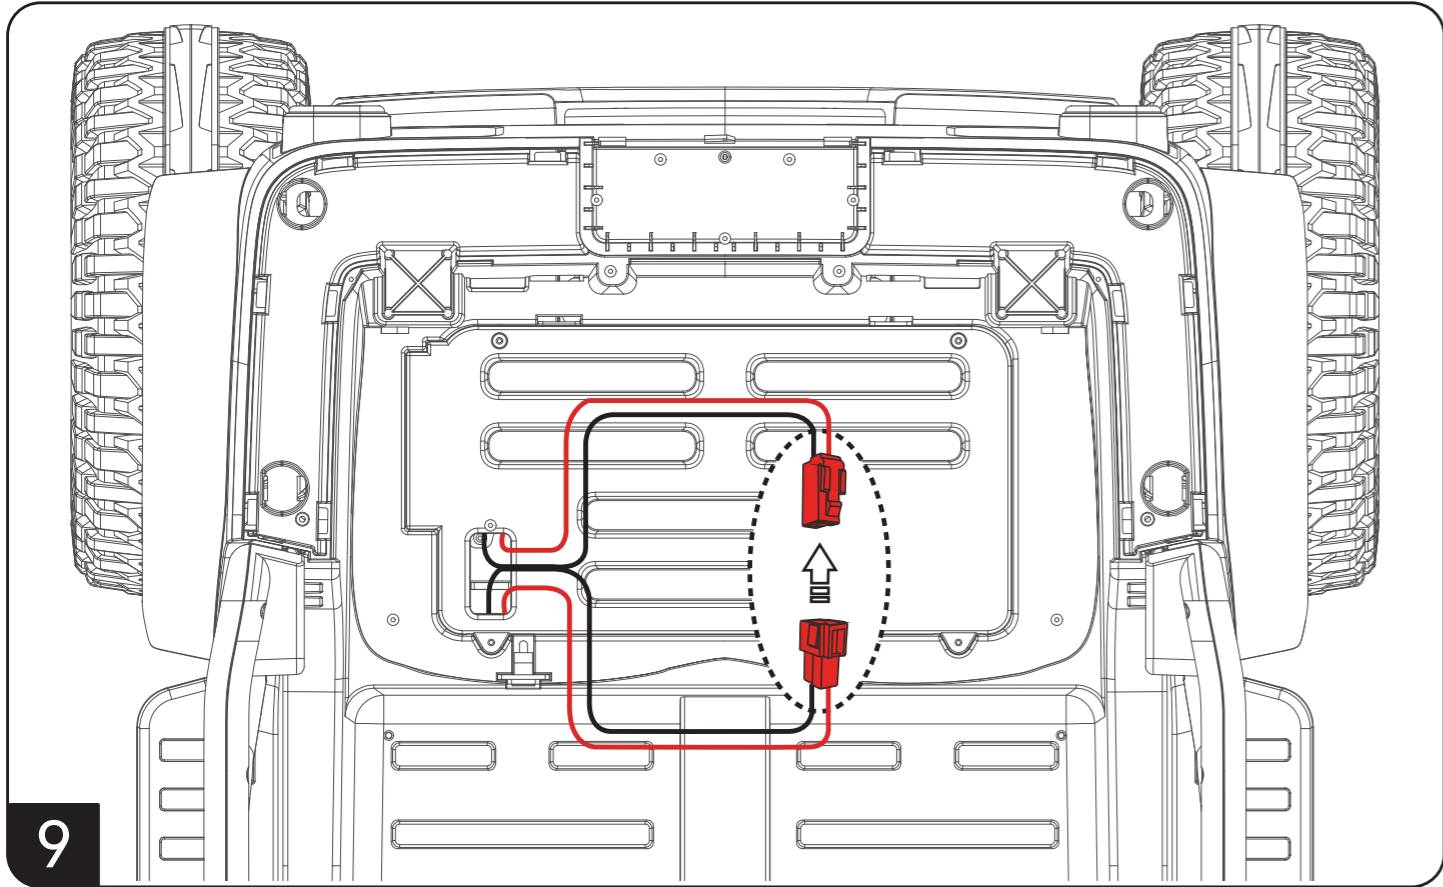


9

# DASHBOARD

 Battery Status: Blue (battery enough); Flashing red (battery low, to be charged)

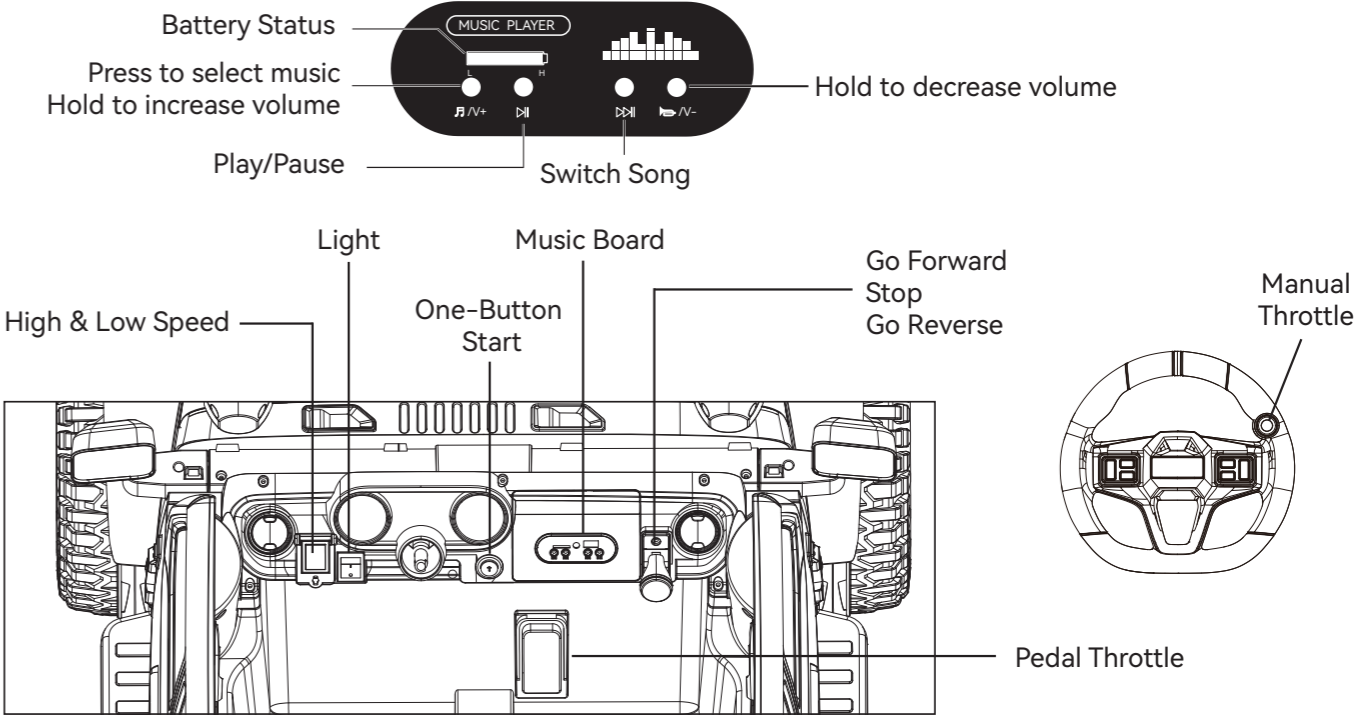


# REMOTE CONTROL

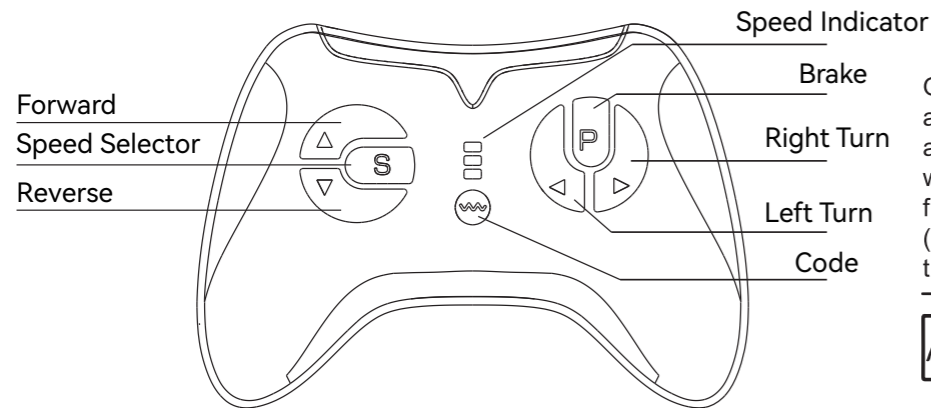 

Open the battery cover of the remote control and insert two AAA1.5V dry batteries. Pay attention to the polarity of the dry batteries when inserting. Cover the battery cover and fix it with screws.

 (Please follow the above steps to replace the battery, adult replacement is required)



## 2.4G Remoter Control Instructions

For the first time need to code, this product has a memory function, replacement battery next time, you do not need to match the code Once again.

- ① Long press "M" button more than three seconds, until the first LED lights flashing.
- ② Open body power, first a long bright LED turns on the success of the code.
- ③ Remote control 10 seconds without operating automatic standby, press any key to wake up.
- ④ Key Description: "△" Forward, "▽" Back, "◁" Left, "▷" Right, "S" Speed, "P" Stop.

Press the "S" key to set the speed, a light is low, two lights for medium-speed, three lights for high-speed, Press the "P" key to keep the brakes, the indicator full flash, press the brake button again to lift the brake.

# CHARGING

In order to ensure safety, this product must be charged by adults.

The charging socket is located under the seat, and the charging procedure is operated according to the following figure. When the normal driving is slow, it should be charged to 8-12 hours in time, and the maximum should not exceed 20 hours. It is recommended to charge for 4-6 hours before the first use, but not more than 10 hours.

 
Insert the charger into the charging hole (the whole vehicle is powered off).

This product has a charging protection function. When charging, all functions of the vehicle cannot be used.


Charge the battery in time after use to keep the battery in shallow circulation.

Original power charger is recommended.

Plug the charger into the power socket.

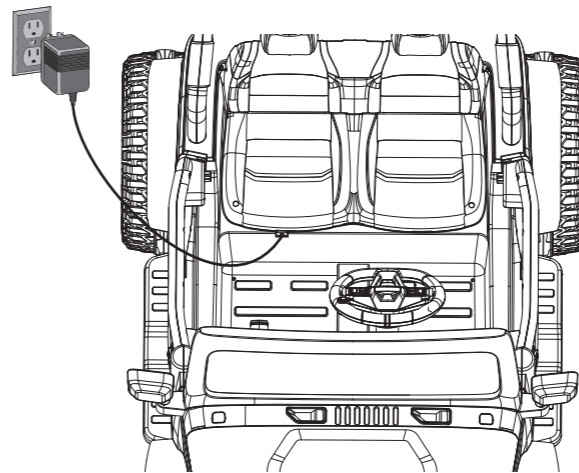

## Note: Fuse 20A

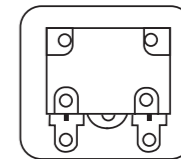 

### Replace the fuse:

- (1) if it is necessary to replace the fuse, first open the seat, take out the reset fuse, and then replace the reset fuse.
- (2) the product uses a recoverable over-current fuse. When the current is too high, it will automatically cut off the power supply, and it can be automatically restored in 5-10 seconds.
- (3) In order to prevent the fuse from cutting off the power supply, this product does not Can overload, maximum load.

# CARE AND MAINTENANCE

1. Before use, parents should check whether the main parts are in good condition, whether the batteries, chargers, wires, plugs, shells and other parts are damaged, whether the screws are loose, and whether there are potential safety hazards. If any damage is found, they should stop using until they are repaired.
2. After using for a period of time, use a small amount of lubricating oil to lubricate the iron parts of the vehicle to prevent wear and rust.
3. The vehicle should be placed away from the fire source and avoid long-term illumination. When storing, it should be placed upward and horizontally. In wet weather, the vehicle should be parked indoors or covered with waterproof cloth.
4. Vehicles should be kept away from hot objects, such as furnaces and heaters. Plastic parts may melt. When charging, keep away from flammable materials to prevent fire.
5. Please charge the battery in time after use. The charging must be operated by adults. If it is stored or not used for a long time, it must be fully charged first. Pull out the red main line and charge once a month to prolong the battery life.
6. Use dry soft cloth to wipe the vehicle, or use non wax furniture polishing material instead of soft cloth to wipe plastic parts to achieve smooth surface effect. Do not use chemical solvent to wipe the plastic parts of toys. Do not clean the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, vehicle circuit system and battery.
7. When you stop using or placing the product, please turn off the power supply of the product and turn all switches to the "stop" or "off" position.
8. Do not use fuses that do not conform to the specifications of this product.
9. Do not change the structure and circuit system of this product without authorization. The maintenance work must be carried out under the guidance of professionals or technicians.
10. Do not use toys for other purposes. Put batteries in with correct polarity.
11. It is forbidden to short circuit the positive and negative electrodes of the battery, and the non rechargeable battery cannot be charged.
12. Rechargeable batteries can only be charged under adult supervision.
13. Do not mix old and new batteries with different types of batteries.
14. The exhausted batteries should be removed from toys and properly handled to prevent children from playing.
15. When the toy is not used for a long time, the battery should be removed from the toy and properly handled to prevent children from playing.