



HADEN

ESTD. ENGLAND 1958



INSTRUCTION MANUAL



PRODUCT CODE: 197221 & 197238

HIGHCLERE KETTLE



ESTD. ENGLAND 1958

How can we help?

The Haden team is always interested in what you have to say, so why not get in touch?



Call us
01909 544 570



Email us
info@haden.com



Write to us
**Team Haden, Sabichi Homewares Ltd,
Priorswell Rd, Worksop, S80 2BY**



Visit us
www.haden.com

COMPONENTS



Features:

1. Handle

2. Spout

3. Base

4. Lid

5. Water window

6. On/Off Switch with indicator light

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons including the following:

IMPORTANT SAFEGUARDS

- Please read these instructions carefully before using the water kettle for the first time.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be carried out by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
- Children should not play with the appliance
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- If the kettle is overfilled, boiling water may be ejected.
- WARNING: Position the lid so that steam is directed away from the handle.
- WARNING: Do not remove the lid while the water is boiling.
- Kettle is only to be used with the stand provided.
- This appliance is intended to be used in the household and similar environments.
- Avoid spillage on the connector.
- Heating element surface is subject to residual heat after use.
- Use the kettle according to these instructions, any misuse may cause electric shock or other hazards.
- This appliance is not intended to heating liquid other than water.
- Do not operate the kettle if damaged. After an appliance malfunctions or it has been damaged in any manner, return to the customer service department for repair, because special purpose tools are required.

- Before you connect the kettle to the mains supply, make sure that the voltage indicated on the rating plate, located on the bottom of the water kettle matches the mains voltage in your home. If it does not, contact your dealer and do not use the kettle.
- The kettle will switch off automatically when the water has boiled. If you want to stop the heating process before the kettle automatically switches off, lift up the ON/OFF switch.
- After the kettle has switched off automatically (or has been switched off manually) it may need time to cool down. After 15-20 seconds, the kettle can be switched on again.
- Always fill the kettle with water before switching it on.
- The kettle is designed to disconnect the live electrical supply from the element during abnormal operating conditions. If the water kettle is accidentally switched on without water, the boil dry protector will operate.
- If the kettle ever boils dry, the power indicator will go out. Allow 15 minutes to cool before refilling with cold water. The safety cutout will automatically reset during this time.
- Place the kettle on a stable flat surface.
- Do not use this appliance outdoors.
- Never immerse the kettle or cord in water or any other liquid. Do not allow liquid to penetrate the electrical parts of this kettle.
- Prevent children from pulling on the mains cord or knocking the kettle over.
- Ensure that the mains lead does not overhang the worktop surface.
- The outside surface of the kettle may get hot during use, please take care when using the kettle.
- Never fill water higher than the maximum acceptable water level.
- Never use the kettle with the lid open.
- Do not open the lid when steam is coming out of the spout.
- Before cleaning the kettle disconnect from the power supply and wait until it has cooled down.

BEFORE USING YOUR KETTLE

Before first use, it is recommended that you operate the kettle for 2 or 3 times following the instructions above, this will remove any dust or residues remaining from the manufacturing process.

- Lift the kettle jug from the base before filling.
- To fill the kettle, remove the lid, then fill to the desired level (note: the water level must be between the minimum mark and maximum mark). Close the lid by pushing it down until it clicks into place.
- Plug the power supply cord into the mains, press the On/Off switch down and the power indicator will light up.
- When the water has boiled the kettle will automatically switch itself off. You can stop the boiling process at any time by lifting the On/Off switch. The power indicator will go out.

AUTOMATIC SAFETY CUT-OFF

An automatic safety is fitted to the kettle for protection against boil-dry overheating. It will operate if the kettle is switch ON when there is insufficient water inside the kettle (i.e. the kettle is not above the MIN marking). If this should occur, switch the kettle OFF and remove the power cord from the power outlet. Allow cooling for 10 minutes then refilling with cold water and reconnecting to the power outlet.

CLEANING AND MAINTENANCE

- First read the instructions in the section titled "IMPORTANT INSTRUCTIONS".
- Always disconnect the kettle from electrical outlet before cleaning.
- Before cleaning make sure the kettle is cold enough.
- Empty the kettle, Clean the exterior surface of the kettle with a clean, damp cloth to preserve its original highly polished finish. Dry and polish with a soft cloth.
- Do not use abrasive cleansers or scouring agents of any kind inside or on the exterior of the kettle.

- Only use the dry cloth to wipe the base of the kettle.
- Avoid wetting the electrical parts.
- Do not immerse the kettle or power base in water or other liquid, and make sure the electrical kettle socket is kept dry.
- Refitting is the reverse of removal.

CLEANING THE FILTER

The following steps are applicable only when the kettle is switched OFF, removed from the power outlet and the kettle including water are cool. Open the lid and lift the filter out from its location in the body of the product. Wash the filter in warm soapy water. Rinse and dry with a clean, soft cloth. Insert the filter back into the body making sure it is correctly located.

DESCALING

- Half fill the kettle with tap water and add the juice of 1 lemon to the water.
- Boil this mixture and allow it to stand for 15 minutes. Re-boil the mixture and allow it to stand a further 15 minutes. Re-boil this mixture a third time then rinse the kettle well.

TECHNICAL DETAILS

AC: 220V~240V

50/60Hz

Power: 3000W

WASTE DISPOSAL

According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated.

If at any time in the future you need to dispose of this product please do NOT do so with household waste.

Please send this product to WEEE collection points where available.



AFTER SALES SERVICE

This product is guaranteed for two years from the date of original purchase. Proof of purchase will be required. The guarantee is subject to the following provisions:

The guarantee does not cover accidental damage, misuse, unit parts, knobs or consumable items.

The product must be correctly stored and operated in accordance with the instructions contained in this manual.

It must be used solely for domestic purposes.

The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.

Specifications are subject to change without prior notice.

The manufacturer disclaims any liability for incidental or consequential damages.

The guarantee is in addition to, and does not affect your statutory or legal rights.



HADEN

ESTD. ENGLAND 1958