

2 ADULTS ASSEMBLY REQUIRED Se necesitan dos adultos para ensamblar

BUYING TIPS



If you have any questions below, please feel free to contact us. We will respond within 24 hours.










OTHER QUESTIONS

GENERAL INFORMATION, TIPS AND TRICKS

- 1. Please read the Assembly Instructions prior to assembling this product.
- 2. Remove all hardware from the box and sort by size.
- 3. Check to see that all hardware and parts are present BEFORE assembling.
- 4. Ask a friend to assist you with the assembly of this furniture.
- 5. To avoid damage, assemble the product on a sturdy, level and protective surface.
- 6. Please wait until all steps are completed before fully tightening bolts.
- 7. Make sure all screws and bolts are tightly fastened before the unit is used.

MAXIMUM RECOMMENDED WEIGHT LOADS

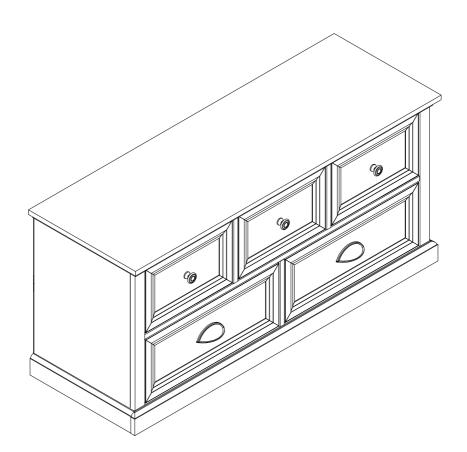


THIS UNIT IS INTENDED ONLY FOR USE WITHIN THE MAXIMUM WEIGHTS INDICATED. USE WITH LOAD HEAVIER THAN THE MAXIMUM WEIGHTS INDICATED MAY RESULT IN INSTABILITY, CAUSING POSSIBLE INJURY.


IMPORTANT


Before you begin: Open, identify and count all parts prior to assembly. Lay out parts on a flat and non-abrasive surface.

NOTE: IT IS VERY IMPORTANT TO USE GLUE WITH THE DOWELS. EXCESS GLUE CAN BE WIPED OFF WITH A DAMP CLOTH.


Insert Dowel at least half way by tapping lightly with a rubber mallet (not included), IF NECESSARY.

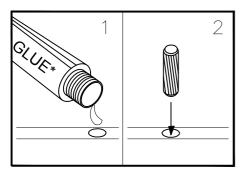

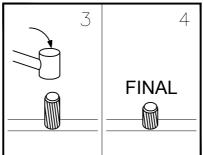

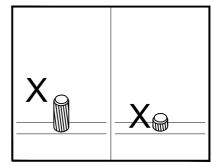



CAM LOCK SYSTEM OPERATION

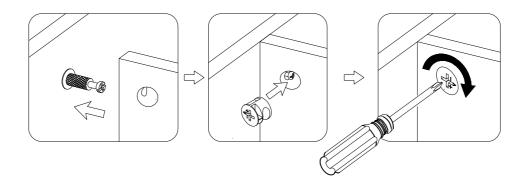



HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS


- 1. Screw the Cam Bolt into the pre-drilled small holes on the panel. Connect both panels together; making sure the Cam Bolt goes into the pre-drilled hole at the end of the panel with the Cam Lock.
- 2. Insert the Cam Lock into the pre-drilled large hole in the panel. Make sure the arrow on the Cam Lock is pointed towards the Cam Bolt.
- 3. Once the Cam Bolt is connected inside the Cam Lock, take a Phillips screwdriver (not included) and tighten the Cam Lock clockwise.

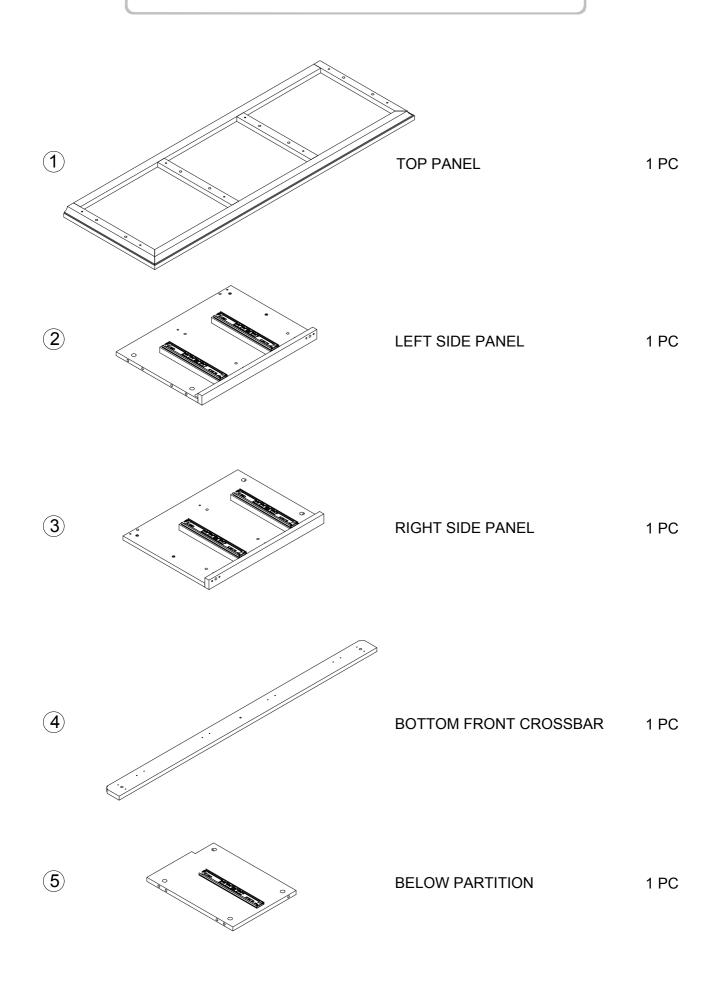


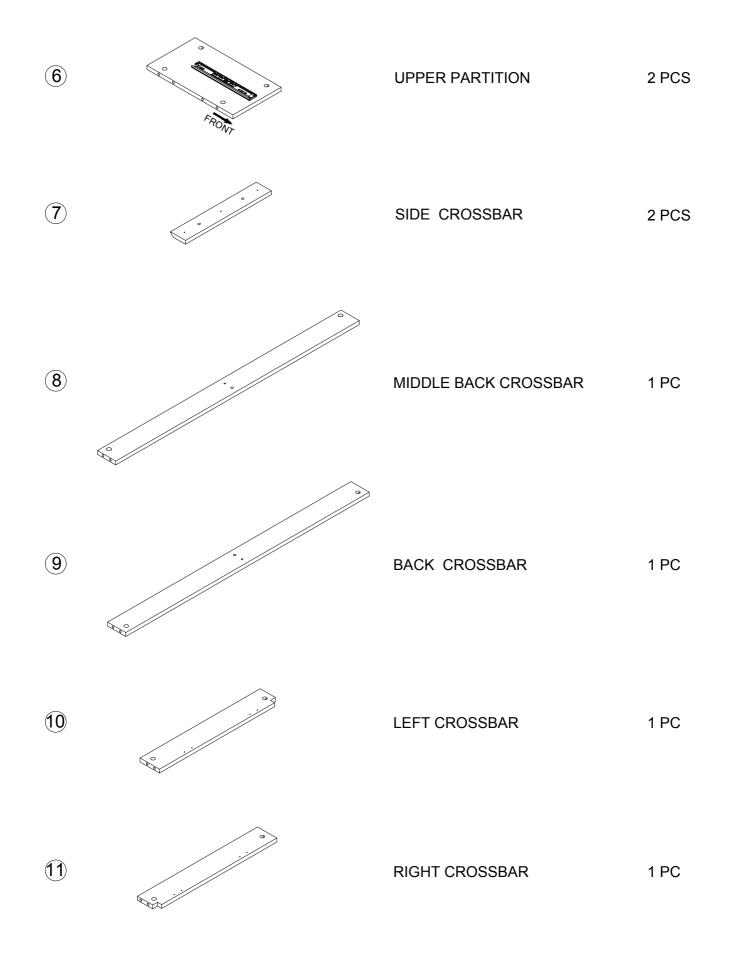


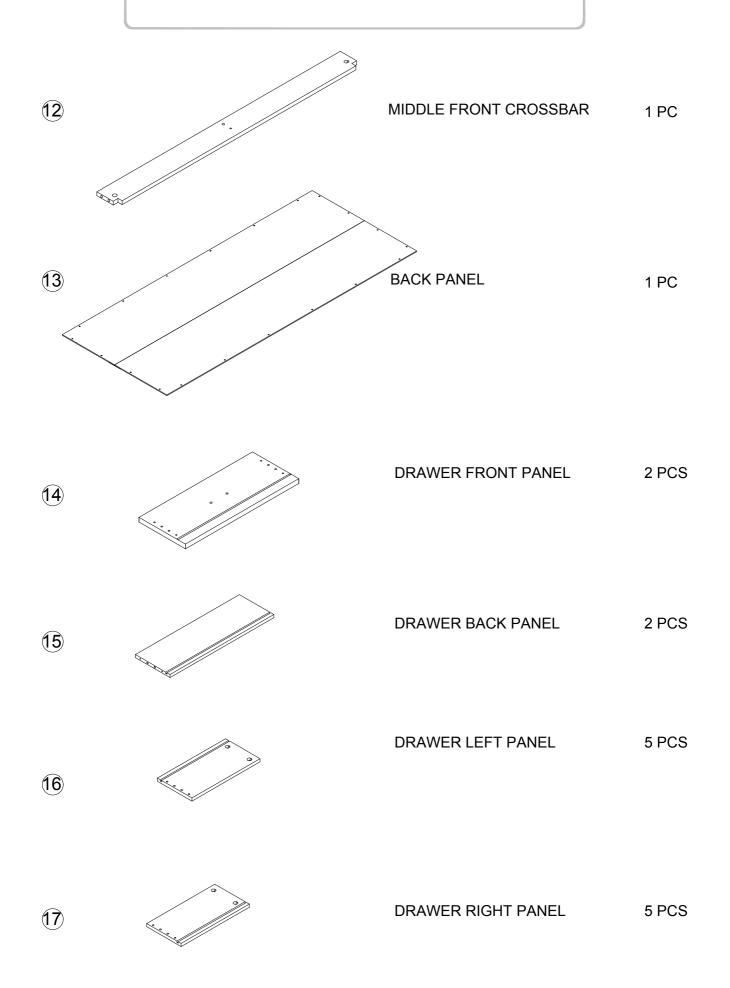

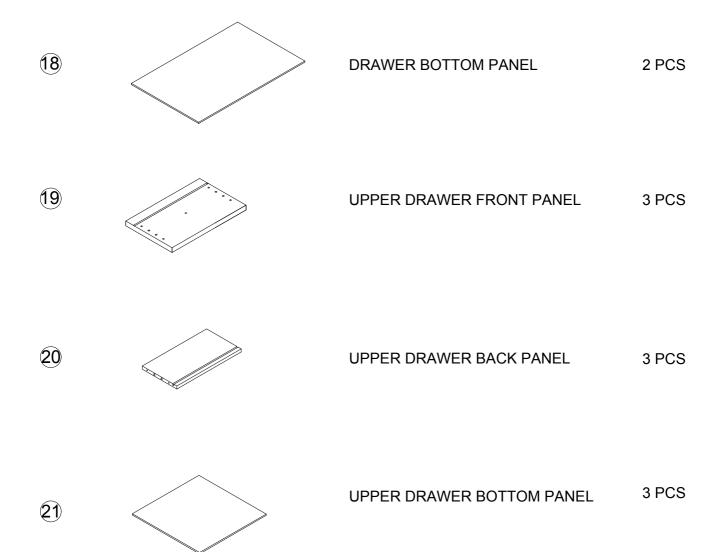

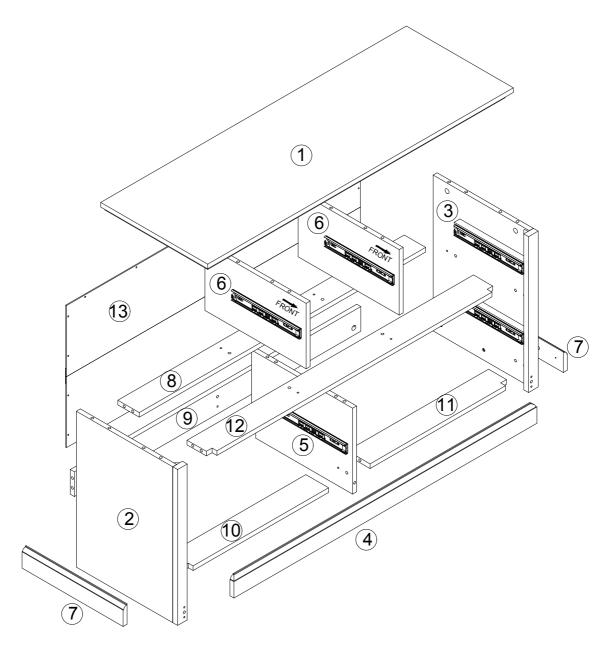

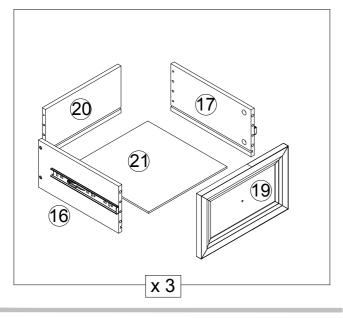

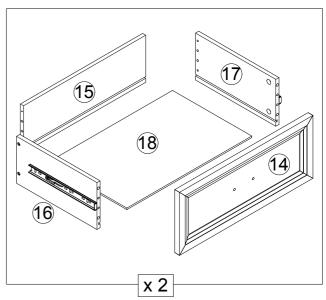


HARDWARE IDENTIFICATION-1


Α		GLUE	2 PCS
В		WOODEN DOWEL Ø8 x 30mm	25 PCS
С		WOODEN DOWEL Ø6 x 30mm	40 PCS
D		WOODEN DOWEL Ø8 x 20mm	6 PCS
E		CAM LOCK Ø15 x 9mm	46 PCS
F		CAM SCREW Ø7 x 34mm	46 PCS
G		HANDLE	2 PCS
Н		HANDLE BOLT 5/32" x 12mm	4 PCS
	E Managara	FLAT HEAD SCREW Ø4 x 25mm	6 PCS
J	Among man	FLAT HEAD SCREW Ø4 x 30mm	24 PCS
K		WOOD SCREW Ø3.5 x 16mm	20 PCS


HARDWARE IDENTIFICATION-2





WALL MOUNTING KIT			
	Metal	4	
5	Steel cable	2	
Omm	Short screw Ø4*20mm	2	
Community	Long screw Ø4*38mm	2	
	Drywall anchor	2	

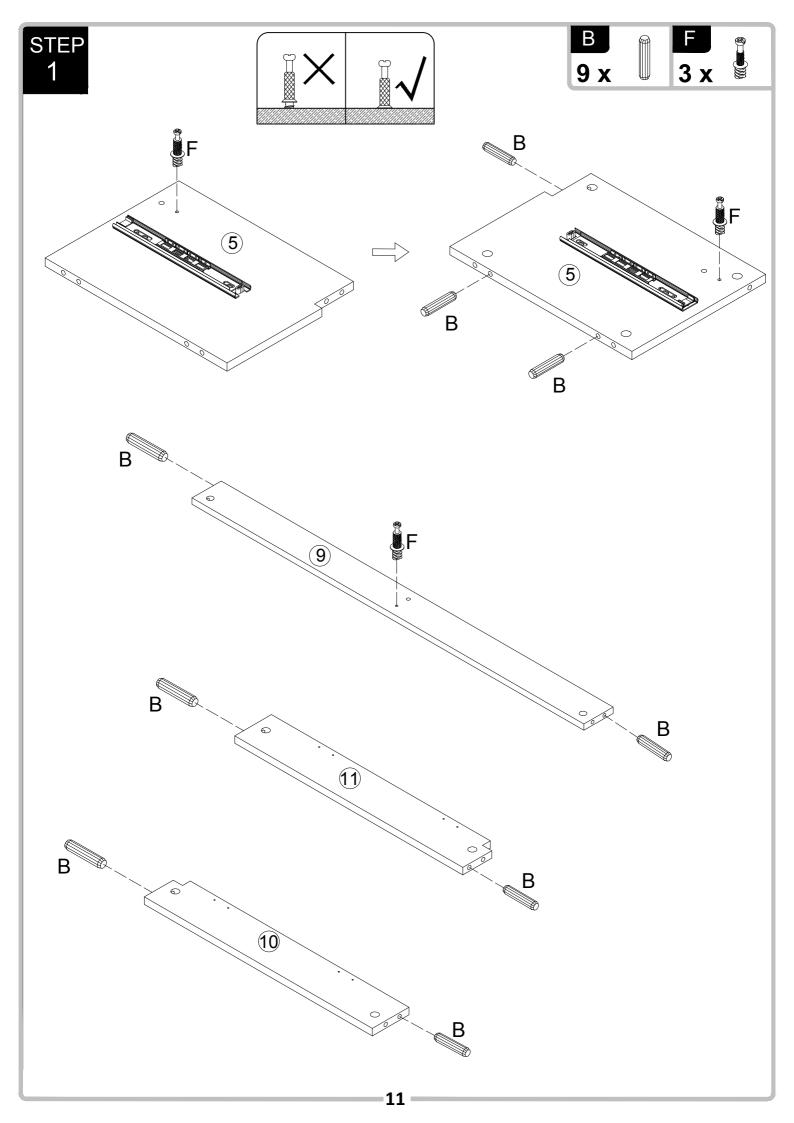

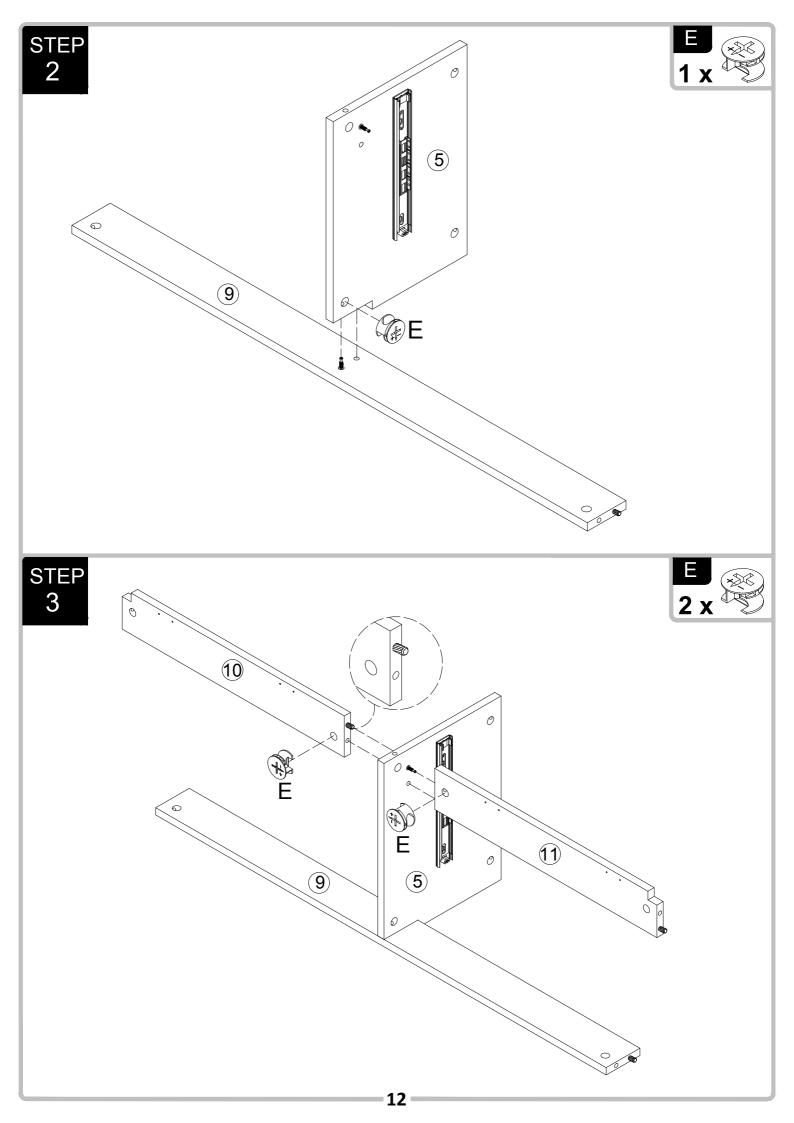


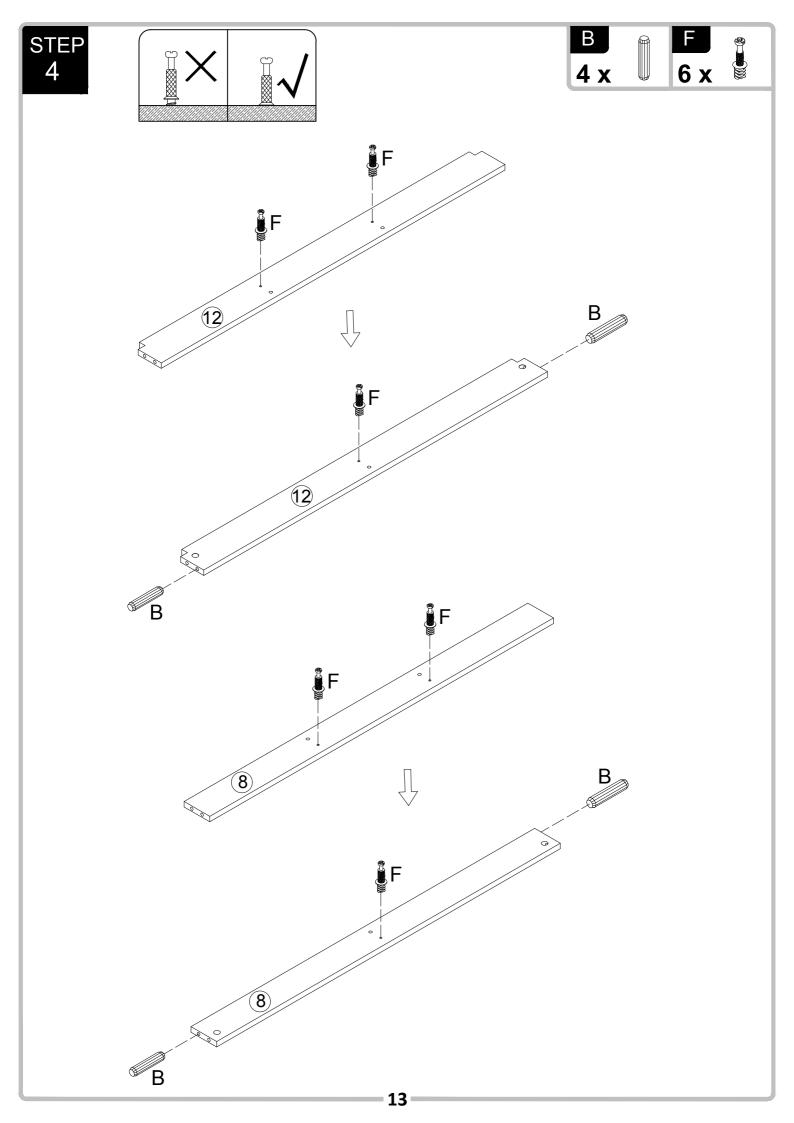


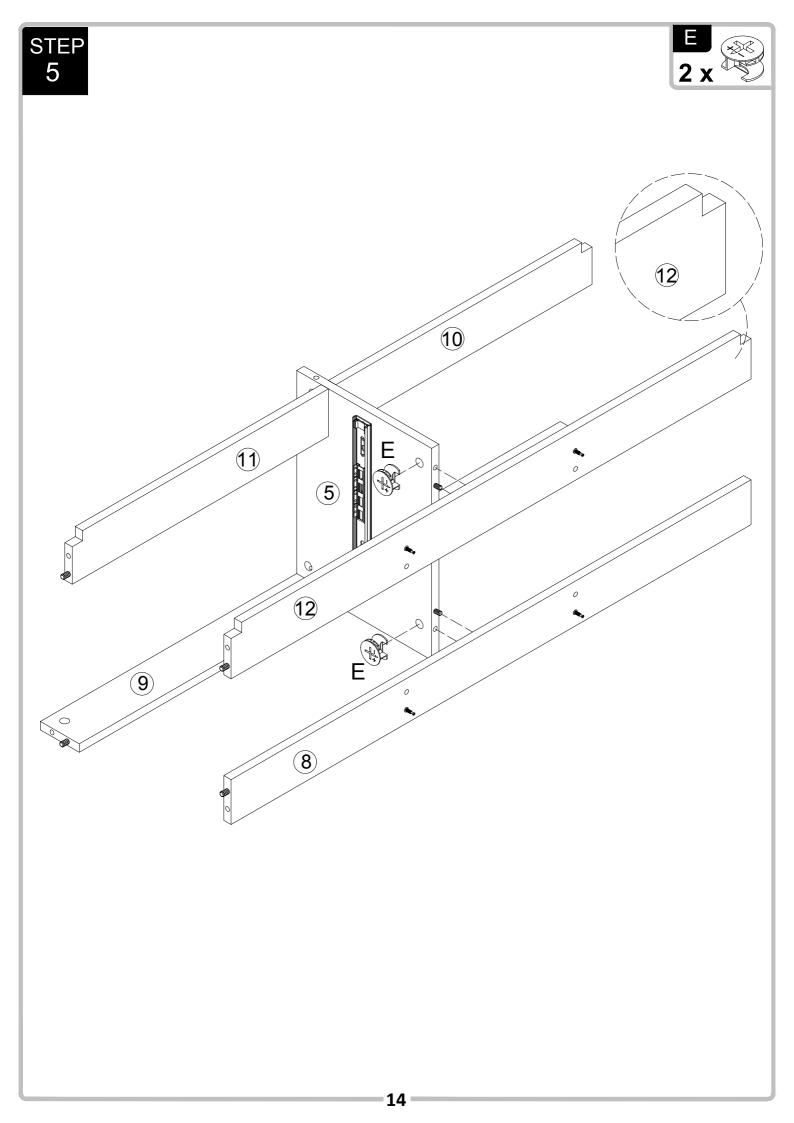

 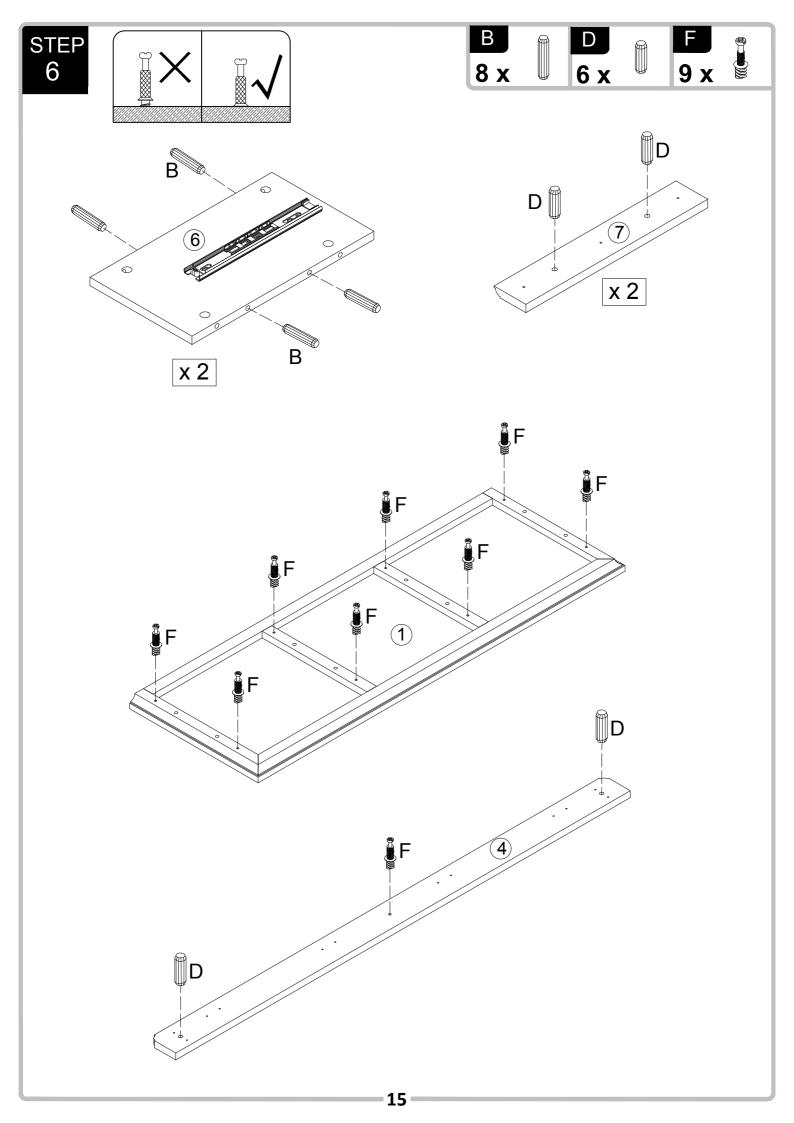





 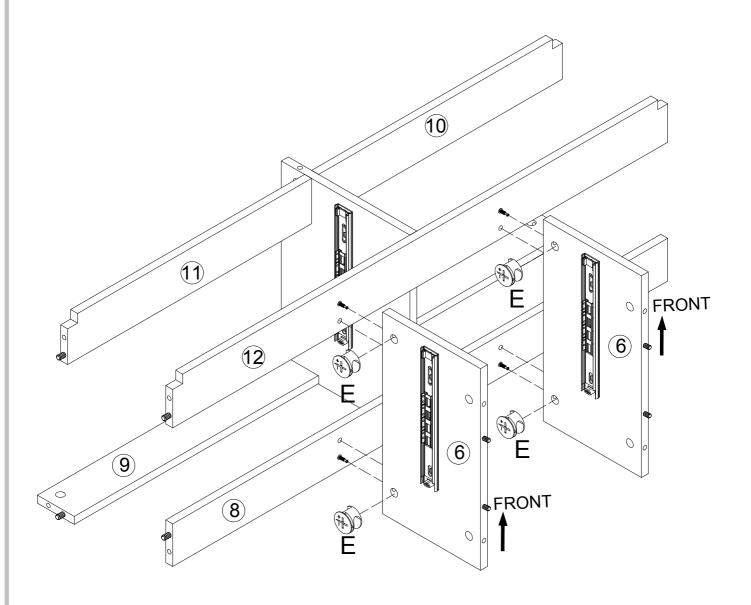







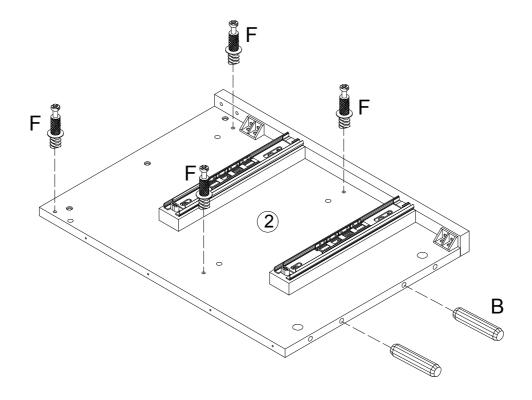


 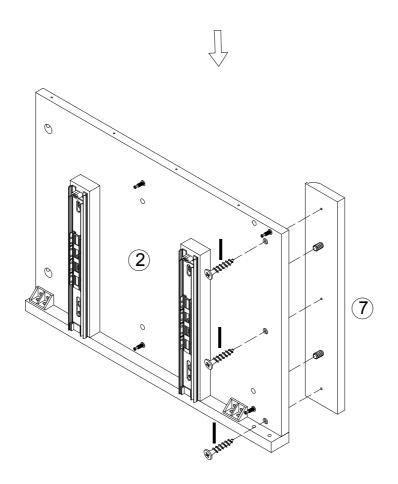







 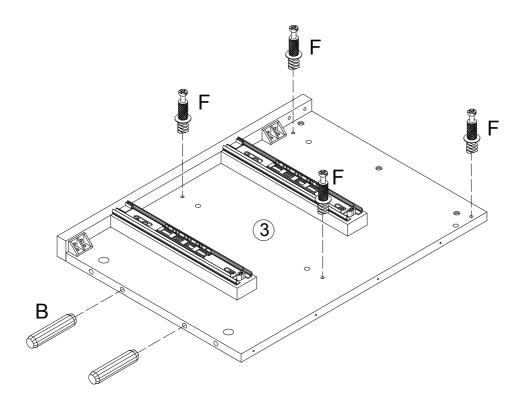


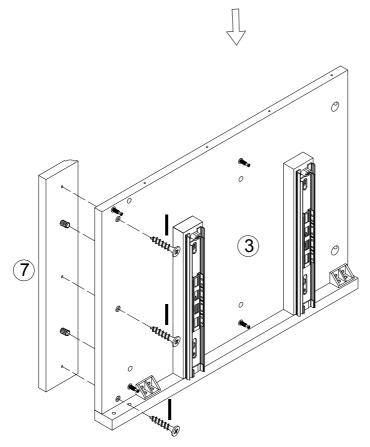







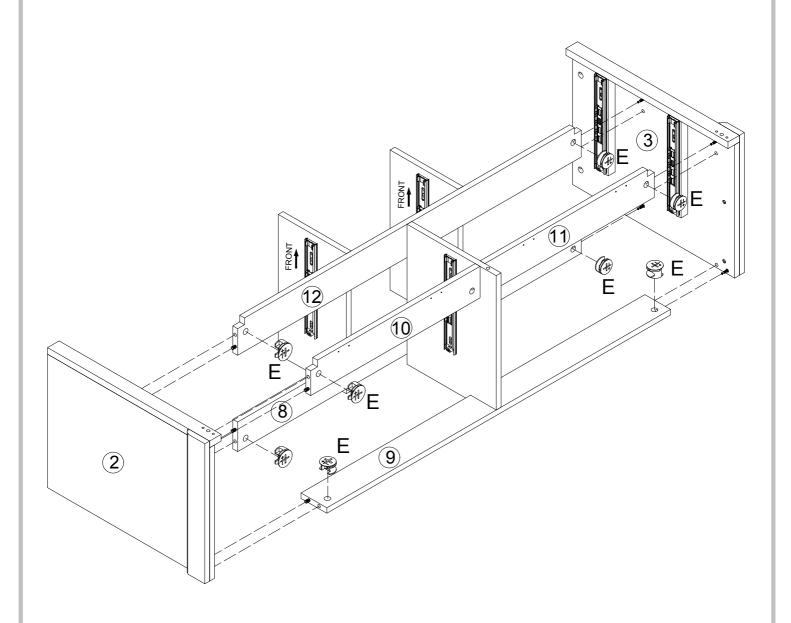






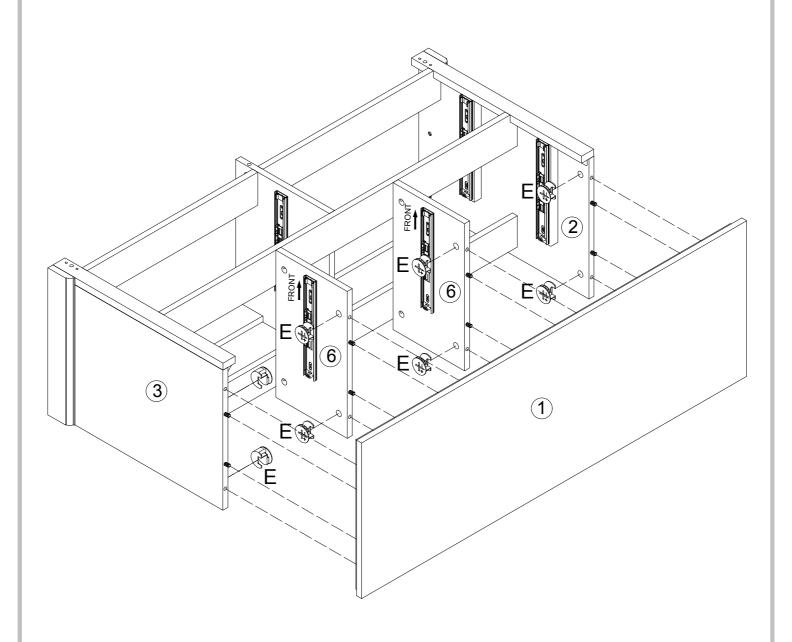


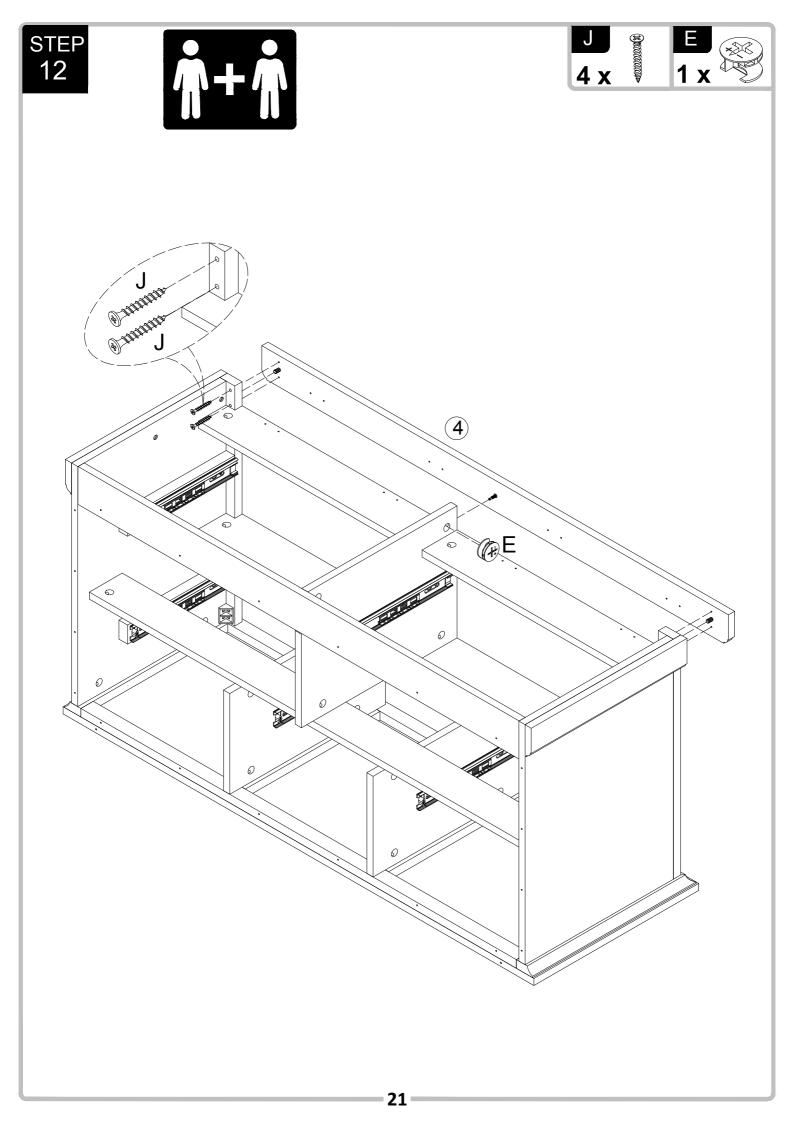


1 N

 
0 16 x

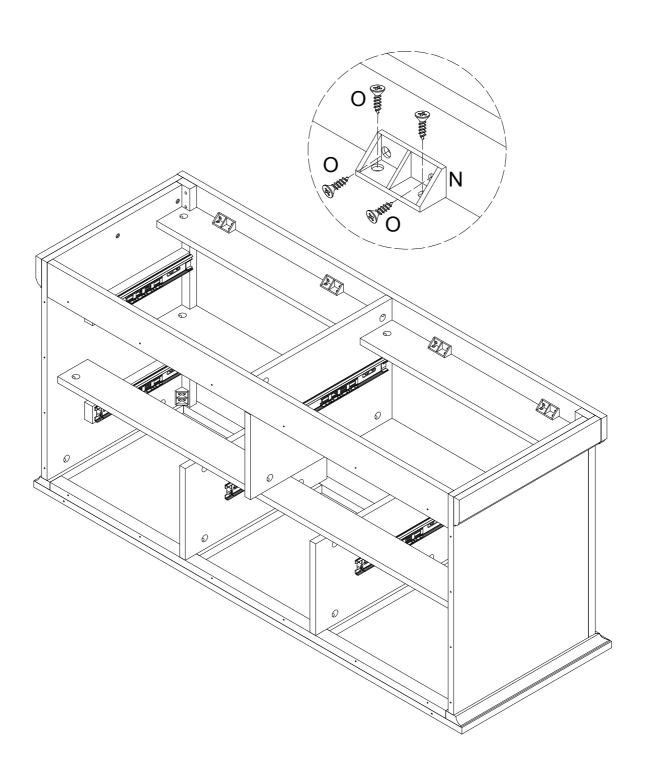







 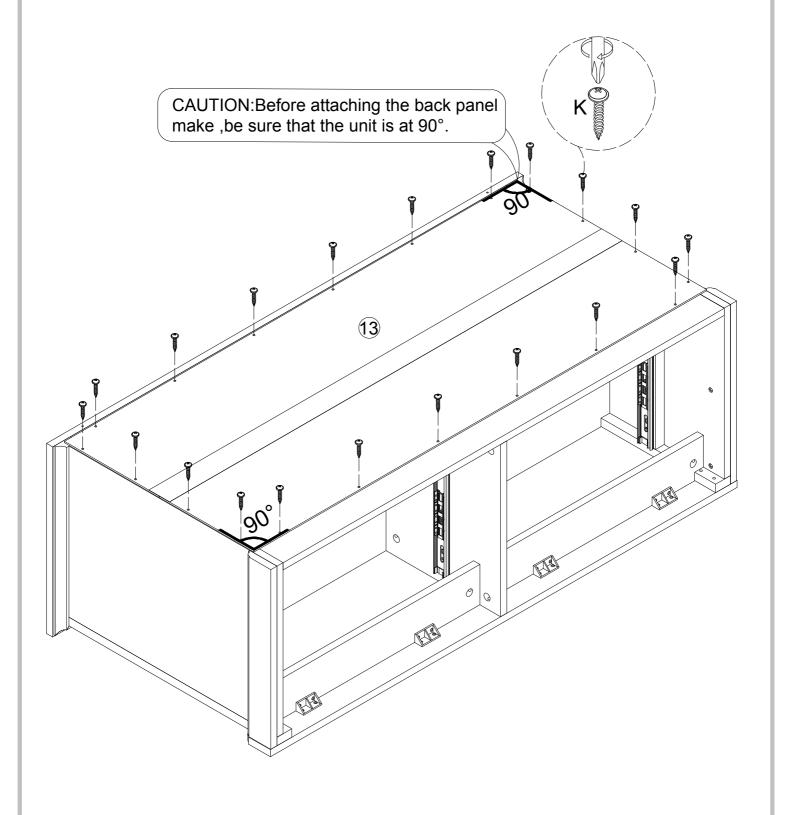


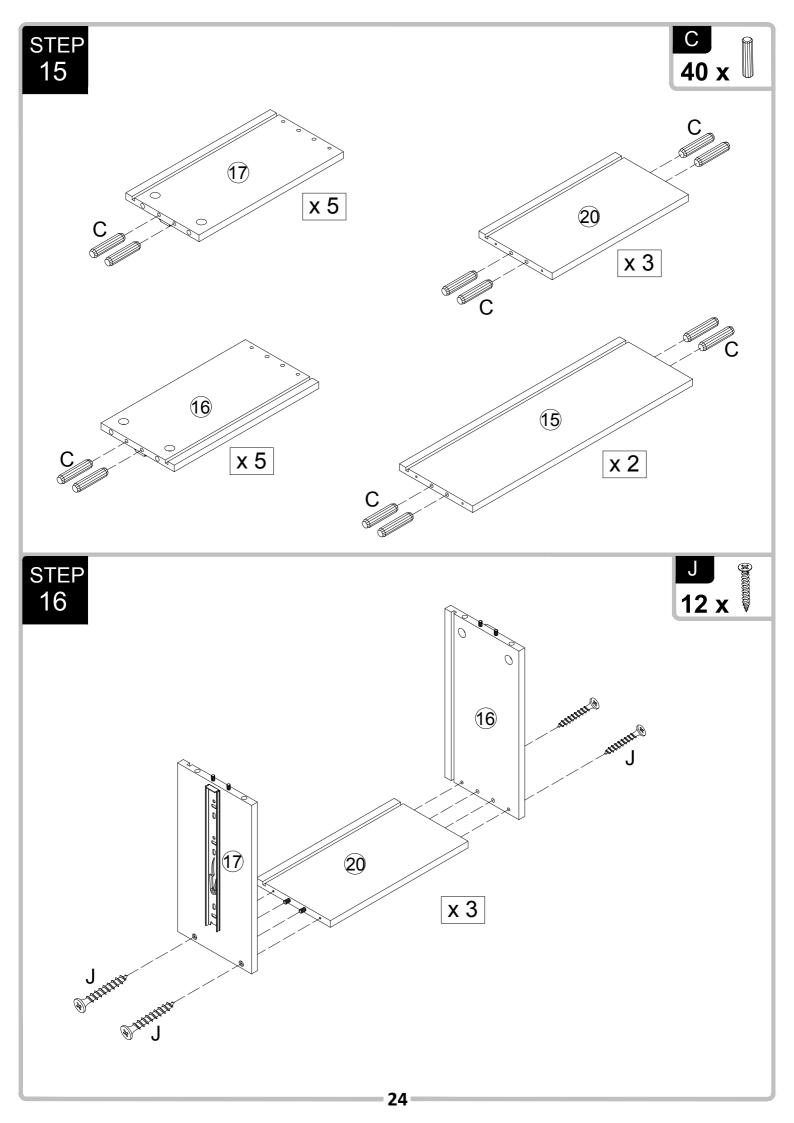


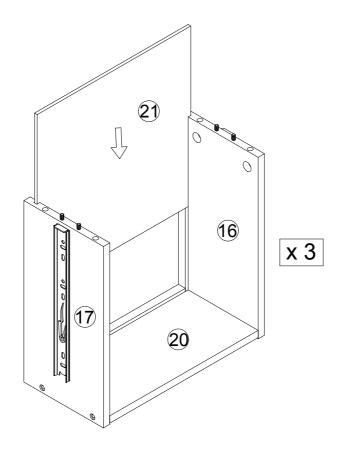


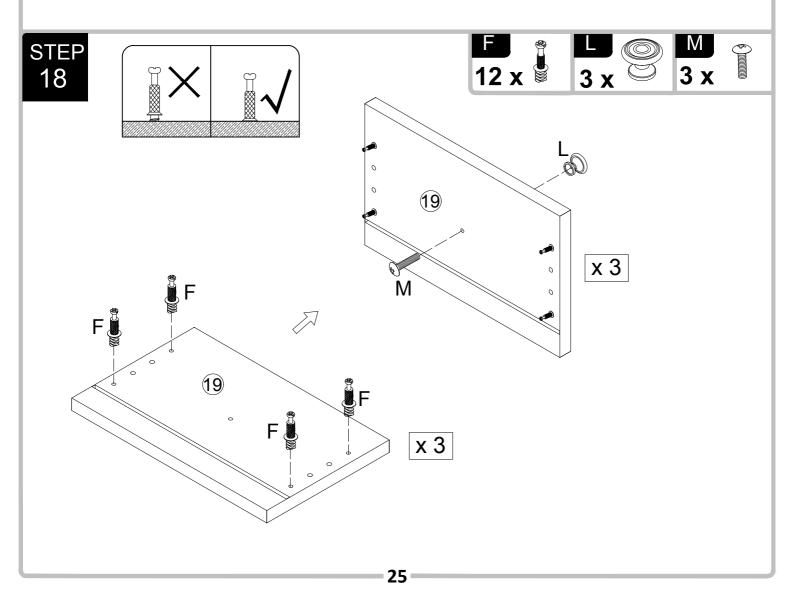







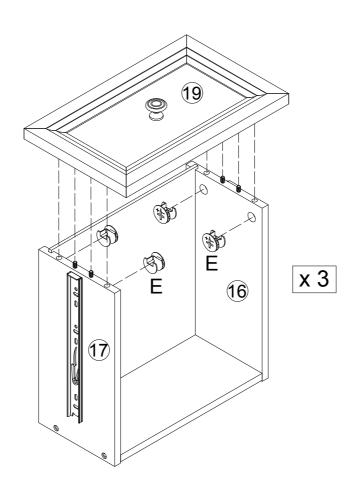


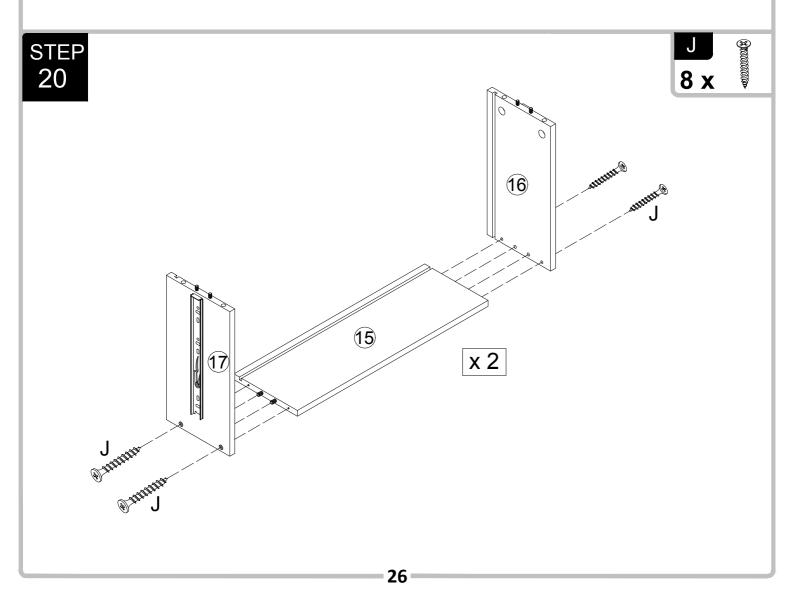


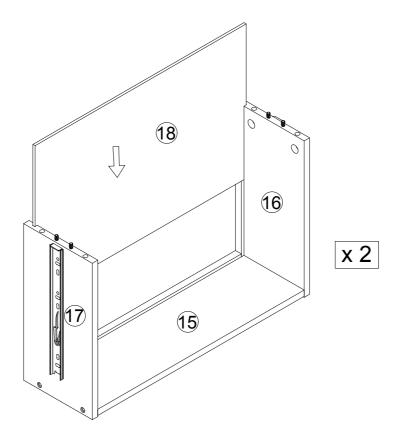


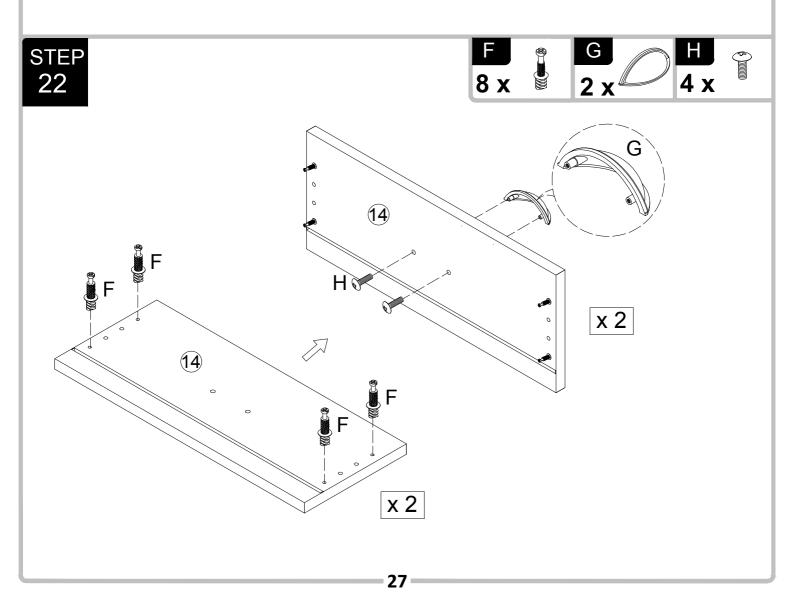



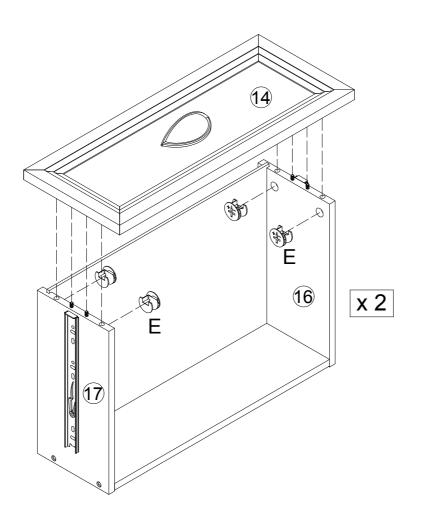

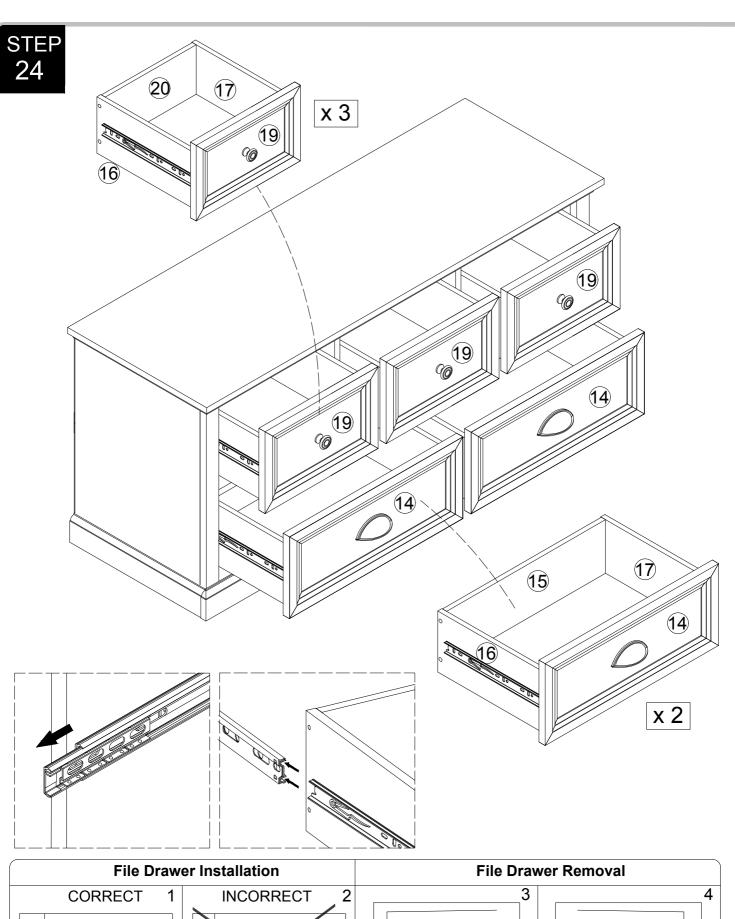


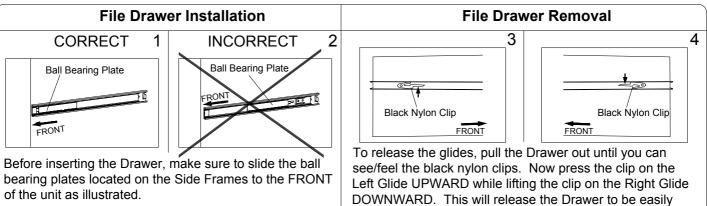

removed.

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

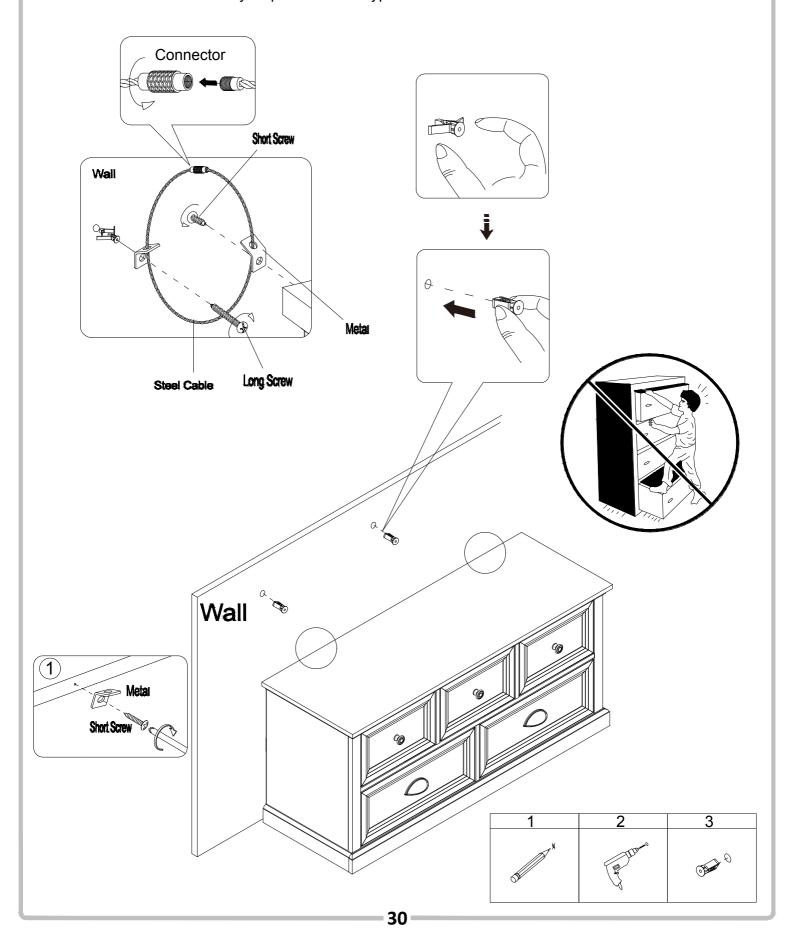

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Stains or marks from crayons or ink markers will be difficult to remove.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws and nuts periodically and tighten them if necessary.

Caring for Wood Furniture

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

Cleaning the Fireplace Trim

Clean the metal trim using a soft cloth, slightly dampened with citrus oil based product and buff with a clean soft cloth. DO NOT use brass polish or household cleaners as these products will damage the metal trim. Citrus oil based products can be obtained at supermarkets or hardware stores.