


Sliding Doors Assembly Instructions




 

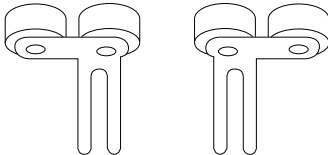
 


In case of questions or missing parts, please contact
✉ Dooraftersale@gmail.com

Scan Here For Latest Version
(SD01-Sliding Doors)

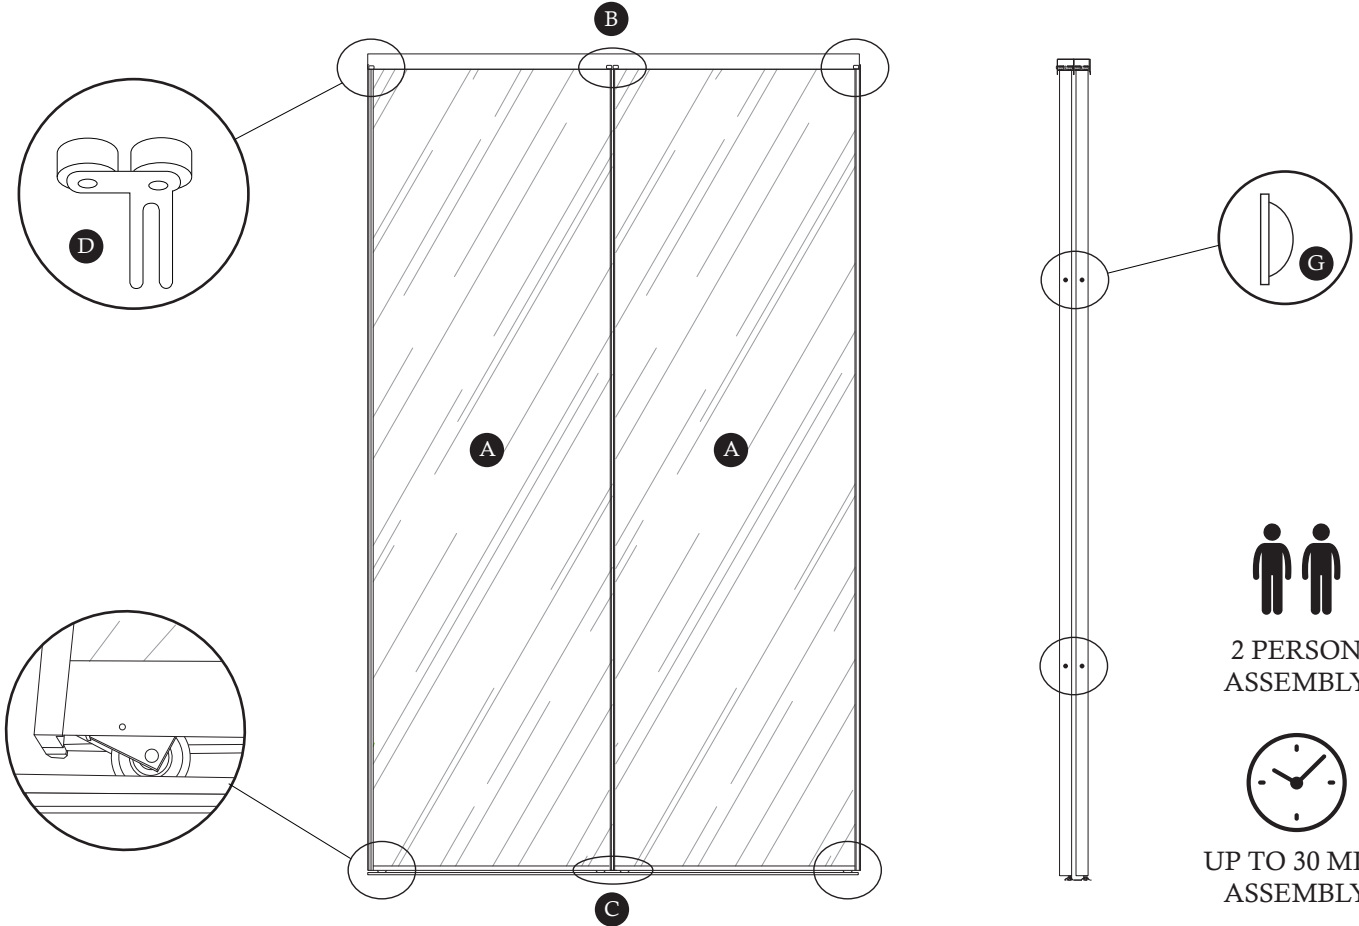Assembly Diagram

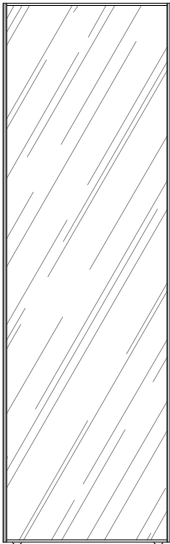

Hardware List


<div>A</div> <div></div> <div>x 2pcs</div>	<div><div>B</div>Upper Track</div> <div></div> <div>x 1pcs</div>	<div><div>C</div>Bottom Track</div> <div></div> <div>x 1pcs</div>		
	<div><div>D</div>Upper guide wheel</div> <div></div> <div>x 4pcs</div>	<div><div>E</div>4*20mm</div> <div></div> <div>48" x 11pcs 60" x 14pcs</div>	<div><div>F</div></div> <div></div> <div>x 2pcs</div>	<div><div>G</div>Door Bumper</div> <div></div> <div>x 8pcs</div>

Assembly Steps


1

Withdraw the screw for some distance, insert the upper guide wheel and fasten the screw.


Repeat the following steps for top 2 corners of both doors (4 times)

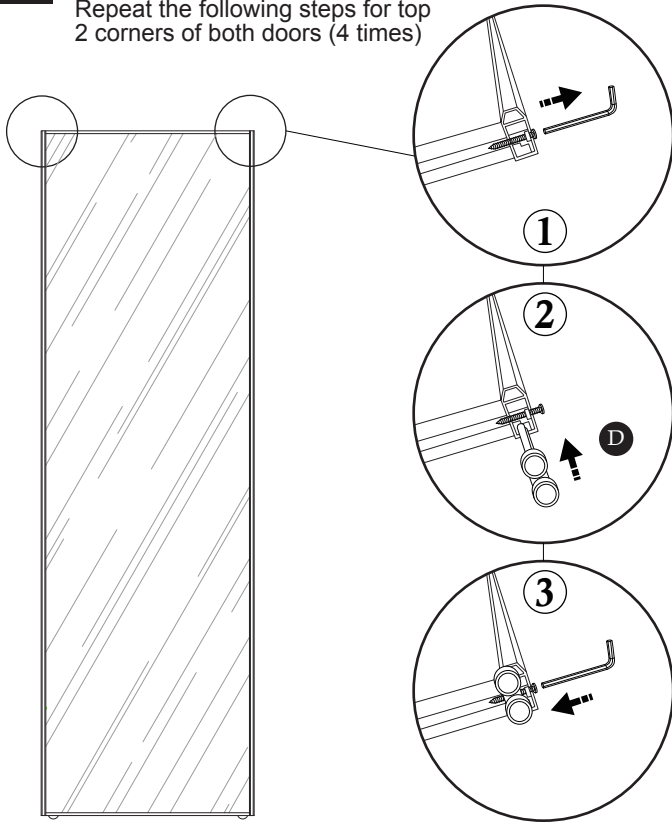

2

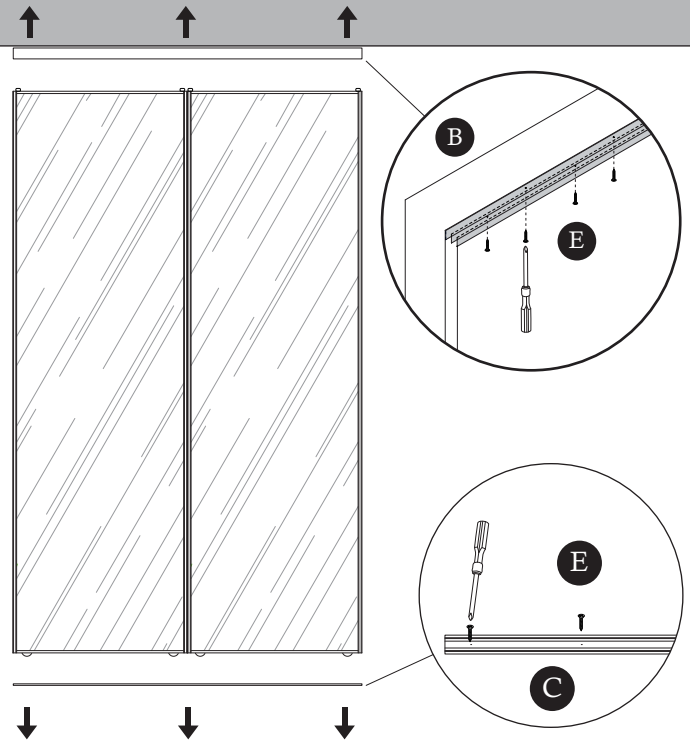

3

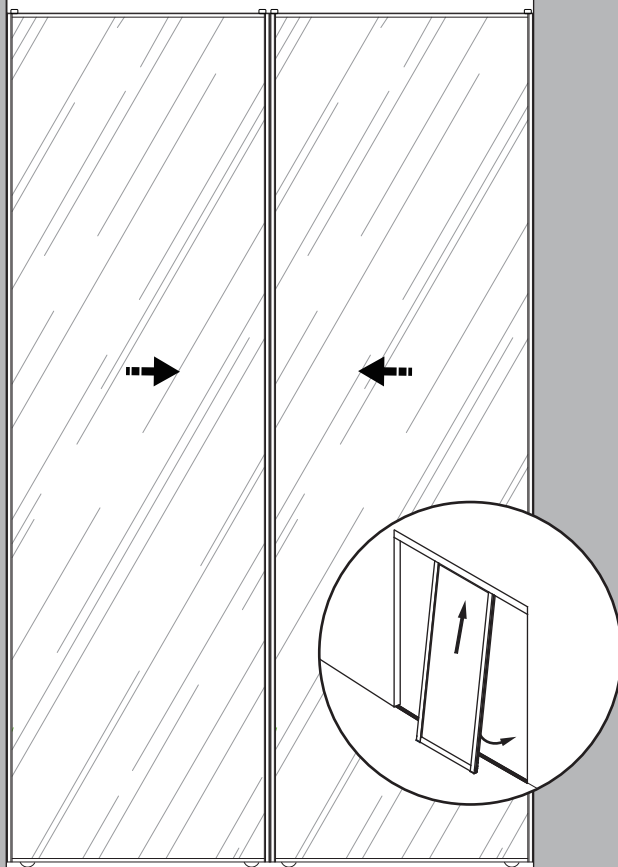

4

The bottom guide wheel has been set suitable for 80" height opening and allow certain level of adjustment. If the opening is not enough, please withdraw screw until only 3 to 4 threads left (as shown in pic).

Place the door horizontally on the floor, leverage the weight of the door to press the lower guide wheel to its lowest position. Insert the plastic pin to maintain the position. Repeat the following steps for bottom 2 corners of both doors (4 times).

You can then follow Step 3 to hang the door, remove plastic pin and tighten the screw.

