




## EN MINI FLIP II LCD ALARM CLOCK INSTRUCTIONS

Thank you for your purchase of this quality clock. Please read these instructions carefully and store it in a safe place for future reference.

BACK OF THE CLOCK

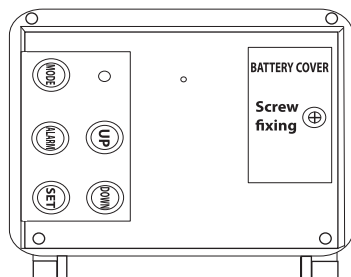

Requires 2 x LR44 button cell batteries (included).

### TO START THE CLOCK

Remove the isolator tabs from the battery compartment. All segments will display briefly and the display will show 12:00. The clock will play melody for 10 seconds.

### TO SET THE TIME

In normal time mode, press the MODE button once and 12 or 24 hour will start to flash. Press UP or DOWN button to select between 12/24 hour format. Press the SET button once the hour digits will flash. Press UP or DOWN button to set the hour. Note. In 12 hour format 'PM' icon will display for PM time.

Press the SET button once again the minute digits will flash. Press UP or DOWN button to set the minutes.

Press the SET button once again the year digits will flash. Press UP or DOWN button to set the year.

Press the SET button once again the month digits will flash. Press UP or DOWN button to set the month.

Press the SET button once again the date digits will flash. Press UP or DOWN button to set the date.

Press the MODE button four times to return back to normal time mode or let it exit automatically 1 minute later without pressing any key.

### TO SET THE ALARM AND TO TURN ALARM ON/OFF

In normal time mode, press the ALARM button once or the MODE button twice to enter the alarm mode, the 'ALARM' icon will appear.

Press the SET button once the hour digits will flash. Press UP or DOWN button to set the desired alarm hour. Note. In 12 hour format 'PM' icon will display for PM time.

Press the SET button once again the minute digits will flash. Press UP or DOWN button to set the minutes.

Press the SET button once again number '1' will flash. Press UP or DOWN button to select the melody for alarm sound. Note. There are 7 different melodies and 2 different 'di di' sounds to choose from.

Press the SET button once to turn on the alarm.

Press the MODE button three times to exit. Note. When alarm is activated 'ALARM' icon will display in the normal time mode. OR

To turn OFF the alarm completely, press the SET button once again. The Alarm time digits will change to '-:--'.

Press the MODE button three times to return back to normal time mode, or let it exit automatically 1 minute later without pressing any key.

### TO ACTIVATE THE SNOOZE

In normal time mode (when the alarm is turned on), press the UP button to turn on the snooze, the 'Zz' icon will appear.

#### When the alarm sounds you may:

- If the snooze is ON press any button and the alarm will stop and sound again after 4 minutes. The 'Zz' icon will flash.
- If the snooze is OFF press any button to turn off the alarm until the next day. The 'ALARM' icon will remain still on the display.
- To turn the snooze completely, press the UP button, the 'Zz' icon will disappear from the display.
- To turn off the alarm completely press the ALARM button once, then press the SET button five times until the alarm time digits will change to '-:--'. Press the MODE button three times to return back to normal time mode, or let it exit automatically 1 minute later without pressing any key.

### THE ALARM MELODIES

In normal time mode, press the DOWN button to listen the frequency and sound level of the 7 alarm melodies. Whilst the melodies play, the '(mel)' icon will display.

To turn off the alarm melodies, press any button.

### TO SET THE COUNTDOWN TIMER

Press the MODE button four times to enter the timer setting mode, the 'TIMER' icon will appear.

Press the SET button once the hour digits will flash, press UP or DOWN button to set the desired hour.

Press the SET button once again the minute digits will, press UP or DOWN button to set the desired minutes.

Note. The timer range is 23:59:00-0:00:00 hour.

Press the SET button once again to start the count down time, the 'TIMER' icon will flash.

When the count down time reaches 0:00:00 the alarm will activate and sound for 1 minute, the 'TIMER' icon will disappear at the same time. To stop the alarm sound, press any button.

Note. If no buttons pressed over 1 minute, the display will return to normal time mode.

### TO SELECT TEMPERATURE IN DEGREE °C OR °F

In normal time mode, press the SET button once.

### CHANGING THE BATTERIES

It is recommended that you replace batteries annually or if the display & alarm becomes weak. Use 2 x LR44 (1.5V) button cell batteries in this clock. Do not mix old and new batteries. Insert the batteries with the correct polarity. Remove exhausted batteries from the clock. Remove the batteries if the clock is stored or not in use.

**Warning:** Button cell batteries are dangerous if swallowed. Always keep them out of reach of children and pets.

Please dispose of used batteries in a responsible manner. For more information please contact your local authority.

### MAINTENANCE

A soft cloth may be used to clean your clock. Do not use any corrosive cleaner or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

### YOUR GUARANTEE

Your clock is guaranteed for 12 month from the date of purchase against any faults arising from defective materials or manufacture. Damage caused through careless handling, misuse or in transit is expressly excluded. Should this clock fail within 12 month please return it to your retailer.

### Environmental Protection



#### Disposal of electrical & electronic equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate collection point. If you are unsure of where this is contact your local authority. Improper disposal may be harmful to the environment.

