 


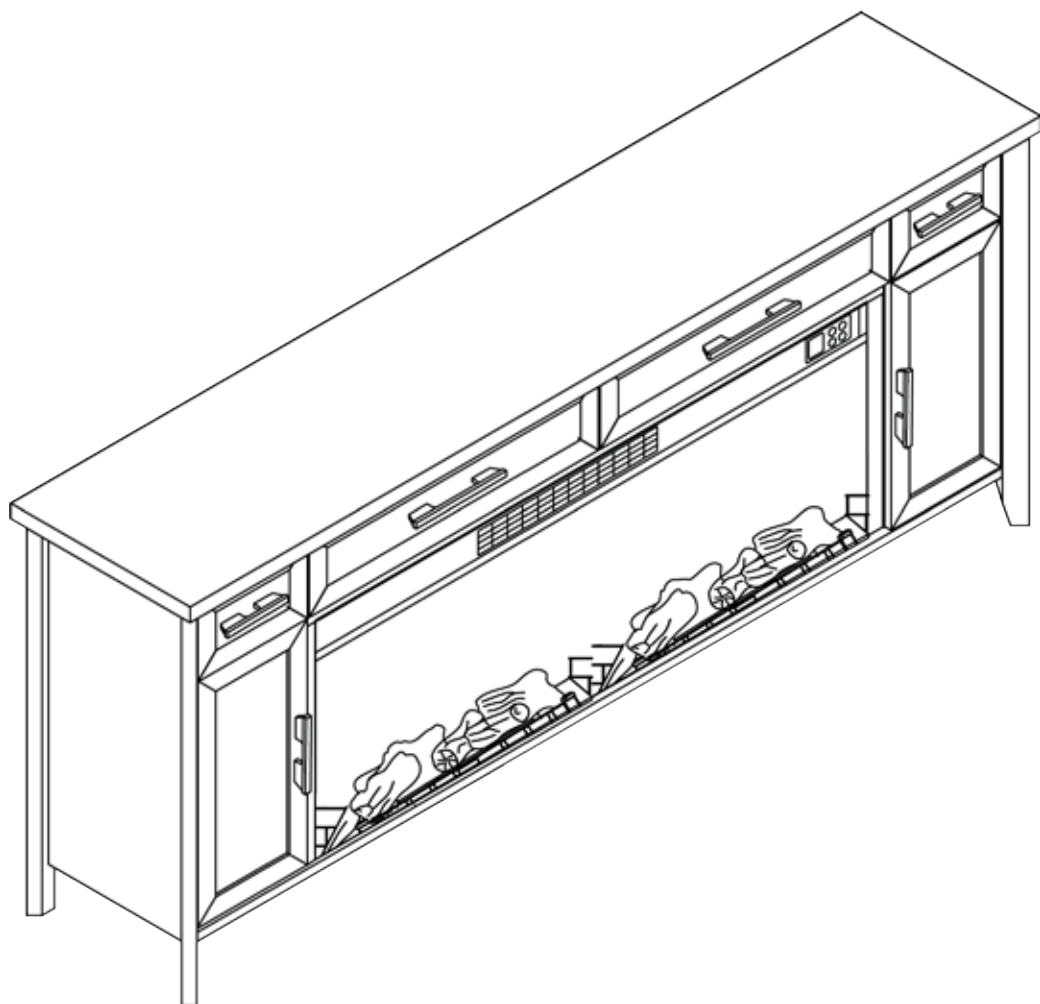



Instruction Manual

Read Before Assembly

The instruction booklet contains **IMPORTANT** safety information. Please read it in full and keep it for future reference.



 
 
WARNING!

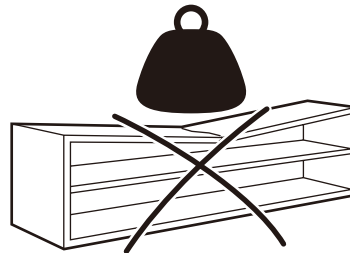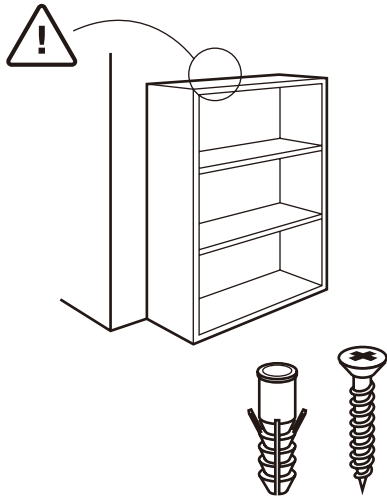

- Serious or fatal crushing injuries may occur if the furniture tip-over. Furniture must permanently affixed to the wall with anti-tipping device(s) in order to prevent the furniture from tipping over.
- Different wall materials requires different type of wall anchors or screws. Use a suitable wall anchors or screws for your specific wall in order to secure the stability and load bearing capacity of the furniture. If you are uncertain about which type of device to use, please contact us or local hardware store and seek professional advice.
- Only place items that is within the recommended size and weight limit of the furniture.
- Items placed onto the furniture must be resting on a support surface without hanging over the edges.
- Climbing on, stepping on, or placing overweighted objects on the product may cause property damage and / or injuries.



  CAUTION!

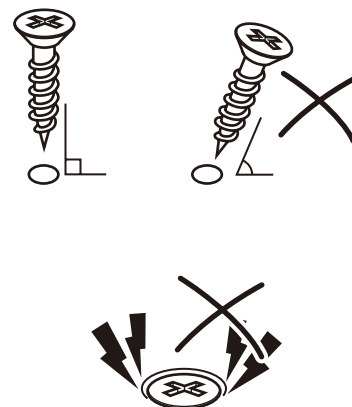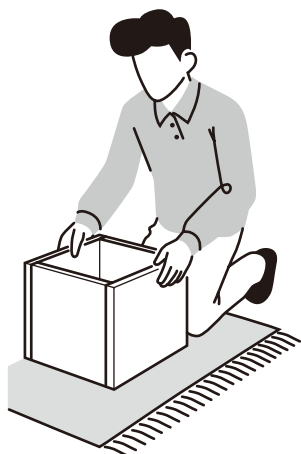

- Assemble the furniture on an empty carton, carpet, or rug to prevent scratches or damage.
- When assembling the furniture, keep pets and children away from the assembly area.
- Ensure the product is fully assembled before use. If you are missing any hardware or parts, do not use it until you have restored the missing parts.
- This furniture requires 2 people for assembly.
- Lay out all components and hardware separately on a flat surface and make sure that no parts are missing or damaged before assembly. Do not destroy or discard any packaging until you are certain that you have all the necessary parts for assembly.
- There are small components used in the construction of the furnitures. Loose items, plastic bags, and packaging films should be kept away from pets or children to avoid choking hazard or suffocations.
- Read this instruction manual prior to assembly and familiarize yourself with the various steps.
- Install all hardware perpendicular to the opening unless otherwise specified.
- Hand tight all hardware and careful not to over-tighten to avoid damaging the product.

Assembly Symbols



- Follow sequential order.



- Build specified number of parts.



- Flip part as indicated.



- Rotate part as indicated.



- Choose your own assembly options.



- Pay attention to the part orientation.



- Leave bolts or screws partially tighten.



- Fully tighten bolts or screws.



- Level the furniture on the ground.

 


Estimated Time for Assembly


120 mins




Weight Capacity Limitations are as Follows:

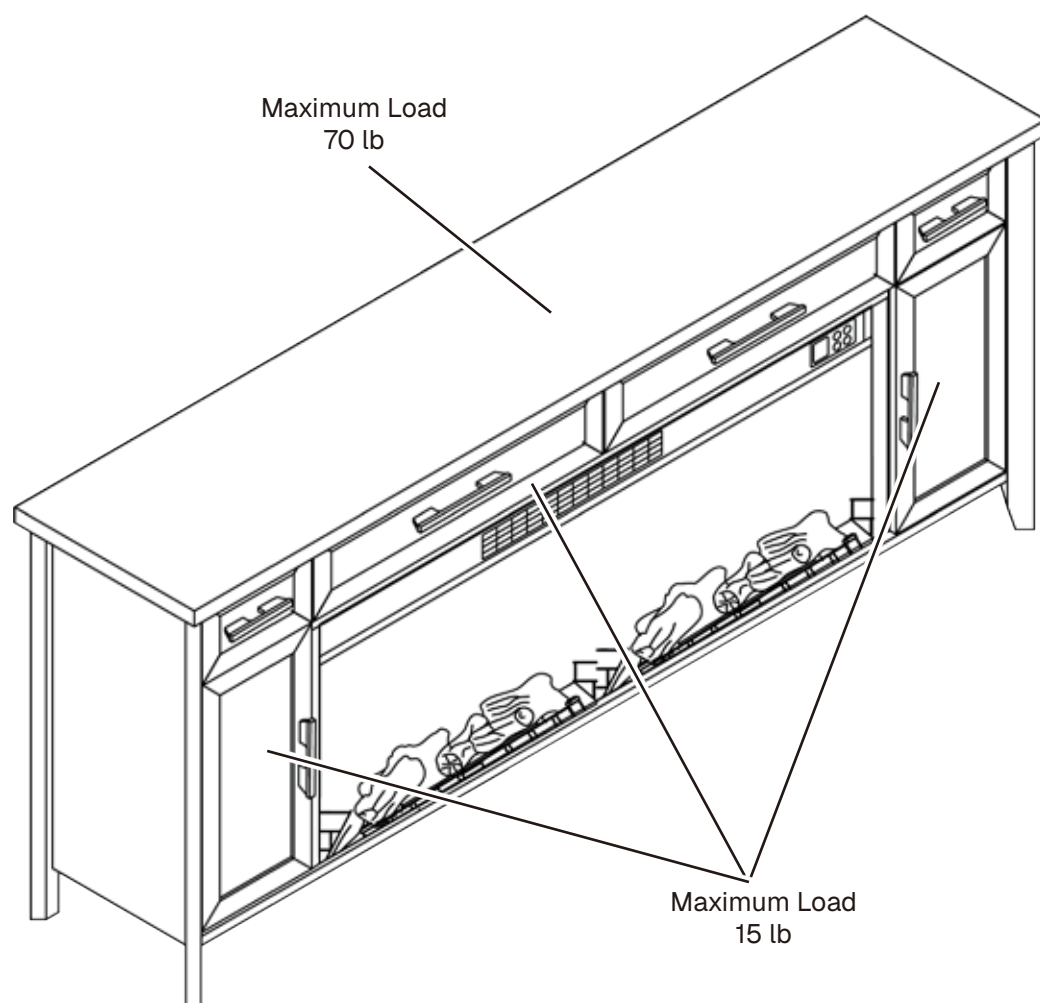


Tools Needed

 

• Philips Screwdriver

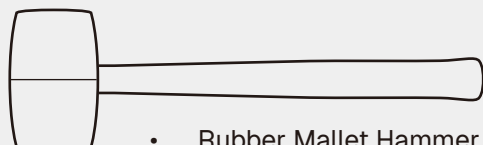 


• Rubber Mallet Hammer

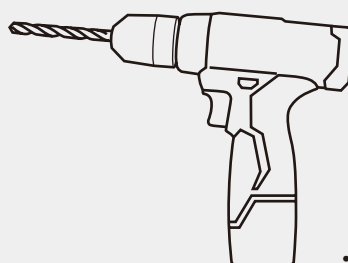 

• Electric Drill

 Package Contents

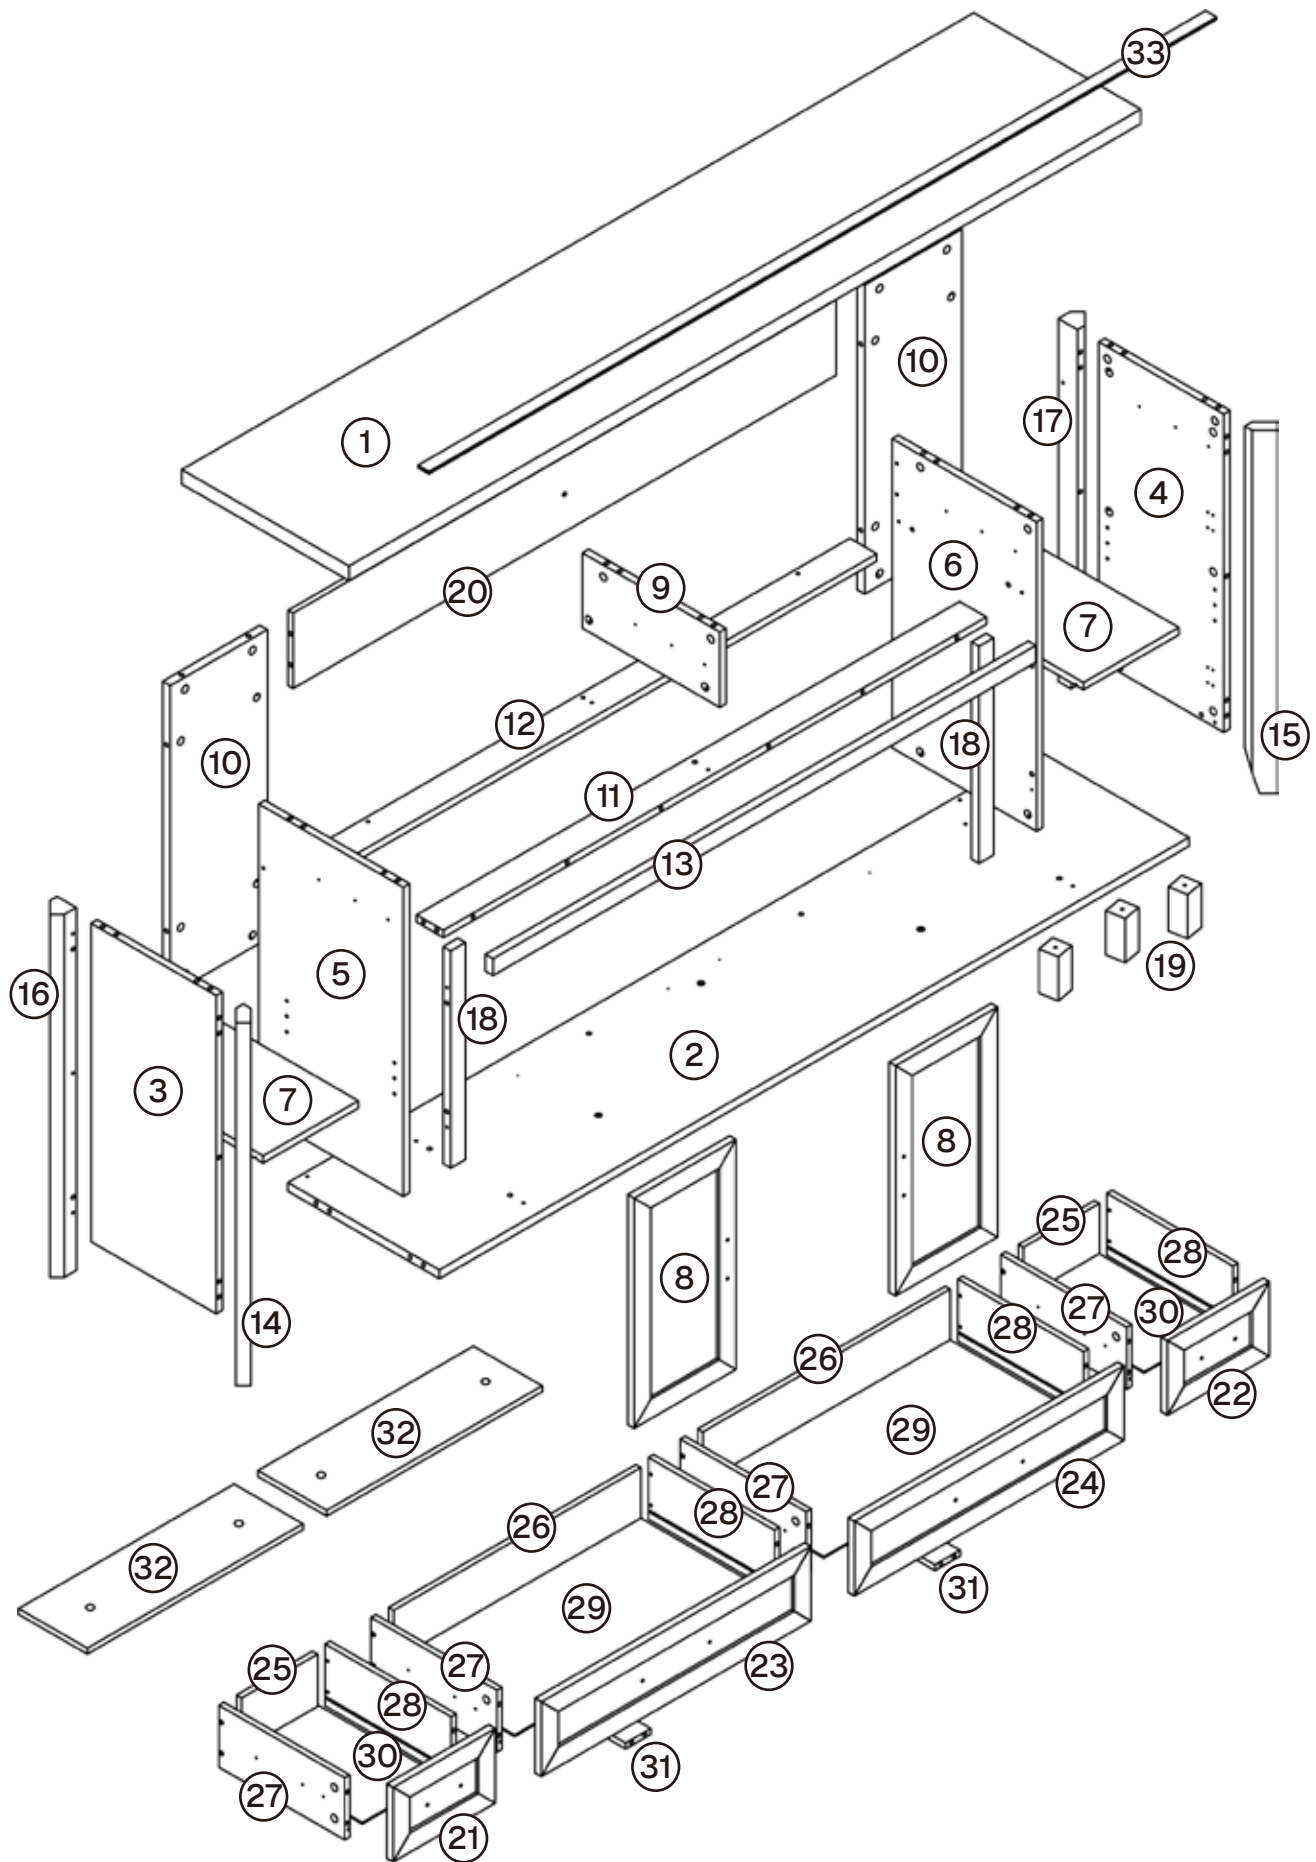

Package Contents

CODE	DESCRIPTION	QTY
1	Top Panel	1
2	Bottom Panel	1
3	Left Lateral Panle	1
4	Right Lateral Panel	1
5	Left Medial Panel	1
6	Right Medial Panel	1
7	Storage Shelf Panel	2
8	Cabinet Door	2
9	Divider Panel	1
10	Side Back Panel	2
11	Front Crossbar	1
12	Back Crossbar	1
13	Top Surround Panel	1
14	Left Front Leg	1
15	Right Front Leg	1
16	Left Back Leg	1
17	Right Back Leg	1

Package Contents

CODE	DESCRIPTION	QTY
18	Side Surround Panel	2
19	Support Leg	3
20	Center Back Panel	1
21	Left Small Drawer Front Panel	1
22	Right Small Drawer Front Panel	1
23	Left Large Drawer Front Panel	1
24	Right Large Drawer Front Panel	1
25	Small Drawer Back Panel	2
26	Large Drawer Back Panel	2
27	Drawer Left Panel	4
28	Drawer Right Panel	4
29	Large Drawer Bottom Panel	2
30	Small Drawer Bottom Panel	2
31	Drawer Support Strip	2
32	Counter Weight Panel	2
33	Top Strip	1

Package Contents

(A)



80x + 4x

(B)



 
56x + 4x

(C)




24x + 2x

(D)



39x + 3x

 (E)



2x

(F)



 
80x + 4x

(G)



8x

(H)




4x

(J)




3x

 (K)



2x

 (L)

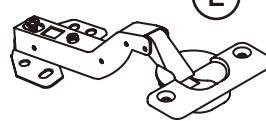


4x

(M)




24x + 2x

 (N)

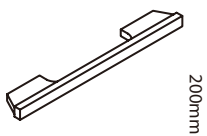

2x

 (O)



4x

(P)



4x

(Q)



8x

Package Contents

(R)



10" x 35mm

8x

(S)



ø3.5 x 12

54x + 4x

(T)



ø4 x 30

20x + 2x

(U)



ø4 x 38

 
4x

(V)



2x


(W)



ø4 x 18

2x

 (X)



ø4 x 25

2x

(Y)



2x

(Z)



 
1x

(AA)



1x

(AB)

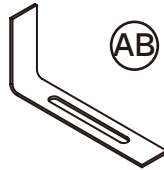

3x

(AC)



ø4 x 25

 
 
4x

01

Detaching slide runners from slide brackets



R 8x

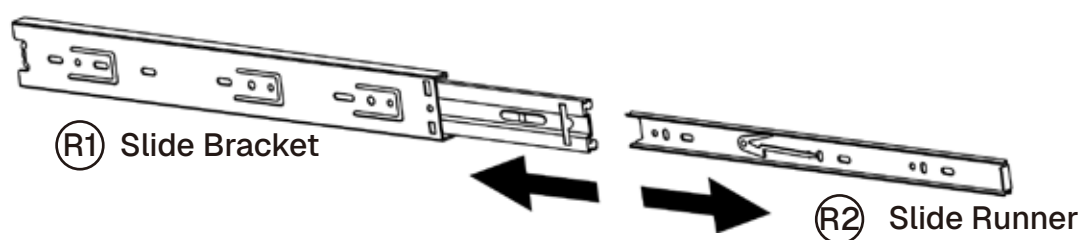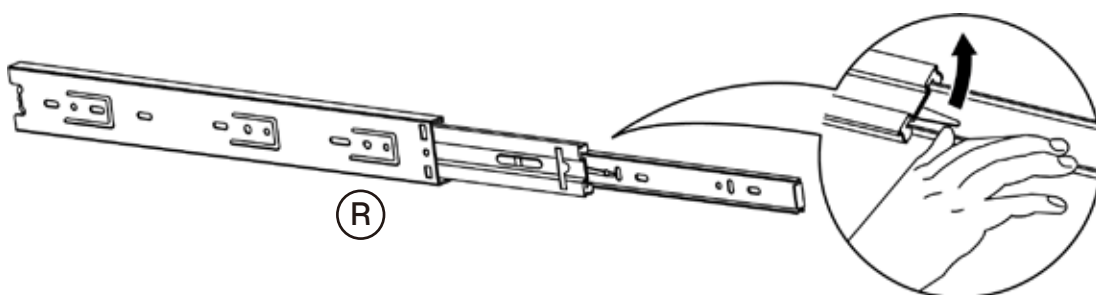

R1 2x

02 Divider panel

 
 
 
 
 


R1 2x



S 6x

★ The left and right slider brackets use different screw openings. Confirm using the designated screw opening to ensure proper fit.

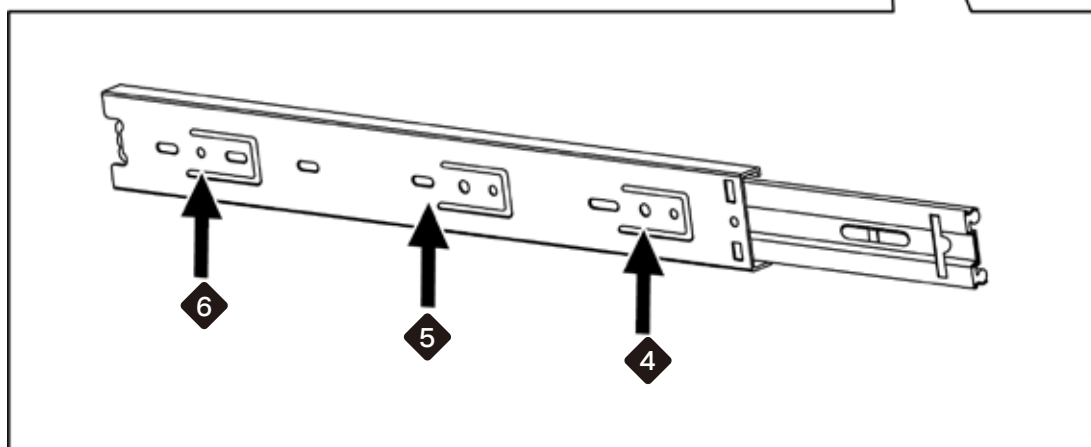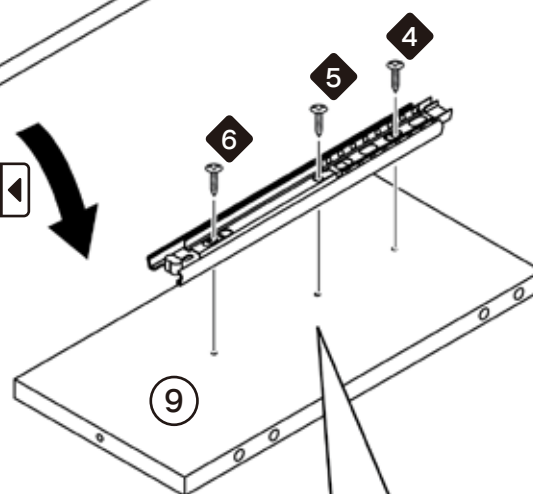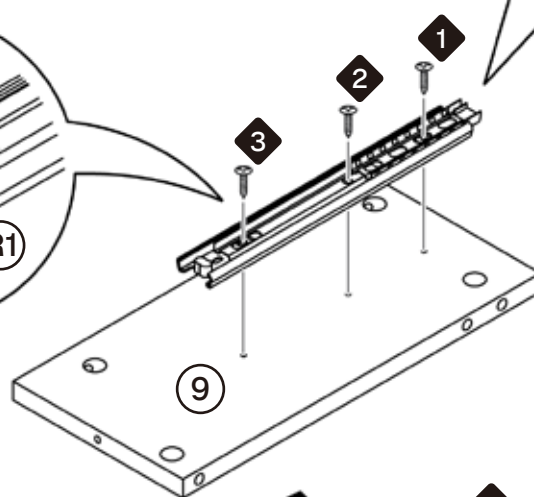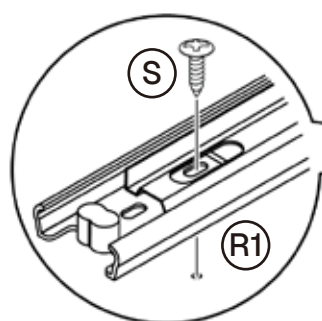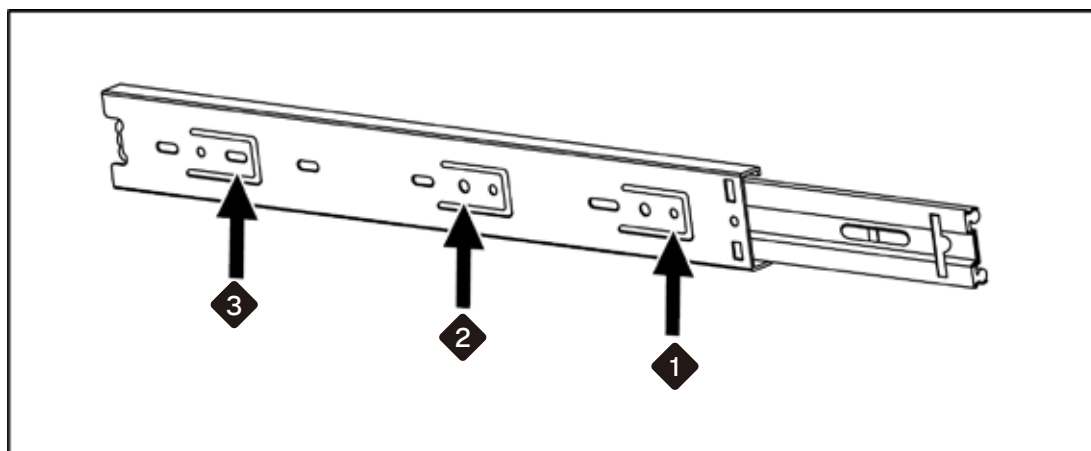

03 Left medial panel

 


R1 2x








S 6x

★ The left and right slider brackets use different screw openings. Confirm using the designated screw opening to ensure proper fit.

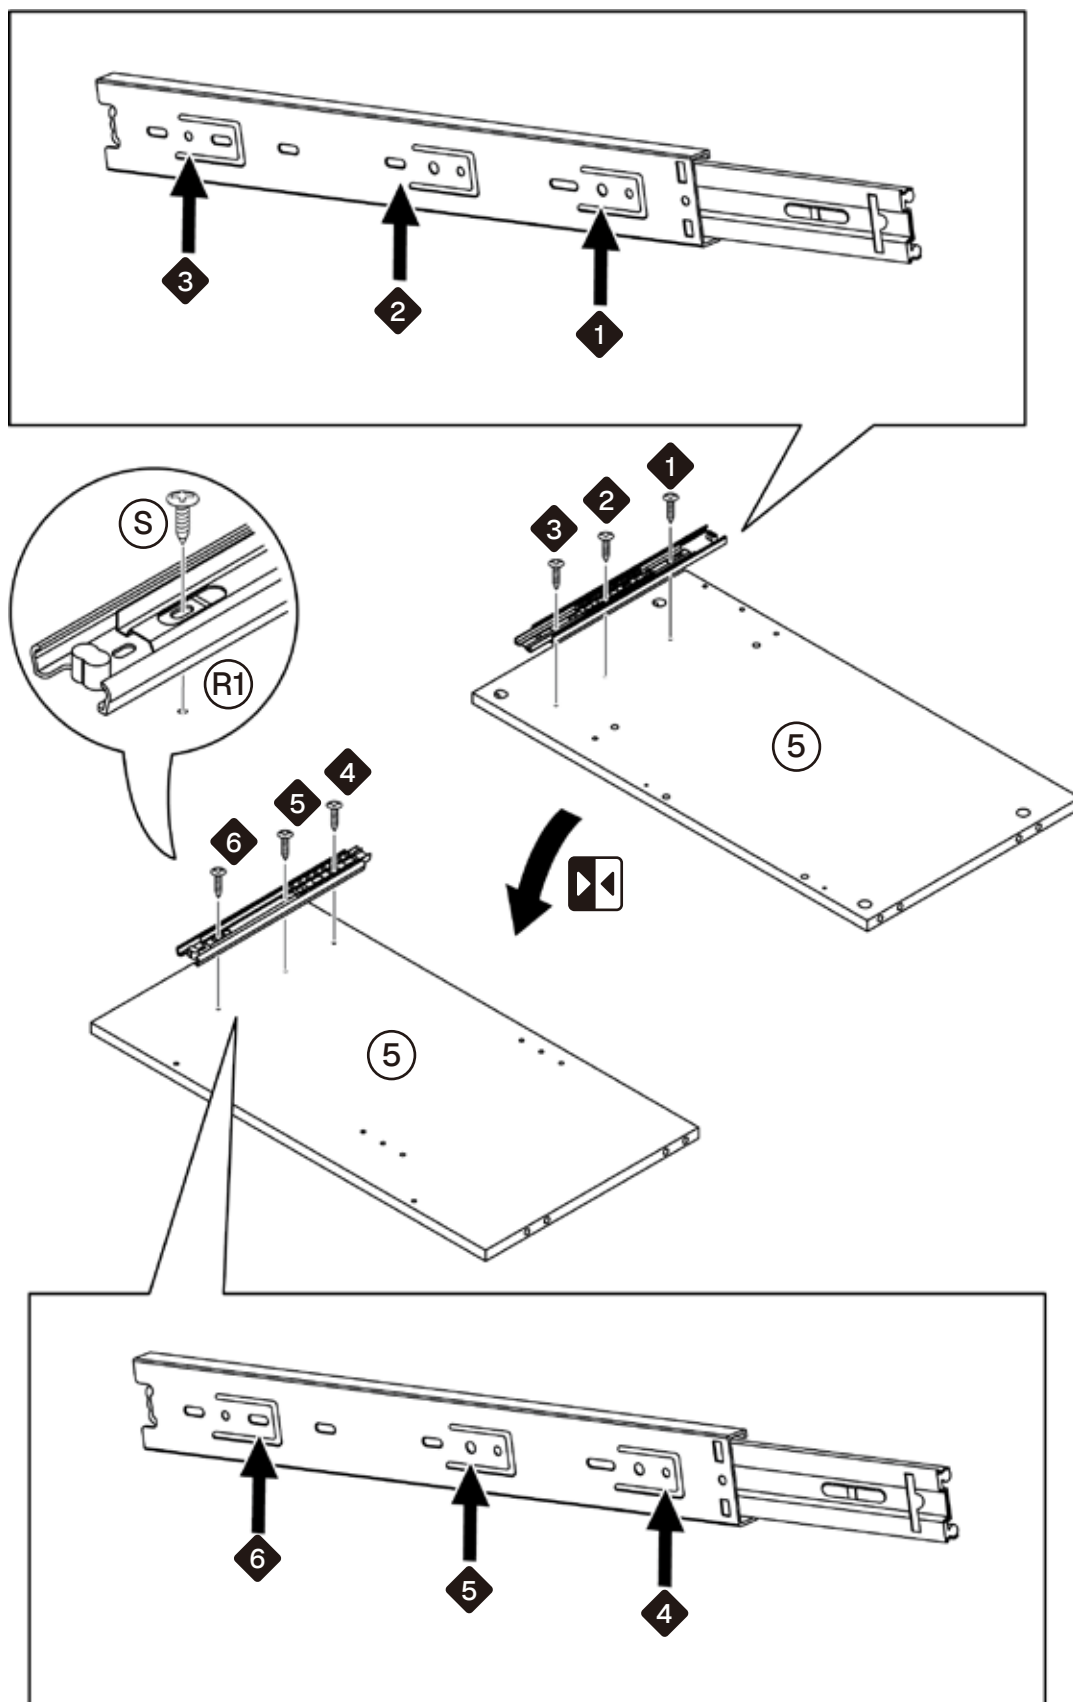

04 Right medial panel

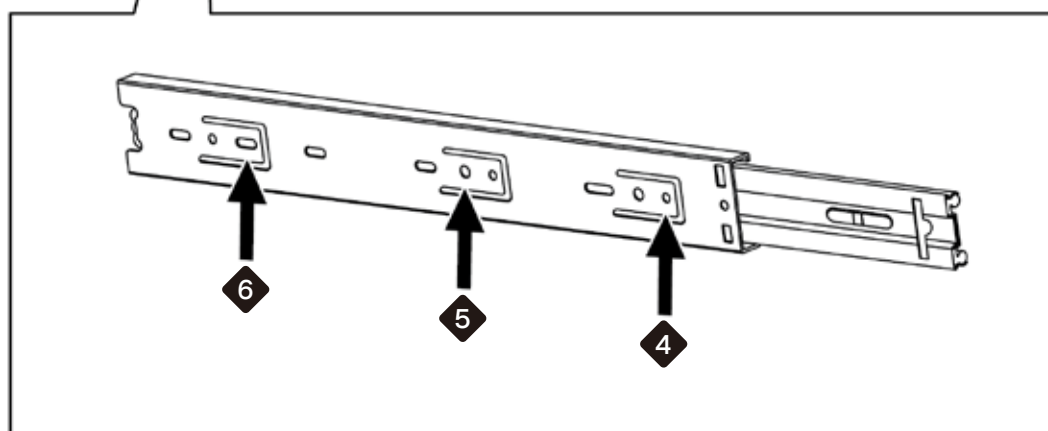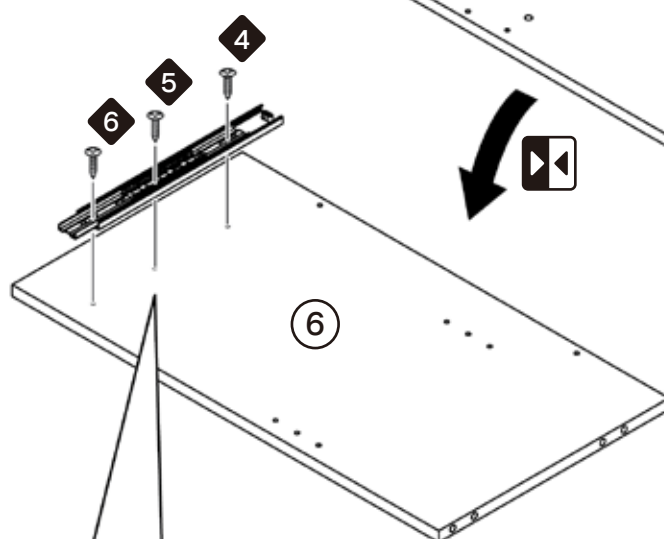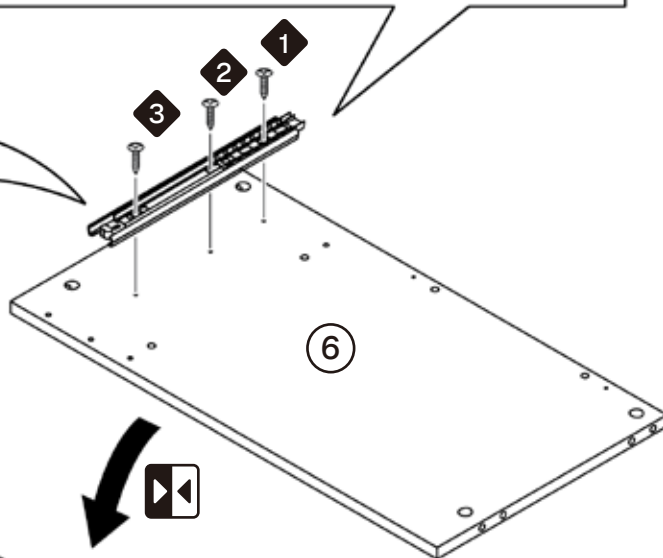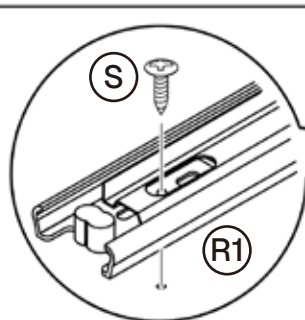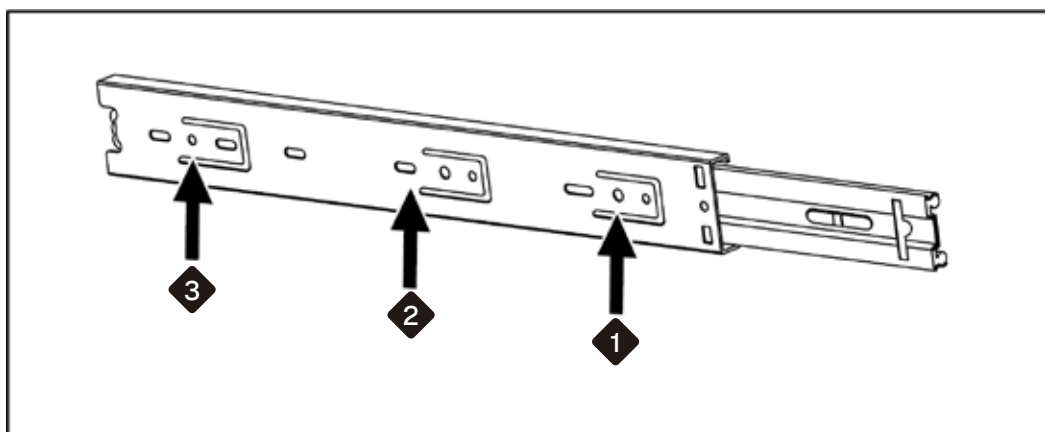     

R1 2x



S 6x

★ The left and right slider brackets use different screw openings. Confirm using the designated screw opening to ensure proper fit.

 
 
 
05 Lateral panel



R1 2x




S 6x

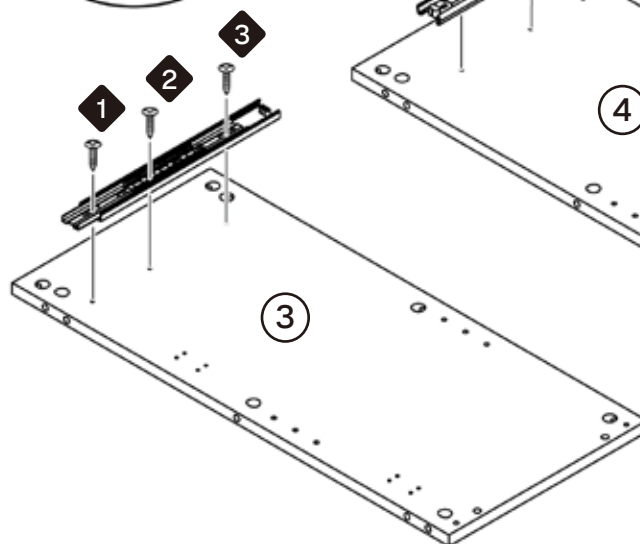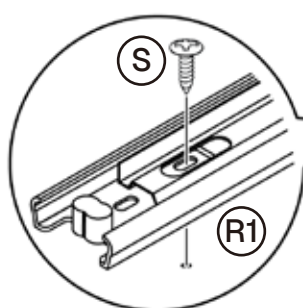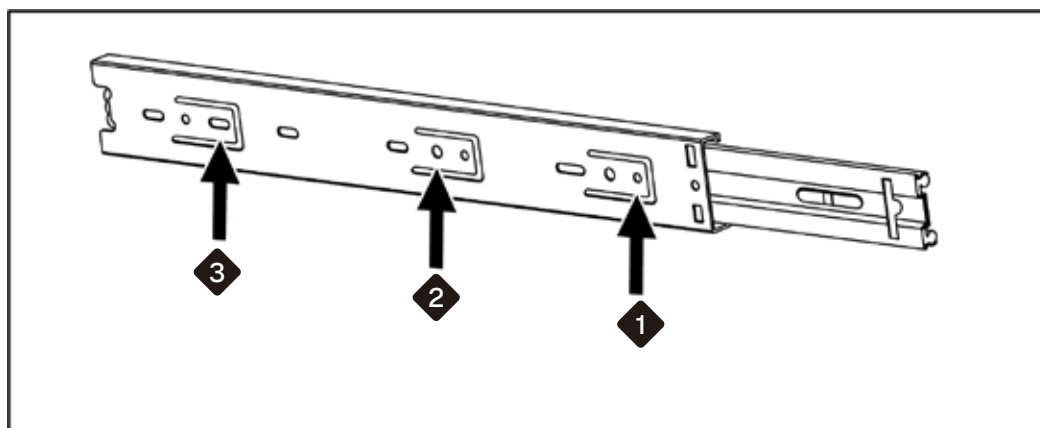

06 medial panels



 
A 12x

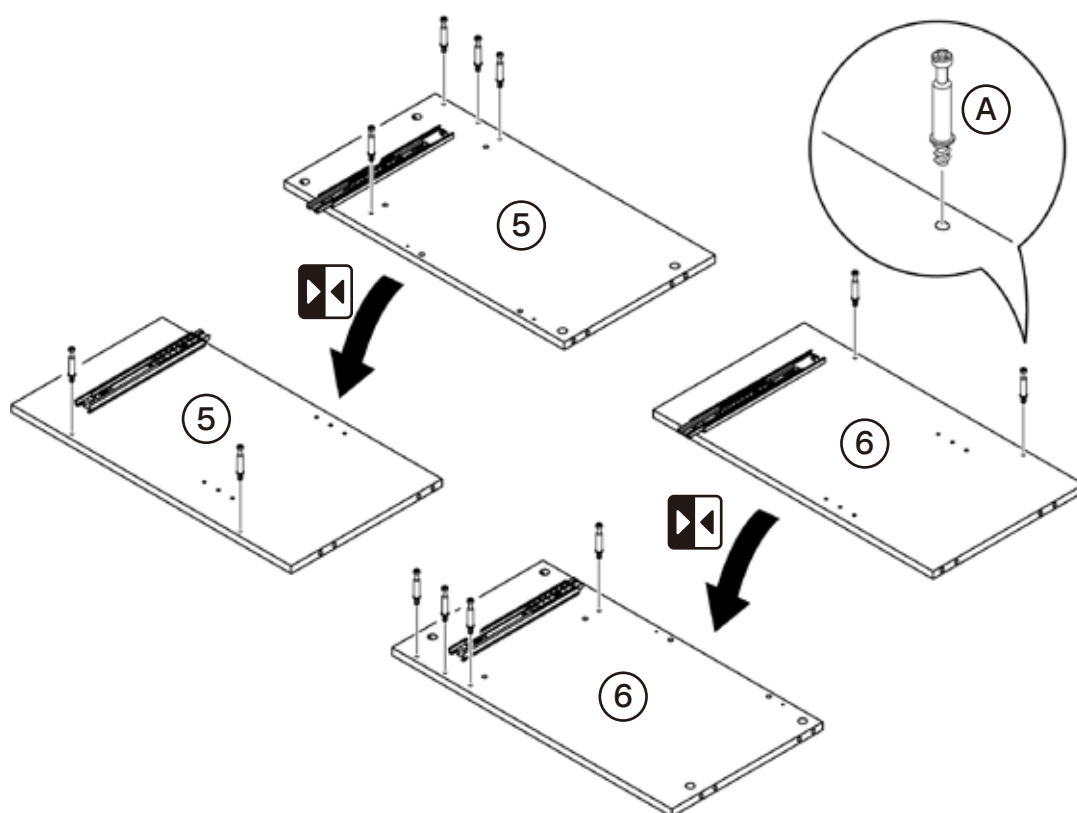

07 Crossbars and top surround panels




 A 6x

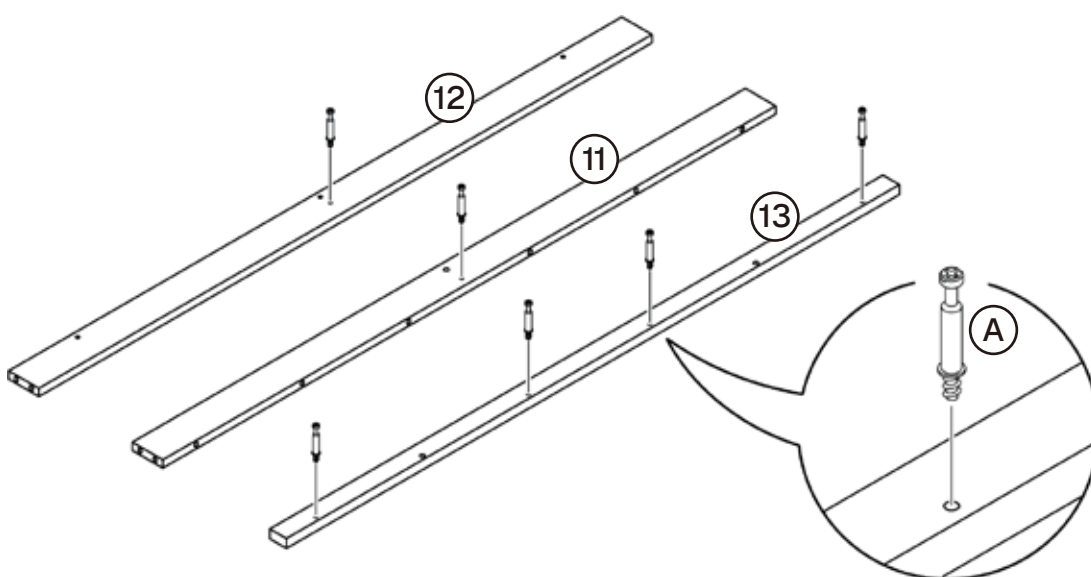


08

 Medial panels, divider panel, crossbars, side surround panels and center back panel



D 23x

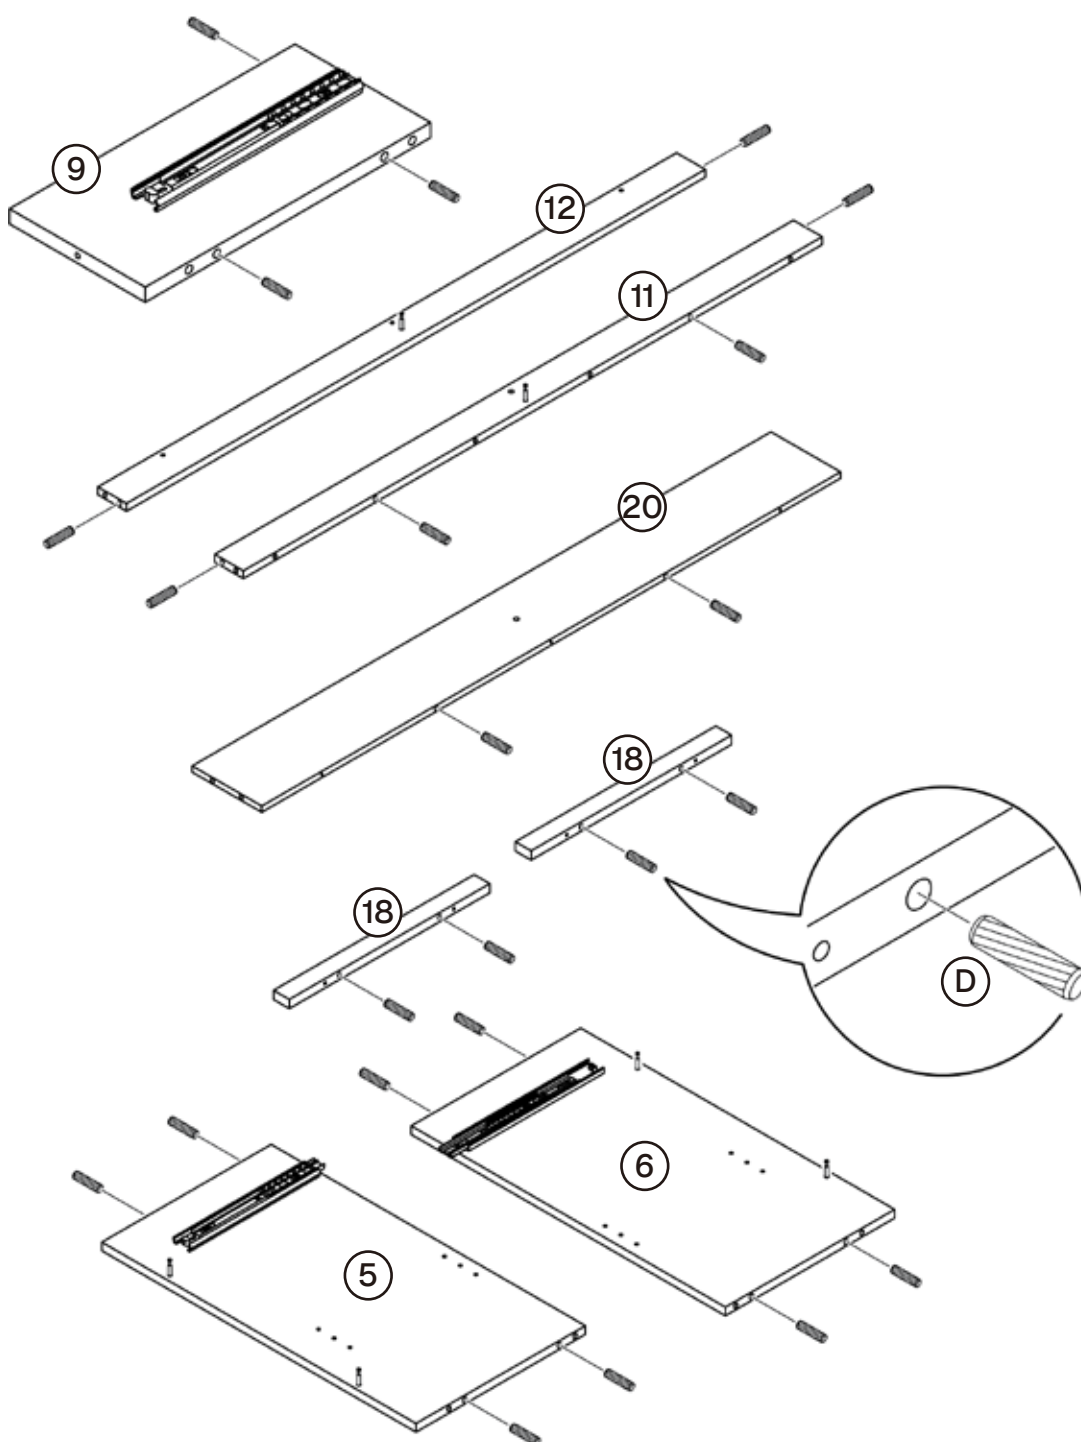 


09 Assembling divider panel to center back panel



H 1x



 AA 1x

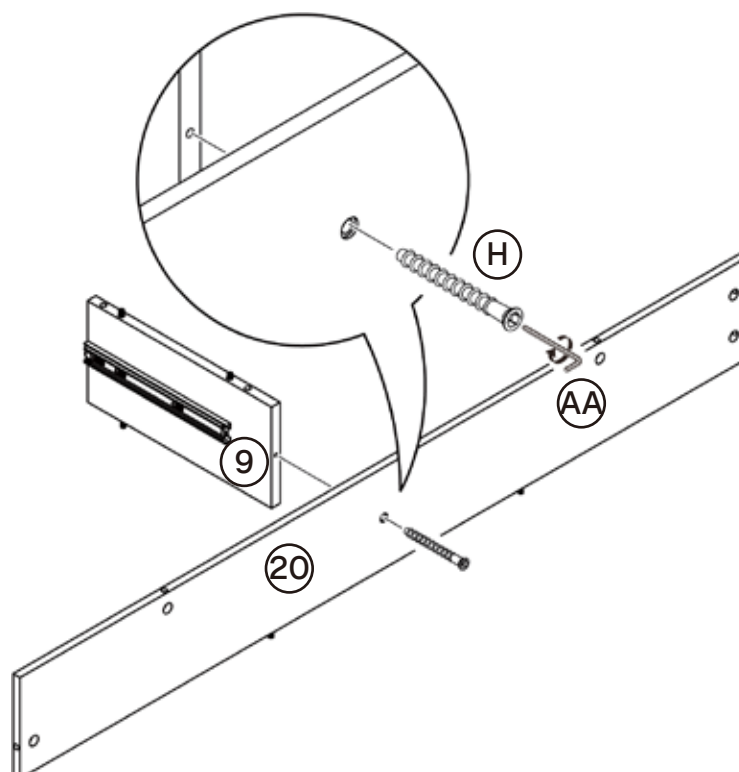



10 Attaching back crossbar to center back panel



J 3x



  Z 1x

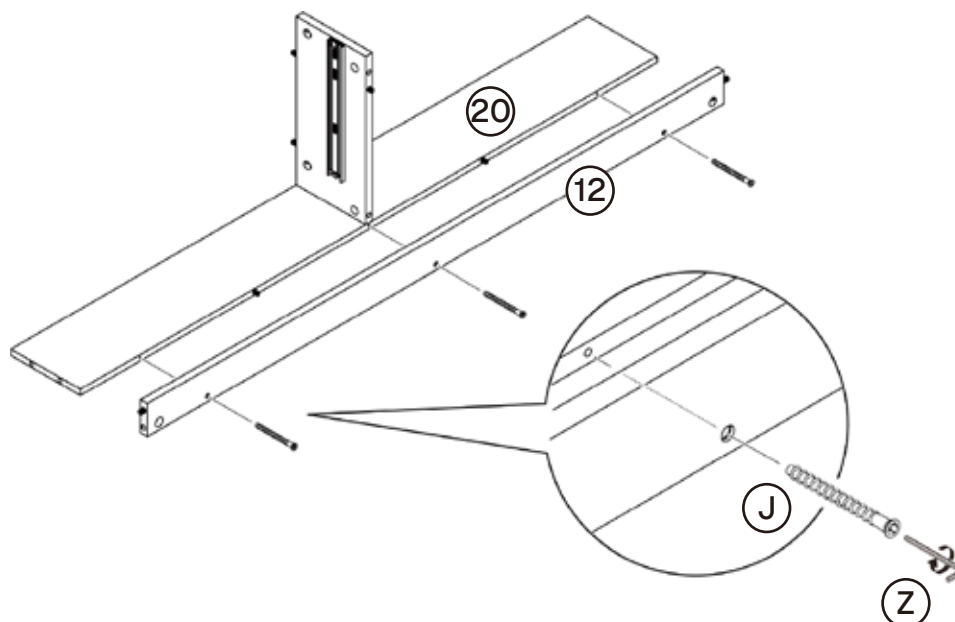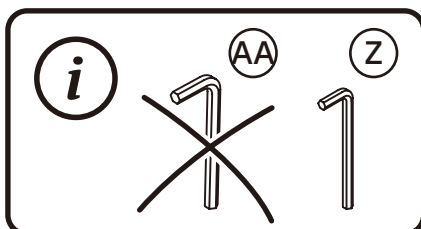

11

 
Securing divider panel



B 1x



F 1x

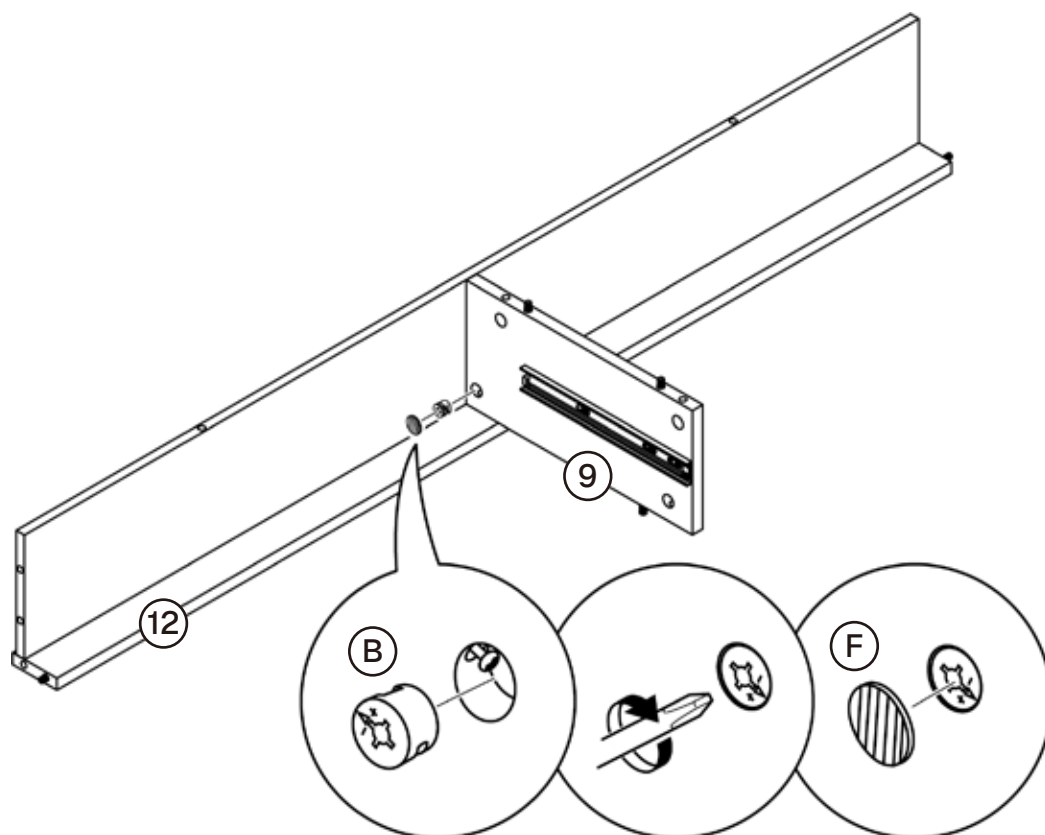

12

 
Assembling top surround panel to front crossbar



B 4x



F 4x

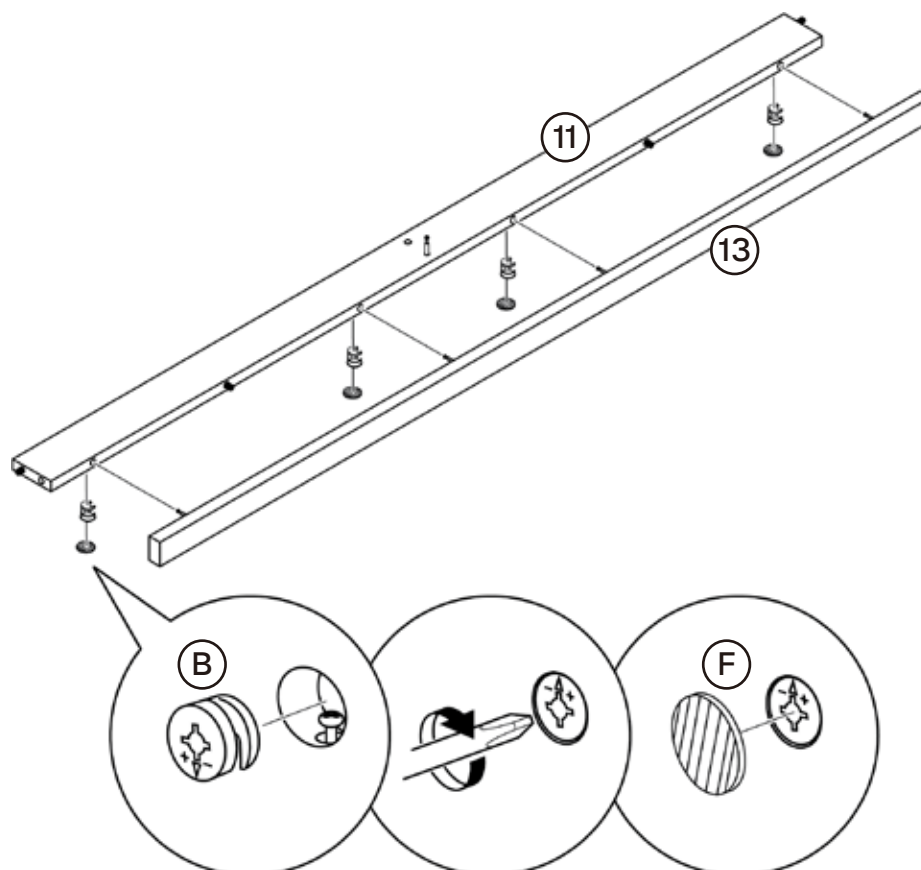

13

 
Assembling front crossbar to divider panel



B 1x



F 1x

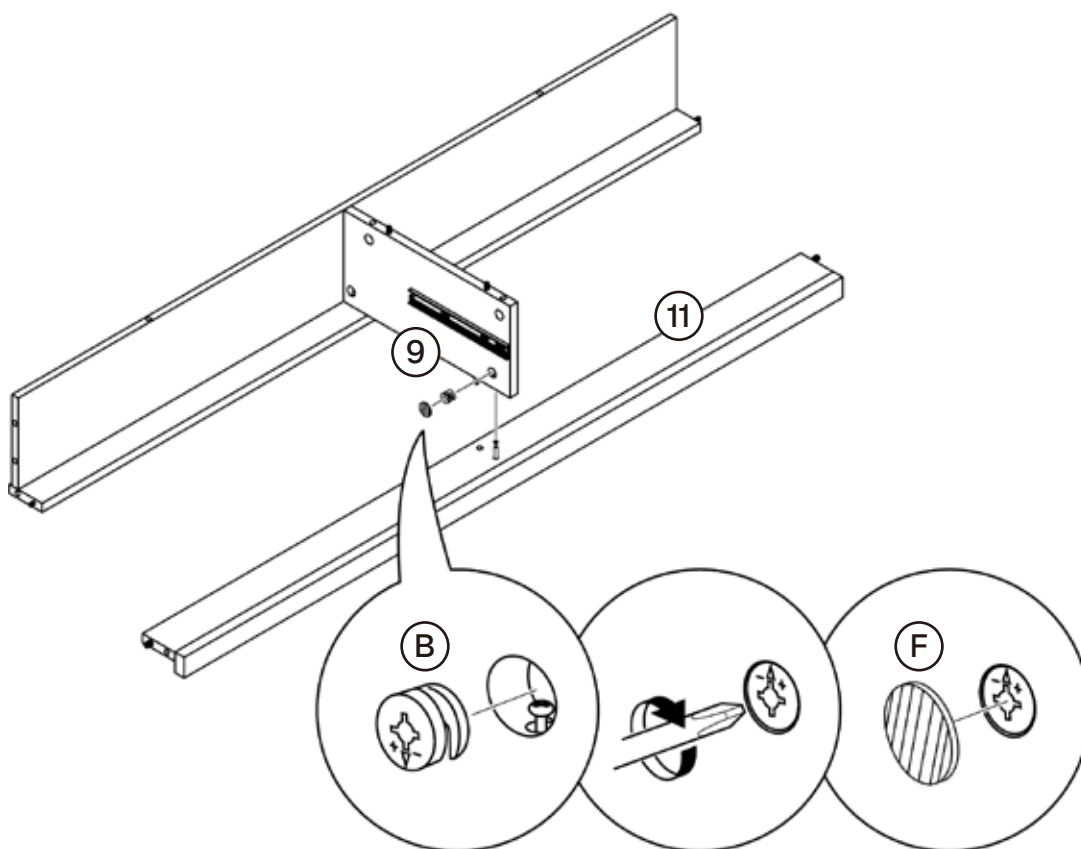

14

 
Attaching right medial panel



B 2x



F 2x

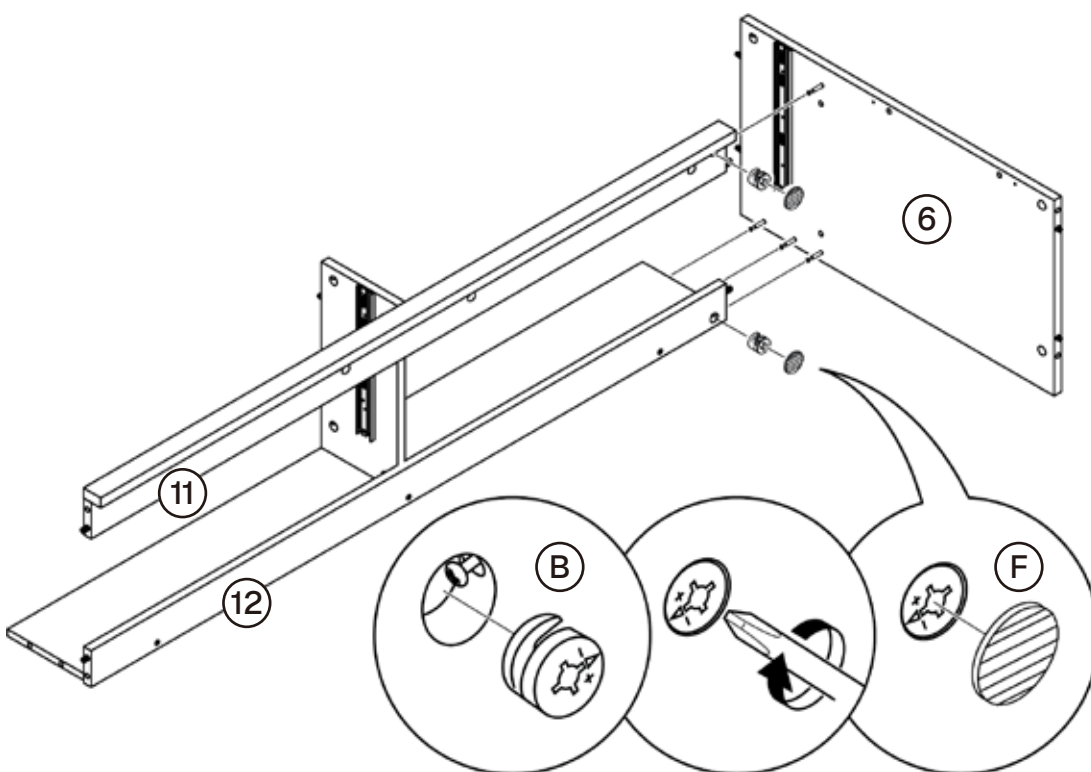

15

 
Attaching left medial panel



B 2x



F 2x

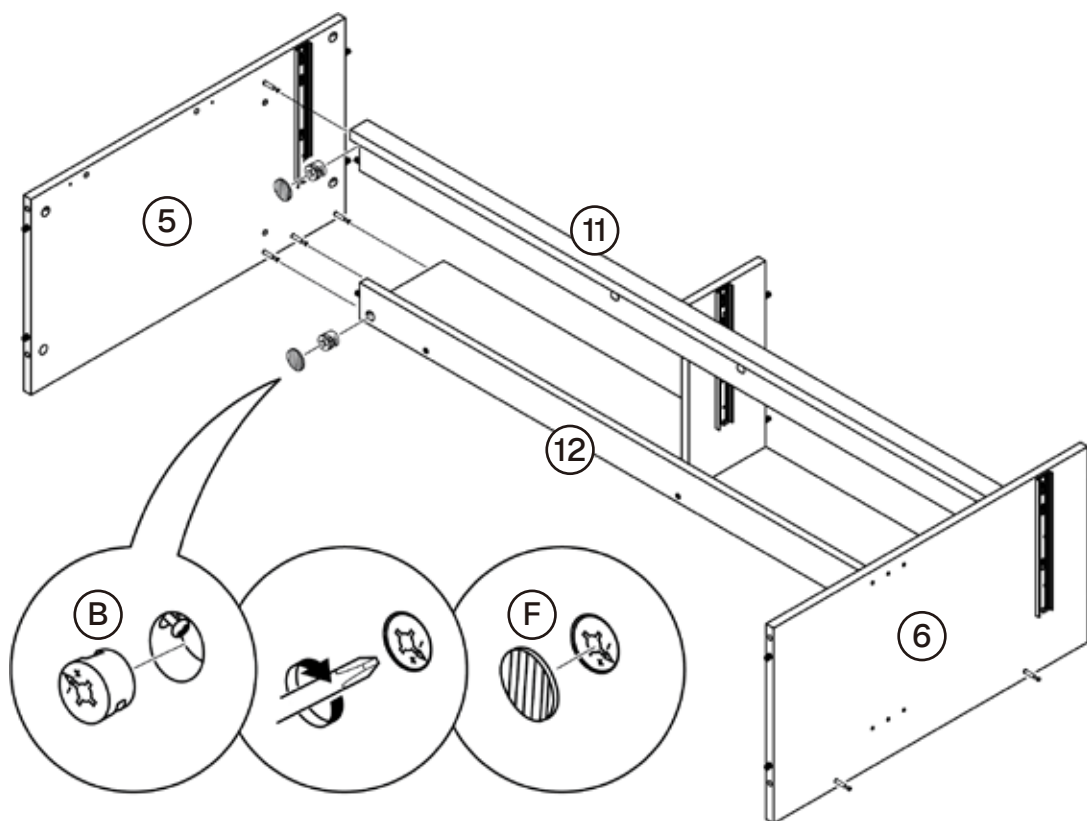

16

 
 
securing center back panel to medial panels



C 4x



F 4x

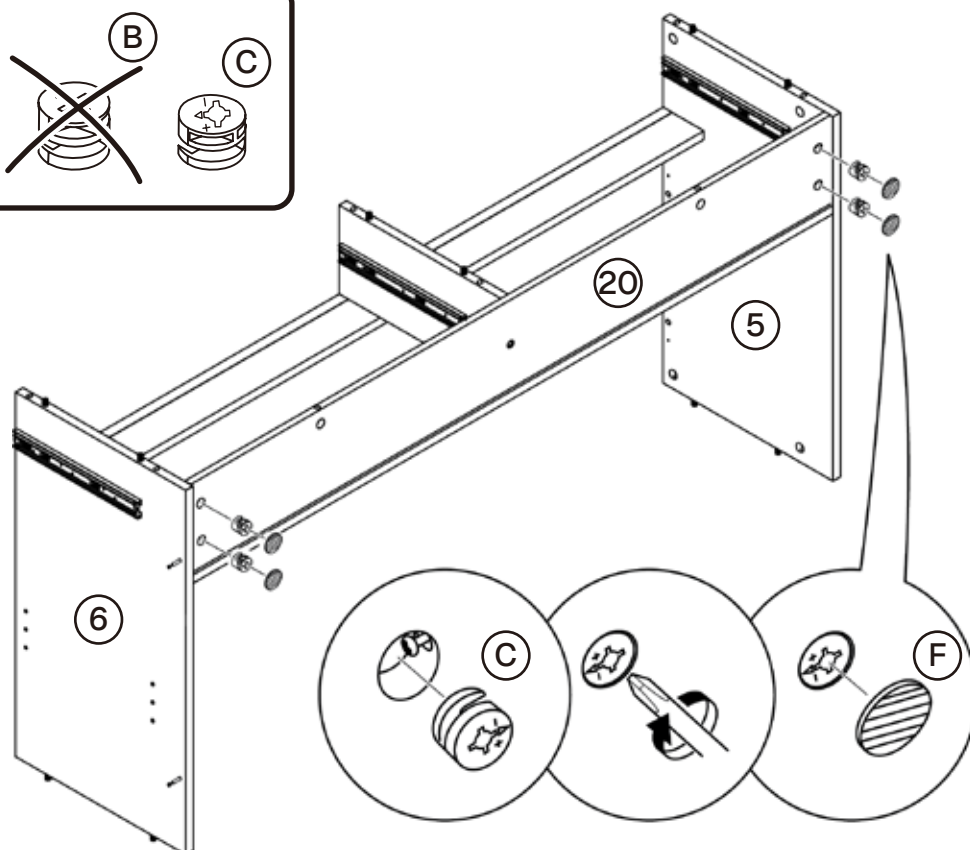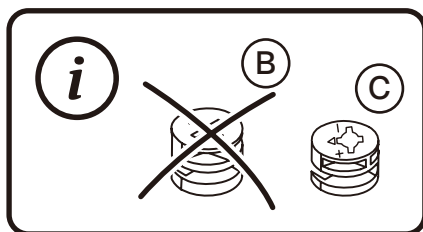


17

Bottom panel and lateral panels



 A 12x

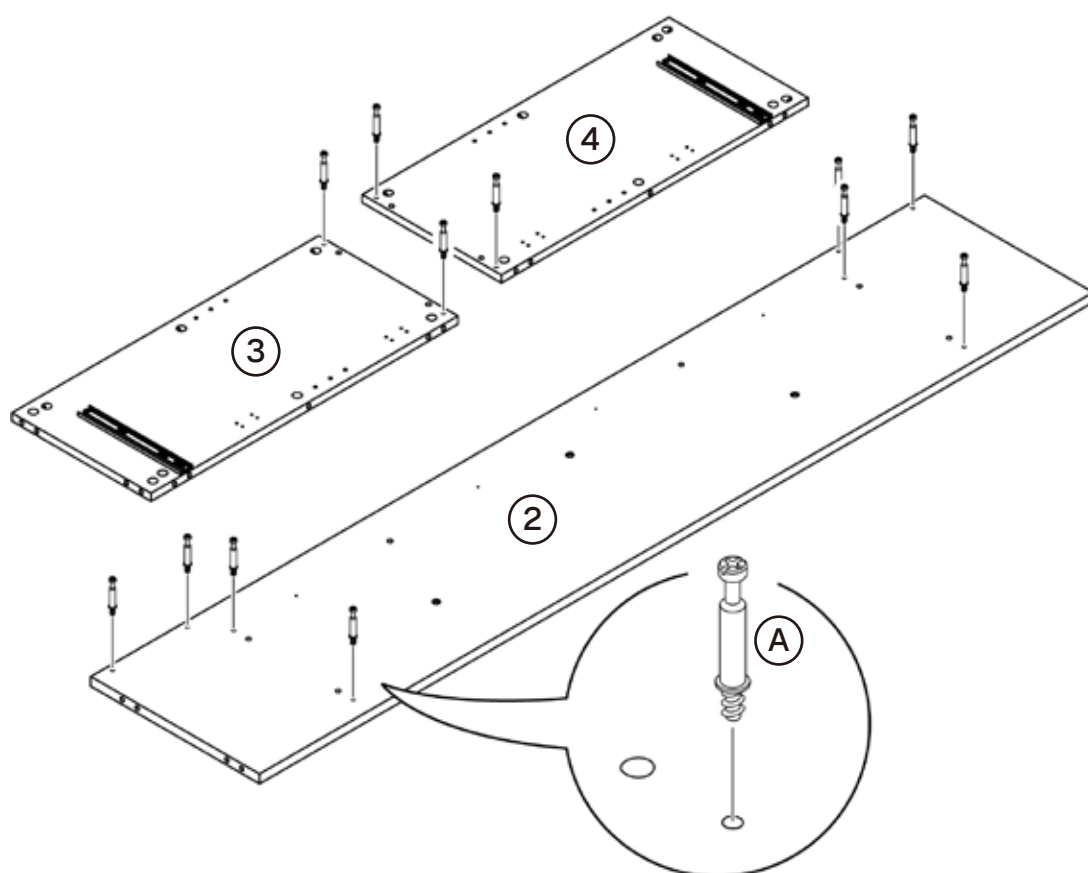


18

Legs




 A 16x

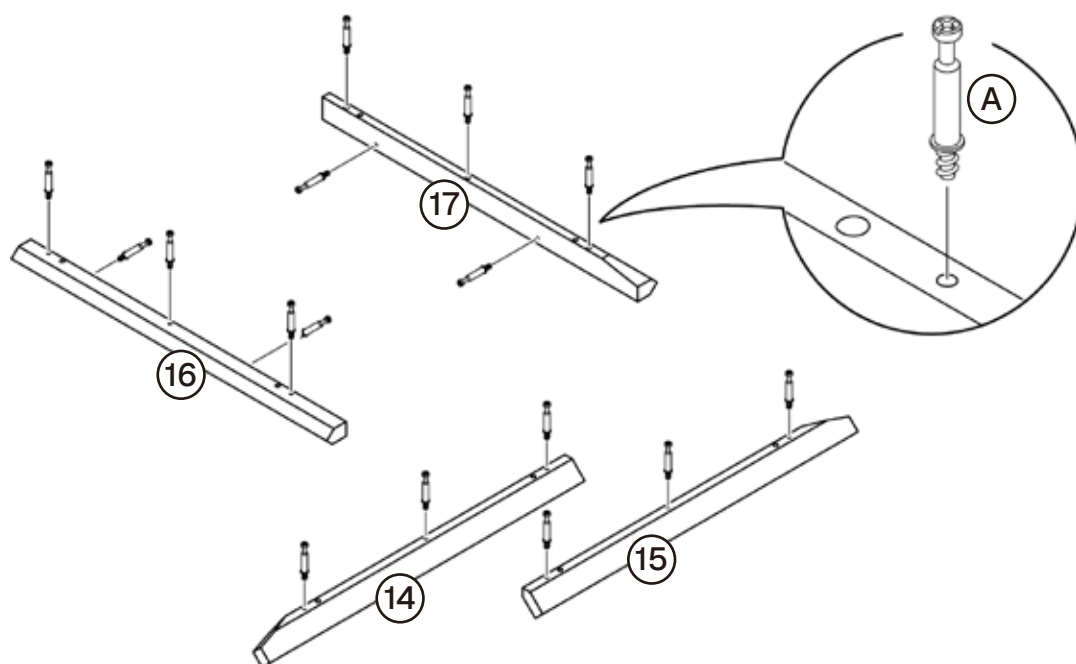


19

 Bottom panel and lateral panels



D 16x

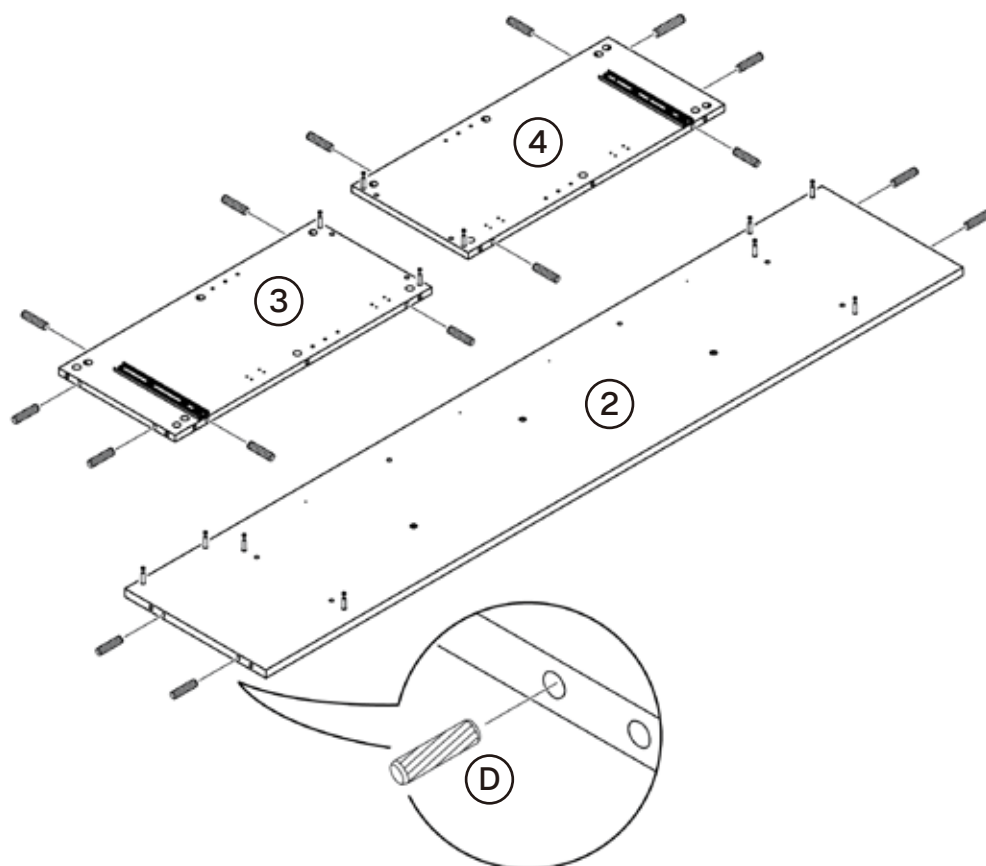 

20

 
Assembling legs to lateral panels



B 12x



F 12x

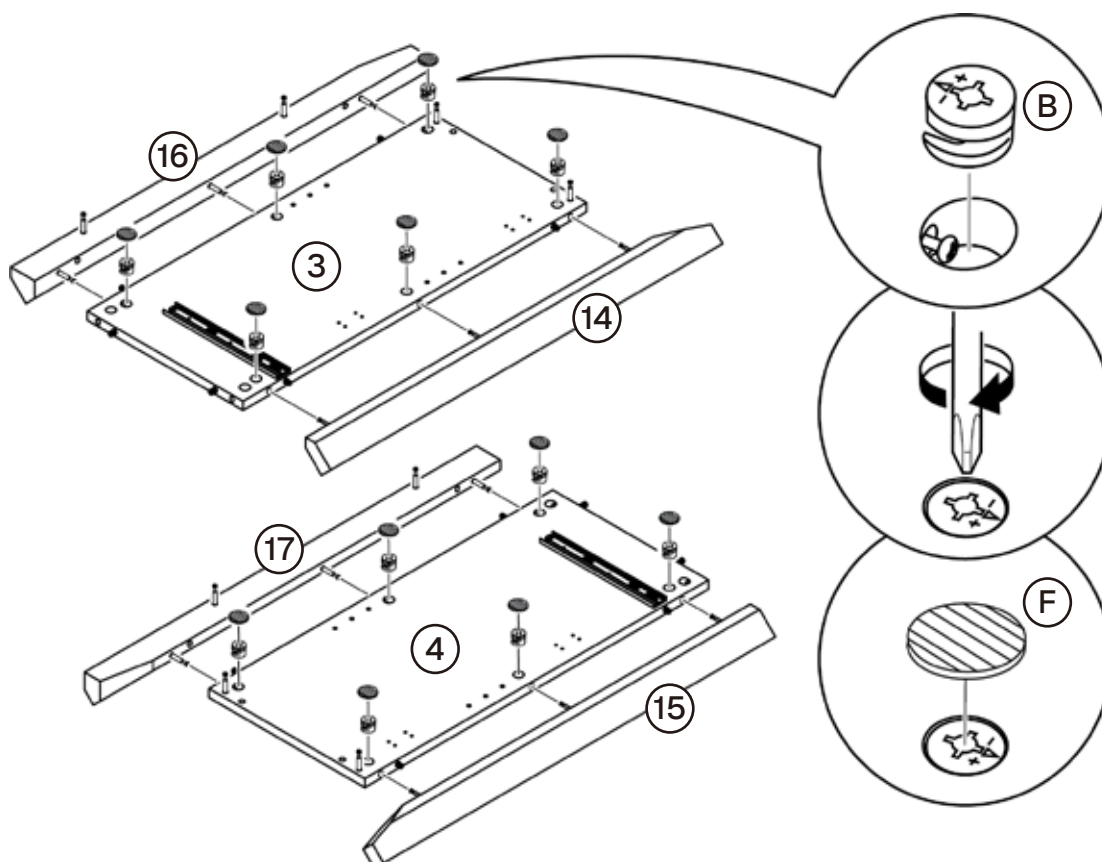


21 Attaching side back panels



B 4x



 F 4x

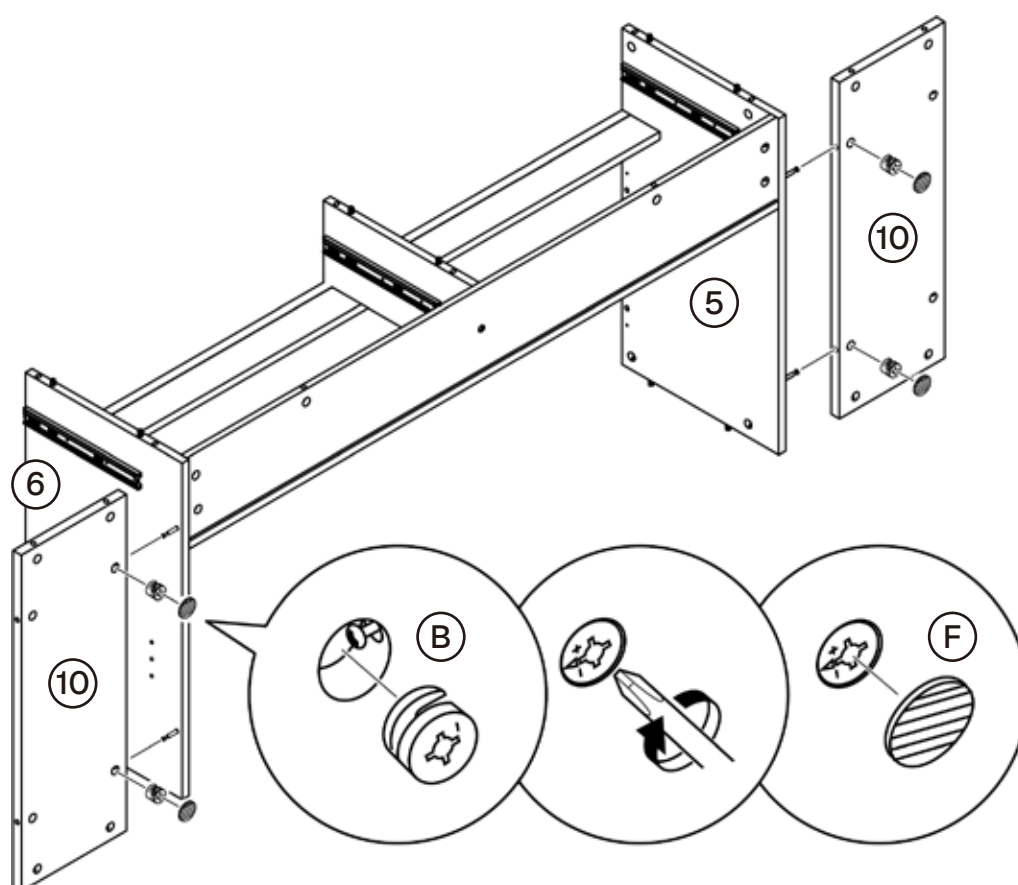


22 Attaching support legs



H 3x



 AA 1x

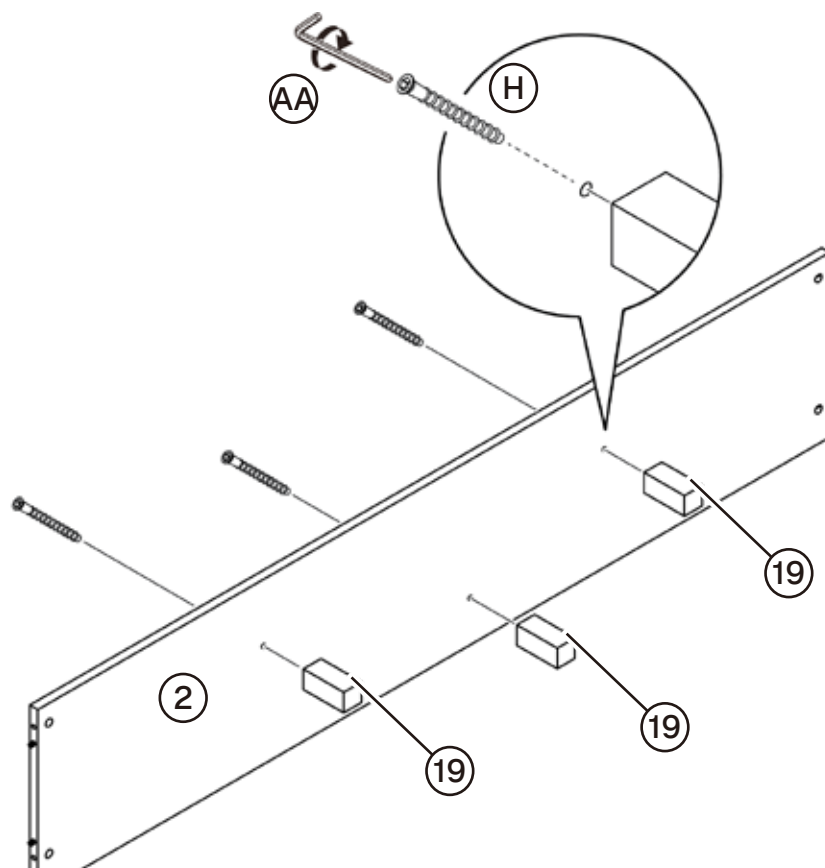


23 Attaching bottom panel



B 4x



 F 4x

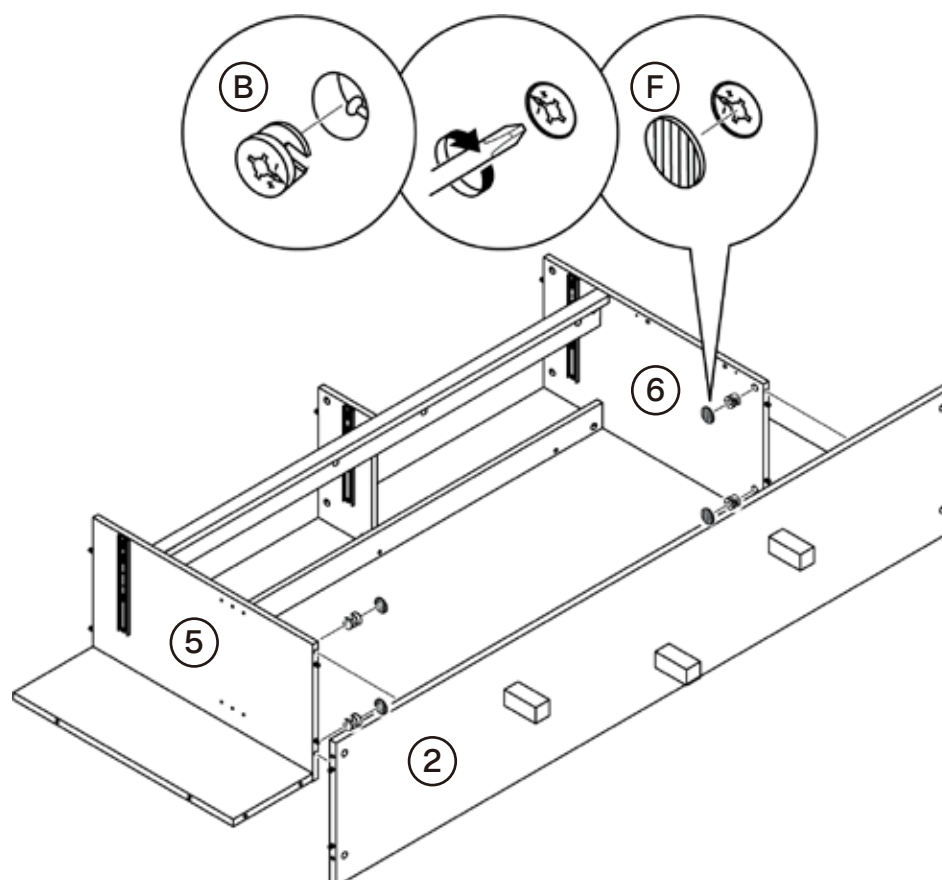


24 Attaching lateral panels



B 4x



 F 4x

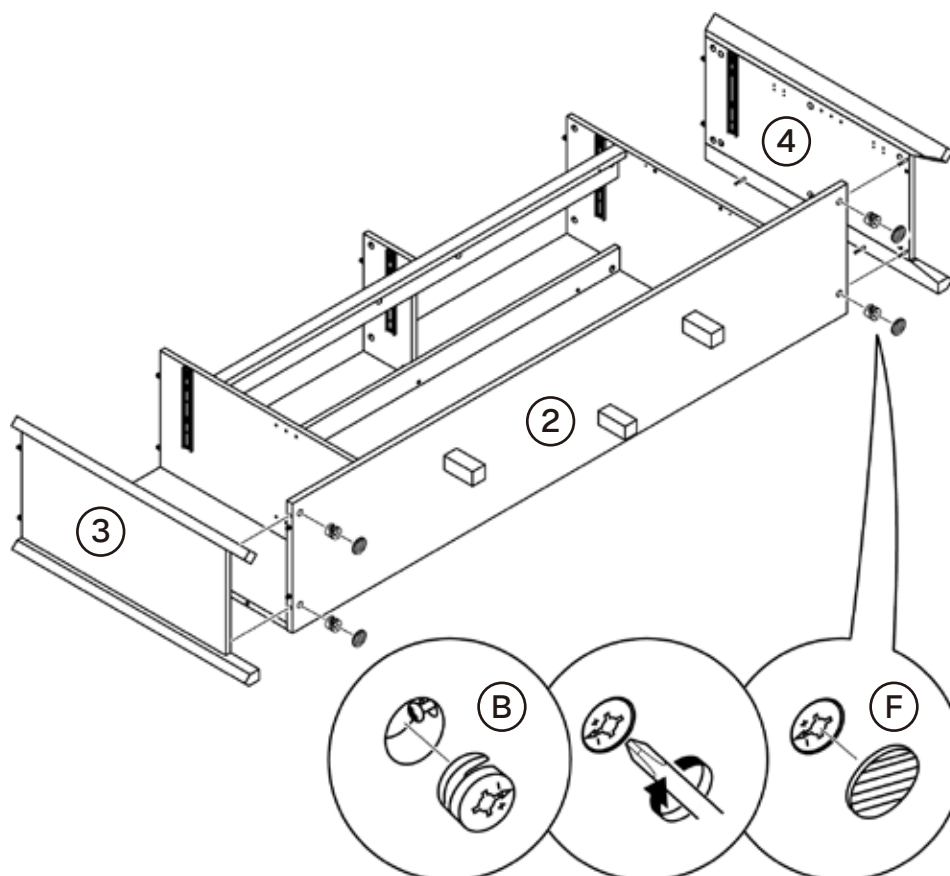


25 Securing side back panels to lateral panels



B 8x



 
F 8x

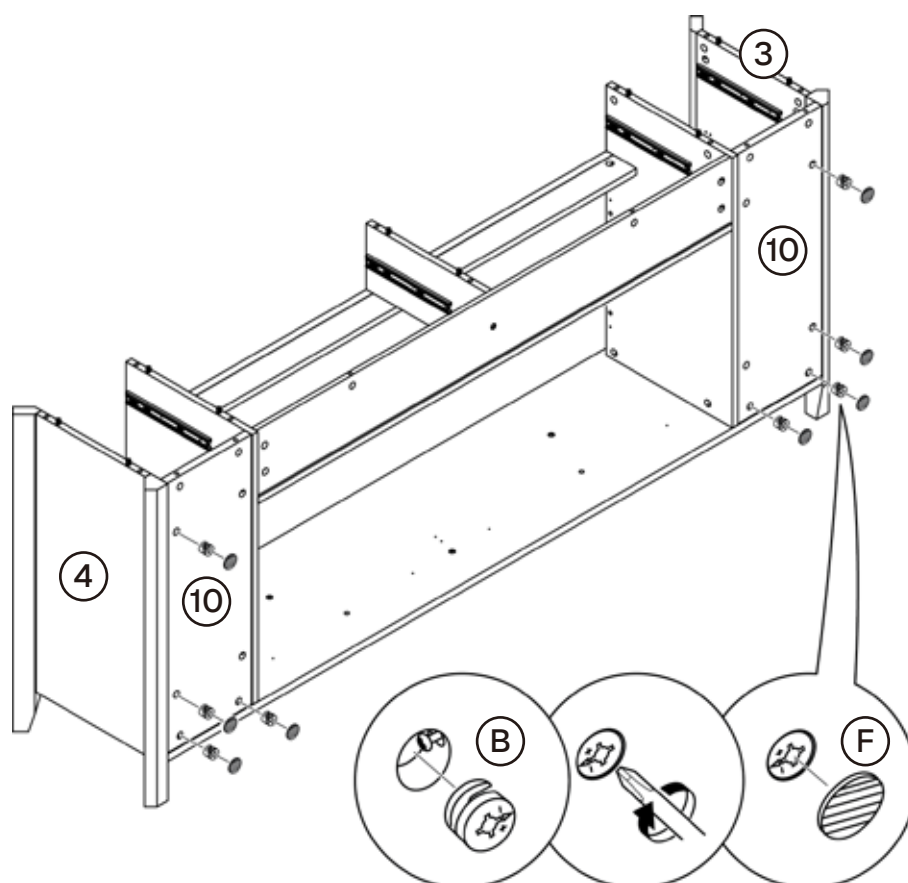

26 Top panel



 A 16x

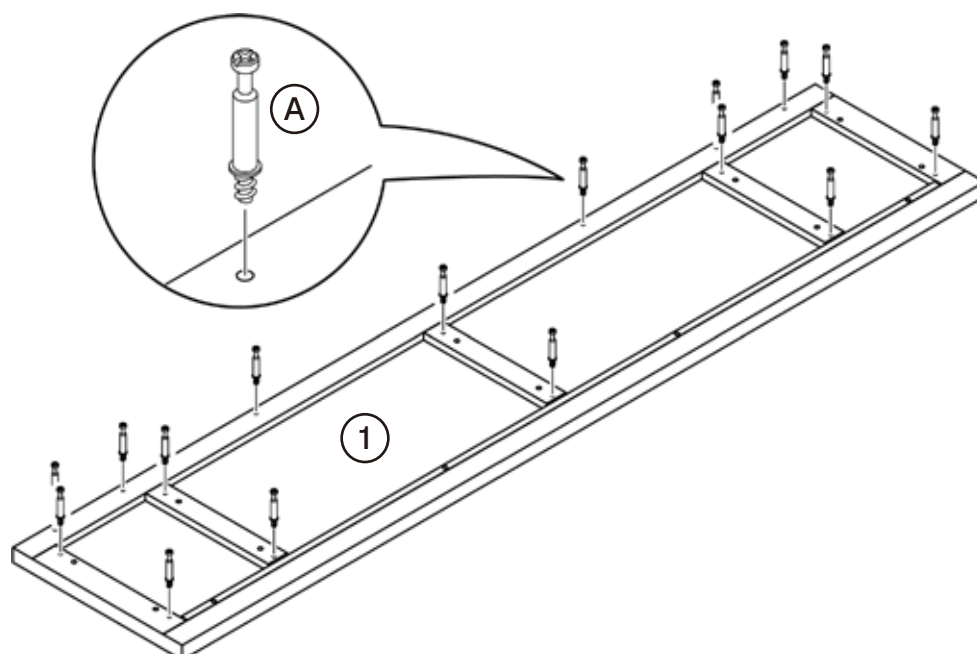


27

Attaching side surround panels



 U 4x

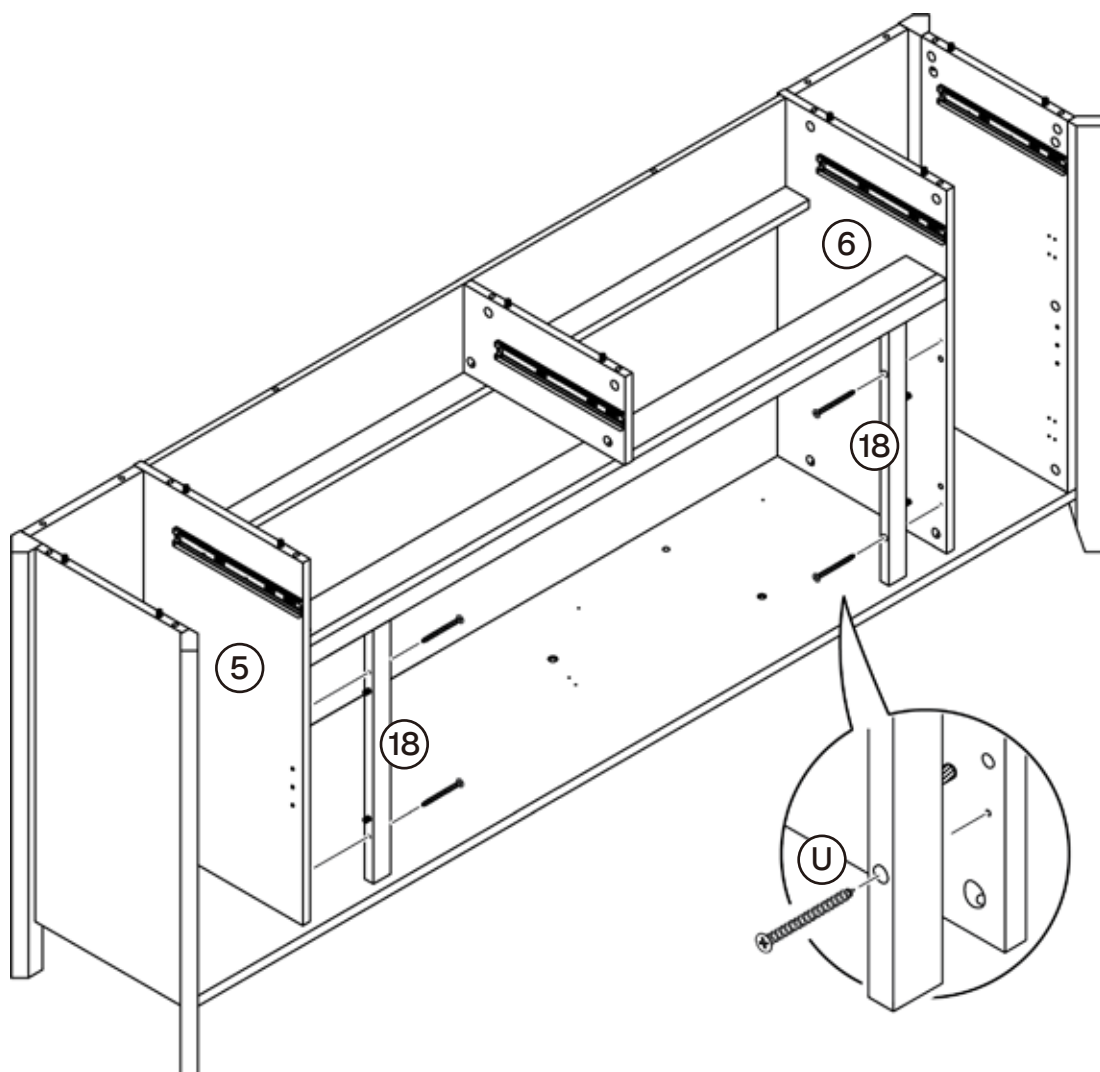

28

 
Attaching top panel



B 10x



F 10x

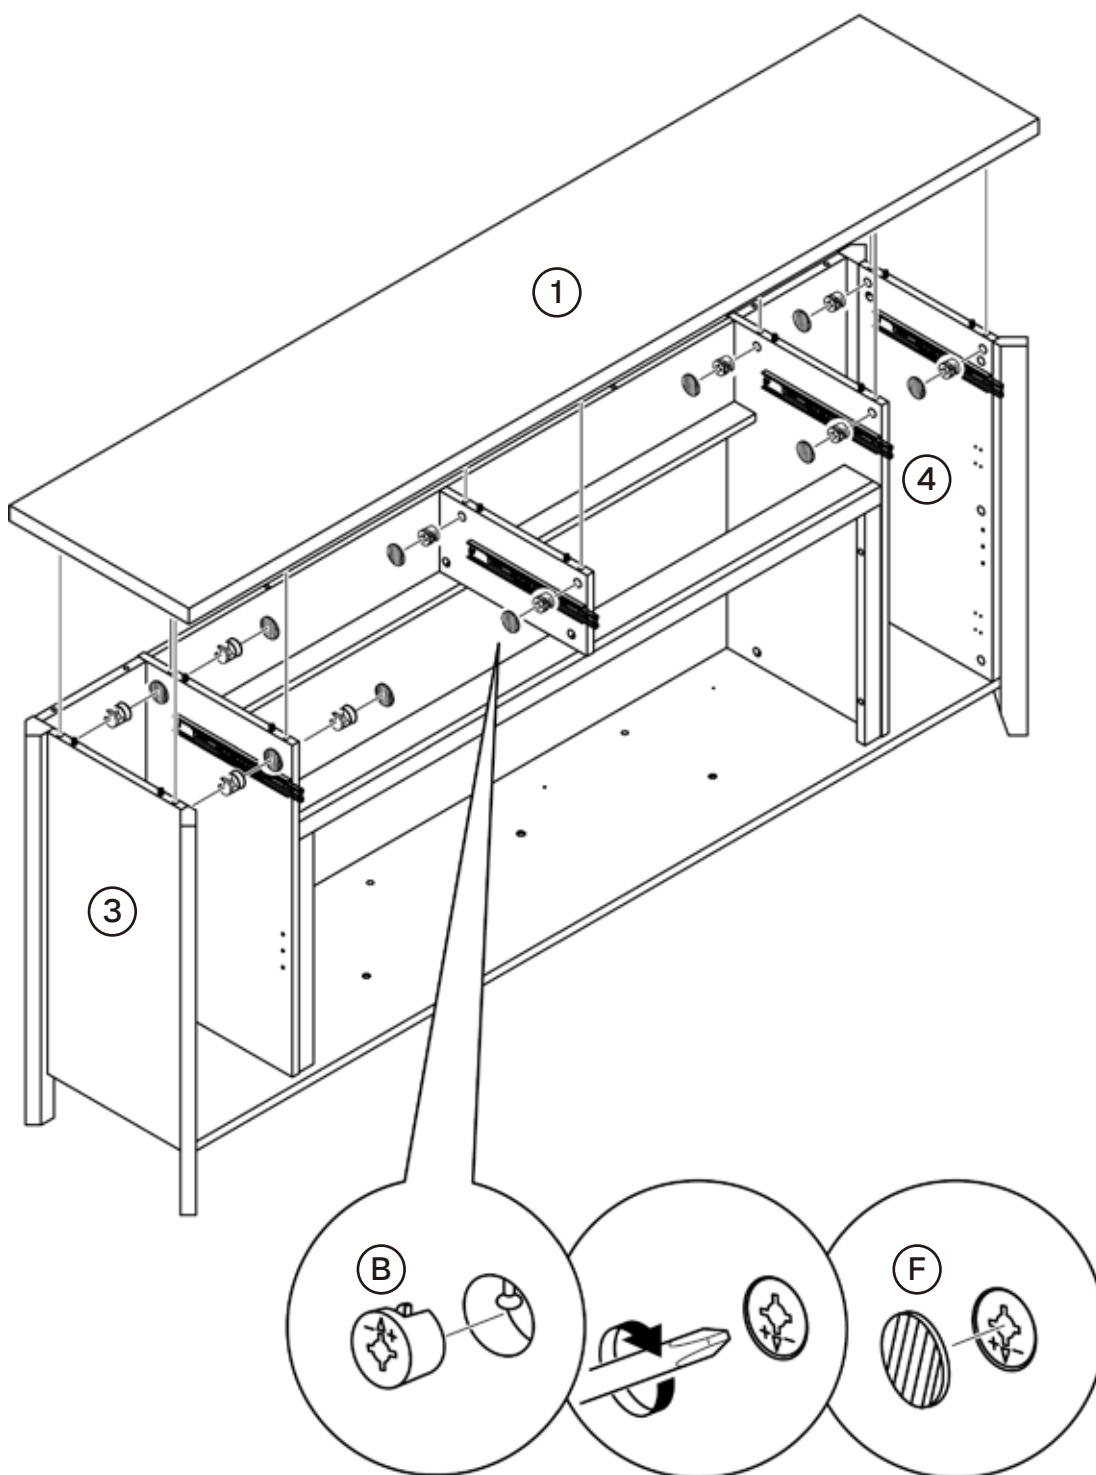

29

 
 
 
Securing center back panel to top panel



C 2x



F 2x

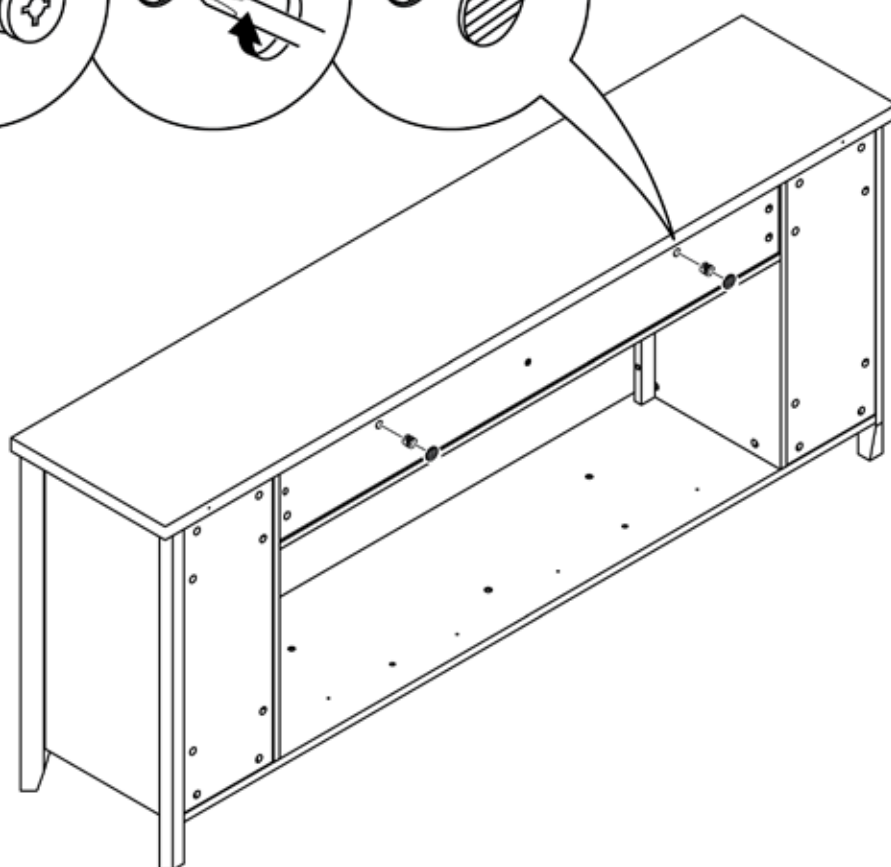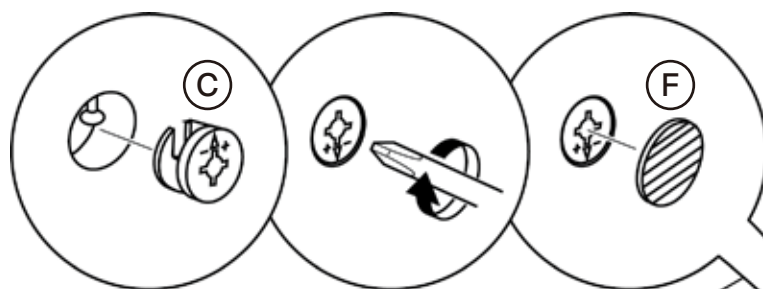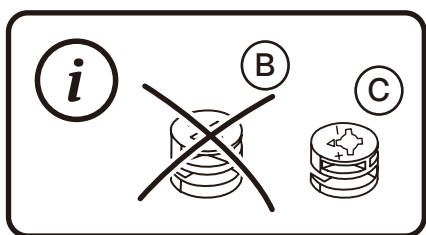


30 Securing side back panels to top panel



B 4x



 
F 4x

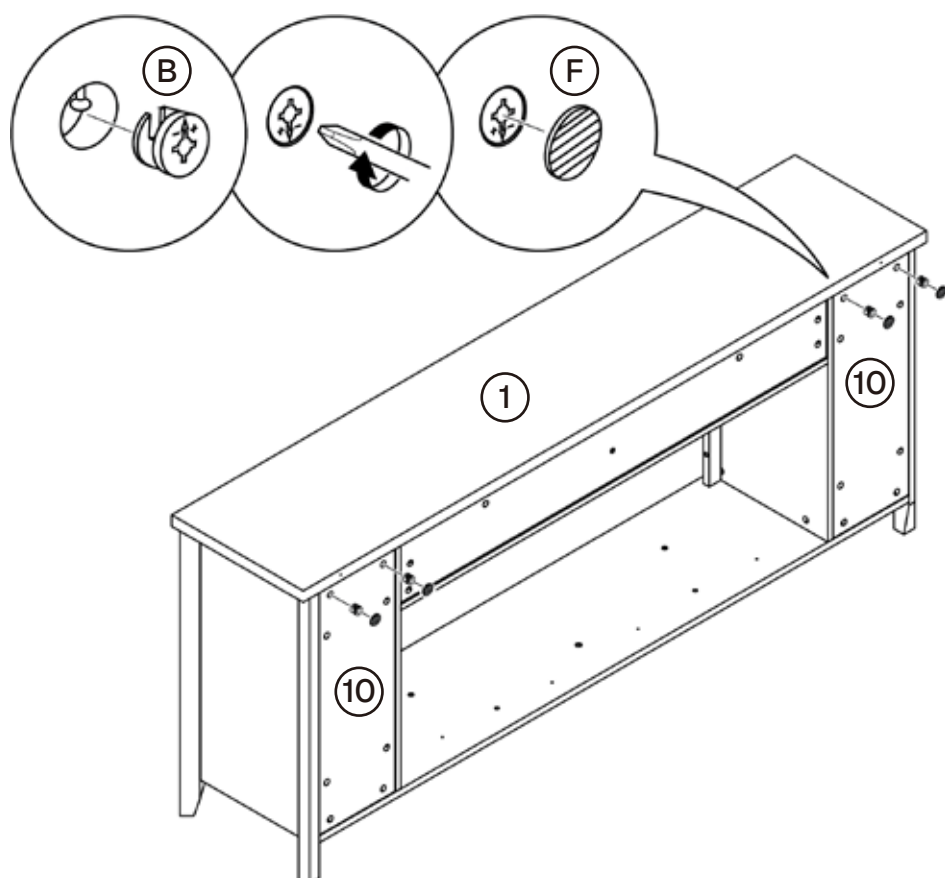

31 Inserting shelf pegs and putting on storage shelf panels



 
G 8x

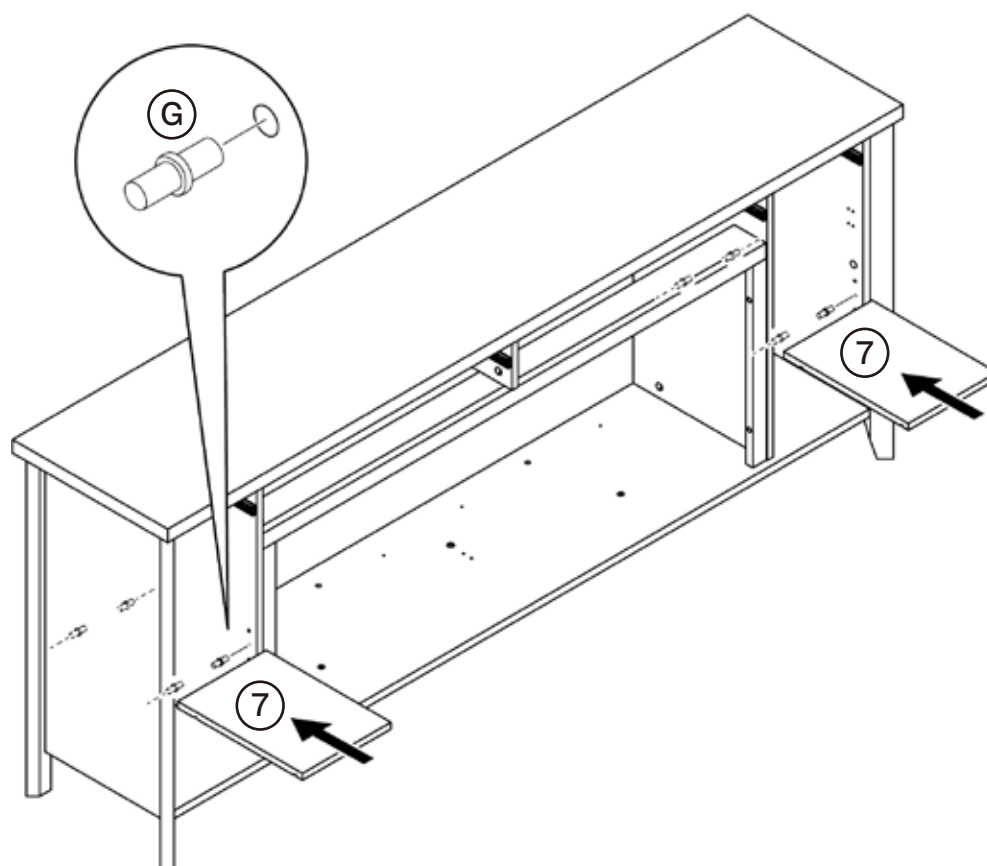


32 Drawer front panels



 
A 18x

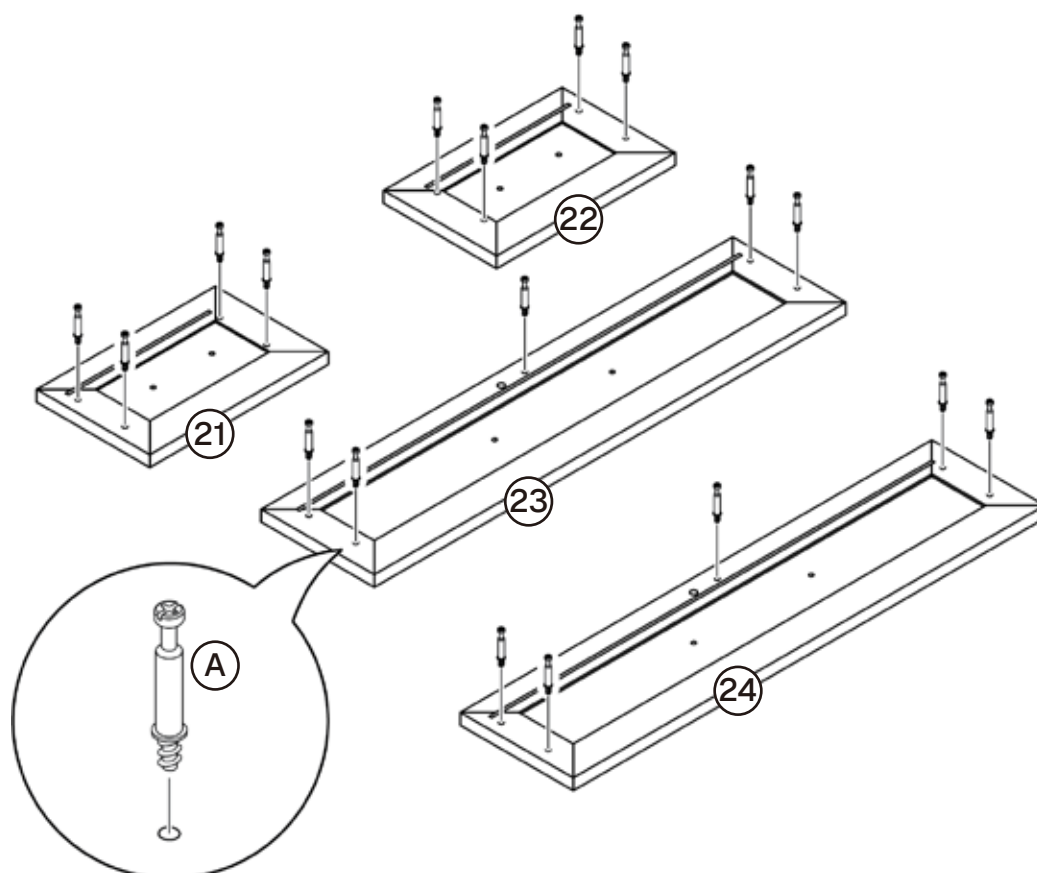

33 Attaching drawer handles

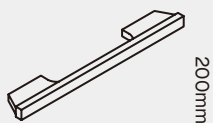 


N 2x

 

O 2x



 Q 8x

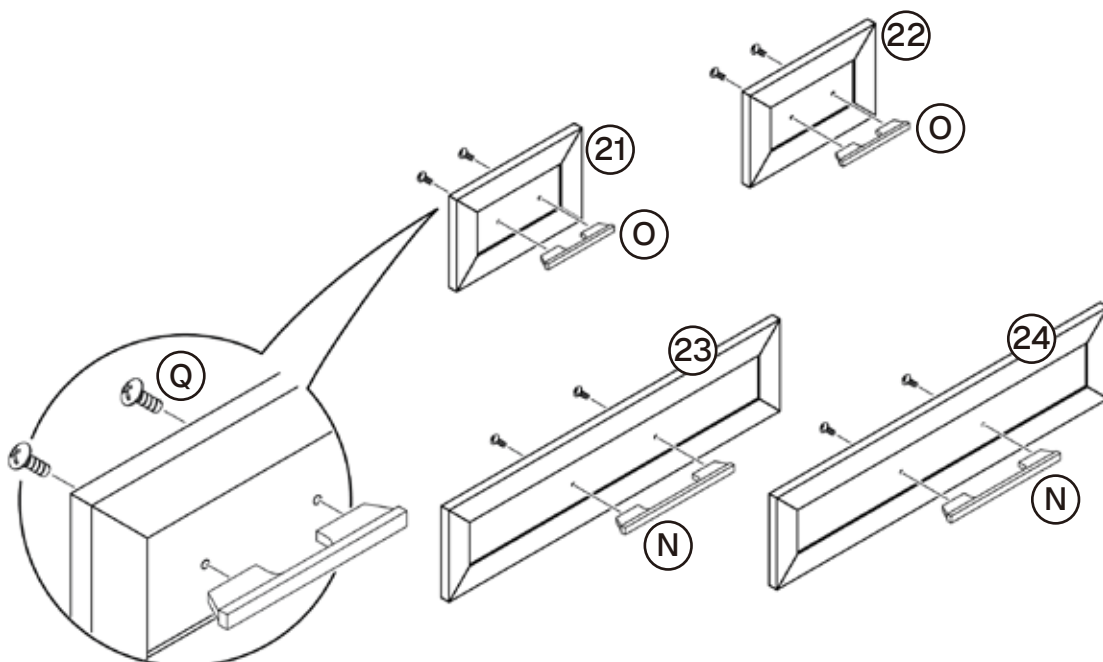



34 Attaching slide runners



R2 8x



  S 24x

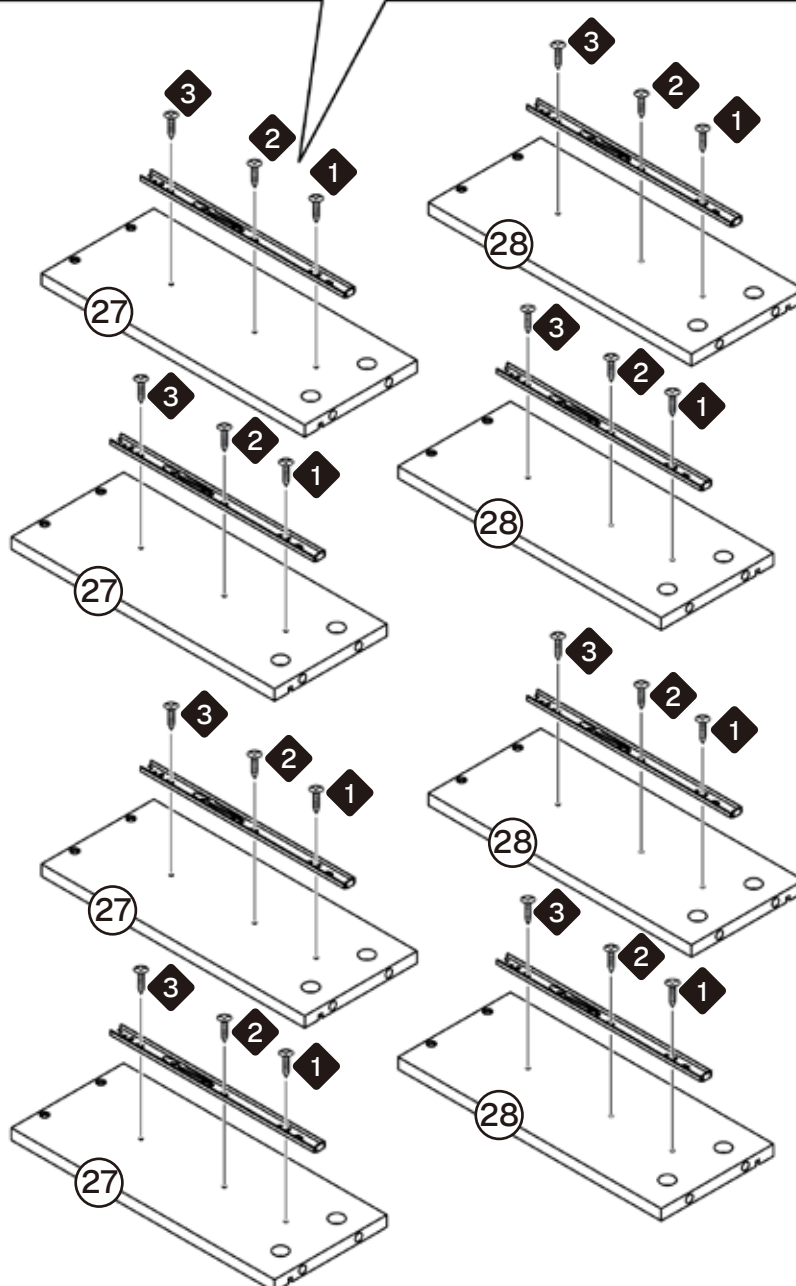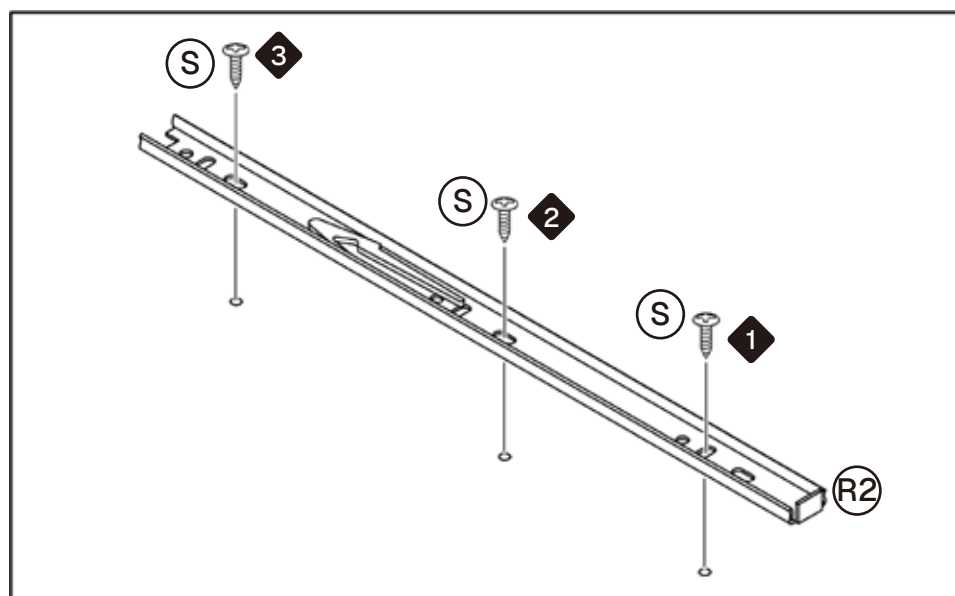


35


Assembling drawers



 T 16x

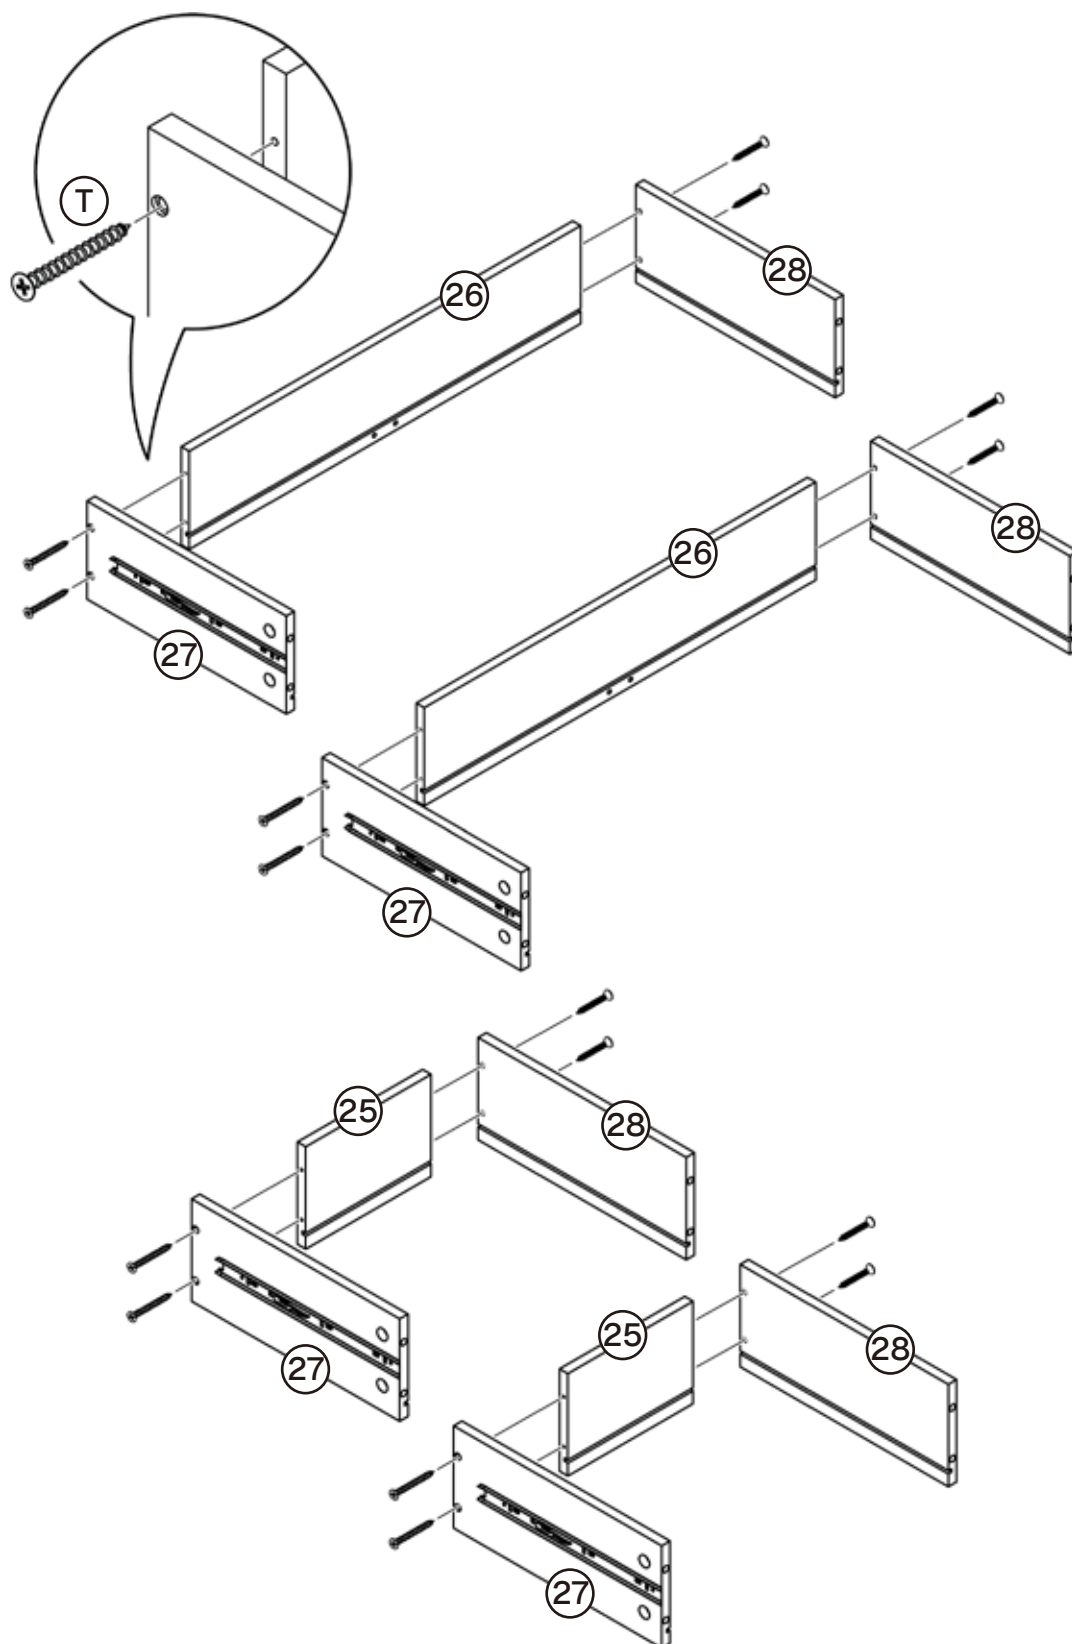

36 Sliding in drawer bottom panels

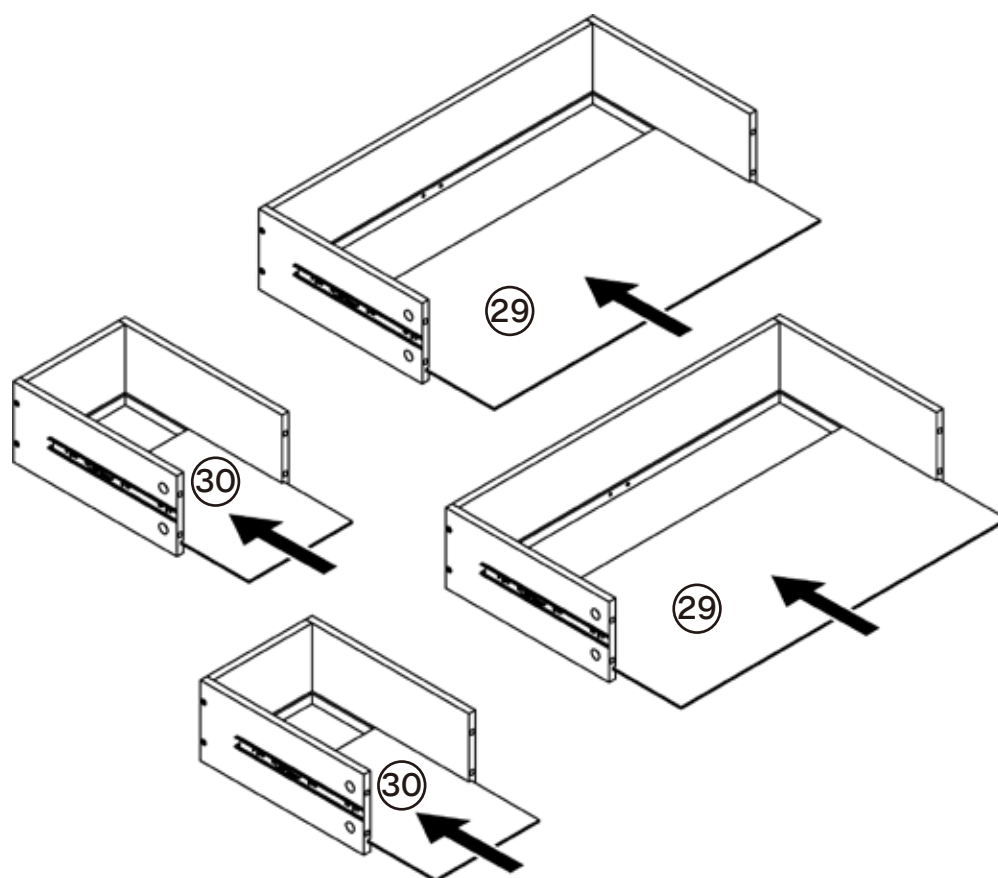 



37 Attaching drawer support strips



E 2x



  T 4x

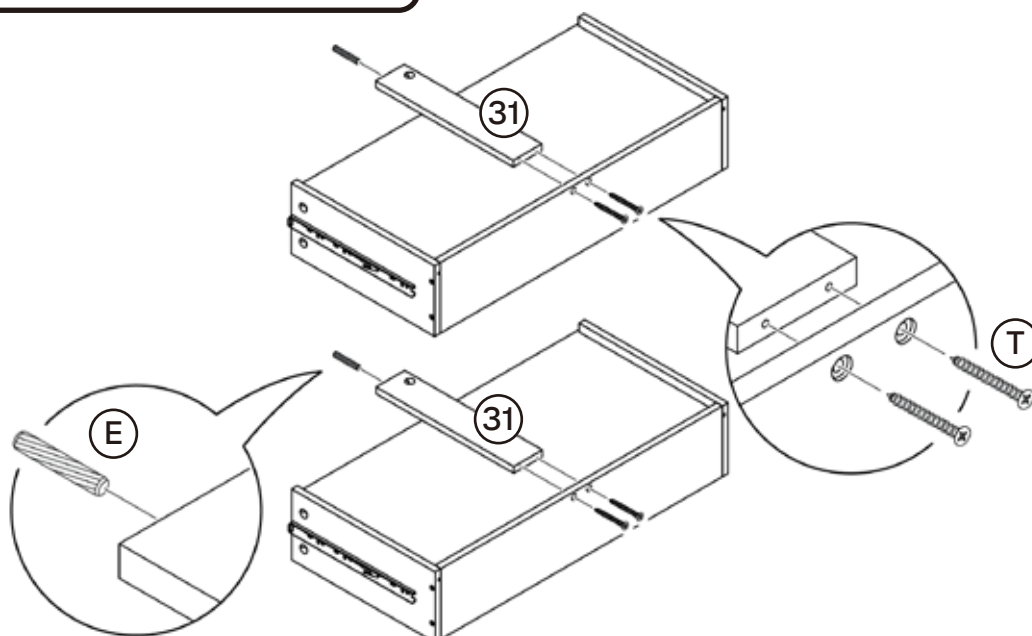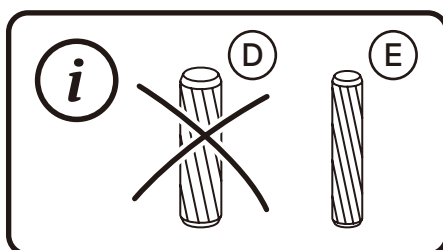

38 Attaching drawer front panels

 
 
 
 
 
 


Ø15 x 6

C 18x




F 18x

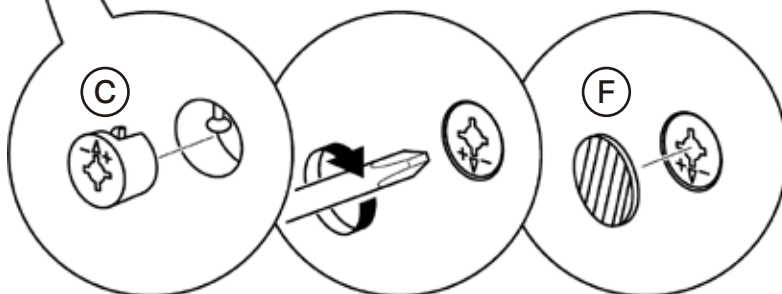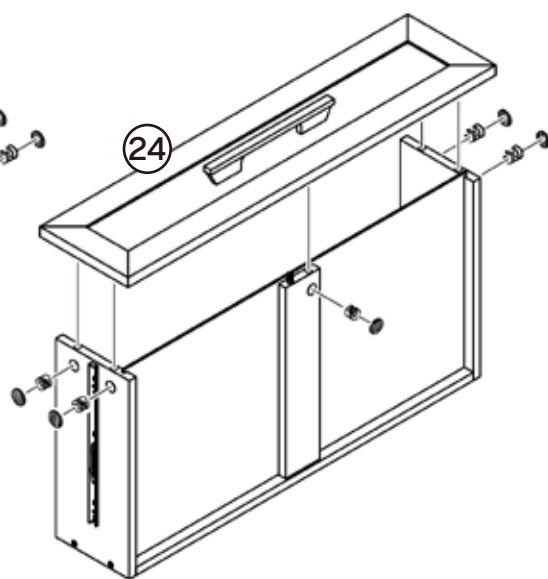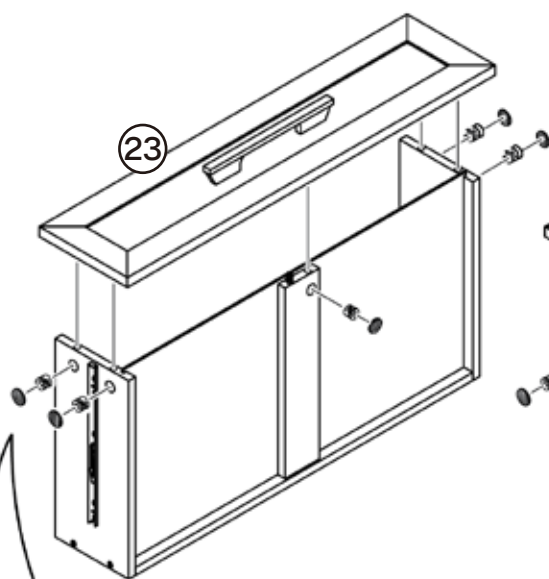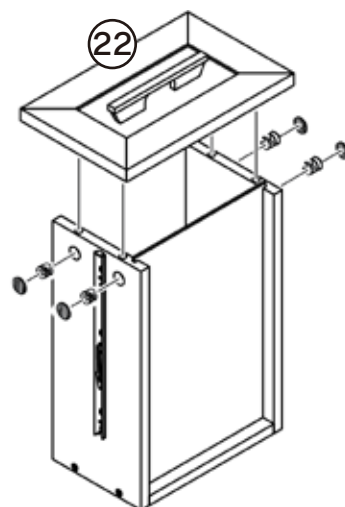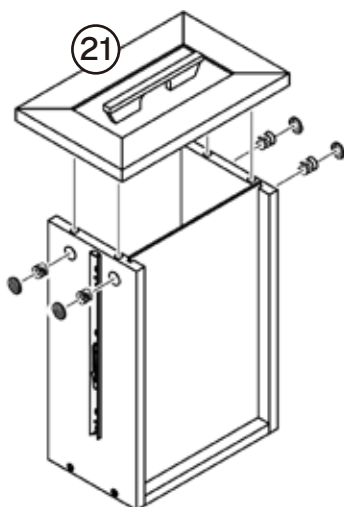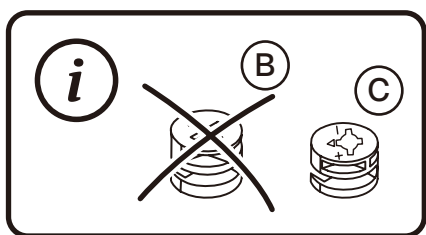

39

Sliding drawers into the stand


 
Slide the sliderplate to the forward position.

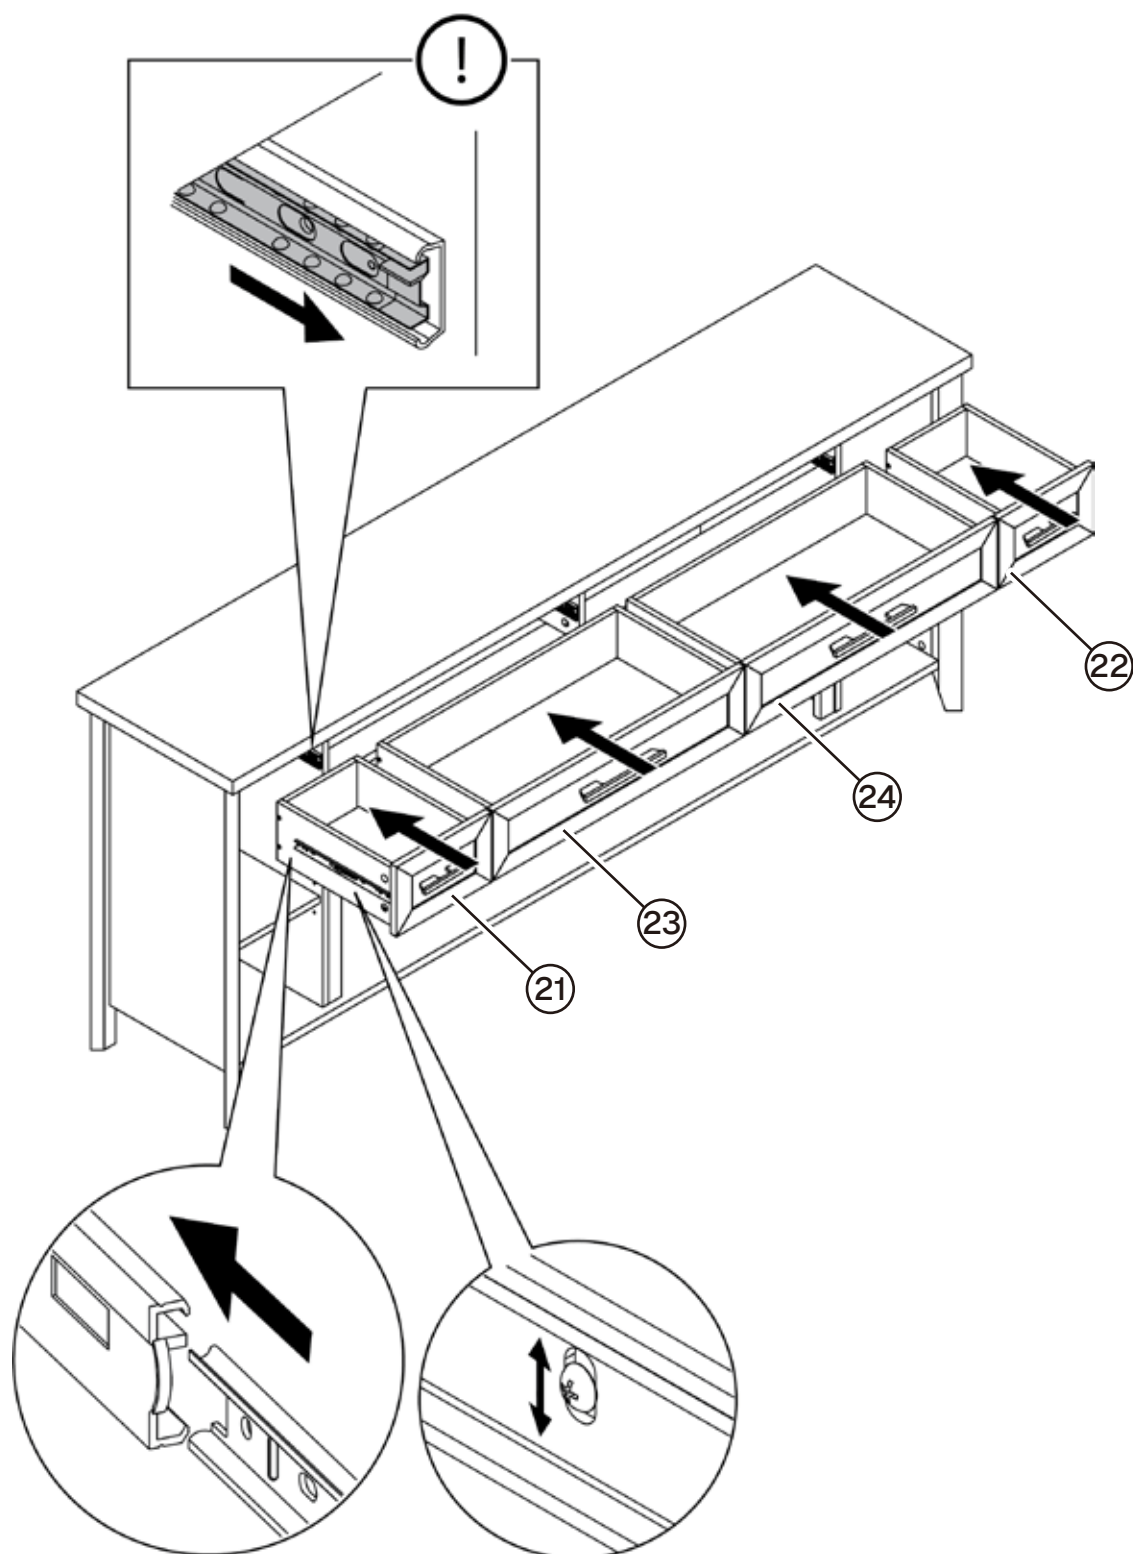

Up and down adjustment by loosening the screws on the slide runner.



40

  Attaching door hinges

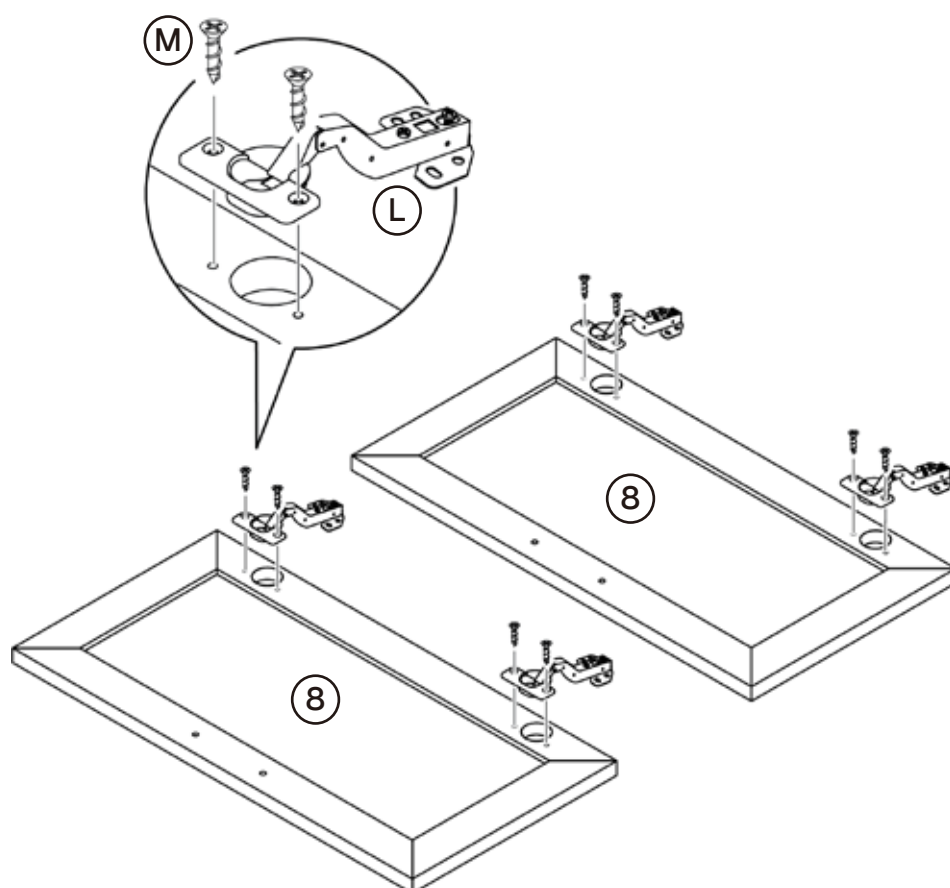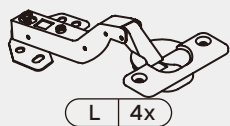

41

  Attaching door handles

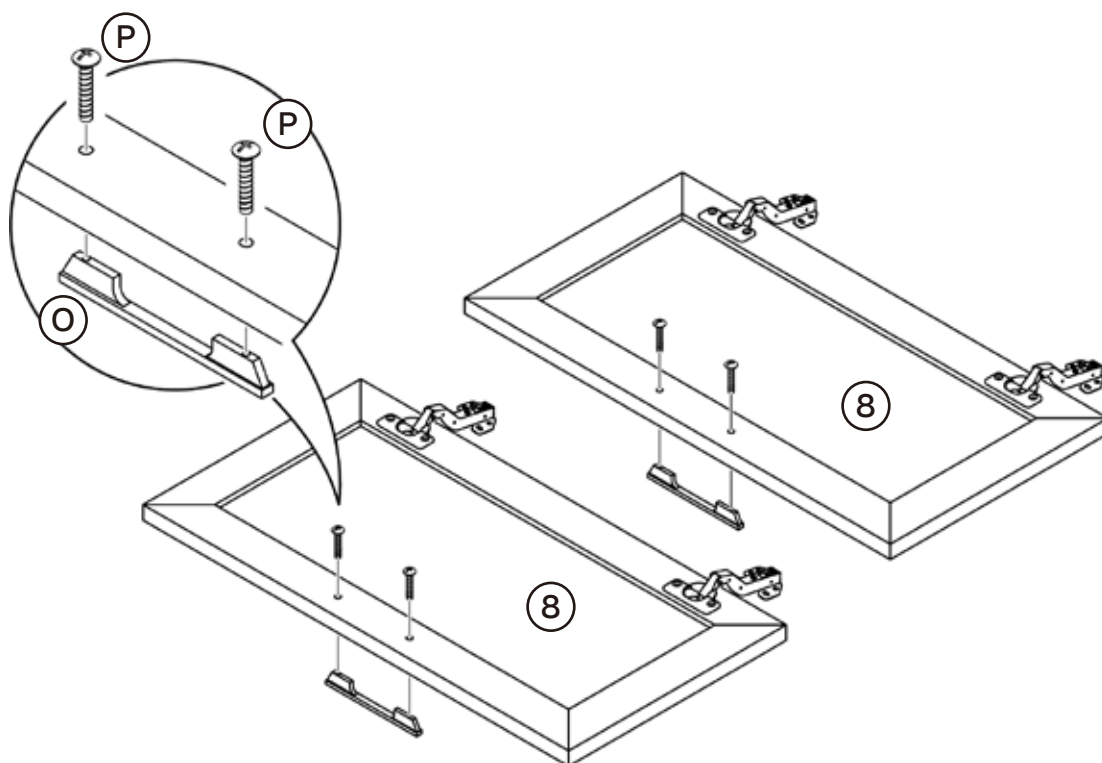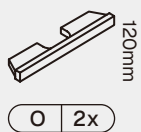


42





Attaching cabinet doors








 
M 16x

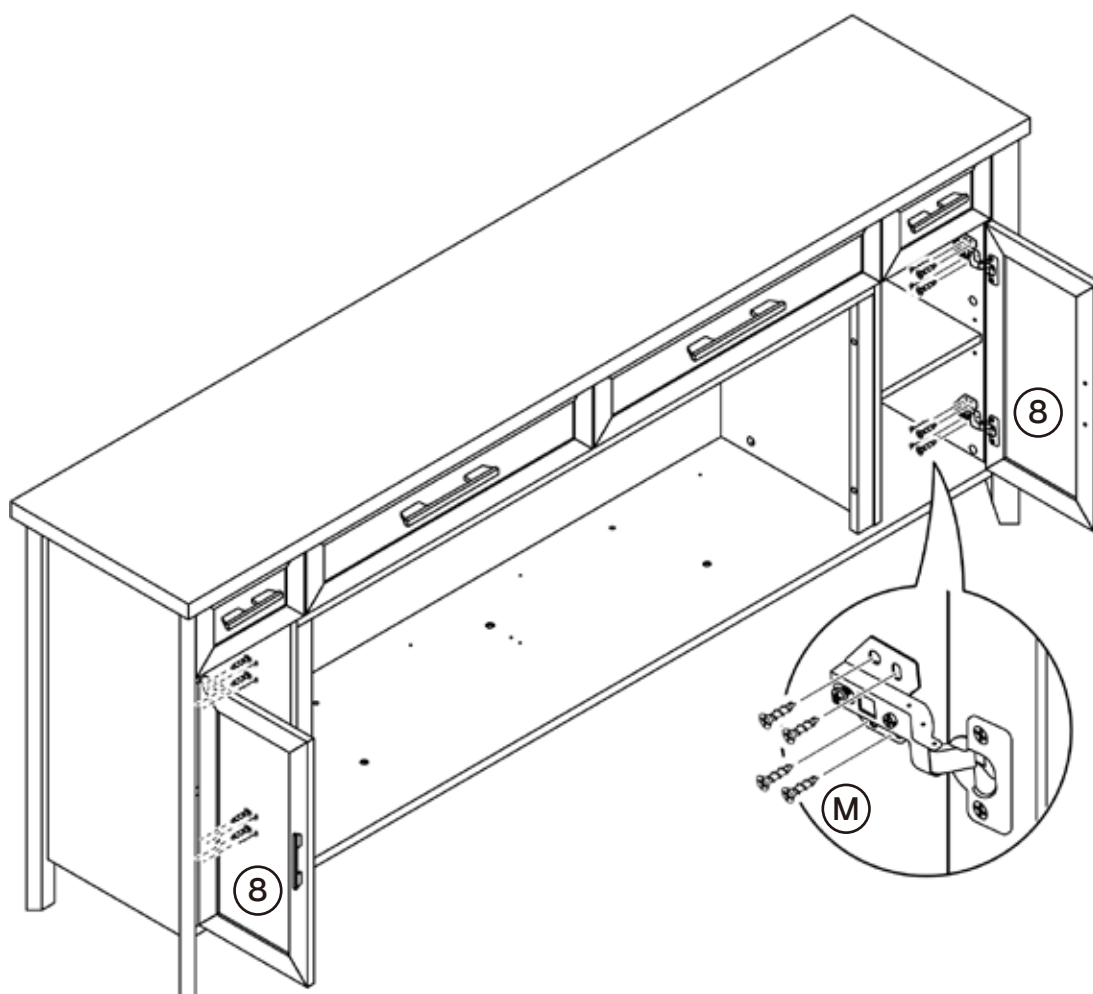

i

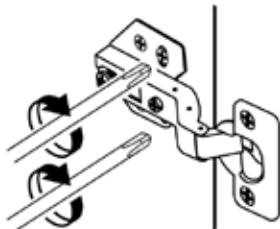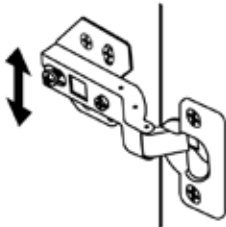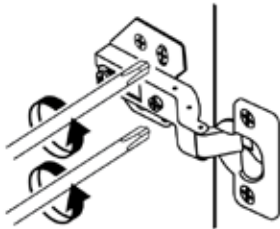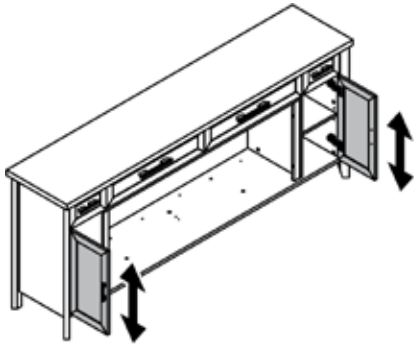    

      
Loosen the screws on the mounting plate to adjust the door **up and down**.

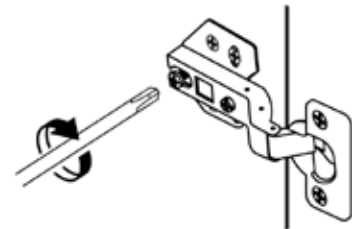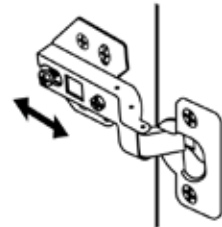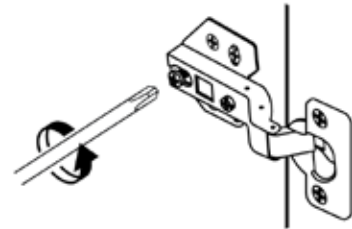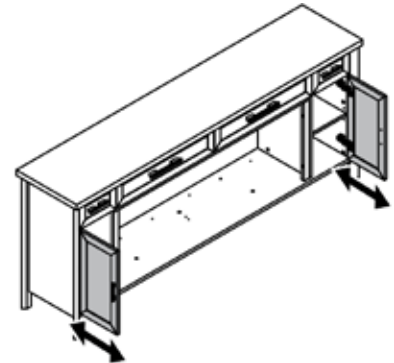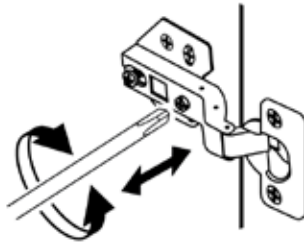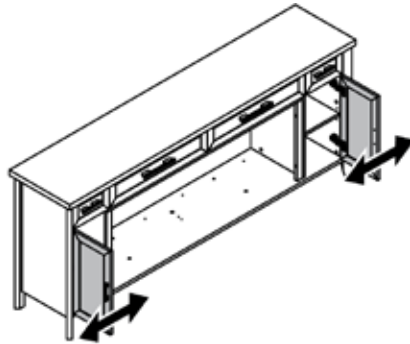

Adjust the screw on the hinge to micro-adjust the door from **side to side**.

Loosen the screws on the hinge arm to adjust the door **in and out**.

 
43 Installing fireplace heater

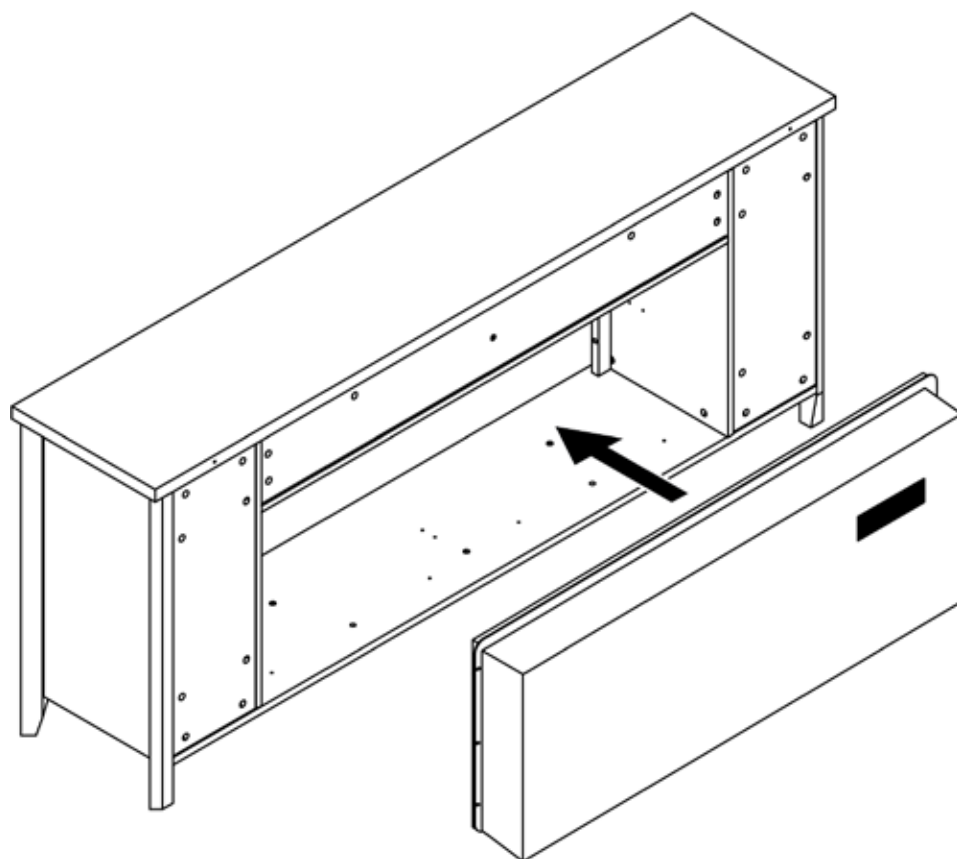

44 Securing fireplace heater with brackets



 
S 6x

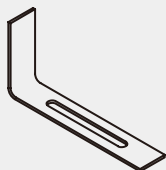

AB 3x

★ Careful when handling glass front panel to prevent injury or damage.

 
★ Do not attempt to install the fireplace heater from the front of the mantel. It will not fit.

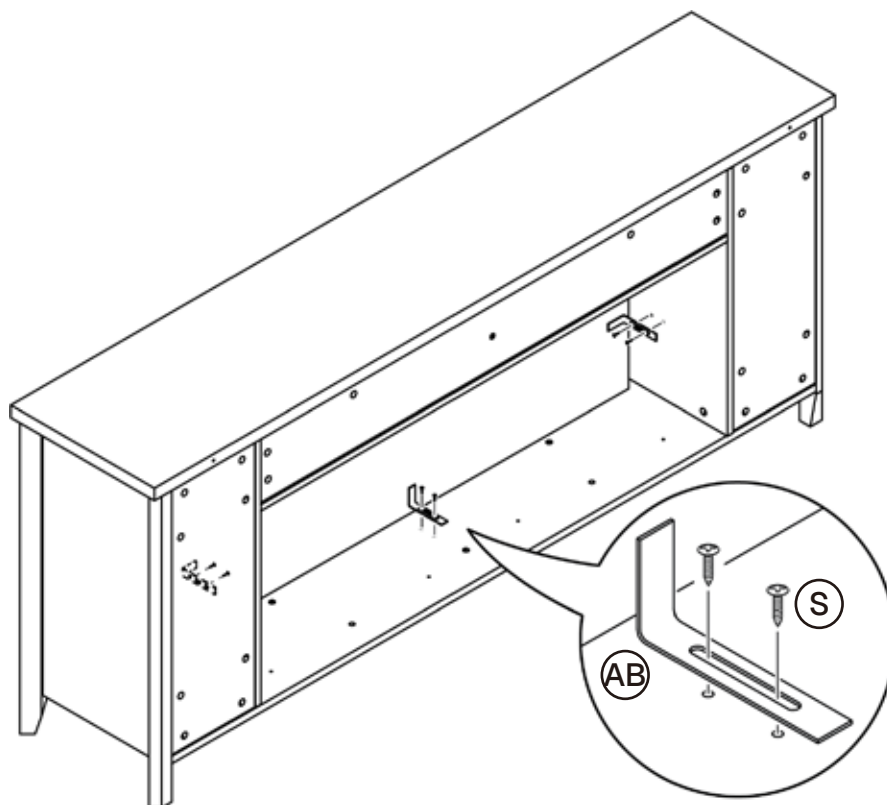

45 Bottom panel



 
K 2x

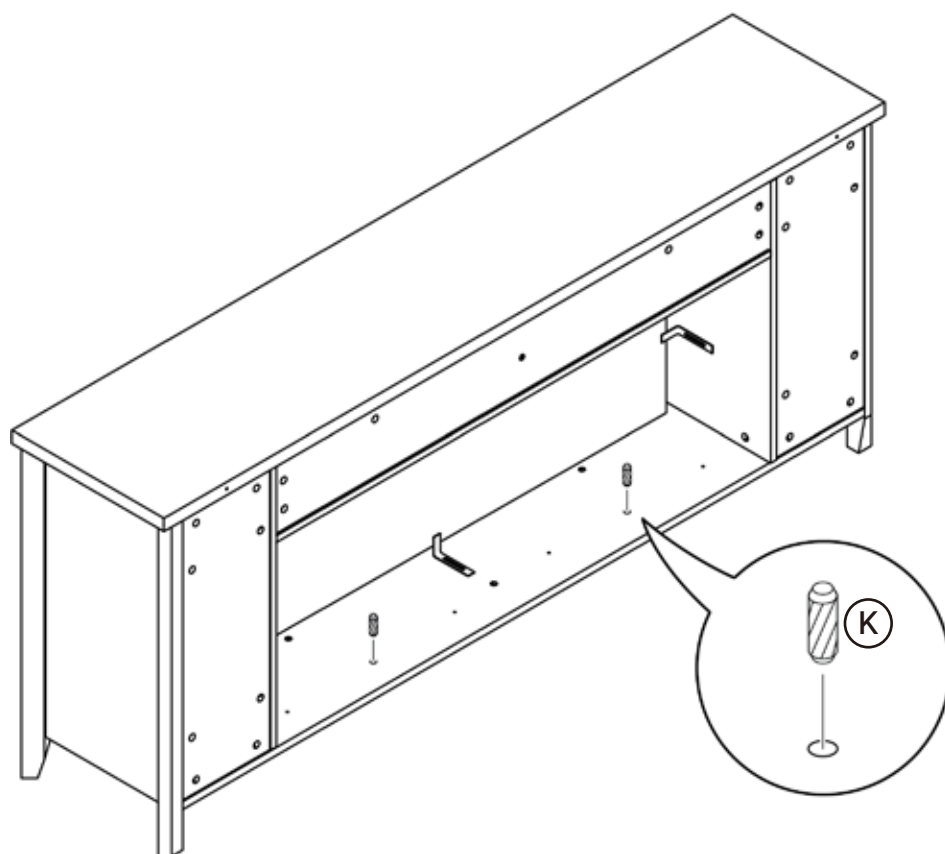

46 Attaching counter weight panels



 AC 4x

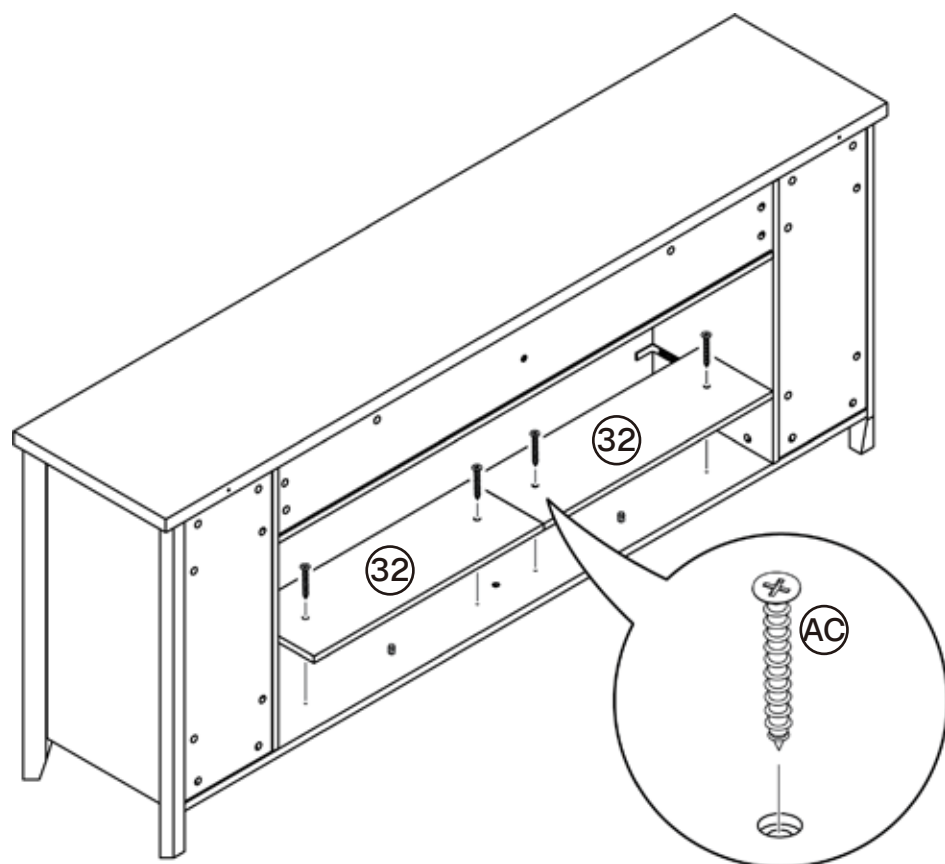

47

 
Attaching anti-tipping straps



Y 2x



W 2x

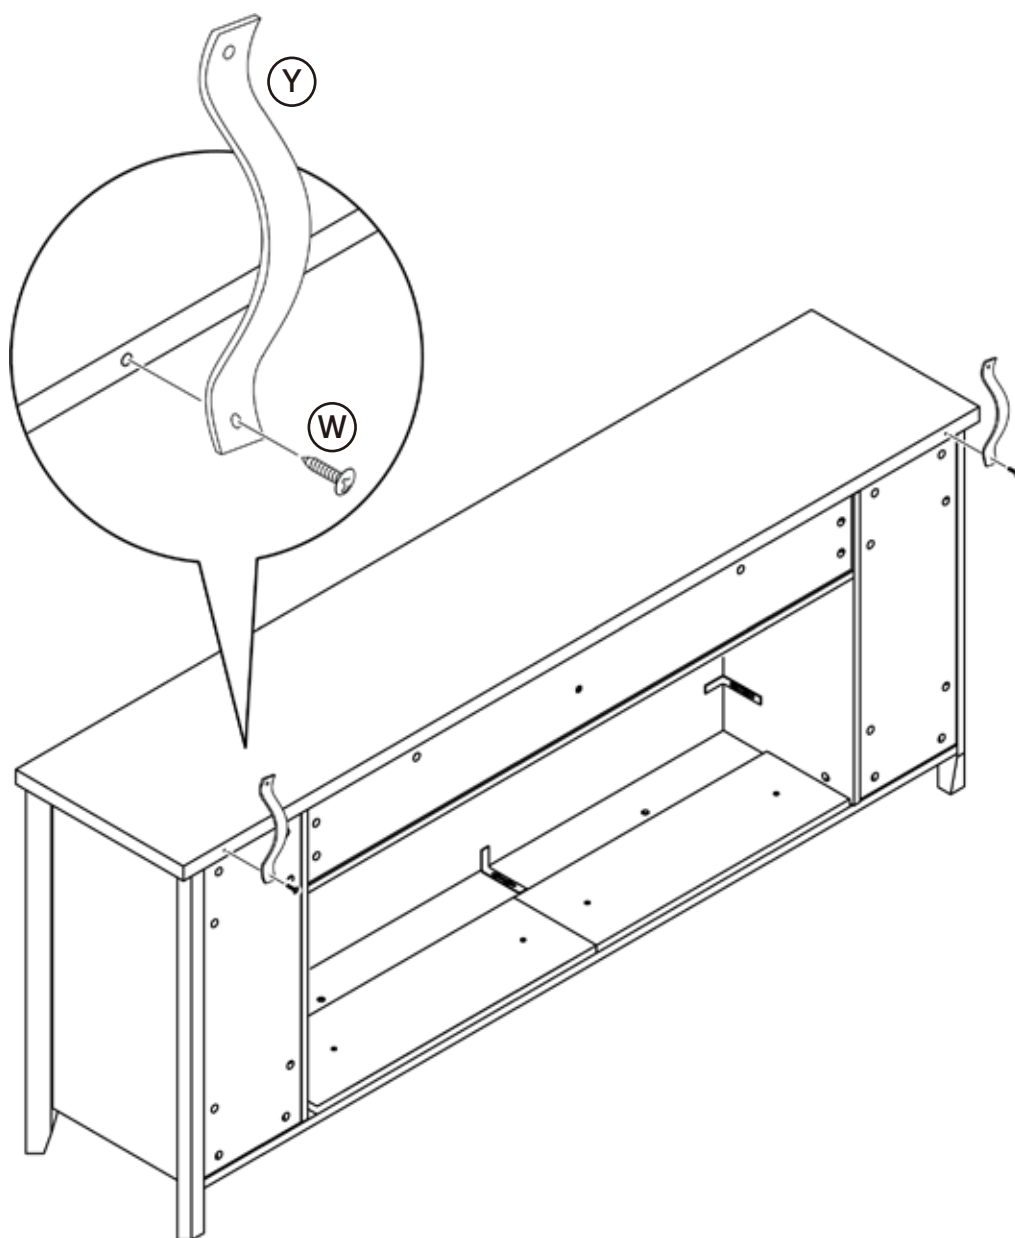



48 Affixing the TV stand to a wall



V 2x



  X 2x

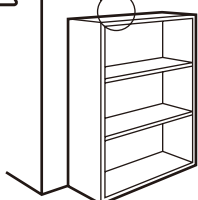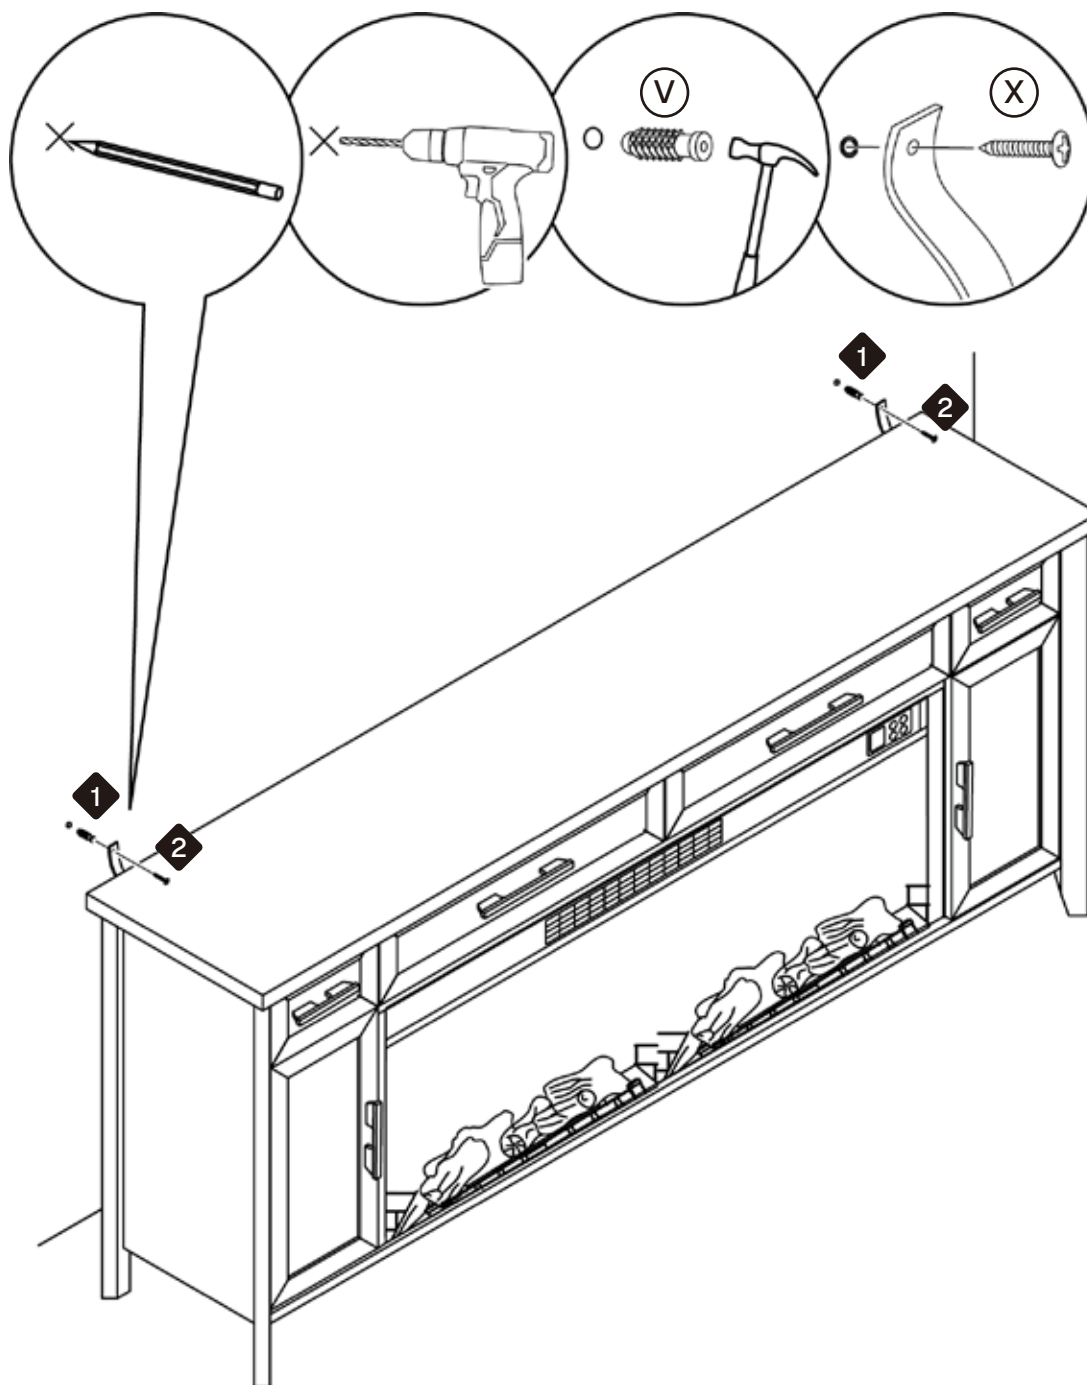


Furniture must permanently fixed to the wall stud with included anti-tipping device to prevent the furniture from tipping over.

- Mark the drill position on the wall with a pencil.
- Drill a small hole on the marked position.
- Insert a wall anchor into the drilled hole.
- Fixed the anti-tipping strap to the wall with provided screws.

49

Attaching top strip

 ★ TV or other objects should be placed behind the wood trim to prevent them from falling off.

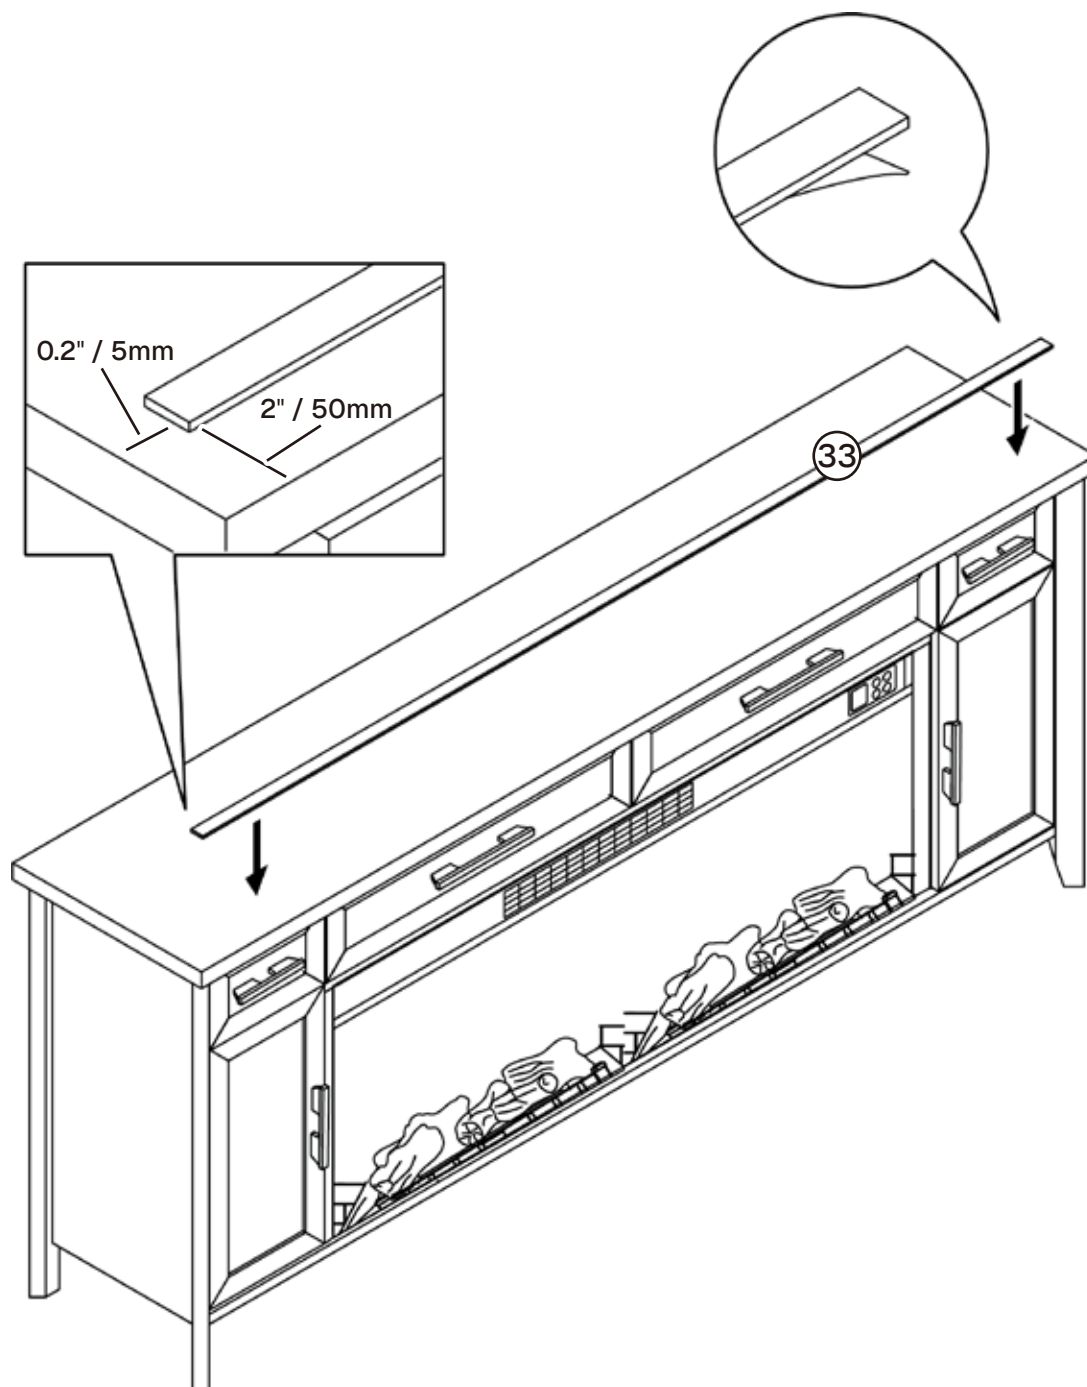



WARNING

For use with televisions weighing 70lbs (31.8kg) or less. Use with heavier televisions may result in instability, causing tip over resulting in death or serious injury.

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.

Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.



NOTICE

The recommended maximum width of the television is 65 inches. Do not exceed the maximum load capacity.

This product is designed for flat panel TVs only.

Care and Maintenance

Thank you for your purchase. We want your item to last as long as possible.

To ensure the product gives you years of longevity, please follow the recommendations in this care and maintenance guide.



Maintenance

- Tighten all bolts and crews again within the first 2 weeks of assembly.
- Check the tightness of all bolts every 2 months and re-tighten them if they come loose.



Cleaning

- Clean the surface of the MDF (medium density fiberboard) with a lightly dampened cloth.
- A small amount of mild soap can be used if necessary.
- Dry the surface immediately after cleaning.



Attention

DO NOT use bleach or alcohol based cleaner to clean the surface.

DO NOT apply wood treatment on parts made with MDF.

MDF will swell and distort when exposed to water damage.

Make sure to dry the furniture immediately after cleaning.



Attention

The manufacturer and seller are not responsible for any and all liability relating to personal injury, property damage or losses, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification or neglect of the product.