 


ASSEMBLY INSTRUCTION

Bookcase

 
 
Item NO.: FBKC010101、FBKC010102、FBKC010103、
FBKC010104、FBKC010105、FBKC010106、FBKC010107

 
 
 
 
 
 
 
 
 
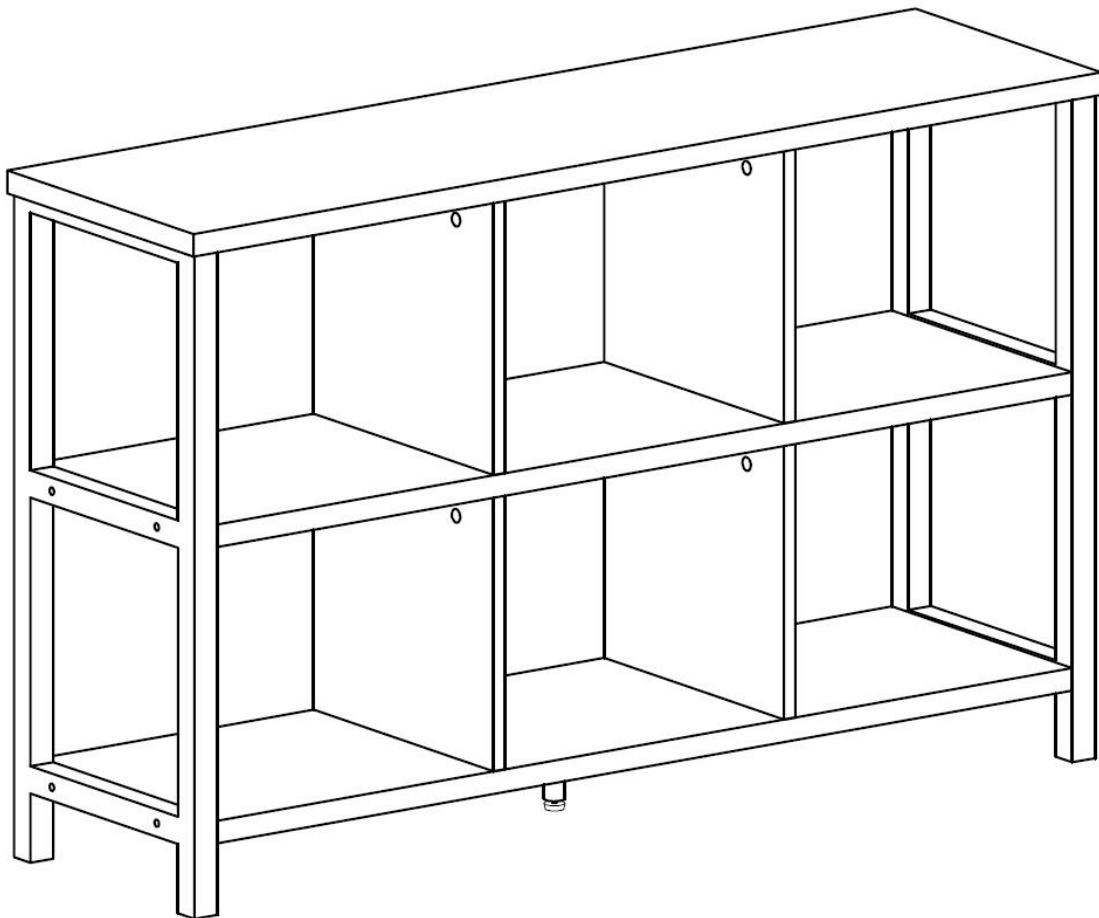 


Version: F082624

Part Identification

While not all parts are labeled, some of the parts will have a label to help distinguish similar parts from each other. Use this part identification to help identify similar parts.

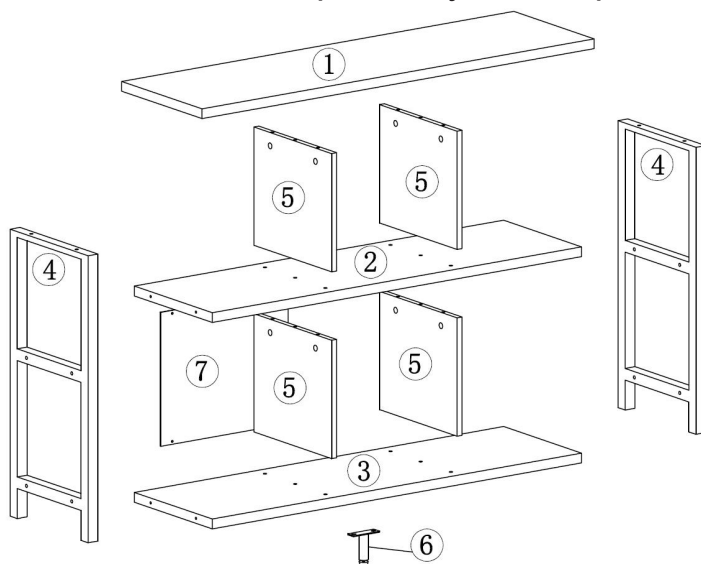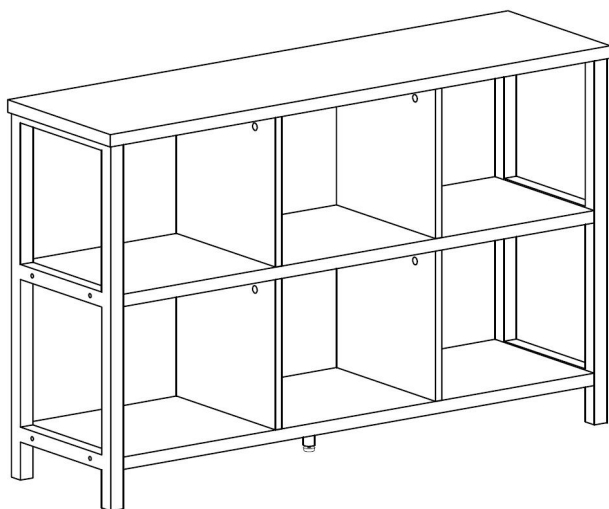

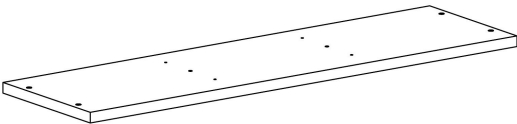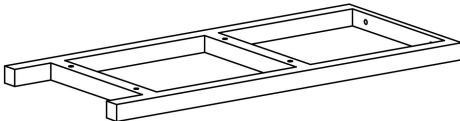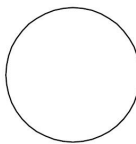①  Top Panel 1 pc	②  Mid Panel 1 pc	③  Bottom Panel 1 pc			
④  Metal Leg 2 pcs	⑤  Vertical Panel 4 pcs	⑥  Supporting Bar 1 pc	⑦  back Panel 1 pc		
A  Cam Bolt Ø6X45mm 8 pcs	B  Cam Lock Ø15X11.5mm 8 pcs	C  Long Screw M7*60mm 16 pcs	D  Wood Dowel Ø8X30mm 8 pcs	E  Short Bolt M6*20mm 2 pcs	
F  Long Bolt M6*30mm 4 pcs	G  Short Screw Ø3.5*19mm 4 pcs	H  Allen Key 4mm 1 pc	I  Phillips Screwdriver 1 pc	J  Leveler M6*23mm 1 pc	K  Sticker Ø20 8 pcs

Hardware Usage Guide

 
 
HOW TO USE A CAM BOLT & CAM LOCK.

1.



Cam Bolt

Clockwise rotate the CAM BOLT until the shoulder is against the surface of the board.

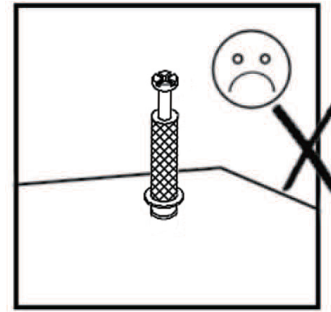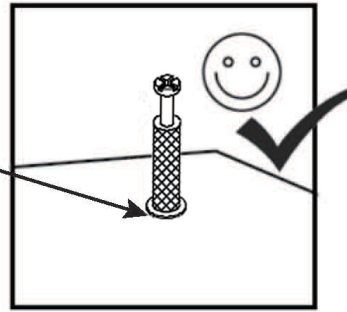


2.

Arrow



Cam Lock

 Push a CAM LOCK into the board. The arrow in the CAM LOCK must point toward the hole in the edge of the board.

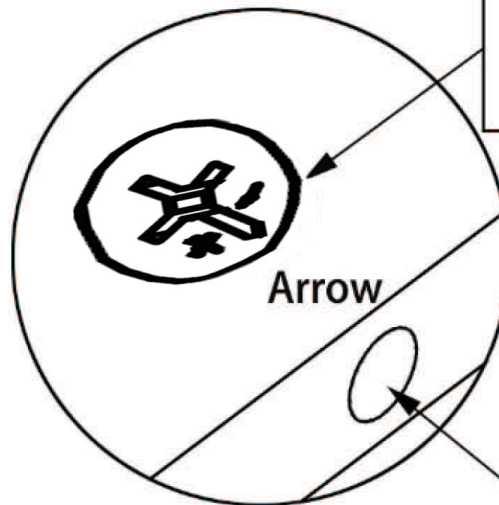


Hole


3.

Insert the CAM BOLT into the CAM LOCK.
Clockwise rotate to tighten the CAM LOCK.

 1

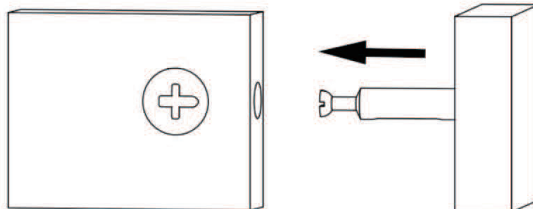



2

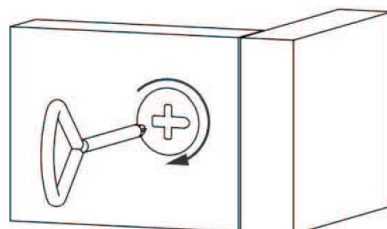 

Step 01

NOTE: All bolts must be fully tightened at this step.
Product support email: andy@foluban.com

  
- 1.1 Lay the Top Panel(①) on a clean smooth surface such as carpet or cardboard. Insert and fasten 4 Cam Bolts(A) into the holes on the Top Panel(①) by Phillips Screwdriver(I). 4 Cam Bolts(A) must be fully tightened. Insert 2 Wood Dowels(D) into the holes of Top Panel(①).
- 1.2 Lay the Mid Panel(②) on a clean smooth surface such as carpet or cardboard. Insert and fasten 4 Cam Bolts(A) into the holes on the Mid Panel(②) by Phillips Screwdriver(I). 4 Cam Bolts(A) must be fully tightened. Insert 2 Wood Dowels(D) into the holes of Mid Panel(②).

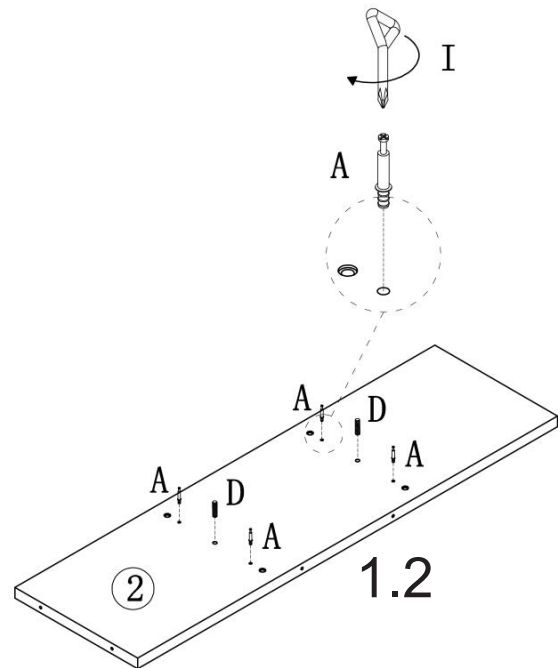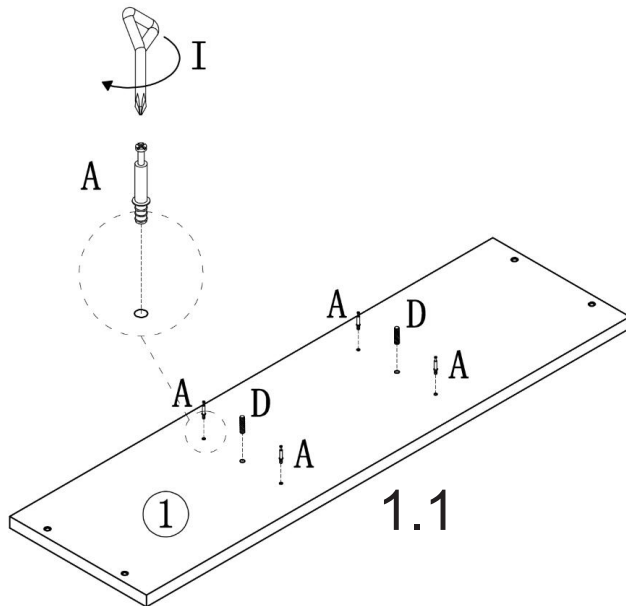

Step 02

NOTE: All bolts must be fully tightened at this step.
Product support email: andy@foluban.com

 - 2.1 Attach and align 2 Vertical Panels(⑤) to the Top Panel(①). Make sure Wood Dowels(D) and Cam Bolts(A) on the Top Panel(①) are inserted into Vertical Panels(⑤).
- 2.2 Insert 4 Cam Locks(B) into 2 Vertical Panels(⑤), make sure the arrow on Cam Lock(B) points to Cam Bolt(A), and then tightly fasten by turning Phillips Screwdriver(I) clockwise.
- 2.3 Insert 2 Wood Dowels(D) into the holes of 2 Vertical Panels(⑤).

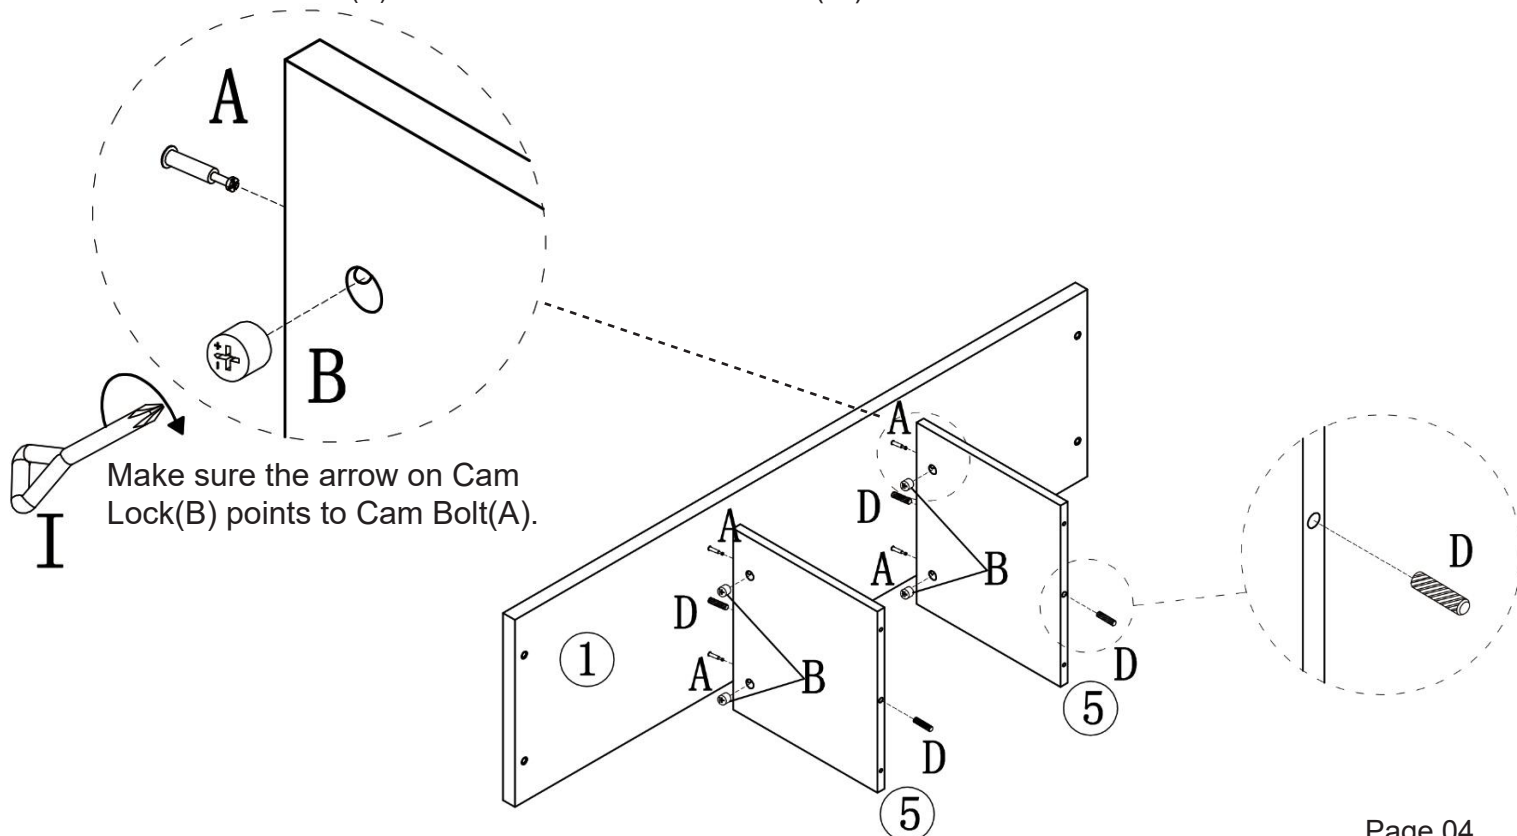


Step 03

NOTE: All bolts must be fully tightened at this step.
Product support email: andy@foluban.com

- 3.1 Connect and fasten Mid Panel(②) to 2 Vertical Panels(⑤) with 4 Long Screws(C) by Allen Key(H). Make sure Wood Dowels(D) on the Vertical Panels(⑤) are inserted into Mid Panel(②) and two holes on Mid Panel(②) should face up.

- 3.2 Insert 2 Wood Dowels(D) into the holes of Mid Panel(②).

 
All bolts must be fully tightened.

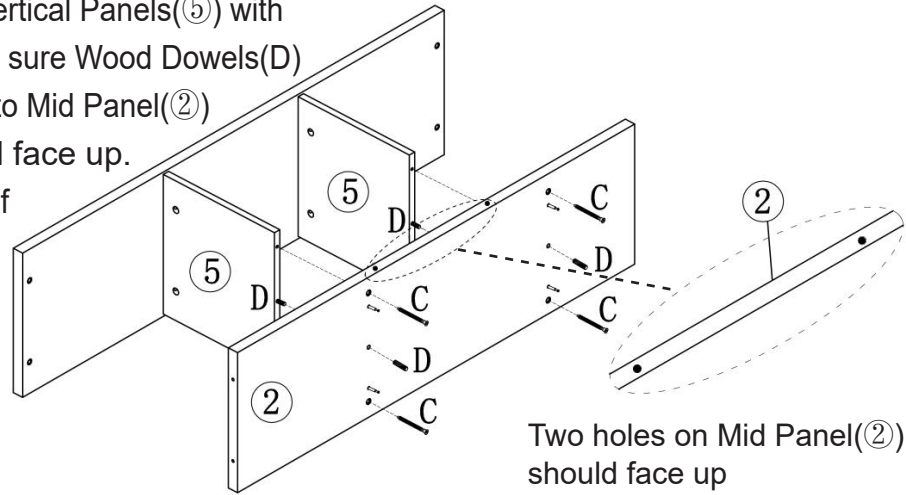

Step 04

NOTE: All bolts must be fully tightened at this step.
Product support email: andy@foluban.com

 
- 4.1 Connect 2 Vertical Panels(⑤) to Mid Panel(②) through Wood Dowels(D) and Cam Bolts(A).
- 4.2 Insert 4 Cam Locks(B) into 2 Vertical Panels(⑤), make sure the arrow on Cam Lock(B) points to Cam Bolt(A), and then tightly fasten by turning Phillips Screwdriver(I) clockwise.
- 4.3 Insert 2 Wood Dowels(D) into the holes of 2 Vertical Panels(⑤).
- All bolts must be fully tightened.

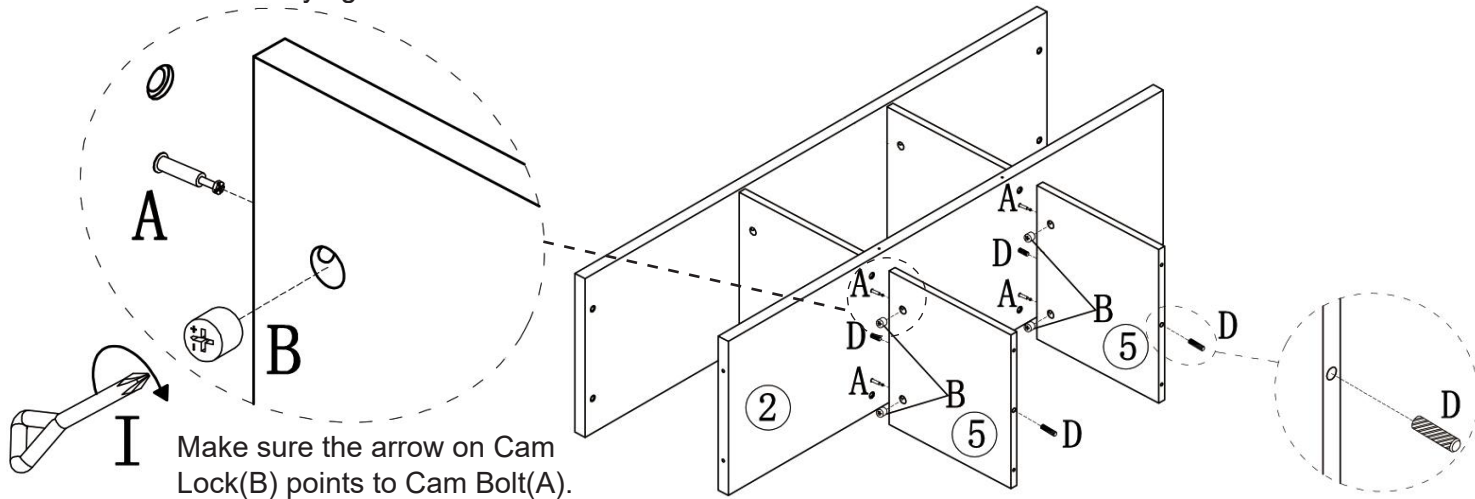

Step 05

NOTE: All bolts must be fully tightened at this step.
Product support email: andy@foluban.com

 
- Connect and fasten Bottom Panel(③) to 2 Vertical Panels(⑤) with 4 Long Screws(C) by Allen Key(H). Make sure Wood Dowels(D) on the Vertical Panels(⑤) are inserted into Bottom Panel(③) and two holes on Bottom Panel(③) should face up.
- All bolts must be fully tightened.

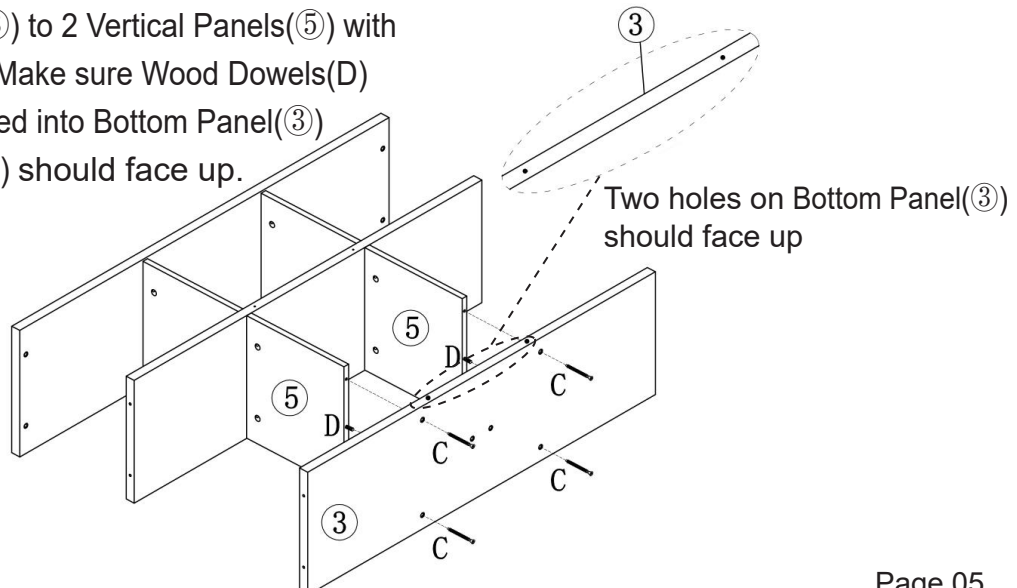

Step 06

NOTE: DO NOT fully tighten all bolts at this step.
Product support email: andy@foluban.com

 
- ✚ Connect and fasten 2 Metal Legs(④) to Mid Panel(②) and Bottom Panel(③) with 8 Long Screws(C) by Allen Key(H).
Do not fully tighten all bolts at this step.

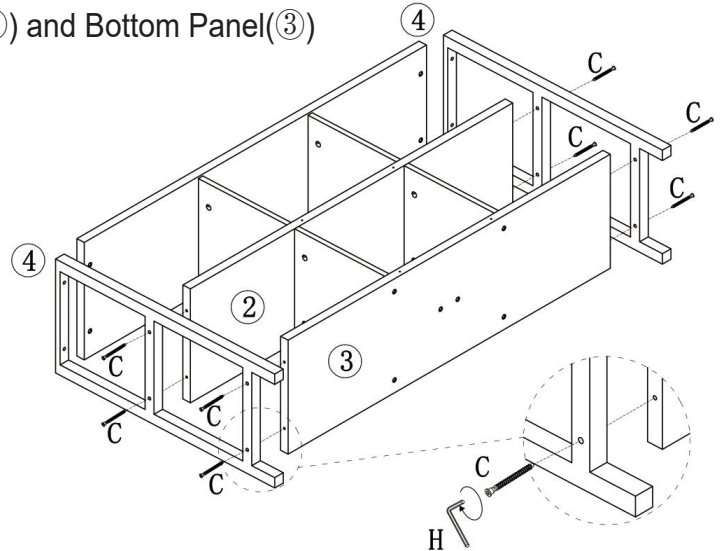

Step 07

NOTE: DO NOT fully tighten all bolts at this step.
Product support email: andy@foluban.com

 
- ✚ Connect and fasten 2 Metal Legs(④) to Top Panel(①) with 4 Long Bolts(F) by Allen Key(H).
Do not fully tighten all bolts at this step.

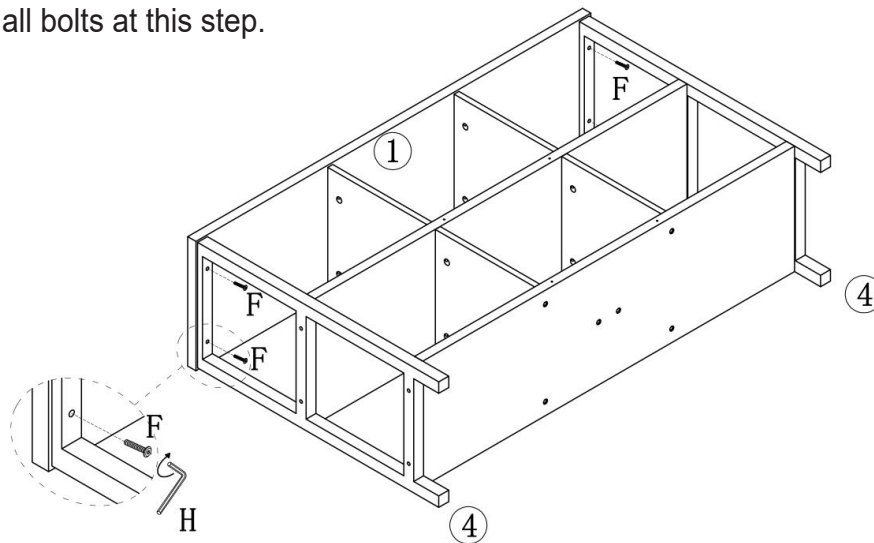

Step 08

Product support email: andy@foluban.com

 
- ✚ Align and fix Supporting Bar(⑥) to Bottom Panel(③) with two Short Bolts(E) by Allen Key(H).

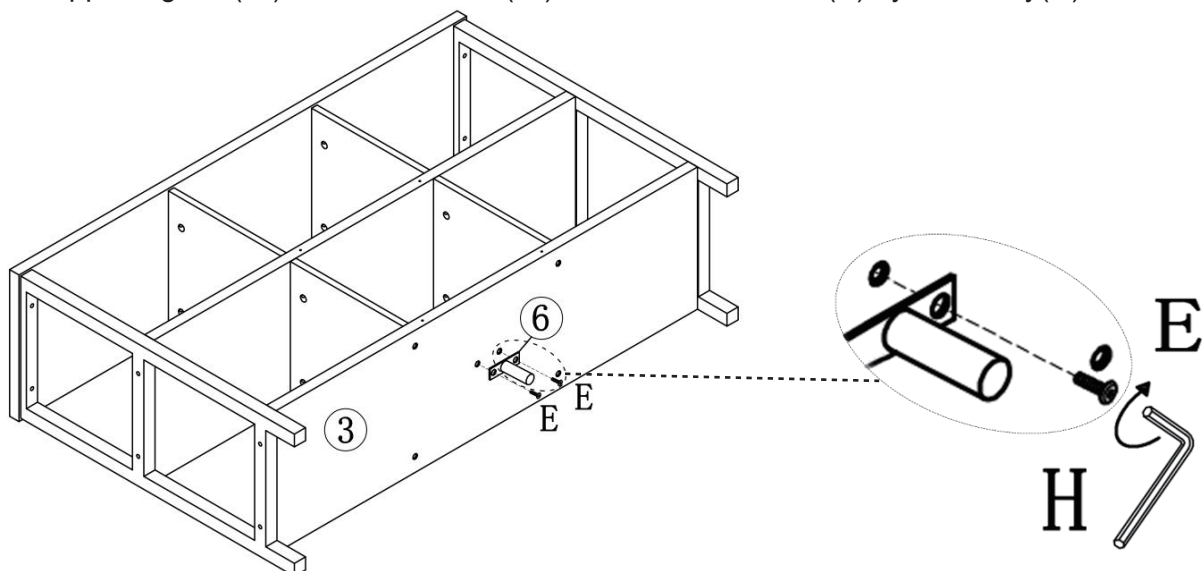

Step 09

Product support email: andy@foluban.com

 
 Screw and fasten Leveler(J) to Supporting Bar(⑥).

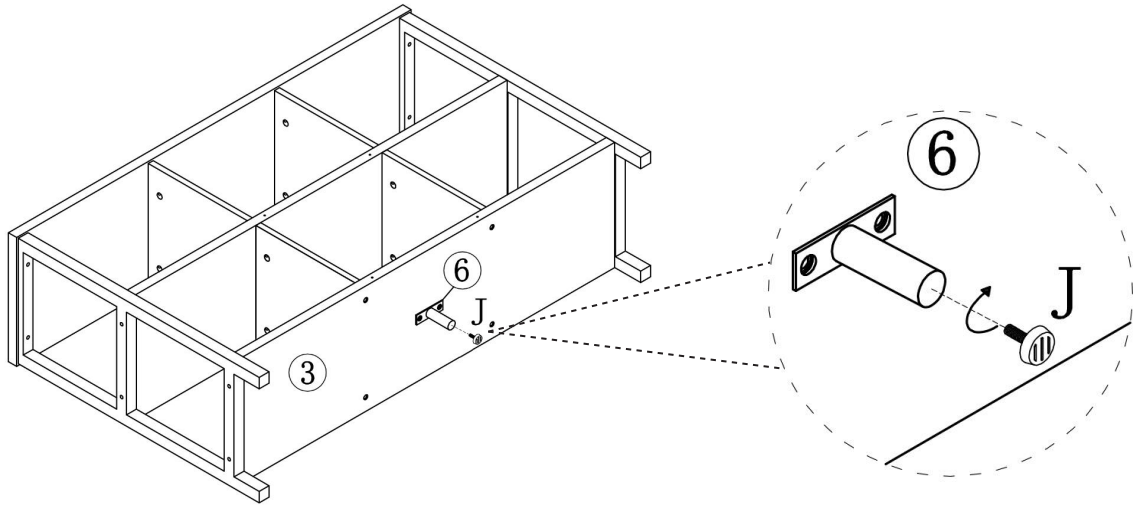

Step 10

NOTE: If holes don't align, loosen all bolts and adjust the holes slightly. After all holes are aligned, fully tighten all bolts.

 
 Attach and align the back Panel(⑦) to Mid Panel(②) and Bottom Panel(③) with 4 Short Screws(G) by Phillips Screwdriver(I). If holes don't align, loosen all bolts and adjust the holes slightly. After all holes are aligned, fully tighten all bolts.

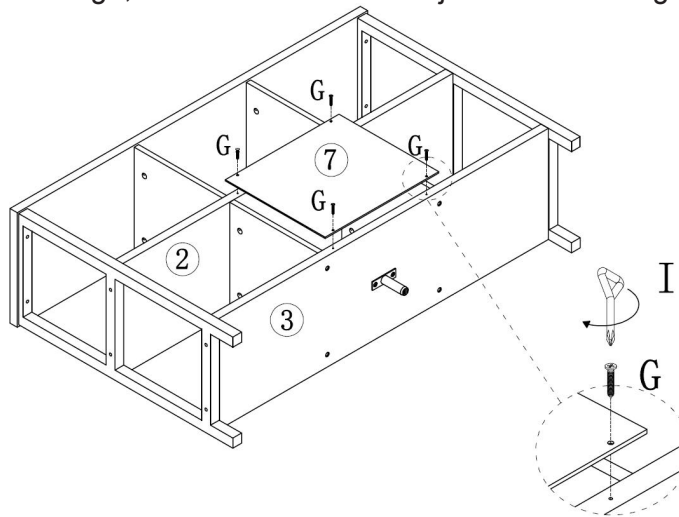

Step 11

Product support email: andy@foluban.com

  Make sure that all bolts are securely tightened, and then stick 8 Stickers(K) on the holes of the Cam Lock(B).

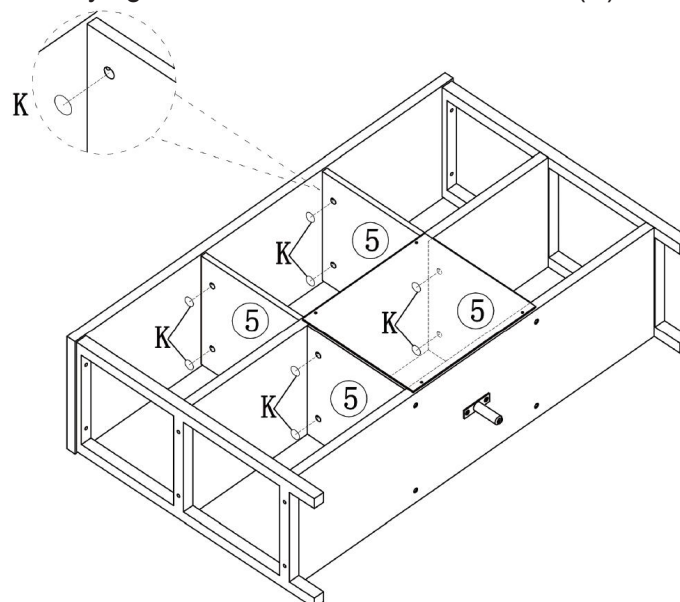




Thank you for purchasing FOLUBAN bookcase. If any part is missing or damaged, please do not hesitate to contact us, we will send you the replacement immediately.


Email: andy@foluban.com

ASSEMBLY TIPS

 1. Please read the assembly instructions first and become familiar with the parts.
2. Proper assembly of this item requires 2 people.

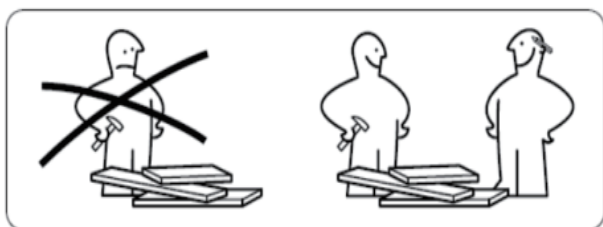

 3. Unpack and assemble this unit in an spacious area, assemble the unit on top of the empty carton or carpet to prevent scratches.

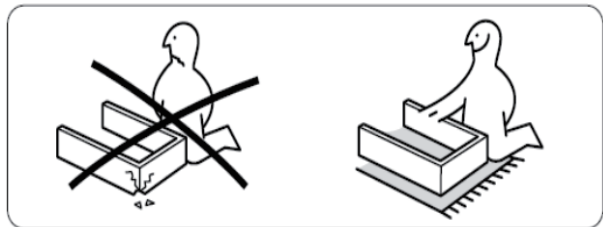

4. To avoid accidentally discarding small parts or hardware, DO NOT dispose of any contents until assembly is completed.
5. **Do not fully tighten all bolts until all parts are in place.** Failure to follow these instructions may cause the bolts to misalign during assembly.

CARE INSTRUCTIONS

- (1) Hardware may loosen overtime. Periodically check that all connections are tight.
- (2) Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.
- (3) All hot serving dishes should be placed on a pad.
- (4) Any liquid spilled onto the furniture should be cleaned up immediately with a dry cloth.