 


Owner Manual

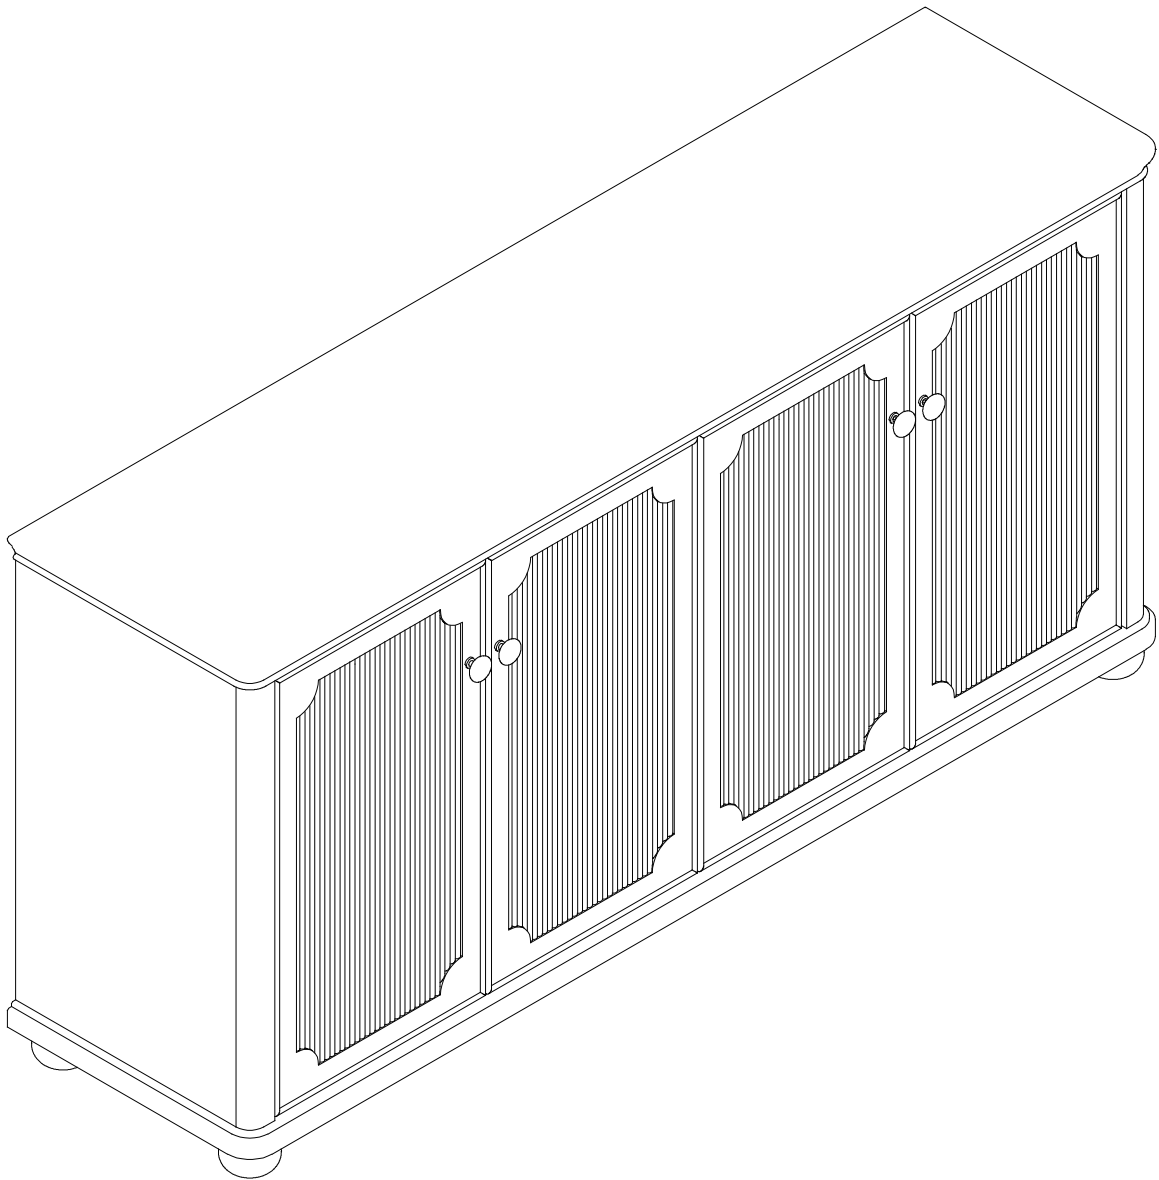

MAINTENANCE AND WARNINGS

Thank You For Choosing Our Furniture.

 
Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product.

NOTE :

This brochure contains IMPORTANT safety info. Please read and keep it for future reference.



Weight Limitation
200 LBS

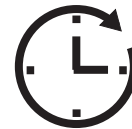

Installation:
30 minutes.



Two Person



Before You Start

Please follow the steps below:

-  Unbox the package and check if all parts and accessories are complete.
-  If you find something missing, stop assembly and contact your supplier immediately.
-  Please do not completely tighten all the hardware until the entire assembly is completed! Be sure to tighten all the hardware once the assembly completed.
-  NOTE: Should be assembled on soft surface to keep balance.

After-Sales Service

- If you encounter any issues or need technical support during use, please contact our after-sales team. We offer long-term maintenance and warranty services.



Warranty

 
-  We strive to offer high , quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.
-  Are you having difficulty with assembly? Missing parts? Please send email with your order number
-  For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!

Daily Maintenance

- Keep furniture away from heat.
- Do not use cleaning agents containing acids, alkalis, or corrosive substances, as they may damage the surface. It is recommended to use neutral cleaning agents or specialized furniture cleaners.
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, for residential use only.


Exploded Diagram

Please confirm that you have received all the parts in the box and start the installation.

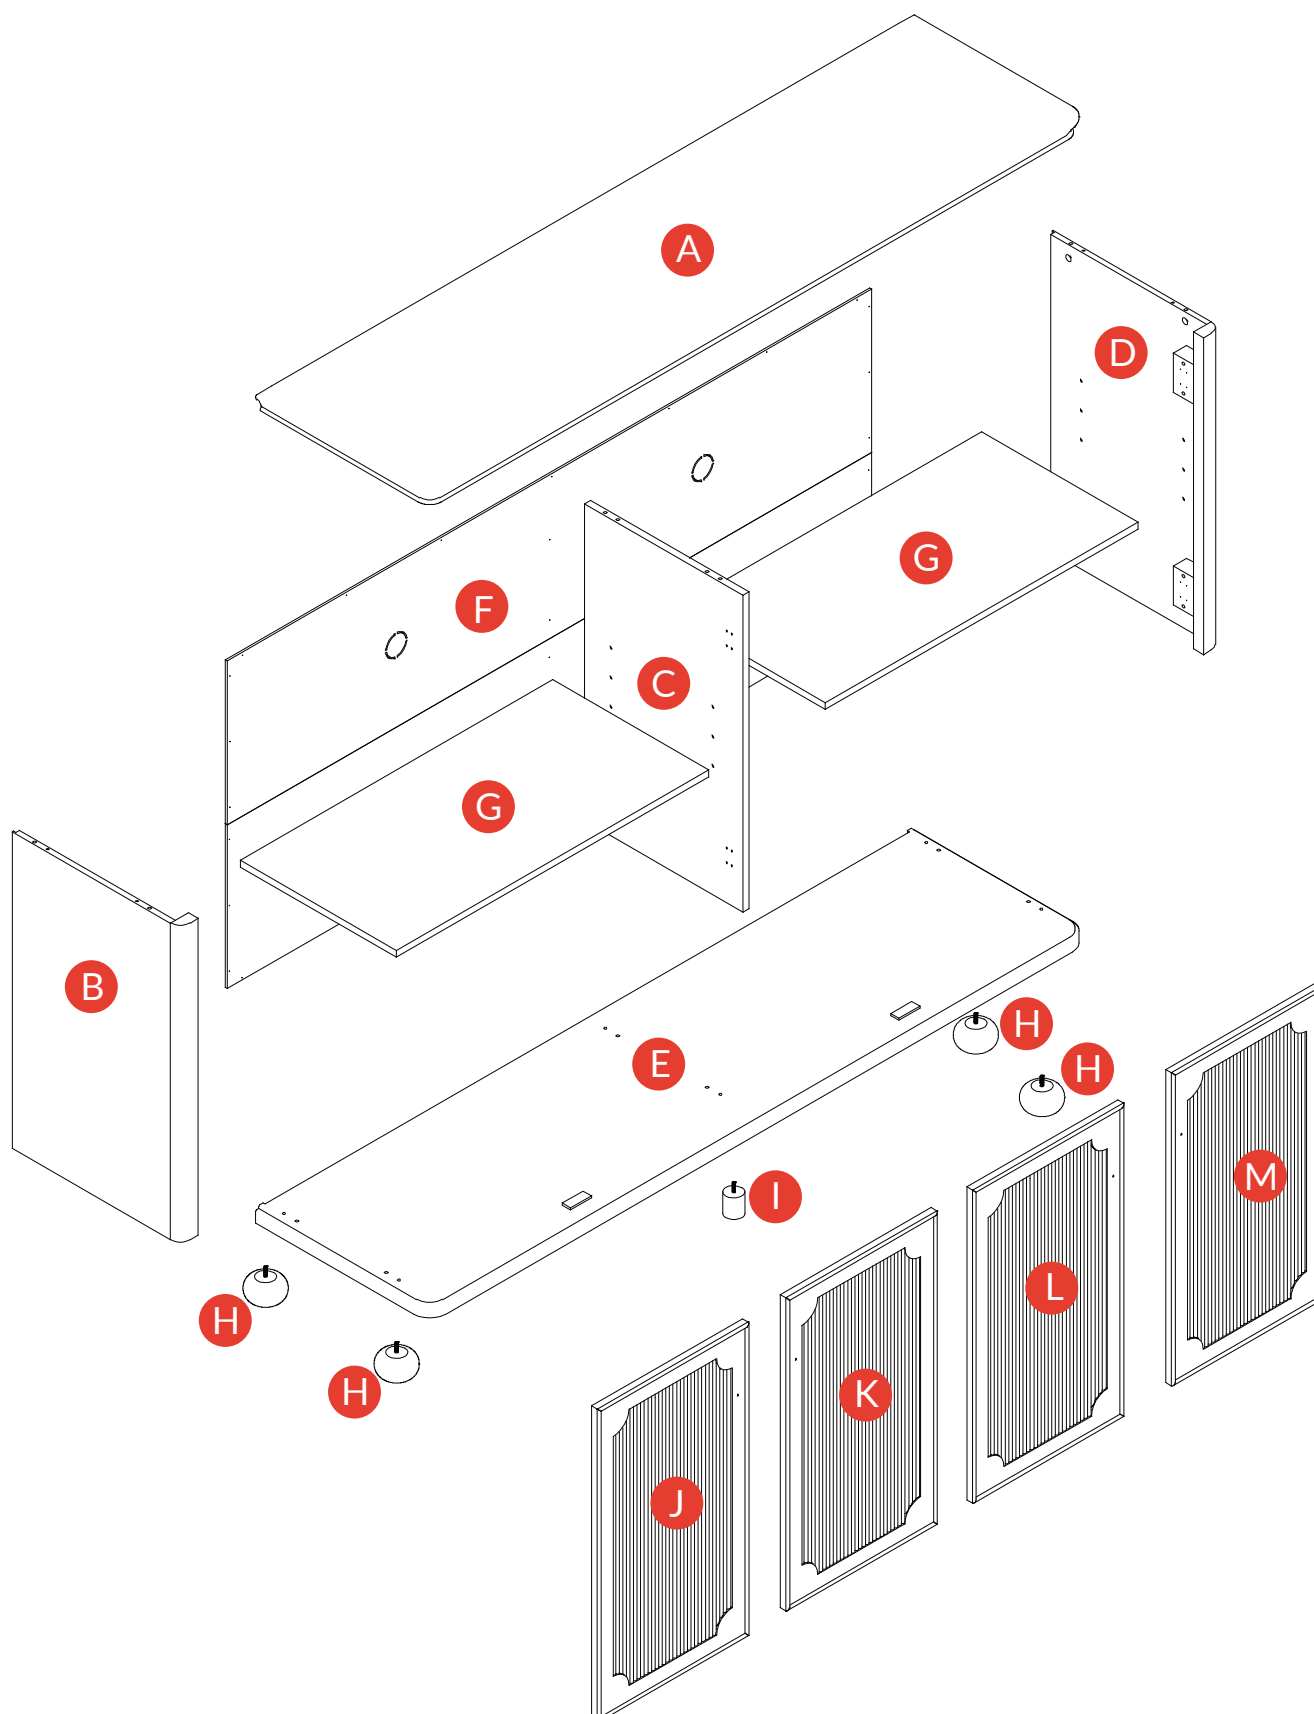


Parts List

 A ×1

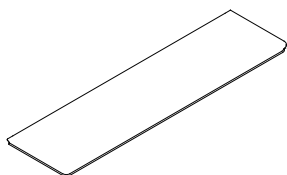


Panel

 B ×1




Left panel

 C ×1




Middle side panel

 D ×1




Right side panel

 E ×1

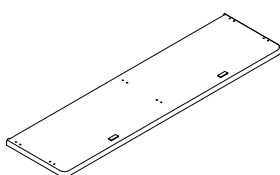


Base plate

 F ×1

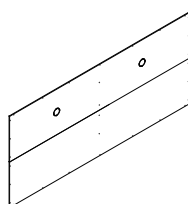

Back panel

 G ×2



Activity shelf

H ×4



 
Foot

I ×1




Middle foot

J ×1




Left door panel

 K ×1




Middle door panel

 L ×1



Middle door panel

 
M ×1



Right door panel


Hardware List

 1 x4

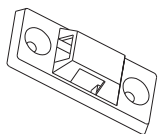


Anti-tip component

 2 x4




Self-tapping screw
D4x20mm

 3 x2

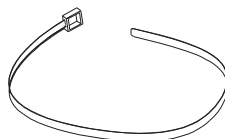


Hardware pack

 4 x4




Expansion pipe
L30mm

 5 x4



Self-tapping screw
D4x40mm

 6 x1

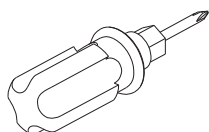


Screwdriver

7 x1



Hexagonal socket wrench
M4

 8 x6




Straight repair screws
Ø6.3x40mm

9 x6+1




Eccentric wheel

 10 x6+1




Three in one
M6x35mm

 11 x12+2




Wood plug
Ø8x30mm

 12 x2

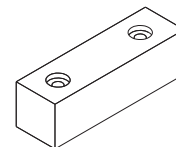


Door stopper

 13 x4+1




Self-tapping screw
D4x30mm

 14 x4




Internal clamp door hinge
Ø35 nn

 15 x4




Half-covered door hinge
Ø35 nn

 16 x48+4



Self-tapping screw
D4x14mm

 17 x8



Layer board support

18 x30+4



Self-tapping screw
D3x16mm

19 x4+1



Pull screw
M4x18mm

20 x4



Pull handle

21 x6+1




Moviwall sticker

ASSEMBLY INSTRUCTIONS

Step 01


1. Insert the self-tapping screws (13) through the door stopper wood (12) and the panel (A), then secure them with a screwdriver (6).
2. Insert the three-in-one component (10) into the corresponding hole on the panel (A), and secure it with a screwdriver (6).


6	 x1	Screwdriver	12	 x 2	Door stopper
10	 x 6	M6x35mm	13	 x 4	D4x30mm

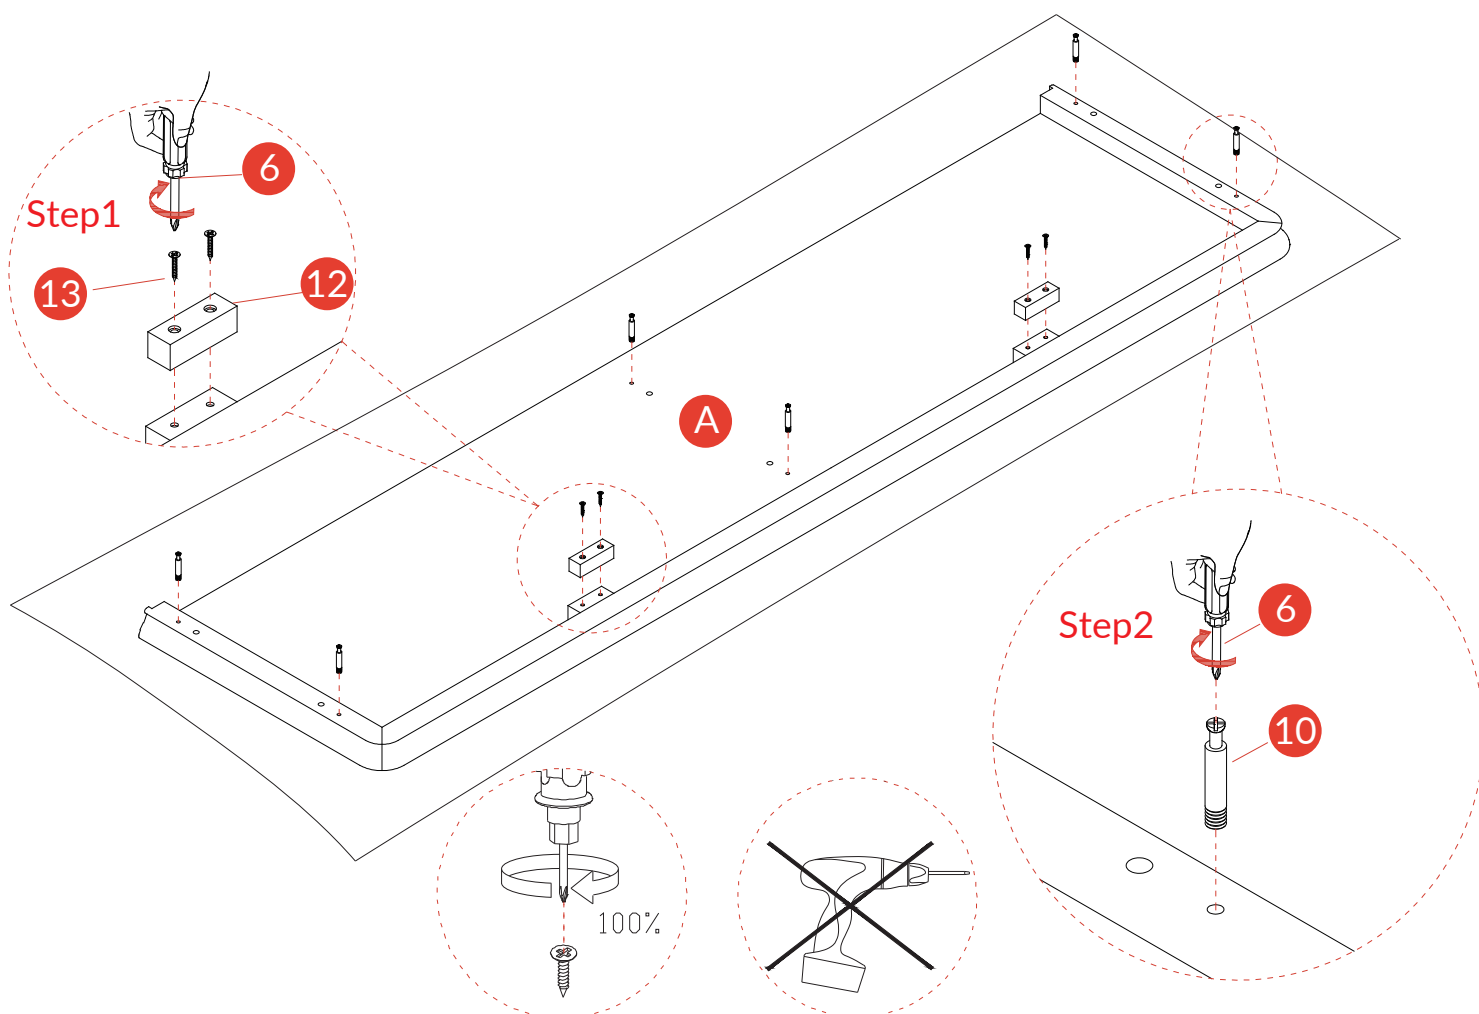 

Step 02

 1. Insert the wooden dowels (11) into the corresponding holes of the panel (A), the left side panel (B), the middle side panel (C), and the right side panel (D). Insert the eccentric wheel (9) into the corresponding holes of the left side panel (B), the middle side panel (C), and the right side panel (D), and secure it with a screwdriver (6).
2. Attach the MoviTape (21) to the corresponding holes on the left panel (B), middle side panel (C), and right panel (D).


9		x 6	Eccentric wheel	11		x 6	Ø8x30mm
6		x1	Screwdriver	21		x 6	Moviwall sticker

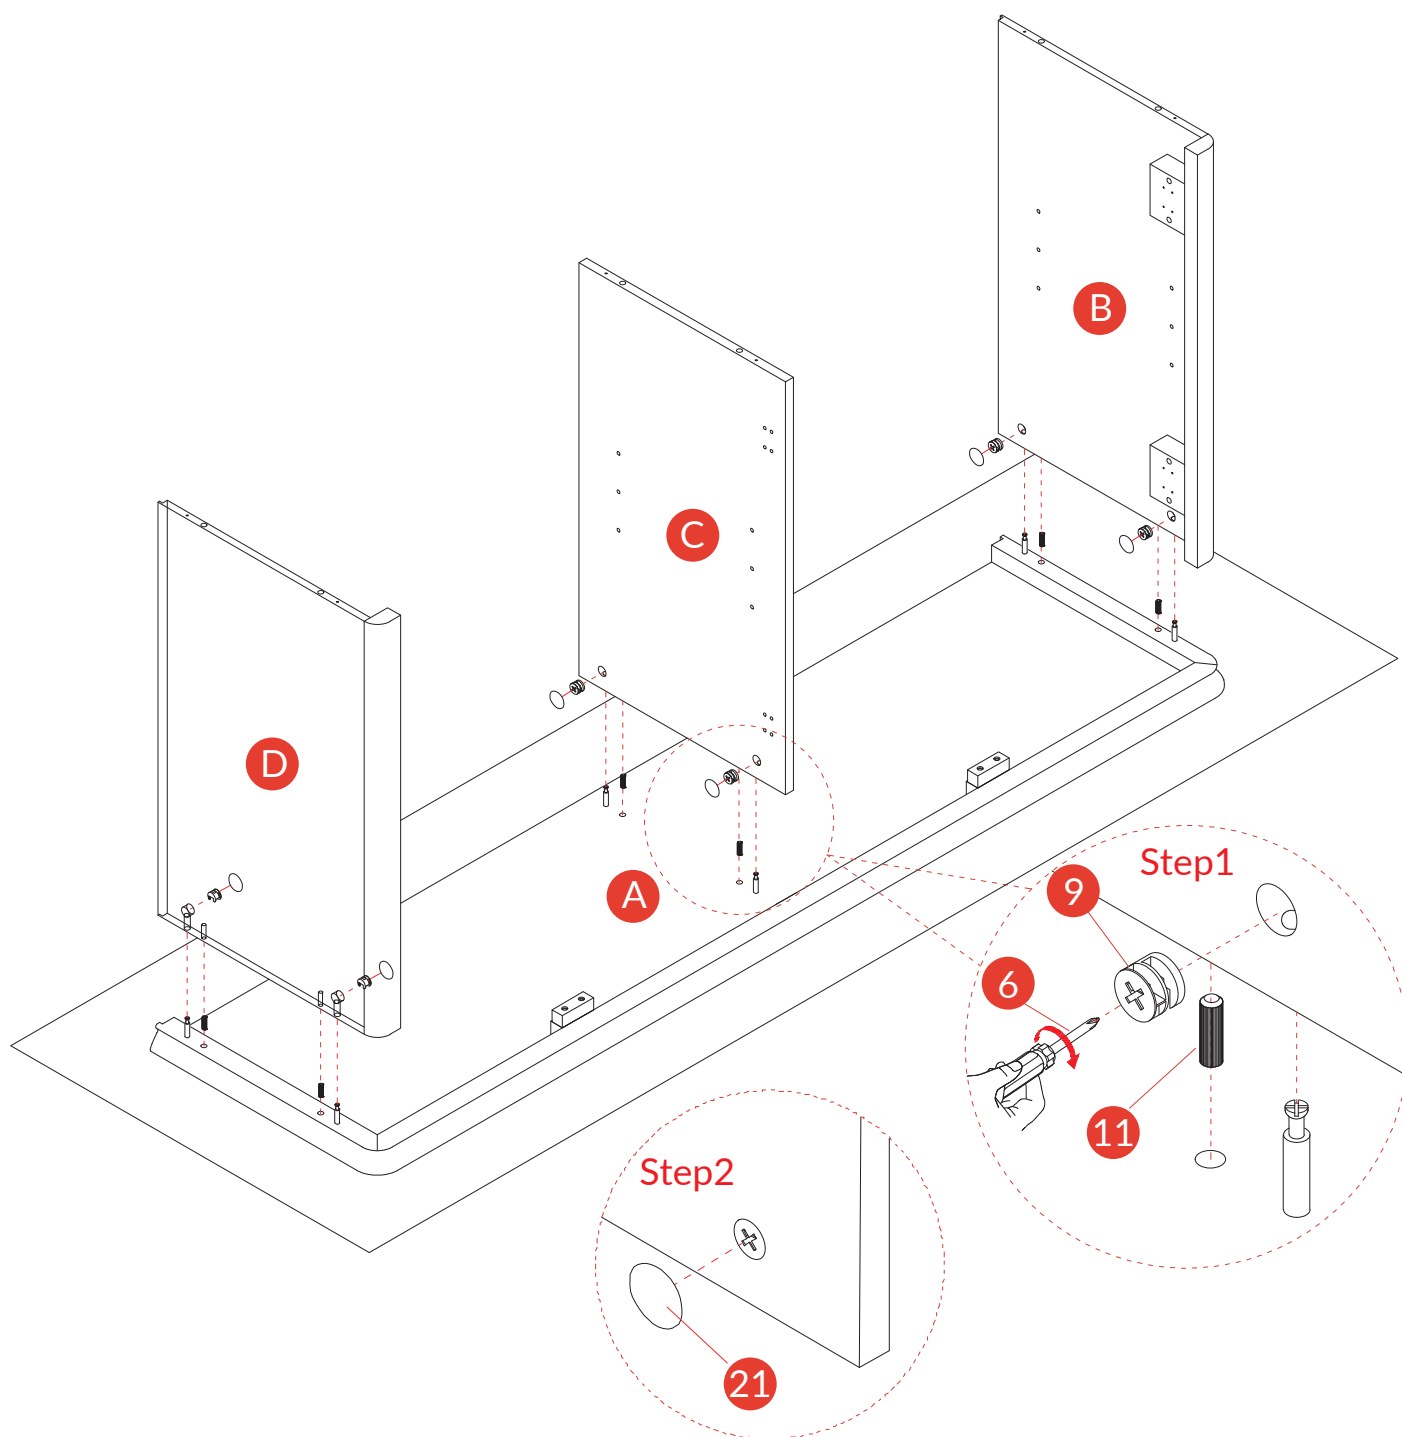 

Step 03


1. Insert the wooden dowels (11) into the corresponding holes of the bottom plate (E), left side plate (B), middle side plate (C), and right side plate (D).
2. Pass the straight screws (8) through the bottom plate (E) and the left side plate (B), middle side plate (C), and right side plate (D) to assemble them, and then tighten them with a wrench (7).

8	 x 6	Ø6.3X40mm	11	 x 6	Ø8x30mm
7	 x 1	M4			

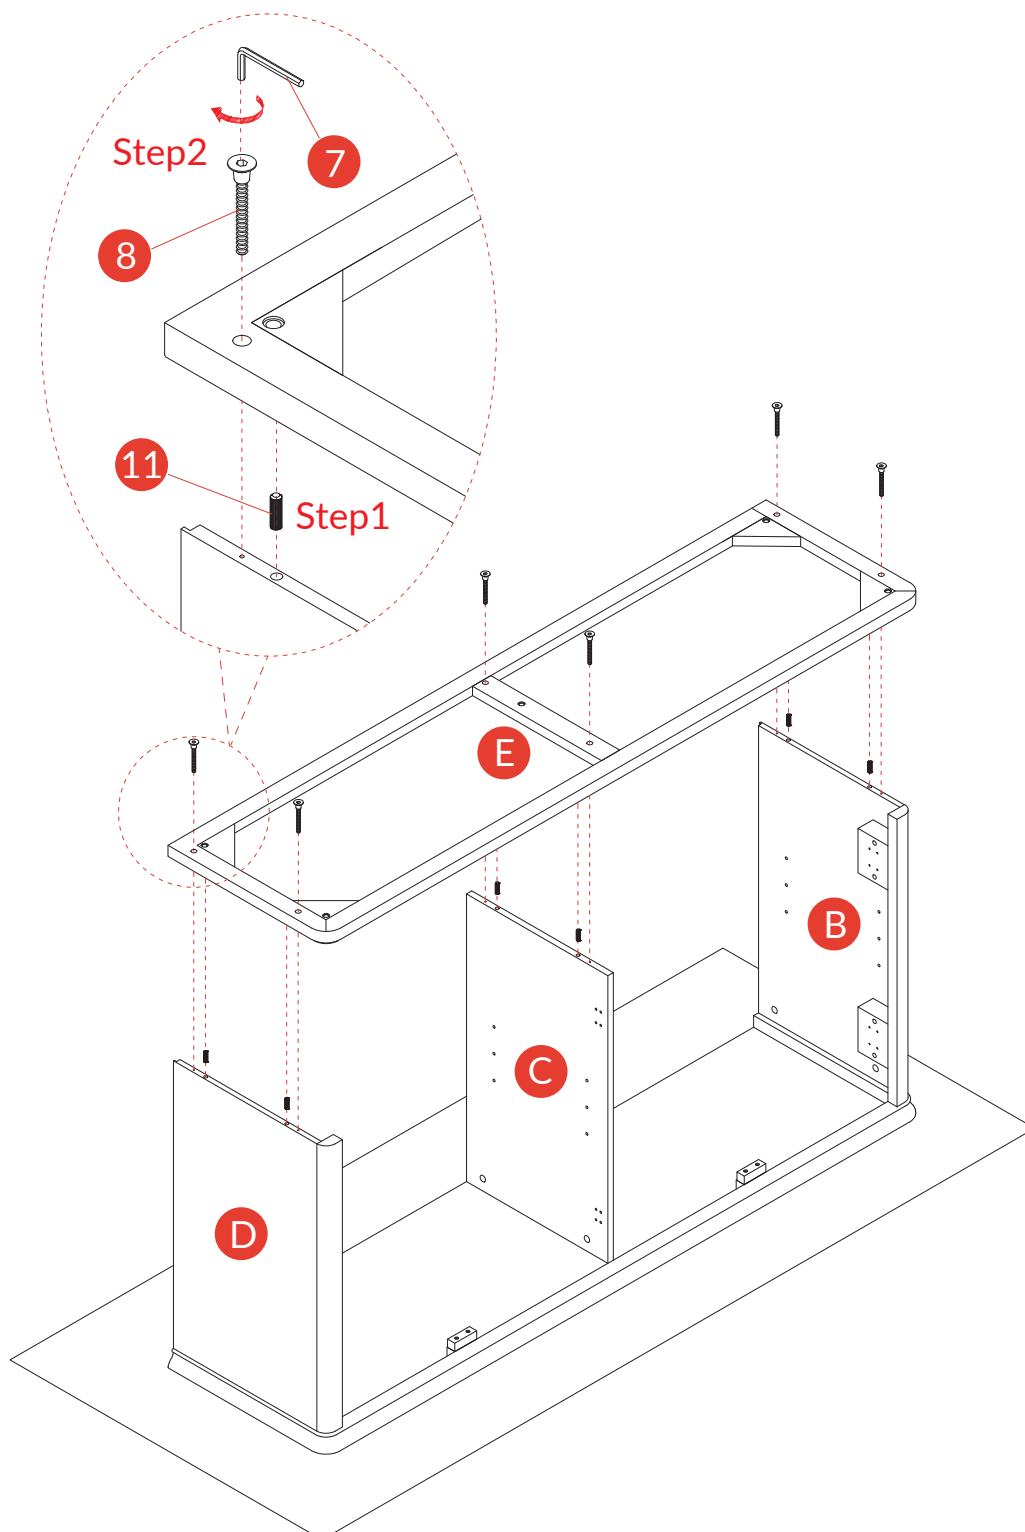 


Step 04

 
Insert the feet (H) and the middle feet (I) into the corresponding holes on the base plate (E), and lock them in place in the direction indicated by the arrows.

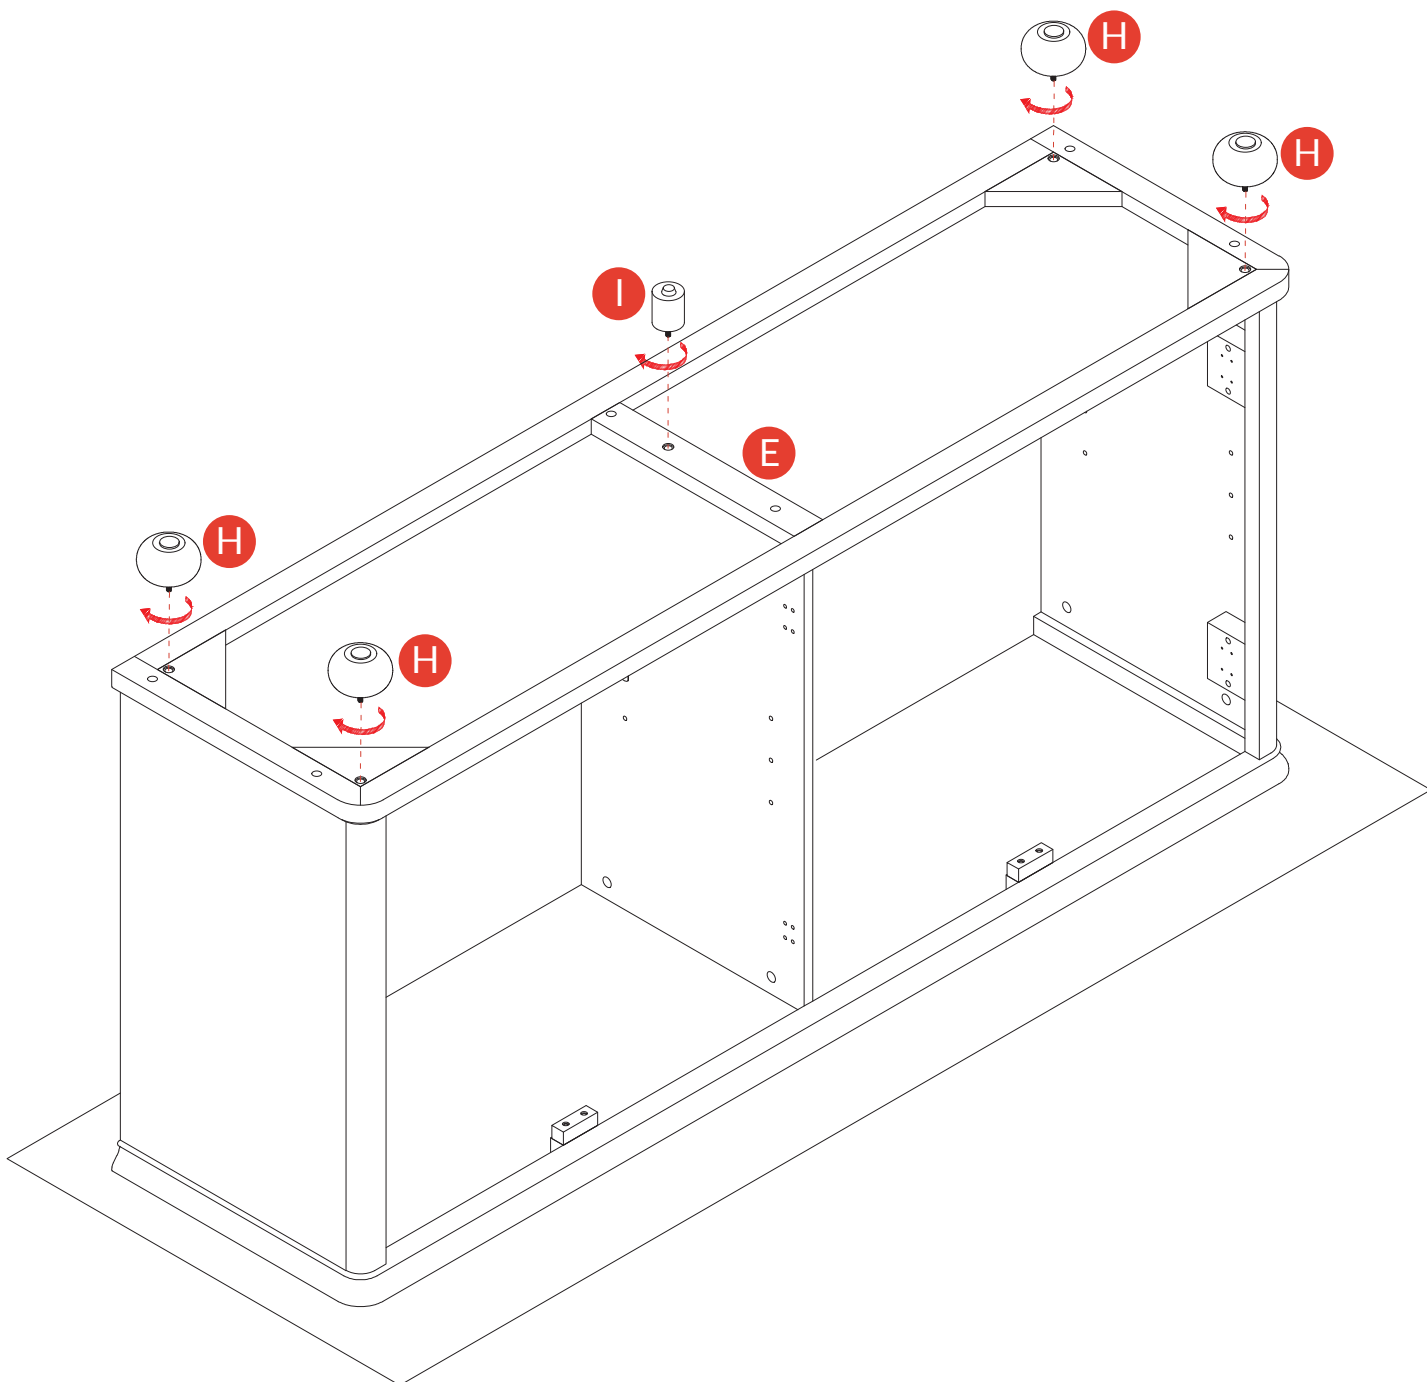


Step 05

 1. Open the back panel (F), and then insert it into the back panel slot of the assembled cabinet.
2. Thread the screws (18) through the back panel (F) and the cabinet to assemble them, and then tighten them with a screwdriver (6).



6	 x 1	Screwdriver
18	 x 30	D3x16mm

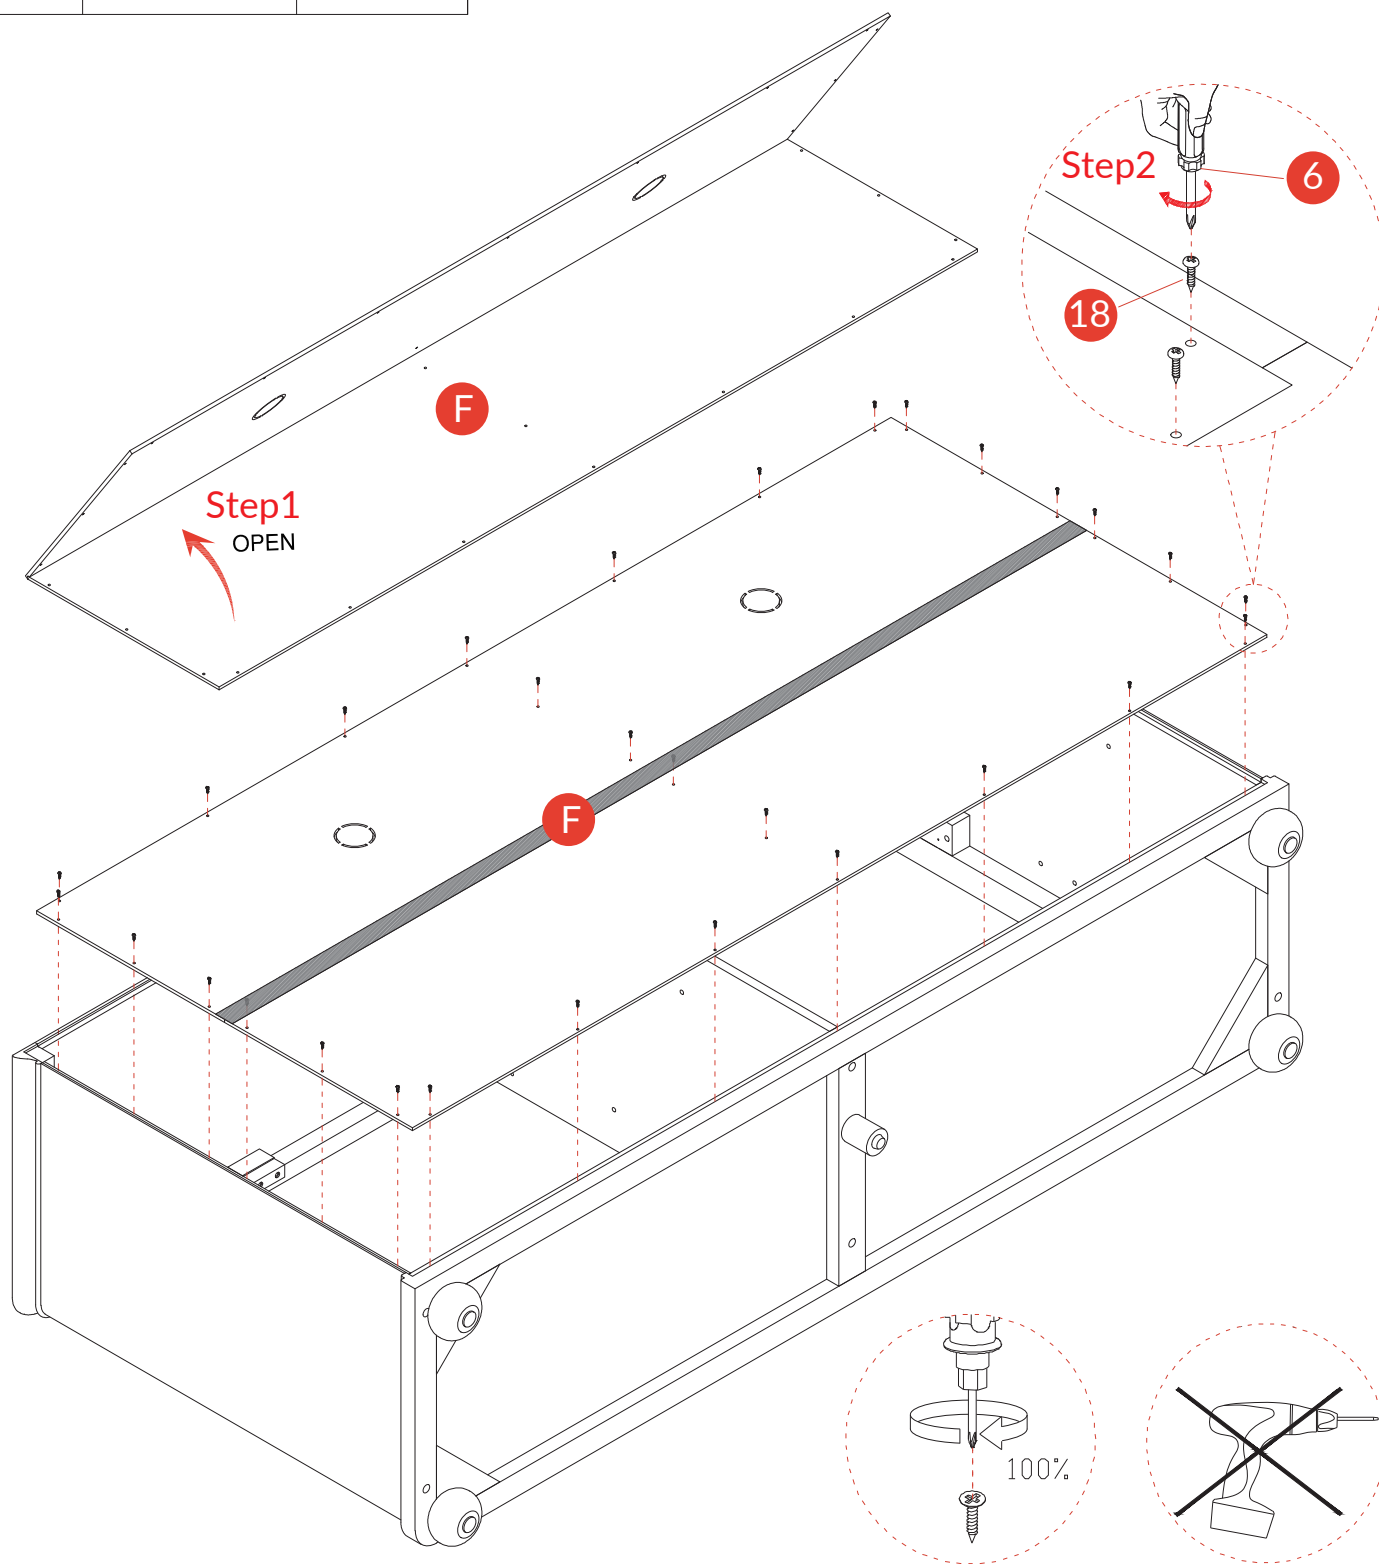 

 Step 06

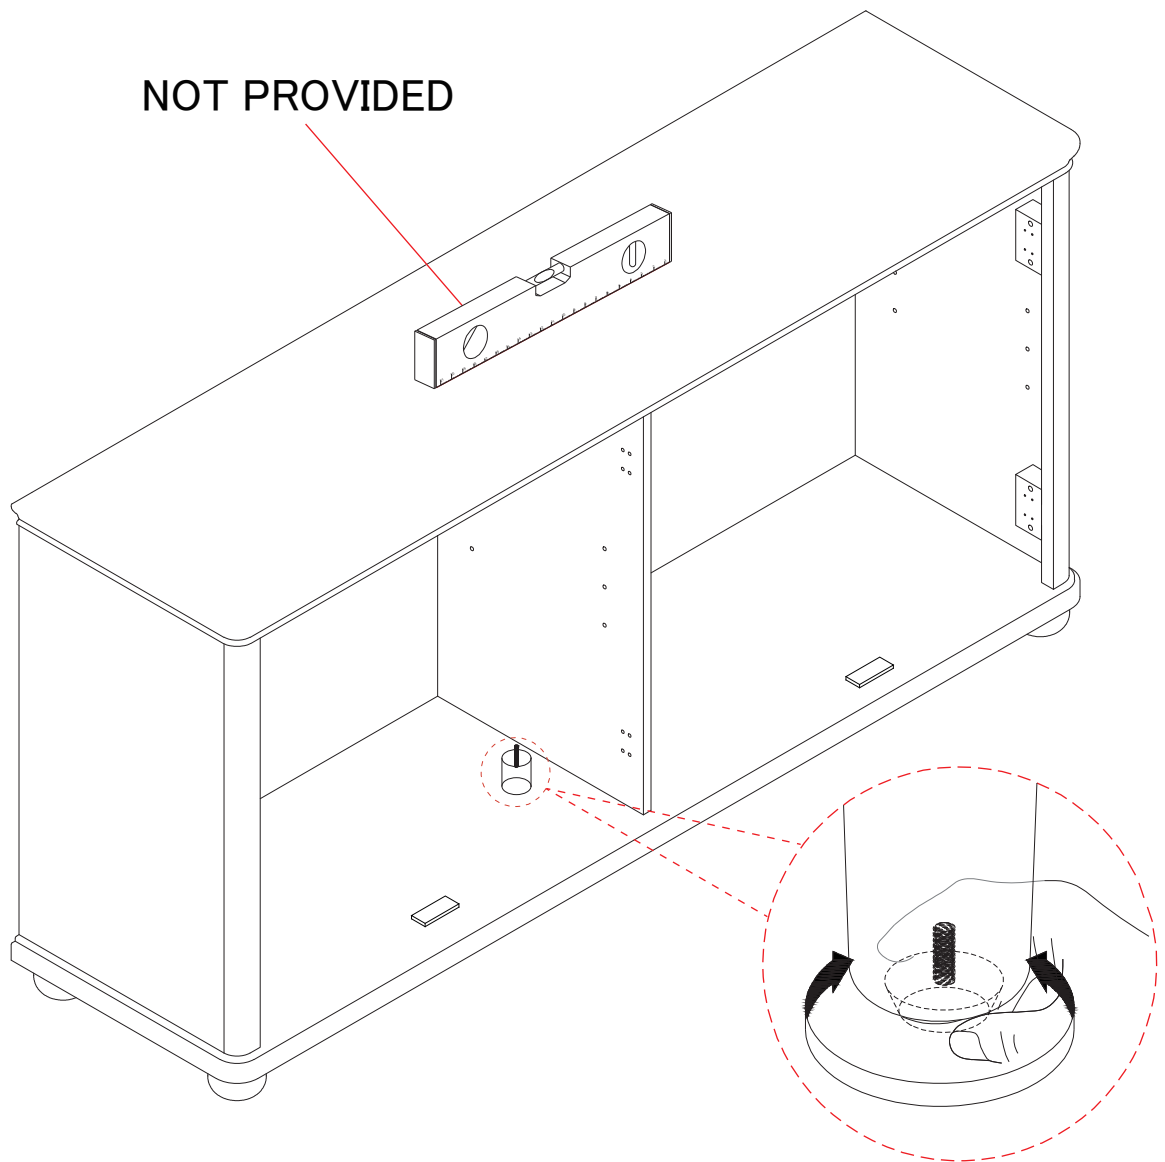

  
Note:
Before the next step, adjust the feet of
the locker to keep it level.

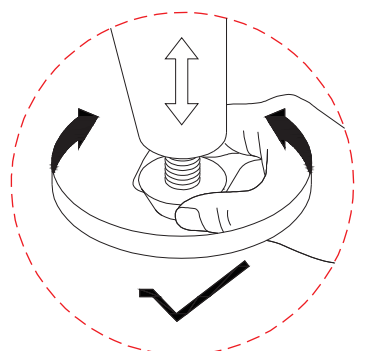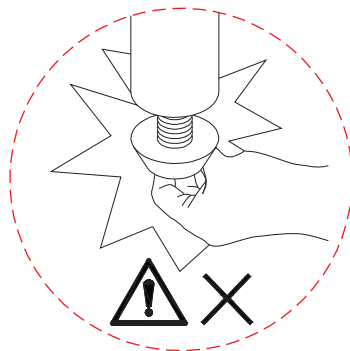

Step 07


Insert the shelf support (17) into the corresponding holes of the left side panel (B), the middle side panel (C), and the right side panel (D), and place the movable shelf panel (G) inside the cabinet.


17	 x 8	Layer board support
----	---	---------------------

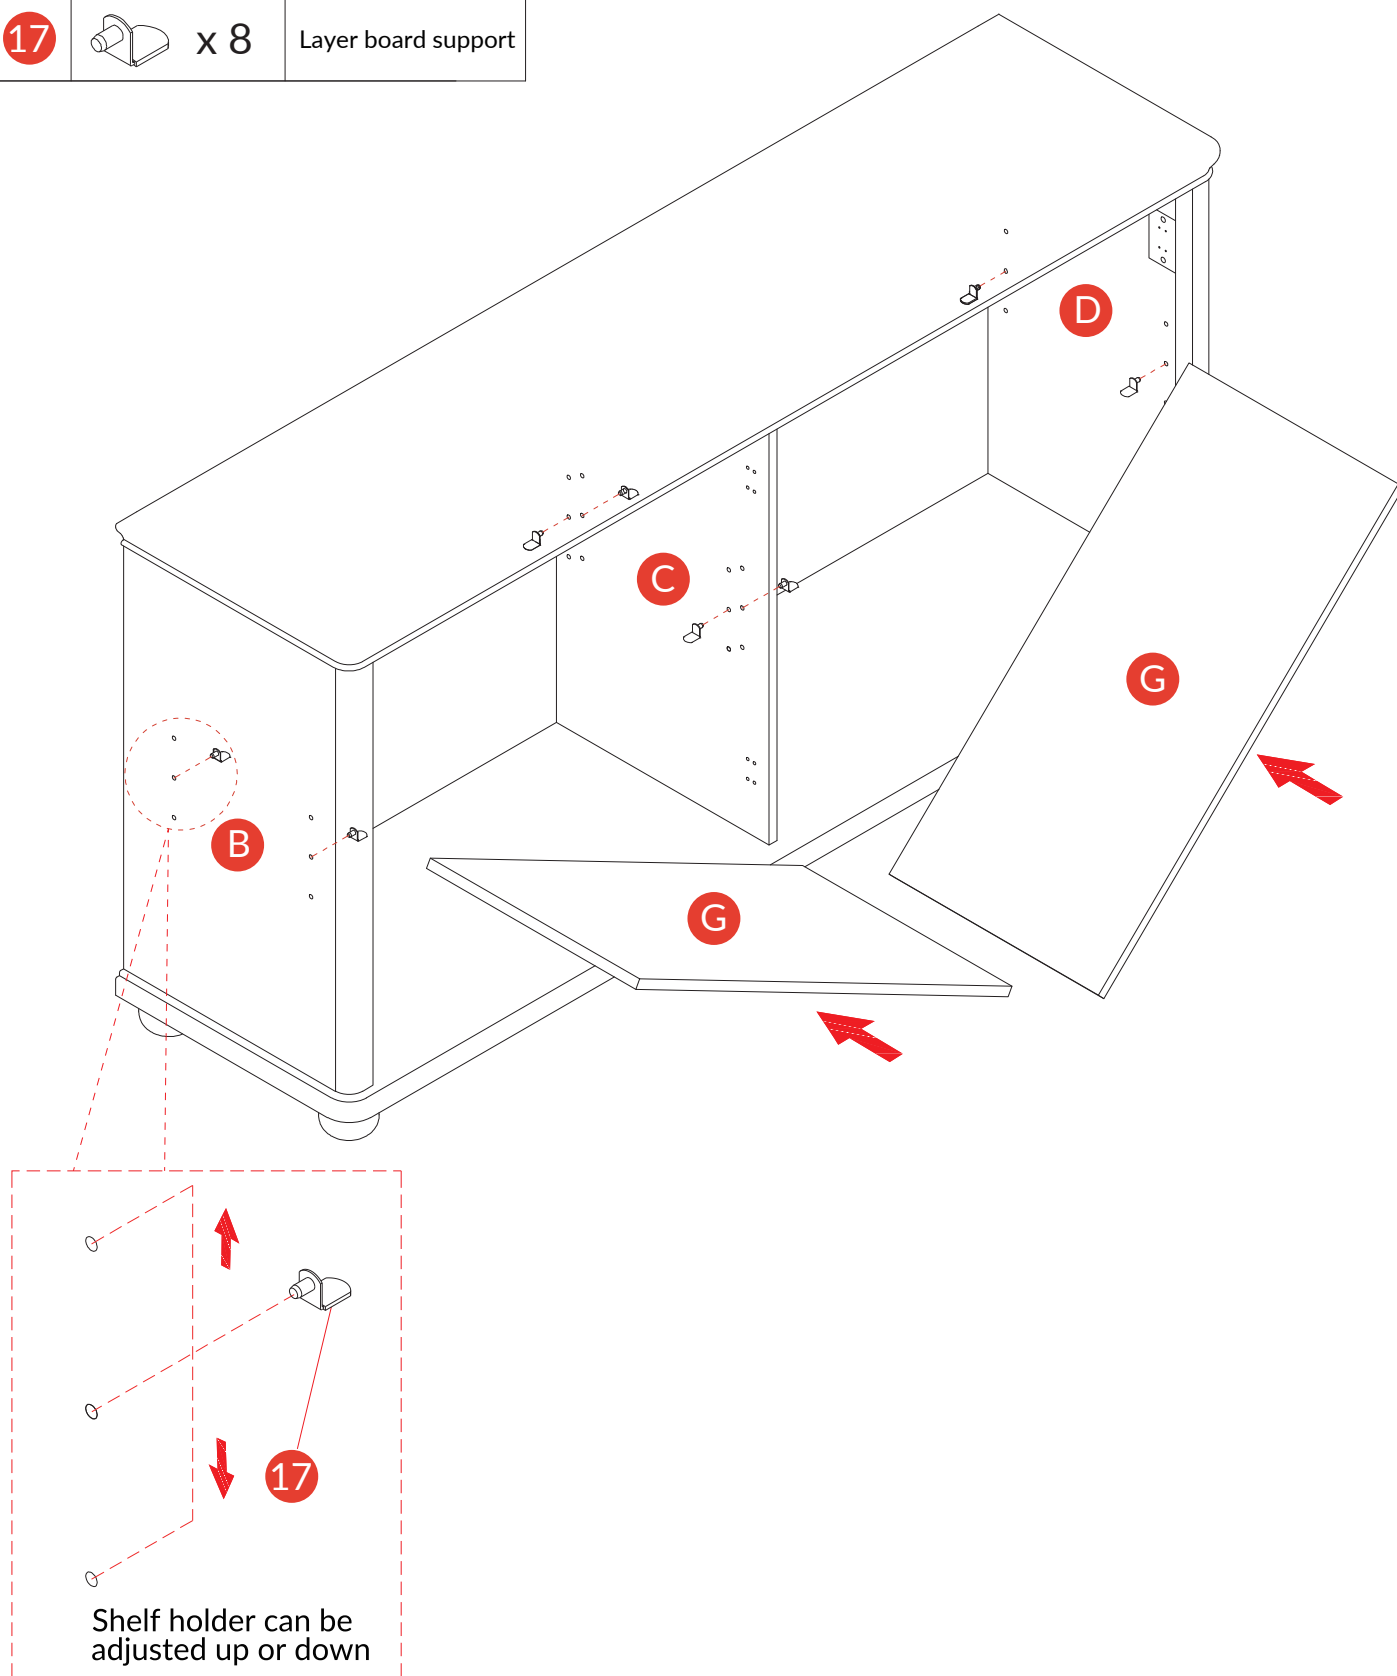 

Step 08


 
1. Insert the self-tapping screws (16) through the large curved door hinge (14) and the left door panel (J), as well as the right door panel (M), and then secure them with a screwdriver (6).
2. Insert the handle screws (19) through the left door panel (J), the right door panel (M), and the handle (20), and then secure them with a screwdriver (6).


14	 x 4	Ø35 mm	19	 x 2	M4x18mm
16	 x 8	D4x14mm	20	 x 2	Pull handle
6	 x 1	Screwdriver			

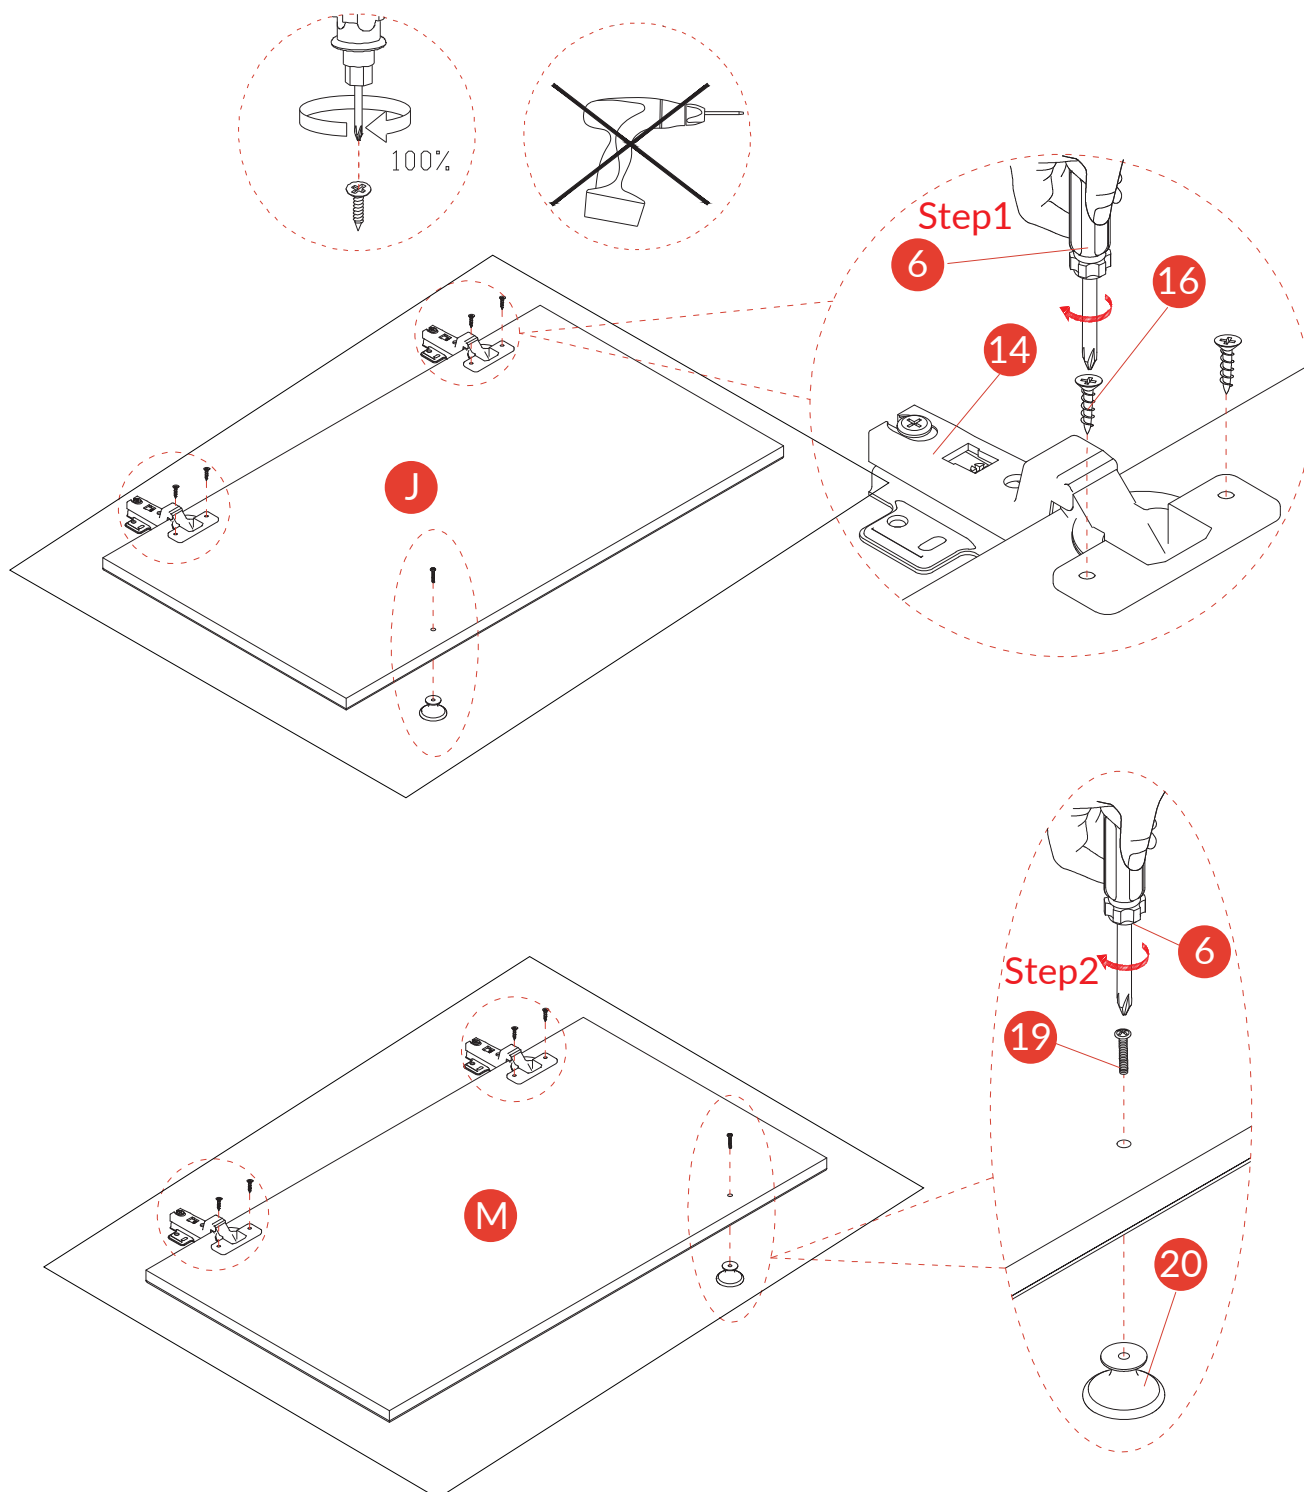 

Step 09

  
1. Insert the self-tapping screws (16) through the middle curved door hinge (15) and the middle door panels (K) and (L), then secure them with a screwdriver (6).
2. Insert the handle screws (19) through the middle door panels (K) and (L) and the handle (20), then secure them with a screwdriver (6).


15	 x 4	Ø35 mm	19	 x 2	M4x18mm
16	 x 8	D4x14mm	20	 x 2	Pull handle
6	 x 1	Screwdriver			

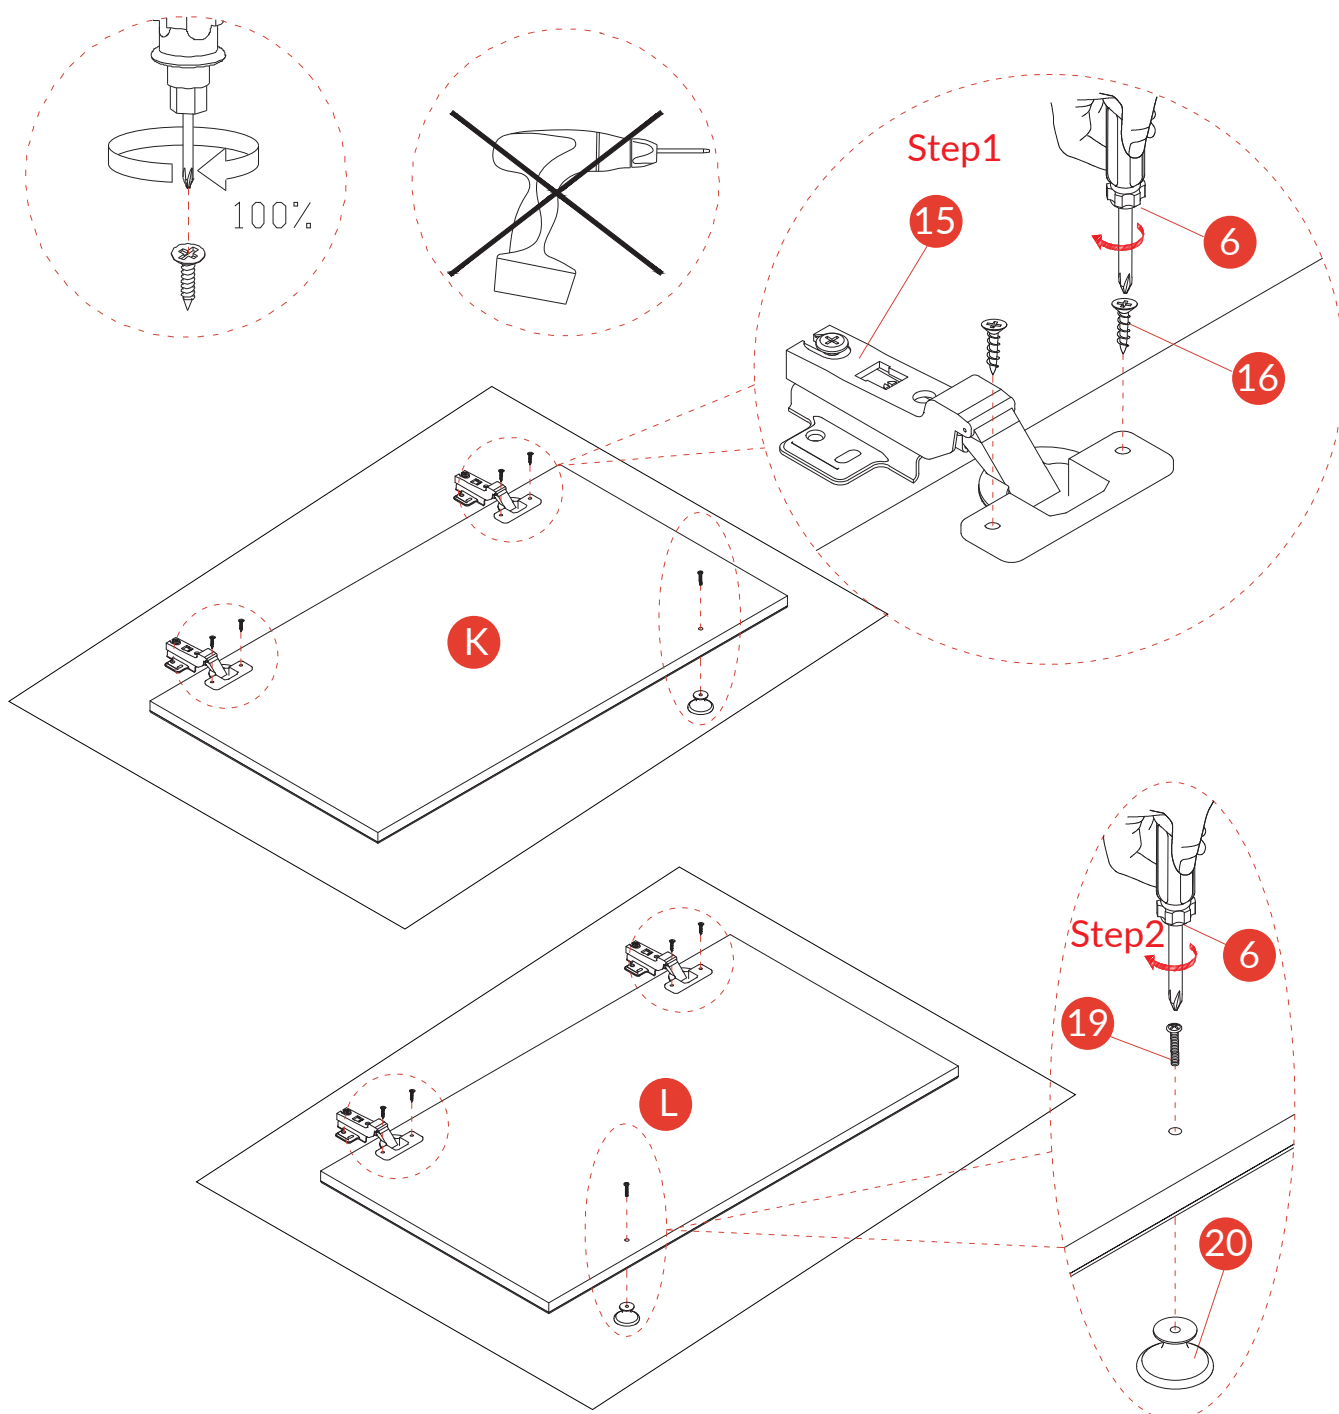 

Step 10

 
Insert the self-tapping screws (16) through the assembled left door panel (J) and the left side panel (B) to assemble them, then lock them with a screwdriver (6). Repeat the same process for the right door panel (M) and the right side panel (D), inserting the self-tapping screws through them and locking them with the screwdriver (6).





6	 x 1	Screwdriver
16	 x 16	D4x14mm

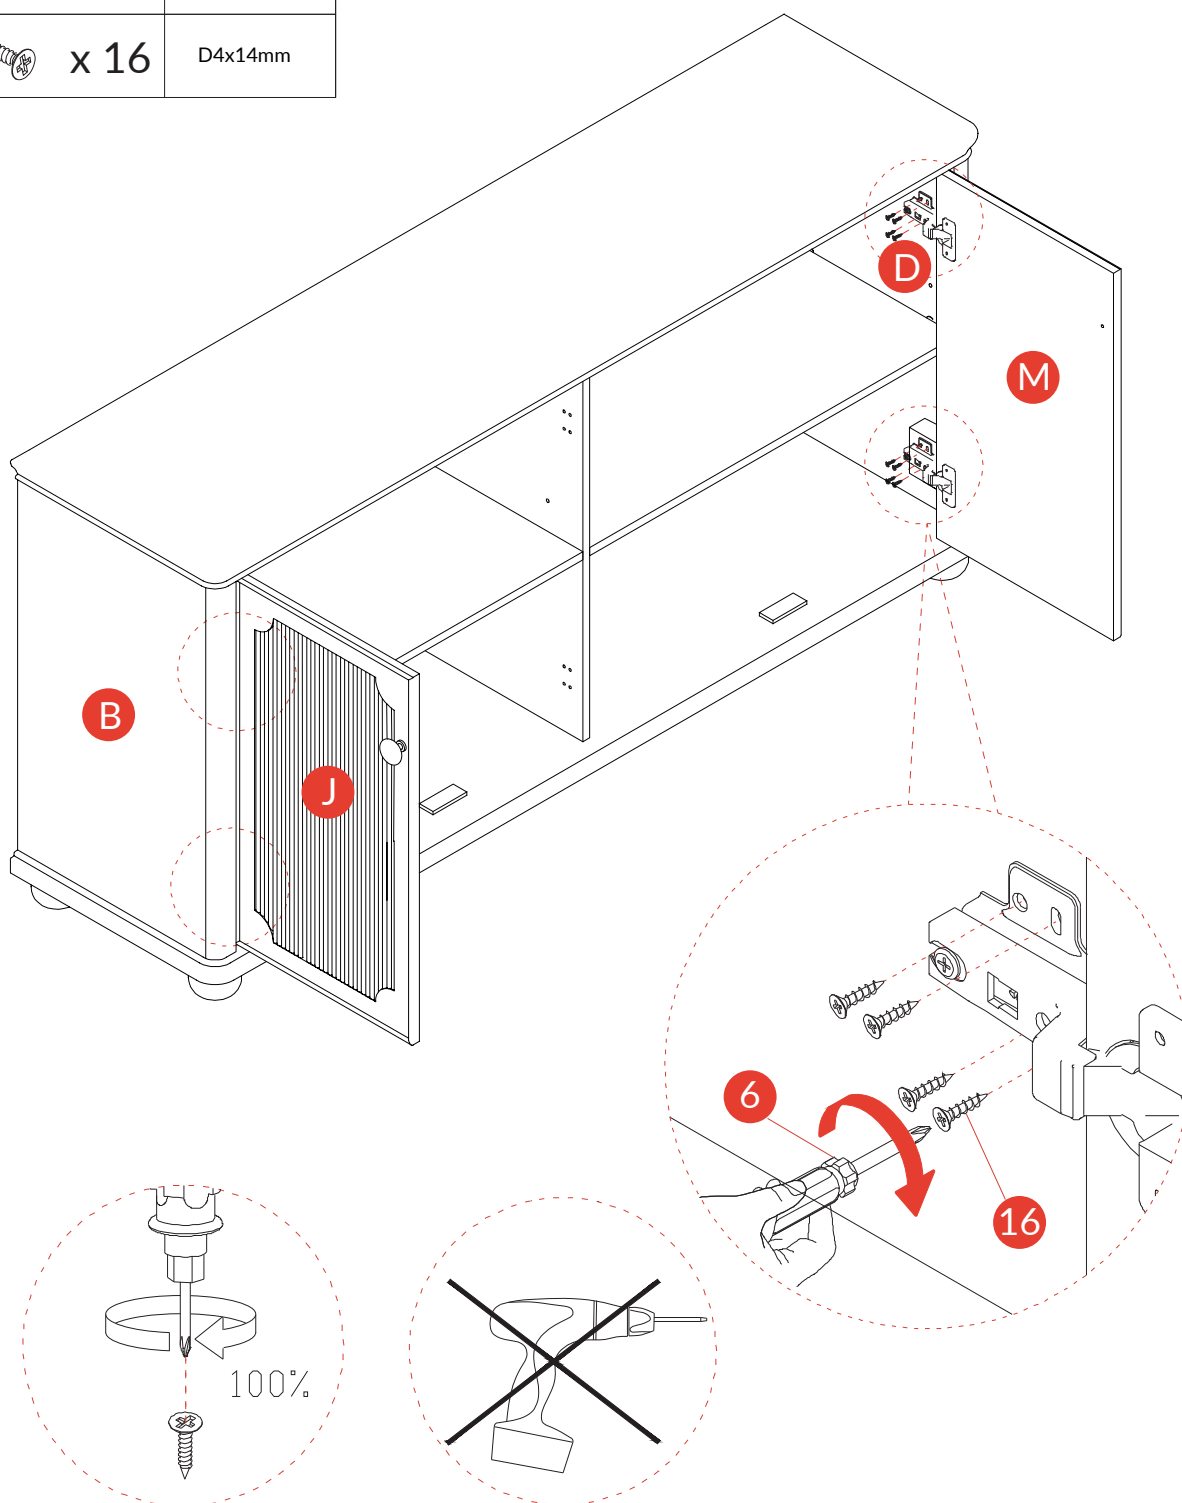 

Step 11

 
Pass the self-tapping screws (16) through the assembled middle door panel (K) and middle side panel (C) to assemble them, then lock them with a screwdriver (6). Repeat this process for the assembled middle door panel (L) and middle side panel (C) to assemble them, and lock them with a screwdriver (6).

6	 x 1	Screwdriver
16	 x 16	D4x14mm

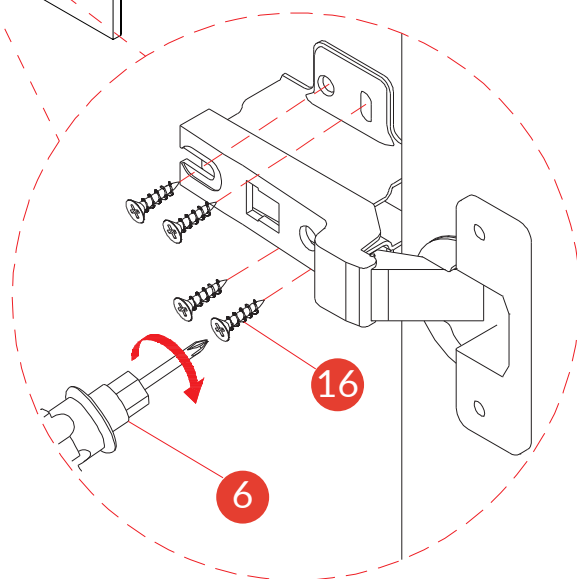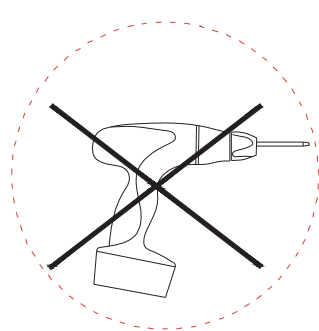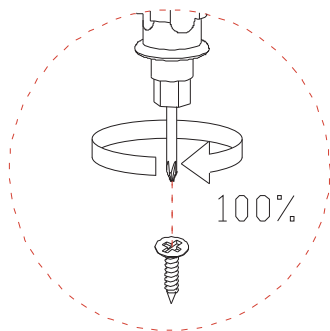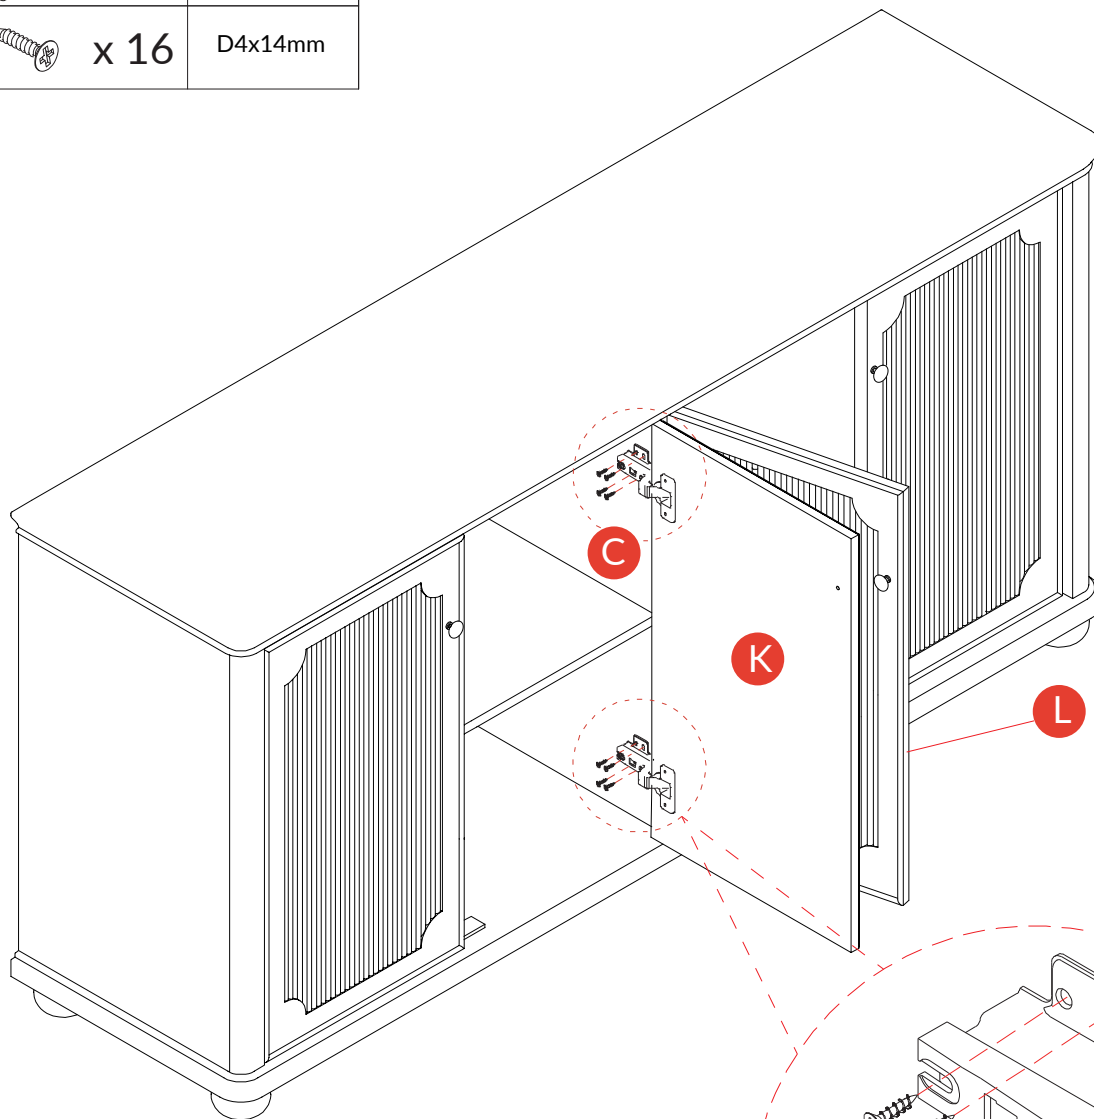    


Door Hinge Adjustment Instructions

 
Concealed hinges are three-way adjustable.

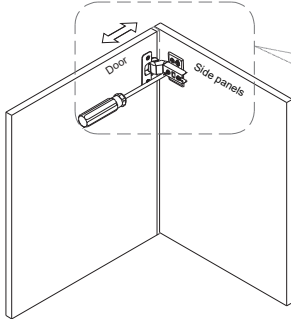


Horizontal by screw adjustment!

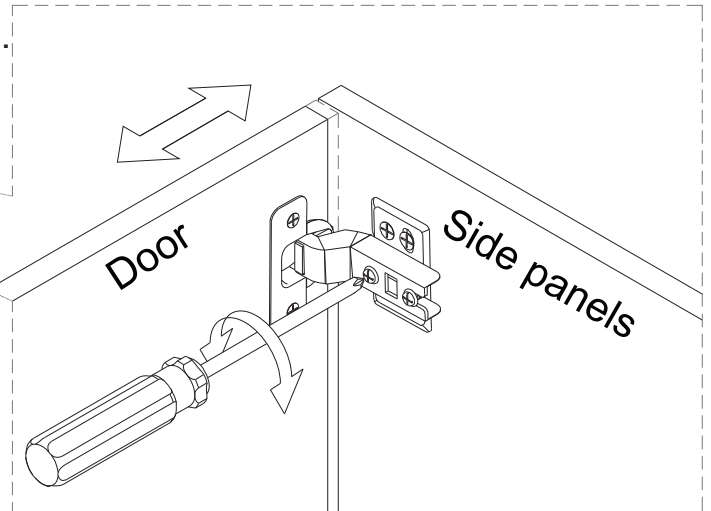 

 
Concealed hinges are three-way adjustable.

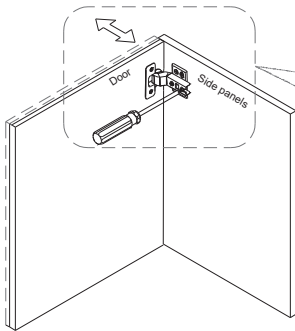

 
In-and-out by loosening the hinge arm mounting screw or via cam adjustment!

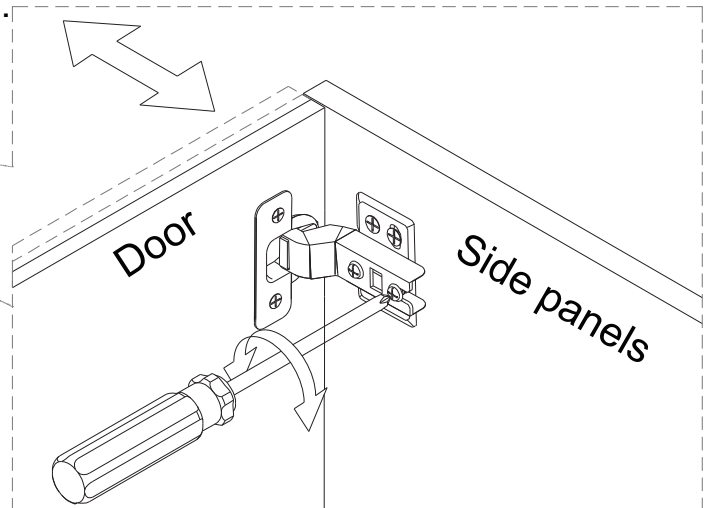

 Concealed hinges are three-way adjustable.

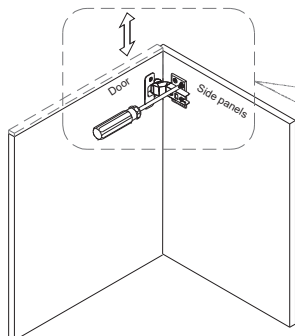


 
Vertical via slots in the mounting plate or via cam adjustment!

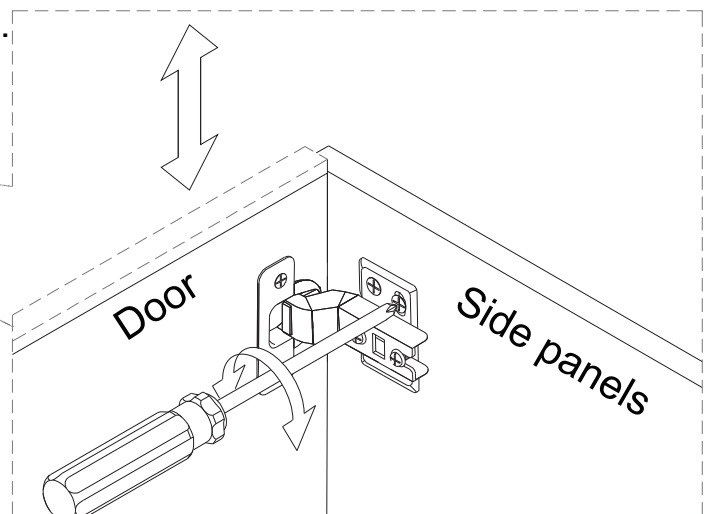

Step 12

 
Pass screw (2) through the anti-fall part (1) and insert it behind the panel, then tighten with screwdriver(6).



2	 x 4	D4x20mm	6	 x 1	Screwdriver
1	 x 2	Anti-tip component			

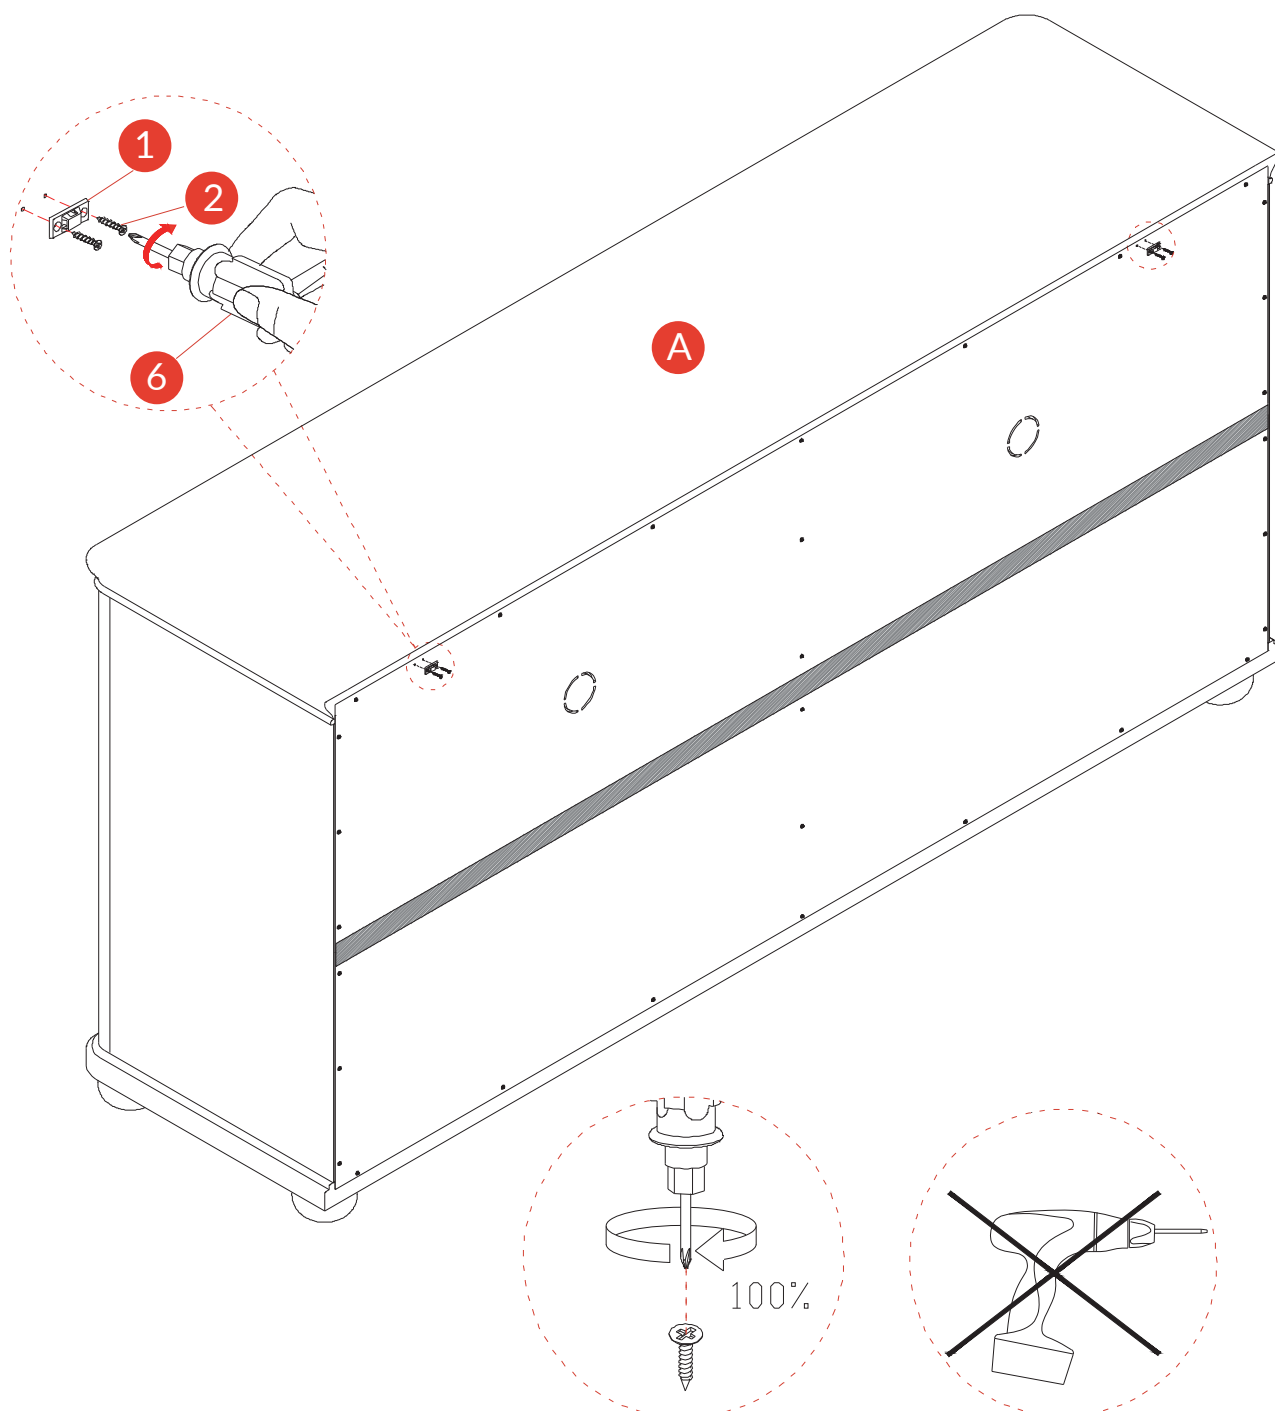 


Step 13

 Install Anti-tip device (1) to the wall in this step.


5	 x 4	D4x40mm	6	 x 1	Screwdriver
1	 x 2	Anti-tip component	4	 x 4	L30mm

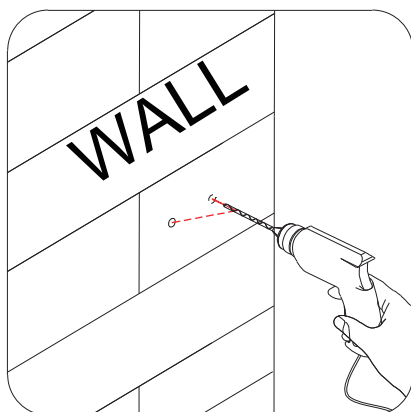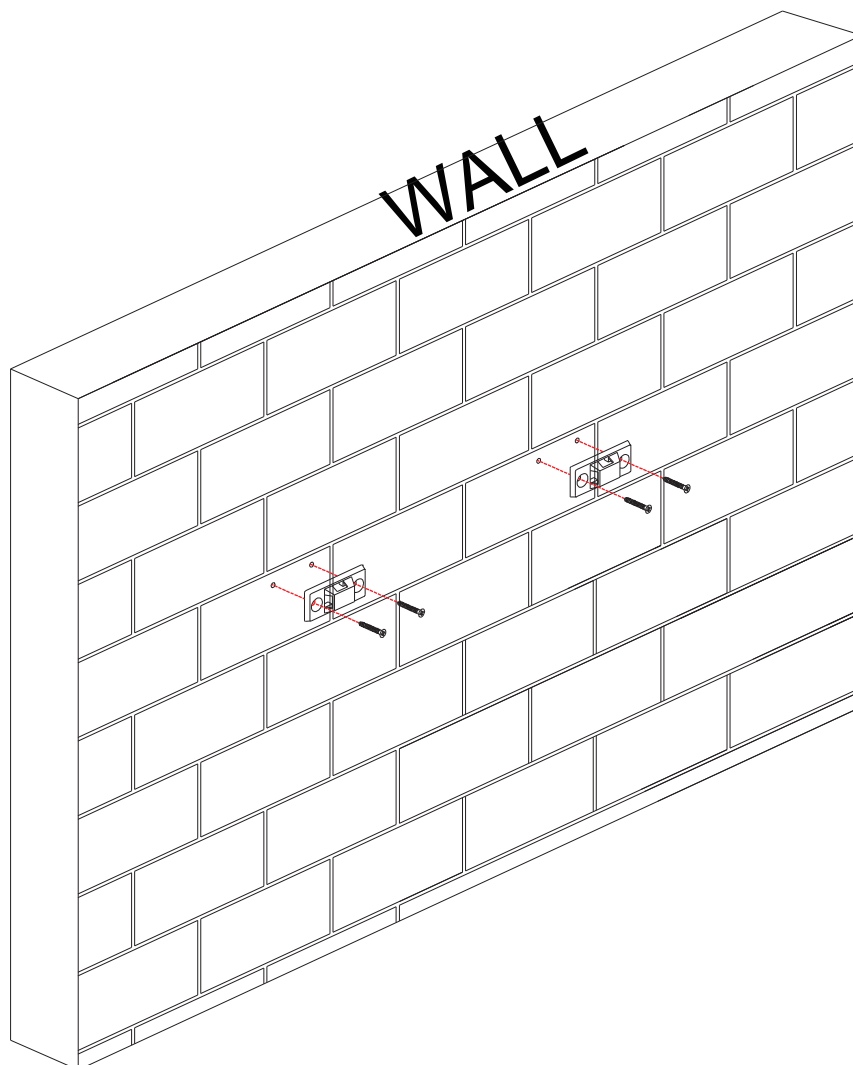  

 1. Drill a hole in the wall with an electric drill.

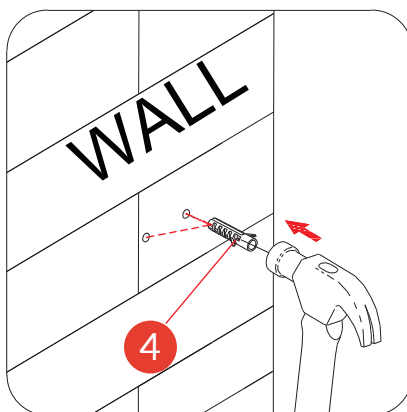

 2. Tap the plastic wall anchor into the hole with a hammer.

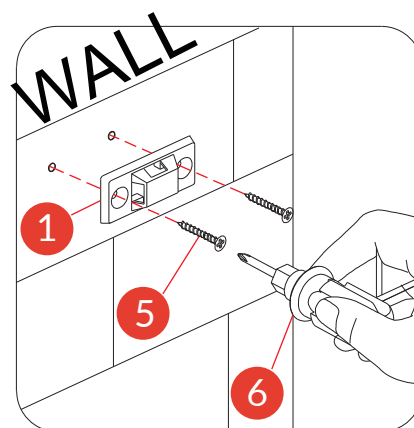

3. Secure the Anti-tip device 1 to the wall with screws 5.

Step 14

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



***This is a permanent label.
Do not remove!***

3



x 2

Hardware pack

