


ASSEMBLY INSTRUCTION SHEET FOR DINING TABLE (BUTTERFLY EXTENSION 24" INCH)


STEP - 1

Turn the dining table with top upside down

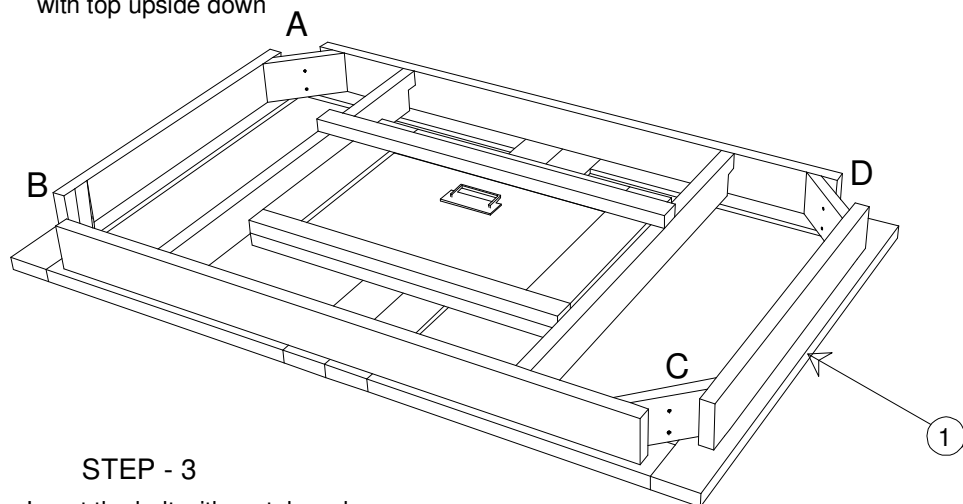


STEP - 3

Insert the bolt with metal washer & use the wrench to tighten the bolt at corner. Repeat step 2 & 3 for other legs.

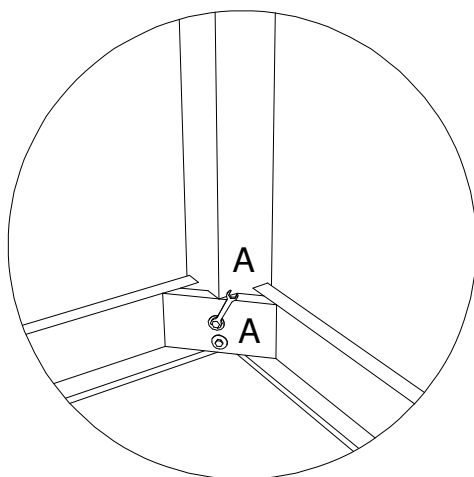


STEP - 2

Coordinate the numbers on leg & numbers on top apron. Align the holes on legs with holes on top.

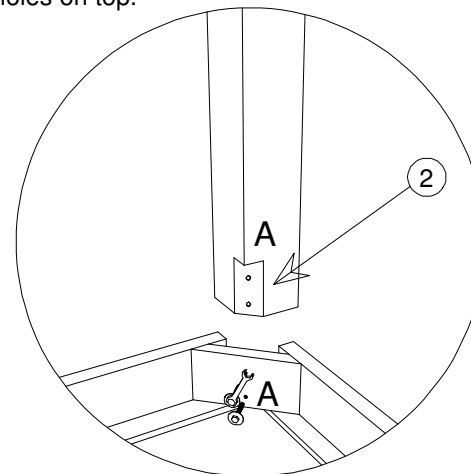


ASSEMBLED VIEW

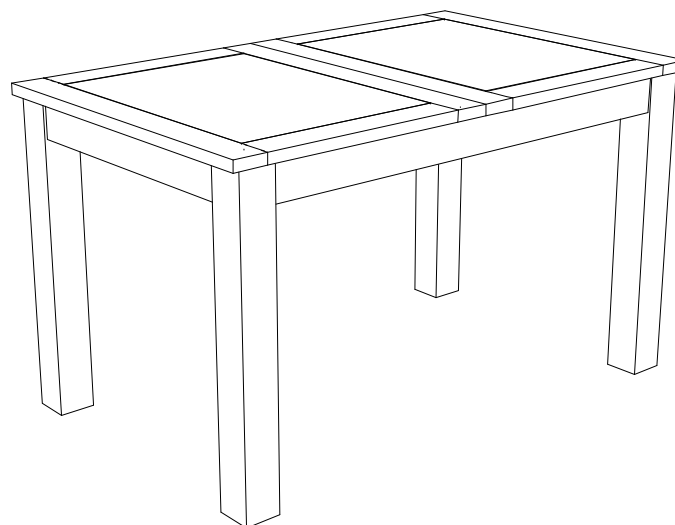



ASSEMBLY INSTRUCTION SHEET FOR DINING TABLE (BUTTERFLY EXTENCTION 24" INCH)

STEP - 4

Pull left & Right side
sliding tops of the table
away from the centre.

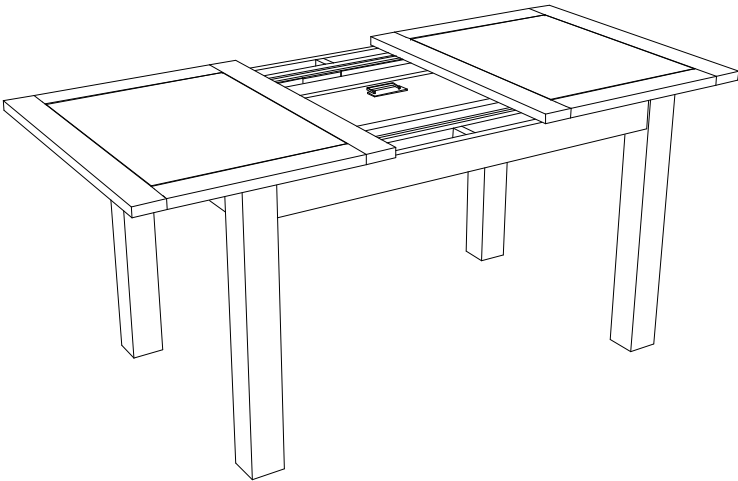

ASSEMBLED VIEW

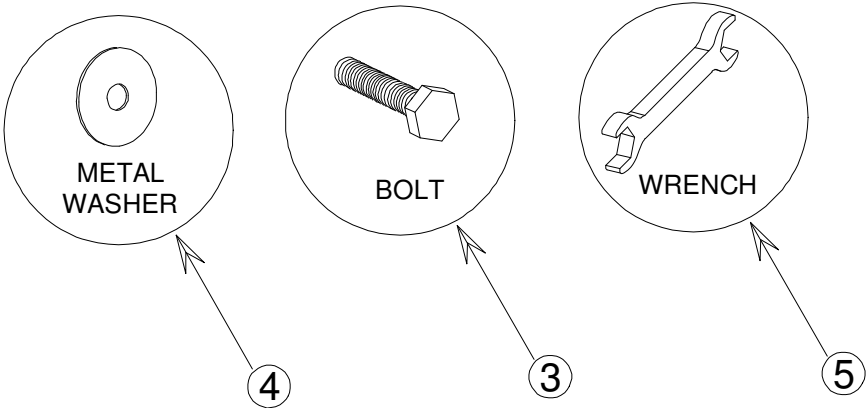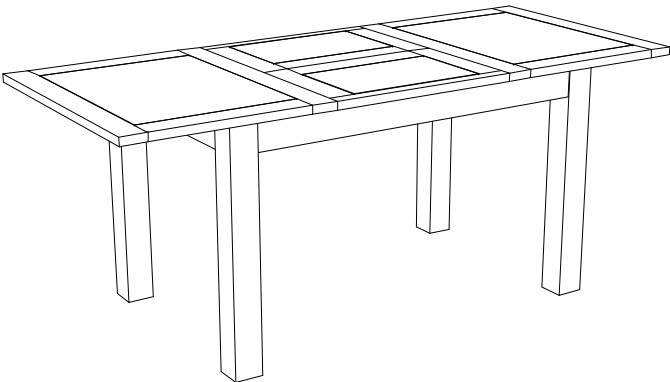

SIZE : 72"X40"X30" INCH.		
--------------------------	--	--

S.N.	PART LIST	QTY.
1	TOP	1
2	LEG	4
3	BOLT	8
4	METAL WASHER	8
5	WRENCH	1