

Touch PRO

LED MAKEUP MIRROR
+ Wireless Bluetooth Audio
+ USB Device Charger

Premium Finish
SCRATCH-RESISTANT
& EASY TO CLEAN

Bluetooth Speaker
WIRELESSLY STREAM MUSIC
& RECEIVE PHONE CALLS

360° Ball Joint
WIDE RANGE OF
ANGLE + EASILY
DETACHES FOR
TRAVEL STORAGE

Indicator Light

SOLID BLUE LIGHT

*Bluetooth is connected
to your device and
ready to play*

FLASHING LIGHT (RAPID)

*Bluetooth is in pairing mode
and ready to connect*

FLASHING LIGHT (SLOW)

*Bluetooth is in standby
mode, press PLAY to
connect to your device*

SOLID RED LIGHT

Battery is charging

LIGHT OFF

Battery is fully charged

USB Device Charging Outlet
PLUG IN & CHARGE MOBILE PHONES
& OTHER USB DEVICES

Touch-Sensitive Light
On/Off/Dimmer Switch
JUST TAP TO TURN ON OR OFF &
HOLD DOWN TO ADJUST BRIGHTNESS

Front-Facing Microphone
FOR CLEAR SPEAKERPHONE
CONVERSATIONS OR RECORDING

MicroUSB Charging Input
4000mAh RECHARGEABLE BATTERY

Previous Track/Volume Down
SHORT PRESS/LONG PRESS

Play/Pause
DURING MUSIC STREAMING
Answer/End Call
DURING PHONE CALL

Next Track/Volume Up
SHORT PRESS/LONG PRESS

Bluetooth On/Off Switch

QUICK START GUIDE

CHARGING YOUR TOUCH PRO

Connect the included cable to your Touch Pro's Micro-USB Charging Input. Plug the other end into a standard USB charging outlet. Indicator light will turn red to indicate charging and then off once fully charged.
NOTE: Please fully charge the battery before use for the best possible experience.

TURNING ON / ADJUSTING DAYLIGHT LED LIGHTS

Tap the touch-sensitive switch once to turn the lights on. Tap again to turn off. Press and hold to brighten lights. Press and hold again to dim lights.

CONNECTING YOUR BLUETOOTH DEVICE FOR THE FIRST TIME

Slide the Touch Pro Bluetooth switch to ON to turn on pairing mode. Connect to "Touch Pro" on your device's Bluetooth menu.

CONNECTING ANOTHER BLUETOOTH DEVICE

Disconnect your connected Bluetooth device to turn on standby mode. Press the PLAY button on your Touch Pro to turn pairing mode on. Connect to "Touch Pro" on your device's Bluetooth menu.

USING YOUR TOUCH PRO TO CHARGE A USB DEVICE

Plug your device's charging cable into your Touch Pro's USB Device Charging outlet. Connect the other end of charging cable to your device.

AUDIO & SPEAKERPHONE CONTROLS

AUDIO PLAYBACK

PLAY AUDIO: press PLAY button
VOLUME UP: press PLAY button during playback
PREV TRACK: press PREVIOUS / - button
NEXT TRACK: press NEXT / + button

SPEAKERPHONE

ANSWER CALL: press PLAY
END CALL: press PLAY during phone call

VOLUME CONTROL

VOLUME UP: press and hold NEXT / +
VOLUME DOWN: press and hold PREVIOUS / -

