 


edishinē

Flush Mount Ceiling Fan User's Manual

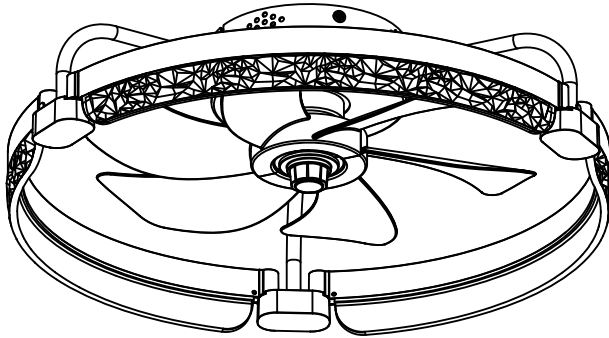

CONTENTS

| | |
|-------------------------------------------------|----|
| 1. Warm Tips | 1 |
| 2. WARNING | 1 |
| 3. Tools May Required | 1 |
| 4. Package Contents | 2 |
| 5. Energy Saving Usage | 3 |
| 6. Electrical and Structural Requirements | 4 |
| 7. Installation | 5 |
| 8. Operate Your Ceiling Fan | 9 |
| 9. Installation Recommended | 9 |
| 10. Remote Control | 10 |
| 11. APP Control | 11 |
| 12. Troubleshooting | 12 |
| 13. Maintenance | 12 |
| 14. Customer Service | 13 |
| 15. Contact Informatin | 13 |

Warm Tips

- About Light Memory:

1. Remote controller: Always has memory if using remote to turn on/off light.

2. Wall switch: The light must remain on for >10 seconds before turning it off with the wall switch. The next time you turn it on, it will remember the previous light-off state.

- Using a full range dimmer switch to control fan speed will damage the fan.
- The lighting kit is unreplaceable.



WARNING!!!

 
- To avoid fire, shock and serious personal injury, follow these instructions.

1. Read your user's manual and safety information before installing your new fan. Review the accompanying assembly diagrams.
2. Before servicing or cleaning the unit, switch off the power at the service panel and lock the service panel to prevent power from being switched on accidentally. If the service disconnecting means cannot be locked, securely fasten a warning device, such as a tag, to the service panel.
3. Be cautious around the fan and blades when clearing, repairing, or working near the fan. Always turn off the power to the ceiling fan before performing any servicing.
4. Do not insert anything into the fan blades while the fan is operating.
5. This appliance is not intended for use by young children or individuals with disabilities without supervision. Young children should be supervised to ensure they do not play with the appliance.
6. Before installing your ceiling fan, refer to the section on the proper method of wiring your fan. If you feel that you do not have enough wiring knowledge or experience, it is recommended to have your fan installed by a licensed electrician.

Tools May Required



Ladder



Screwdriver



Wire Strippers



 
Tape



Goggles

Package Contents

- Check to see that you have received the following parts

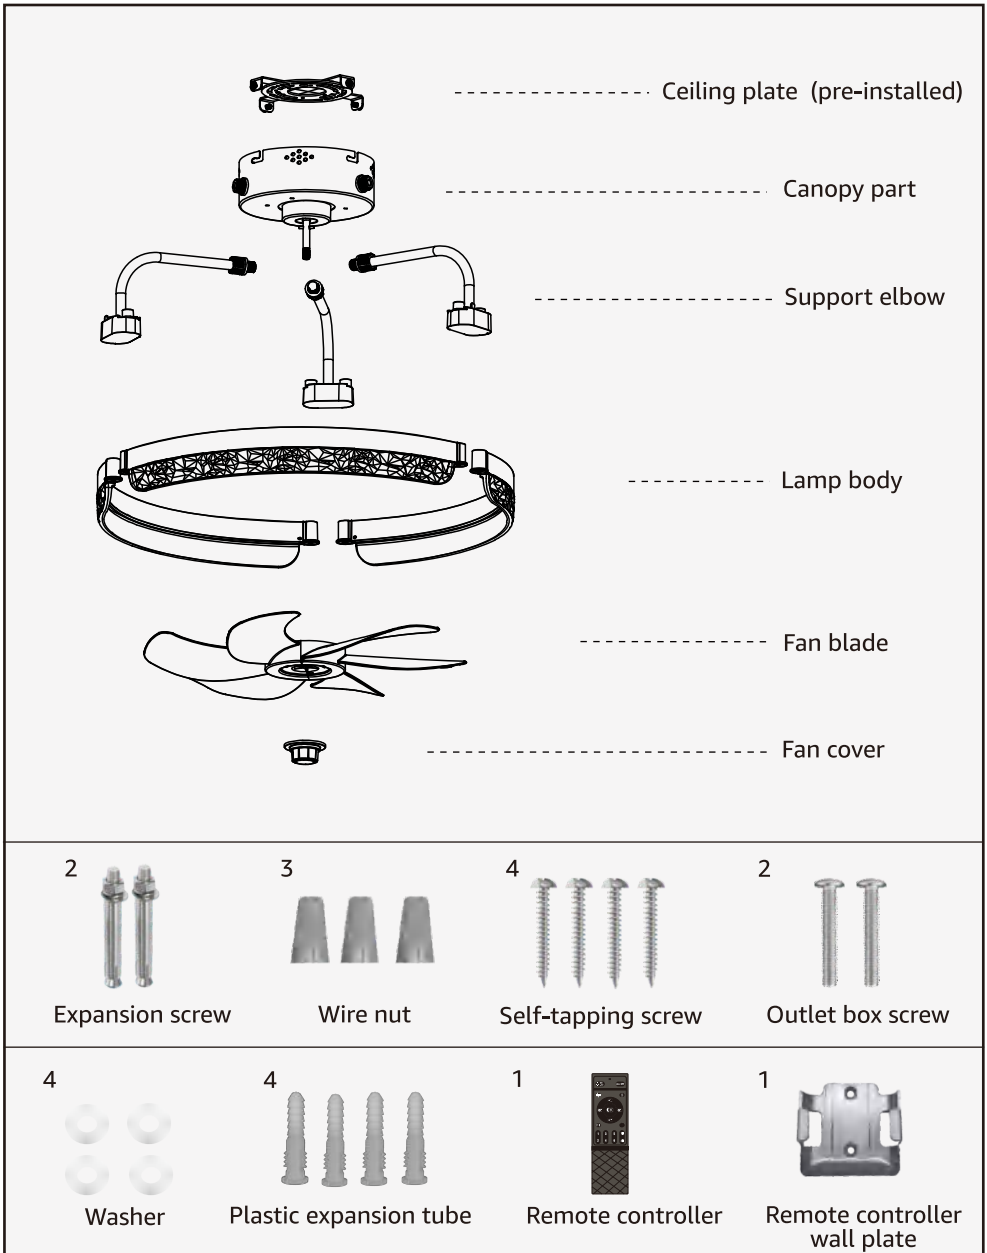

Energy Saving Usage

- Ceiling fan performance and energy savings rely heavily on the proper installation and use of the ceiling fan. Here are a few tips to ensure efficient product performance.

Choosing the Appropriate Mounting Location

Ceiling fans should be installed or mounted in the middle of the room and positioned at least 7 feet above the floor and 18 inches away from the walls. If the ceiling height allows, it is recommended to install the fan 7~9 feet above the floor to achieve optimal airflow.

Turn Off When Not in the Room

If the room is unoccupied, turn off the ceiling fan to save energy.

 
 
 
Using the Ceiling Fan Year Round

Summer Season: Use the ceiling fan in the counterclockwise direction. The airflow created by the ceiling fan produces a wind-chill effect, making you feel cooler. Select a fan speed that provides a comfortable breeze; lower speeds consume less energy.

Winter Season: Reverse the motor and operate the ceiling fan at a low speed in the clockwise direction. This produces a gentle updraft, which pushes the warm air near the ceiling down into the occupied space. Remember to adjust your thermostat when using your ceiling fan. This simple step can lead to additional energy and cost savings.

Electrical and Structural Requirements

- Your new ceiling fan will require a grounded electrical supply line of AC 110-130V/60Hz and a 15 Amp circuit. According to electrical codes, it is necessary to use a fan-rated outlet box to support the additional weight and motion associated with a ceiling fan. A fan-rated box will be clearly labeled as such and is typically designed to support ceiling fans weighing up to 70 pounds. Fan-rated outlet boxes are available in various ratings and designs. It is essential to ensure that the rating of your ceiling fan outlet box meets the requirements for the specific ceiling fan you are installing. Please refer to the figures below for different structural configurations that can be used for mounting the outlet box.
- Low-profile use (Figure 1):
A 1/2"-deep pancake box is meant to be screwed to a joist or block. It is used if only one cable is coming into the box. It is also available in a saddle-mount configuration.
- Deep-profile use (Figure 2)
A 2-1/4" deep box is attached to blocking between joists and is roomy enough to handle more than one cable.
- Brace use (Figure 3)
Paired with a deep box, this hanger is meant to span between two joists and takes the place of wooden blocking.
- If your fan is to replace an existing light fixture, turn power off at the main fuse box and remove the existing light fixture.

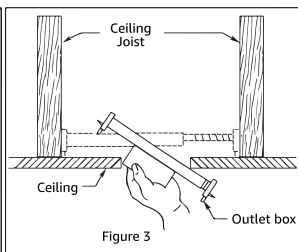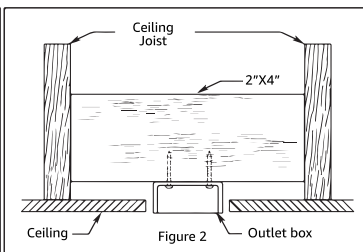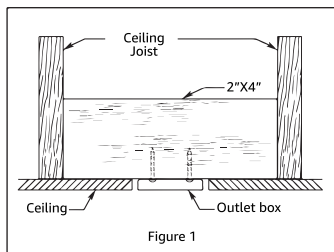

WARNING

To ensure safety and prevent potential electrical shock, it is not sufficient to simply turn off the wall switch. Prior to wiring, make sure to turn off the electricity at the main fuse box. All wiring should be done in accordance with national and local electrical codes. Additionally, it is important to properly ground the ceiling fan as a precautionary measure against possible electrical shock. Following these guidelines will help ensure the safe installation and operation of your ceiling fan.

WARNING

Do not use a variable (rheostat) wall controller or dimmer switch to operate this fan. Doing so can cause damage to the ceiling fan's remote control unit. It is recommended to only use the provided remote control.

Installation

Fig.1

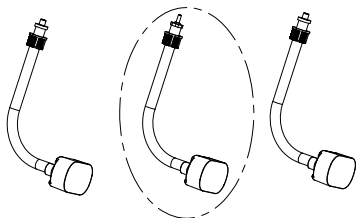 


Fig.1.1

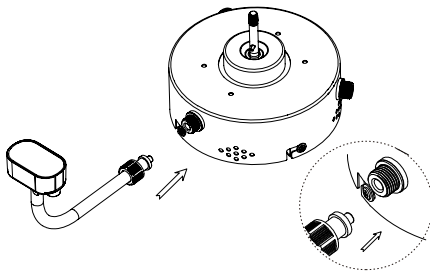 


Fig.1.2


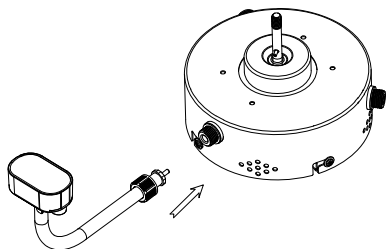 


Fig.1.3

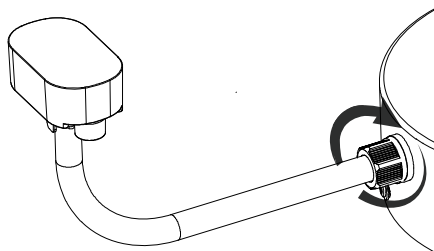 

- Three elbow supports: two without needles and one with a needle. Connect the 3 support elbows to the corresponding notch on the canopy. Tighten the nut to fix the elbow.

Fig.2


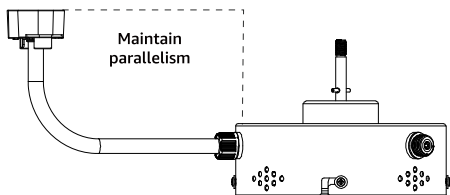 


Fig.2.1

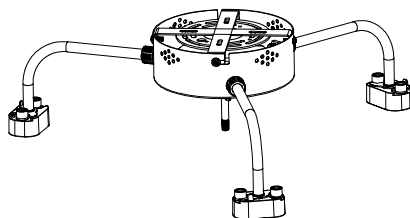 

- Align all support elbow connectors, make sure they are on the same plane, and then turn the lamp body over as shown in the image above.

Installation

Fig.3


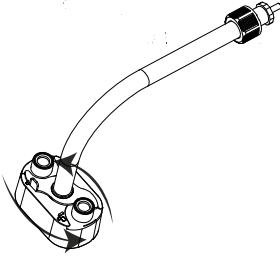 


Fig.3.1

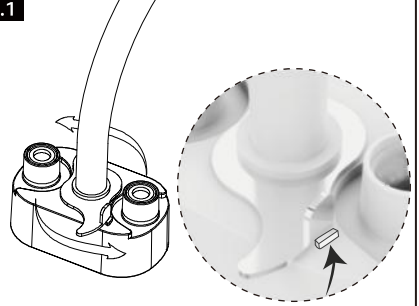 

- Turn the metal fixing plate to the locking position.
(Notice: Please wear gloves when operating to avoid injury.)

Fig.4

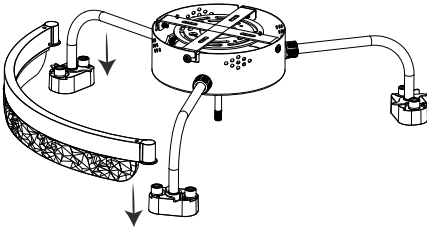 


Fig.4.1

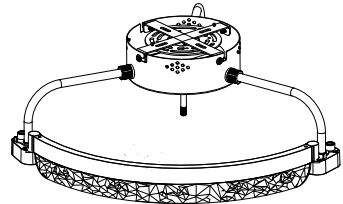 


Fig.4.2


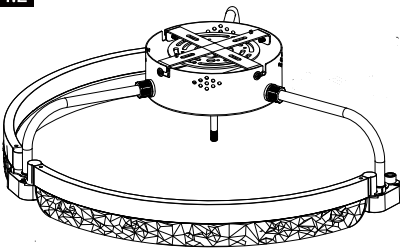 


Fig.4.3

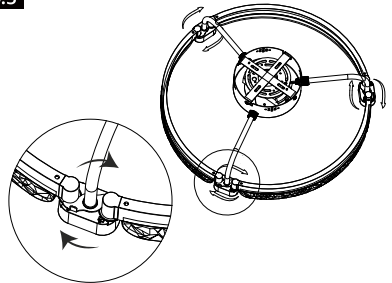 

- Insert the ends of the light body into the corresponding connector ports, and then rotate the metal fixing plate to secure both sections of the light body. (metal fixing plate position as shown in the fig 4.3)

Installation

Fig.5


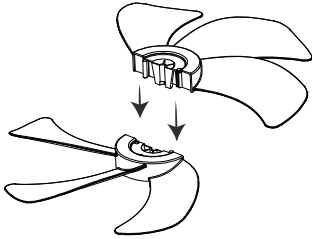 


Fig.5.1

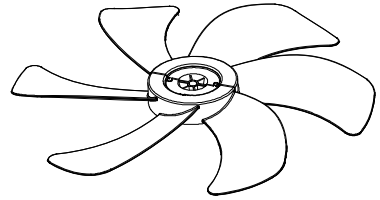 

- Align the slots of the two parts fan blade, push the upper part fan blade down to the slot of lower part blade.

Fig.6


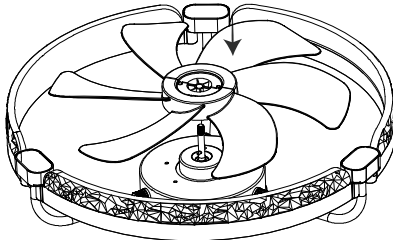 


Fig.6.1

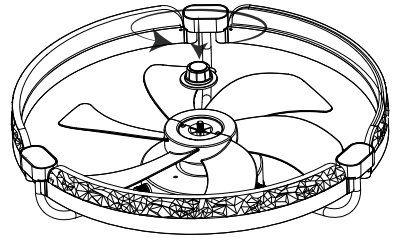 

- Align the fan blade groove to the pin of motor shaft.
- Counterclockwise rotate the blade cap to secure the fan blade to the motor shaft.

Fig.7


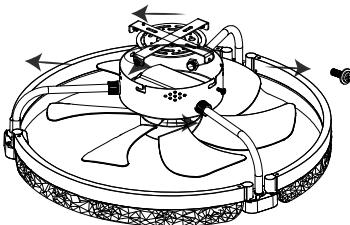 


Fig.7.1

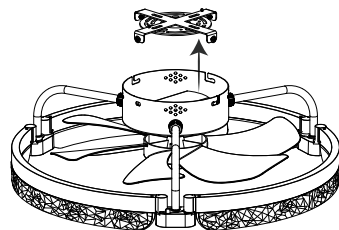 

- Loosen the four canopy screws (remove two screws and leave two screws intact), then rotate counterclockwise to remove the mounting plate.

Installation

Fig.8


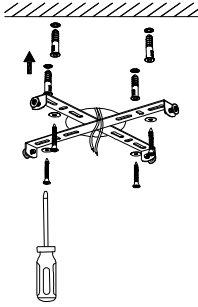 


Fig.9

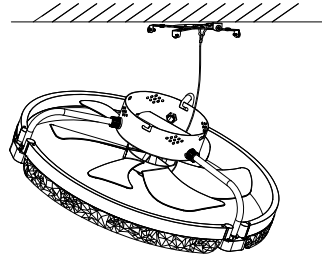 

- Use the pre-installed safety rope to hang the lamp onto the ceiling plate.
- According to the user's ceiling situation, choose the corresponding installation method.

Junction box: Use J-box screws and washers to secure the bracket to the ceiling.
Wooden ceiling: Drive self-tapping screws directly into the wooden ceiling.
Cement ceiling: Drill holes into the cement ceiling, then use expansion tubes and self-tapping screws for fixation.

Fig.10


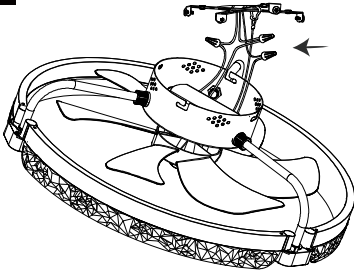 




Fig.11

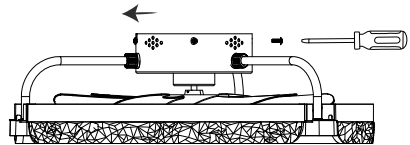 

- Wiring:
Connect the "Neutral wire" (white wire) from ceiling to the white wire.
Connect the "Live wire" (black wire) from ceiling to the black wire.
Connect the "Ground wire" (green or yellow/green or bare) from ceiling to the yellow/green wire.
- Rotate the ceiling fan to align with the grooves, then tighten all four screws to complete the installation.


Operate Your Ceiling Fan

   - **IMPORTANT:** Using a full range dimmer switch to control fan speed will damage the fan. To reduce the risk of fire or electrical shock, do not use a full range dimmer switch to control the fan speed. (Figure 1).
Only control light on/off via wall fan switch.
- Restore electrical power to the outlet box by turning the electricity on at the main fuse box.(Figure 2).

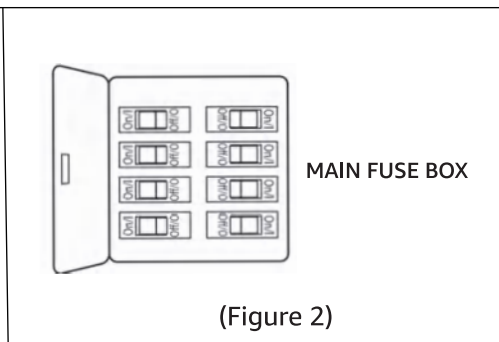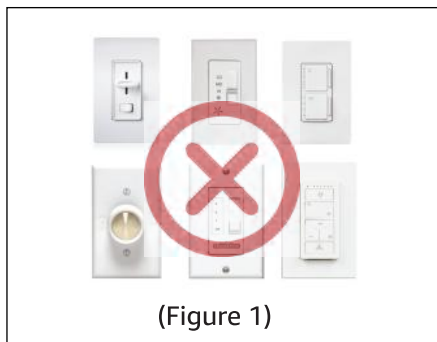



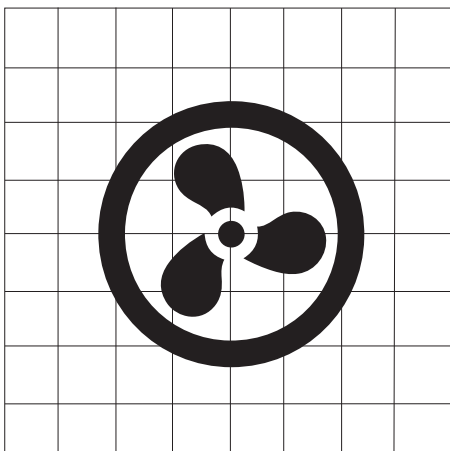

Installation Recommended

Room Size:




UP TO 8.5 ft x 8.5 ft

Room Height:


| | | |
|------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Installation Height | 7FT | 8FT |
| |  |  |
| | 9FT | 10FT |
| |  |  |

 Remote Control

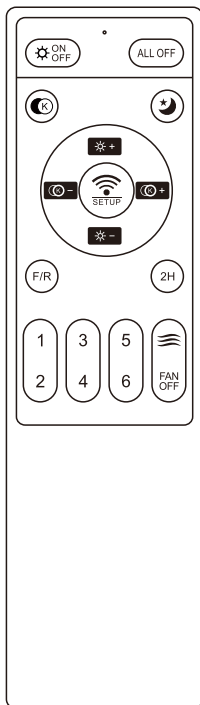

| | |
|--|-----------------------|
| | Light on/off |
| | Light & fan /off |
| | Fan off |
| | Pairing |
| | CCT change |
| | Brightness + |
| | Brightness - |
| | CCT + (cooler) |
| | CCT - (warmer) |
| | Forward/reverse |
| | Night light |
| | Fan speed |
| | Fan speed |
| | Fan speed |
| | All off after 2 hours |

 Attach wall plate using the two screws provided.

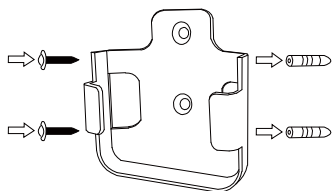



To operate the fan, please install 2 AAA batteries (included) in the handheld remote transmitter. If not used for extended periods of time, remove the batteries to prevent damage to the transmitter. Store the remote away from excessive temperatures and humidity.

Pairing method: (single/multiple fans)

Turn on the power and Press and hold the light pairing key within 5seconds of the light on,When you hear a beep or a light flashes, thecode match is successful.If you need to match the code a second time,you need to wait 30 seconds before turning on the power and repeat theabove operation.

APP Control

  - NOTE: Scan the QR code and install the APP on your phone, or search and install "FanLampPro" from Google Play, Apple App Store, and other app stores. Make sure your phone is connected to the internet and **BLUETOOTH** enabled.

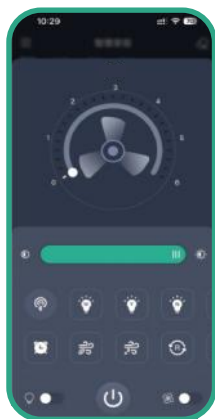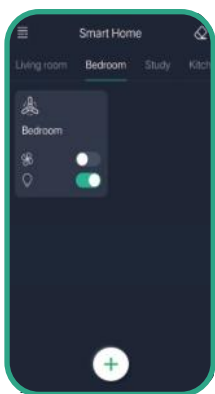

| | |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | Pair button. Click it within 5 seconds after turning on the fan from the power switch. Once the light flashes or beeps, it has been successfully paired with the phone and can be controlled through the phone. |
| | Slide to change the fan speed |
| | Slide to change the brightness of the light |
| | Quick switch for "White" light color |
| | Quick switch for "Yellow" light color |
| | Quick switch for "Natural" light color |
| | Timer the fan |
| | Natural wind: fan speed will change automatically when use this function |
| | Sleeping wind |
| | Fan moves reversely |
| | Fan moves forwards |
| | Night light (10% brightness in neutral white) |
| | N/A for this model |
| | N/A for this model |
| | N/A for this model |
| Buzzer Sound | There is a buzzer sound ("beep"voice) when pairing. |

Troubleshooting

WARNING

For your own safety turn off power at fuse box or circuit breaker before trouble shooting.

| Trouble | Probable Cause | Suggested Remedy |
|-----------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| THE FAN WON' TSTART OR THE LIGHT WON' TOME ON | <ol style="list-style-type: none">1. Fuse or circuit breaker blown.2. Loose power line connections to the fan or loose switch wire connections in the switch housing.3. The wiring between the receiving box and the fan is not properly connected.4. The receiving box is damaged due to the wrong connection. | <ol style="list-style-type: none">1. Check main and branch circuit fuses or circuit breakers.2-3. Check line wire connections to the fan and switch wire connections in the switch housingsCAUTION: Make sure the main power is turned off!4. Contact us for support. |
| FAN WOBBLER EXCESSIVELY | <ol style="list-style-type: none">1. Check for loose ceiling screws.2. Check if the four screws on the canopy are loose.3. Check if the blade is broken | <ol style="list-style-type: none">1-2. Tighten the loose screws.3. Contact us for new blade replacement |
| FAN SOUNDS NOISY | <ol style="list-style-type: none">1. Check for loose ceiling screws.2. Check if the four screws on the canopy are loose.3. Check for wrong wire connection to the wall switch or light dimmer. | <ol style="list-style-type: none">1-2. Tighten the loose screws.3. Disconnect from the wall switch and use the remote controller only. |
| REMOTE DOES NOT WORK | <ol style="list-style-type: none">1. Battery out of power2. Battery not installed correctly3. Not paired | <ol style="list-style-type: none">1. Use new battery2. Install again to ensure right3. Repair (refer to page.10) |

Maintenance :

Periodic cleaning of your new ceiling fan is the only maintenance that is needed. When cleaning, use only a soft brush or lint-free cloth to avoid scratching the finish. Avoid using water as it can damage the motor, finish, and create the possibility of electrical shock. It is best to dry clean the fan to ensure its safe operation.

Customer Service :

30-Days Full Refund Guarantee

If you are not completely satisfied or the item isn't what you expected, just tell us within 30 days. We will give you a full refund unconditionally.

Friendly Reminder

It's better to contact us than leaving a negative shopping experience. Nothing is more important than your satisfaction, and we will do our best to serve you.

Quick Response within 12 Hours

You can contact us without any hesitation at any time of the day, and we will reply to you within 12 hours. (It would be appreciated if you could provide us with a video or pictures, if available)

2-year Warranty

We will send you brand new items for free or give you a full refund if any quality problems occur within 2 years from the date of purchase.