 
 
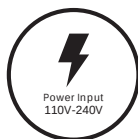 






USER MANUAL

Electric Smart Sofa

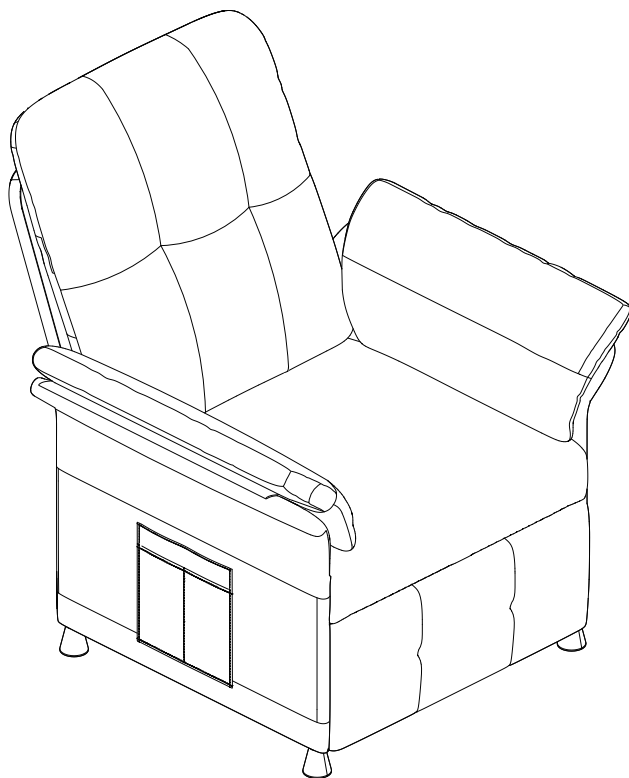

    Caution: Do Not Exceed Maximum Listed Weight Capacity.
Serious Injury Or Property Damage May Occur!

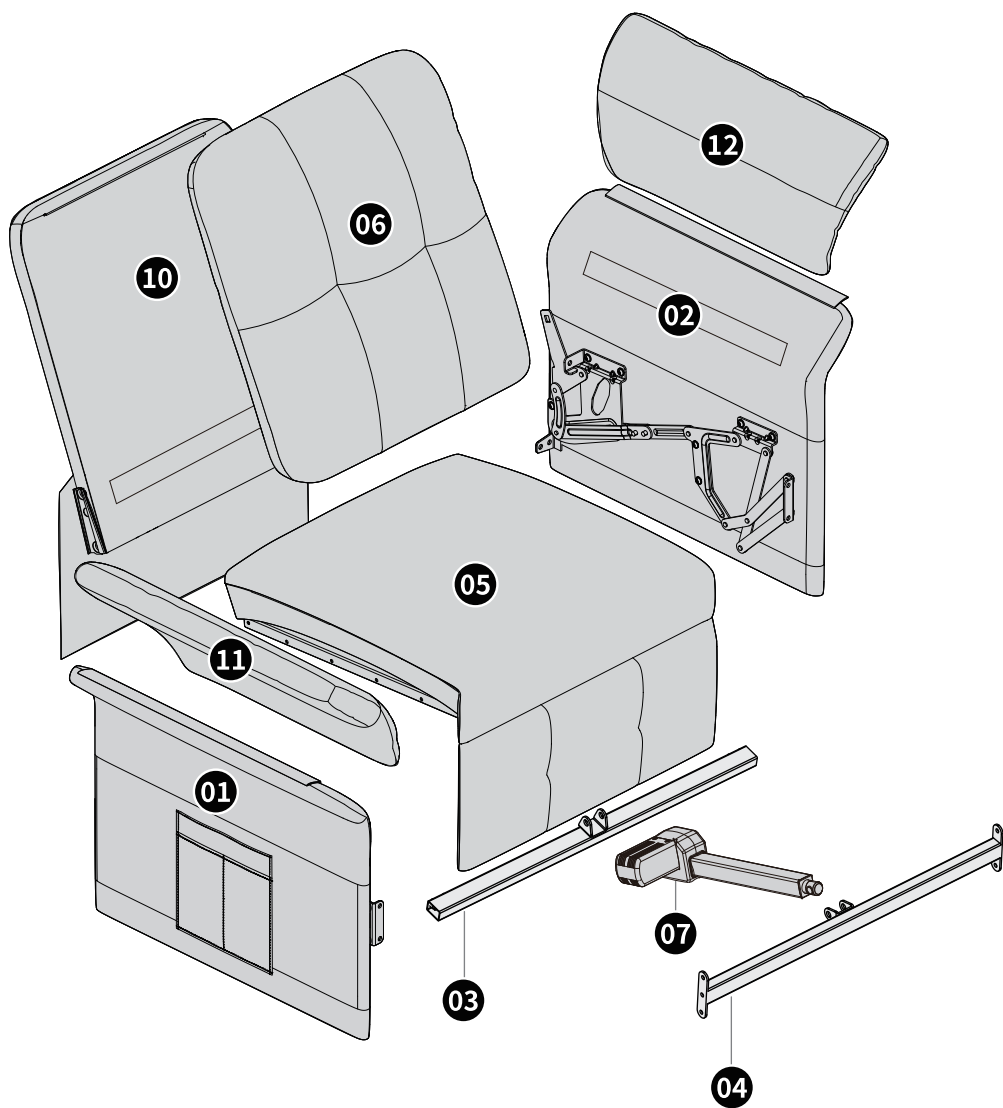

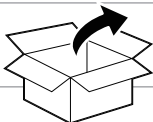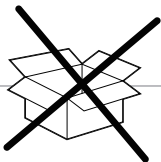

A x 4



M8 x 20mm

B x 10



 
M6 x 11mm

C x 4




M6 x 15mm

D x 4

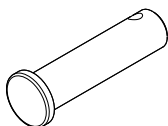


Ø10 x 40mm

 E x 2

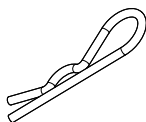

F x 2

 

3/16" (5mm)

G x 1



M8 x 20mm

B x 2



 
M6 x 11mm

C x 1




M6 x 15mm

D x 1

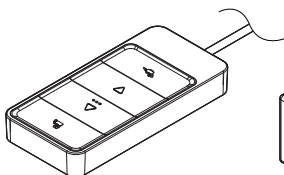


08 x 1

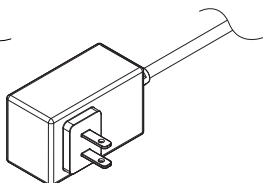 


09 x 1

 1

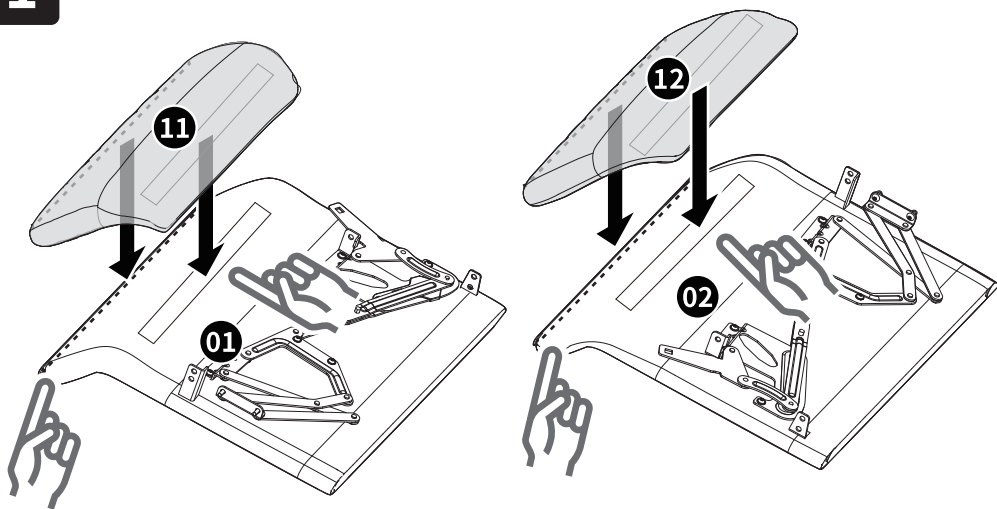

TIP: Zip up to connect the two parts.

 



TIP: Align and attach the hook and loop fasteners for a secure connection.

2



  (A) x 4

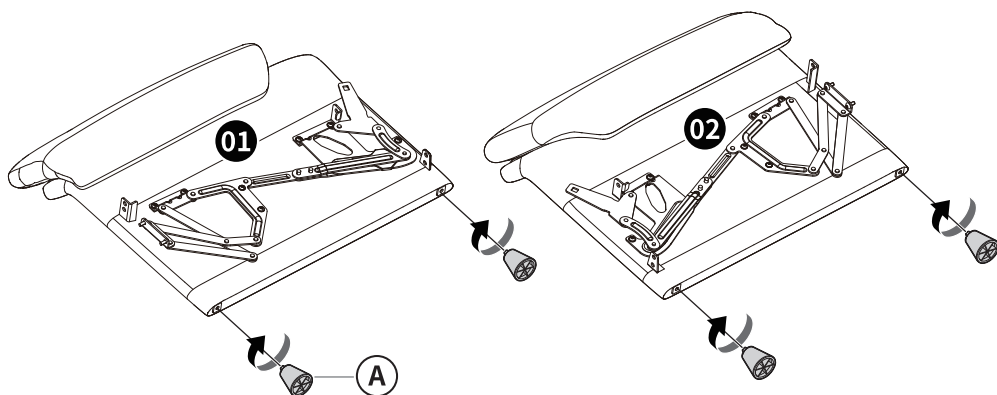





M8 x 20mm



(B) x 3

 3/16" (5mm)


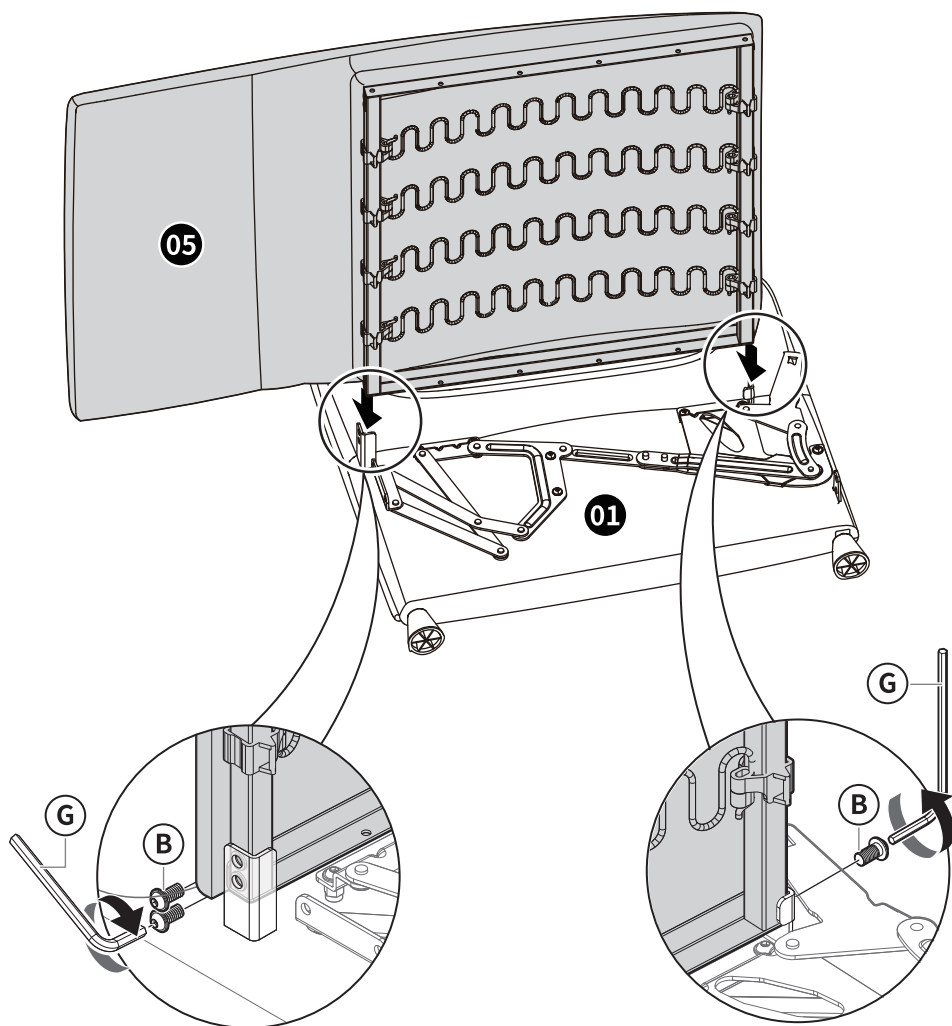 
(G) x 1


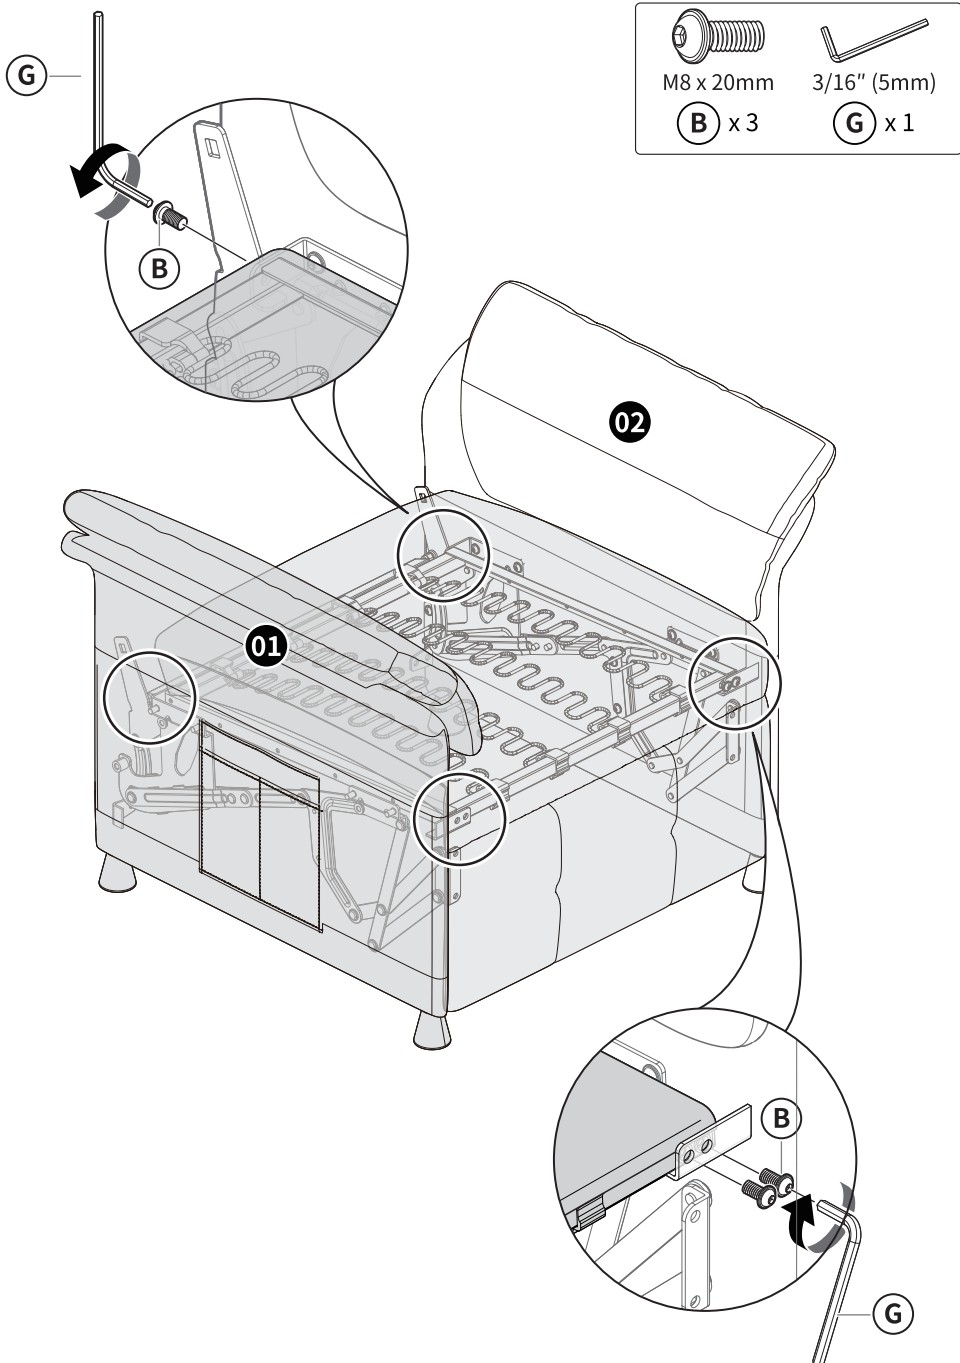



5

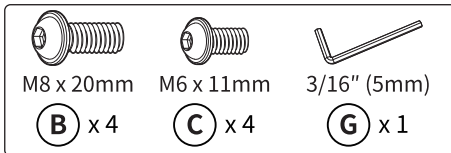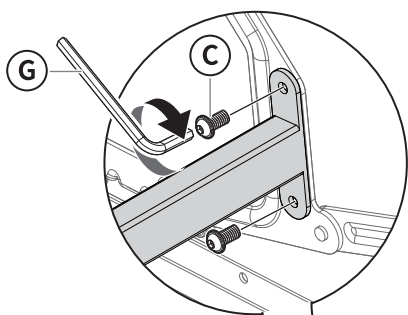  

180

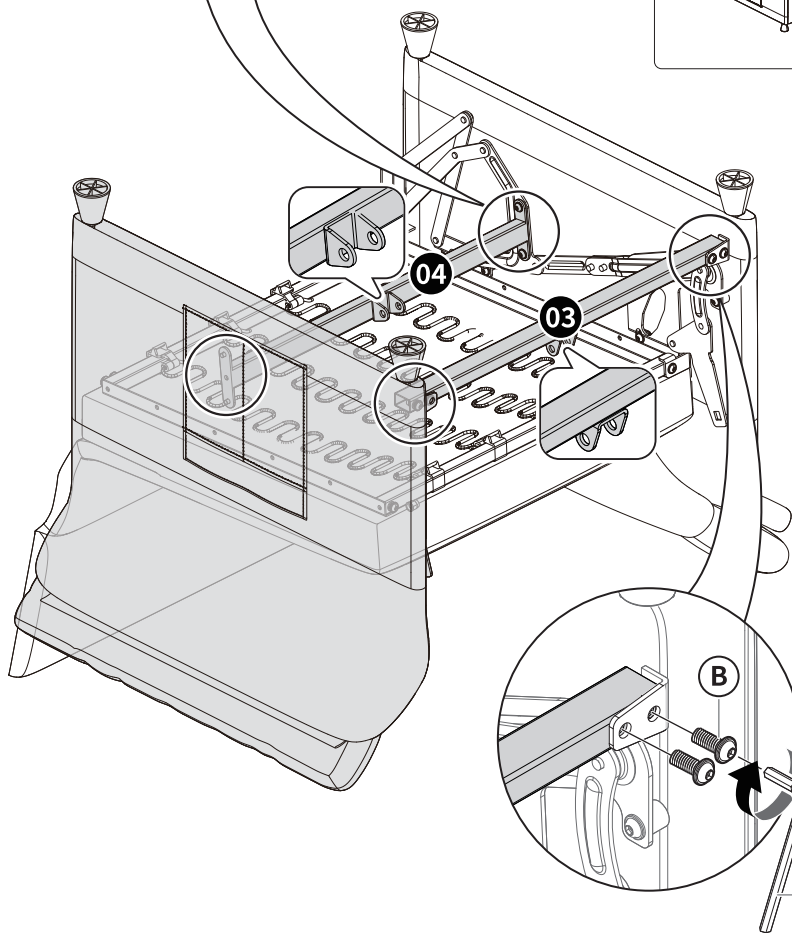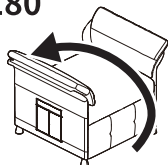  

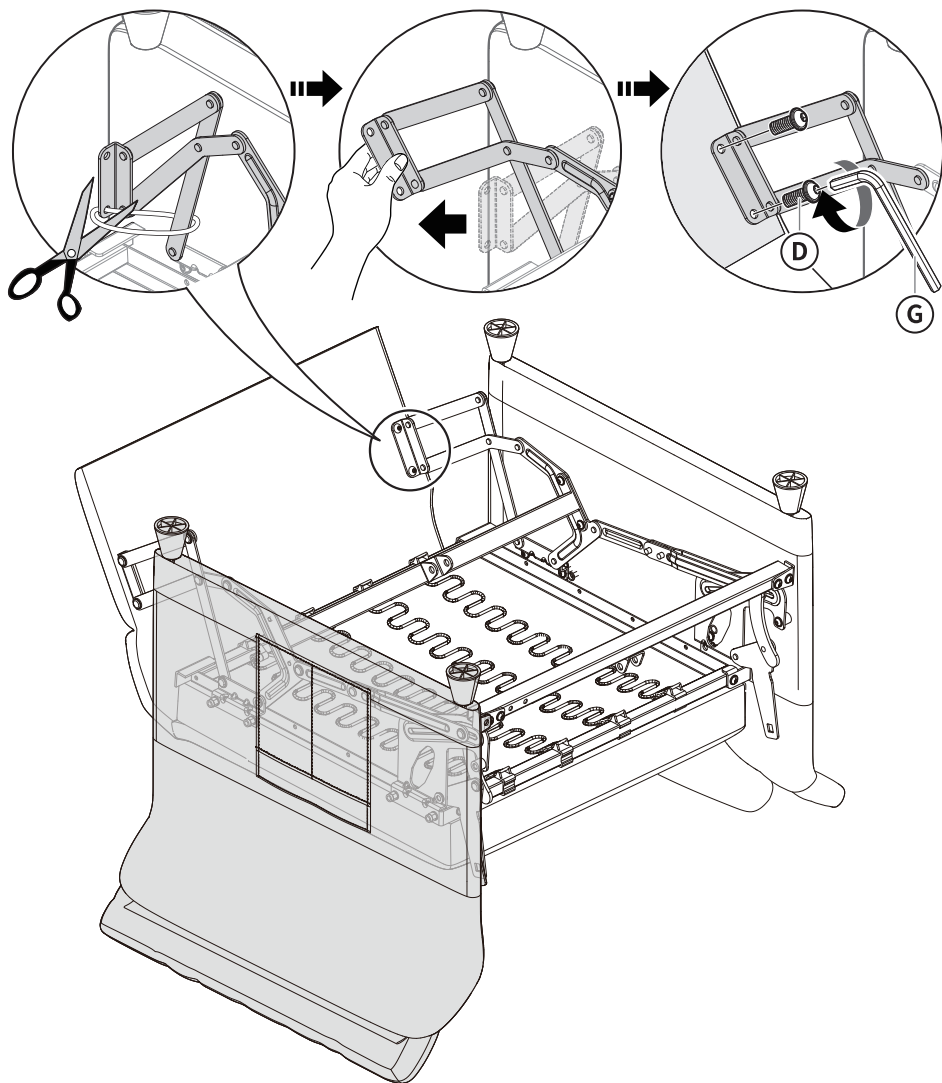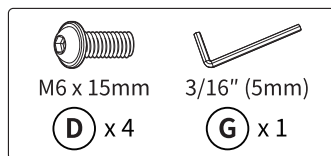  

 


Ø10 x 40mm

(E) x 2





 (F) x 2



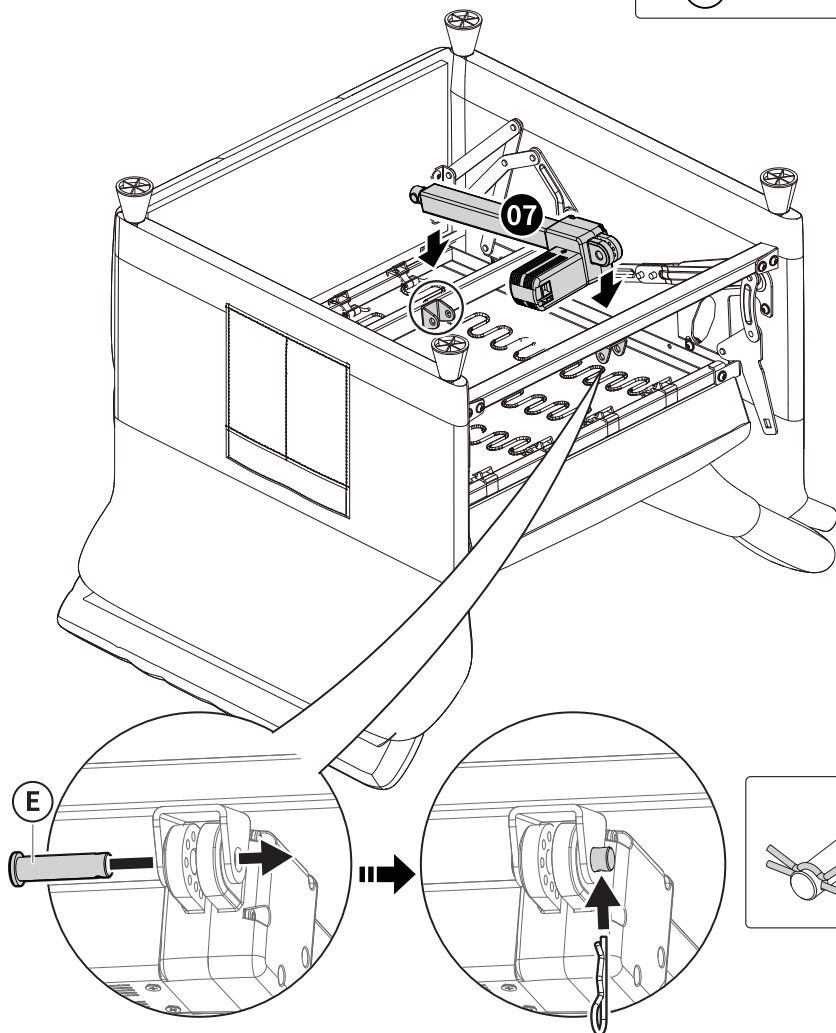


8

  
180°

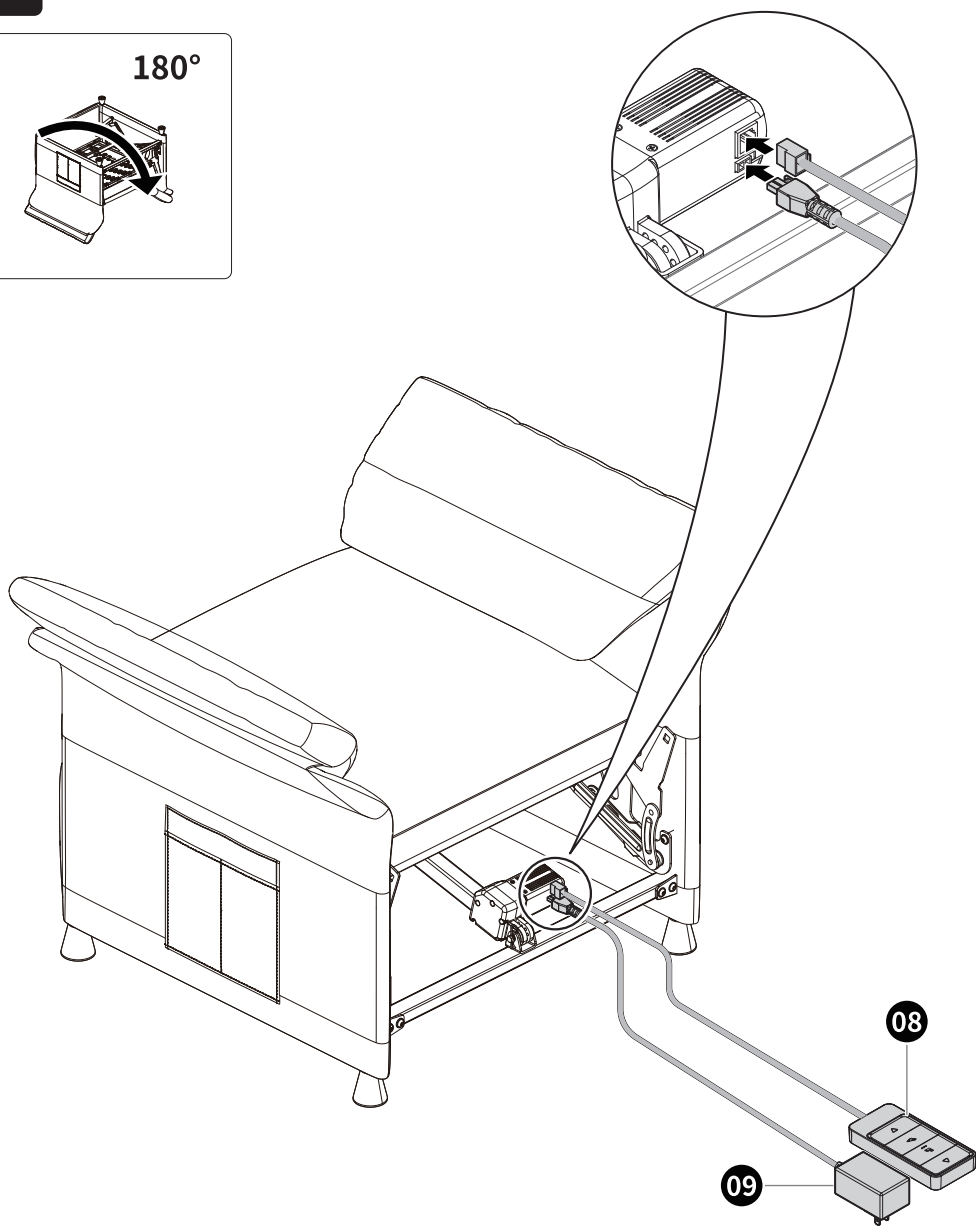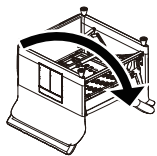


9

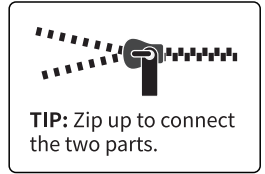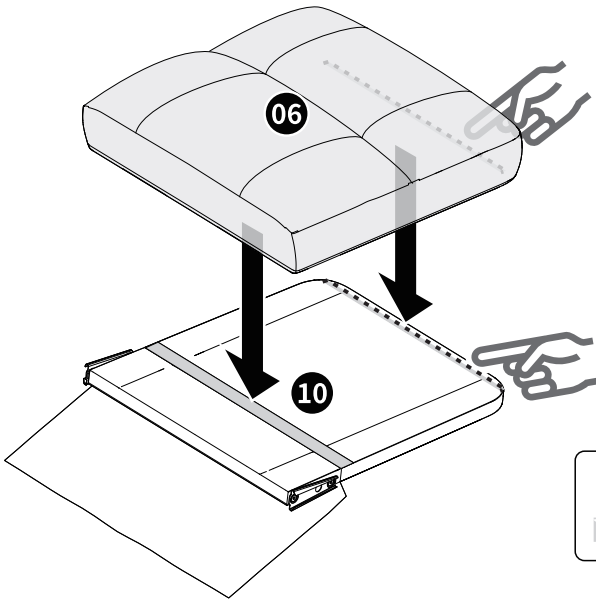   

10

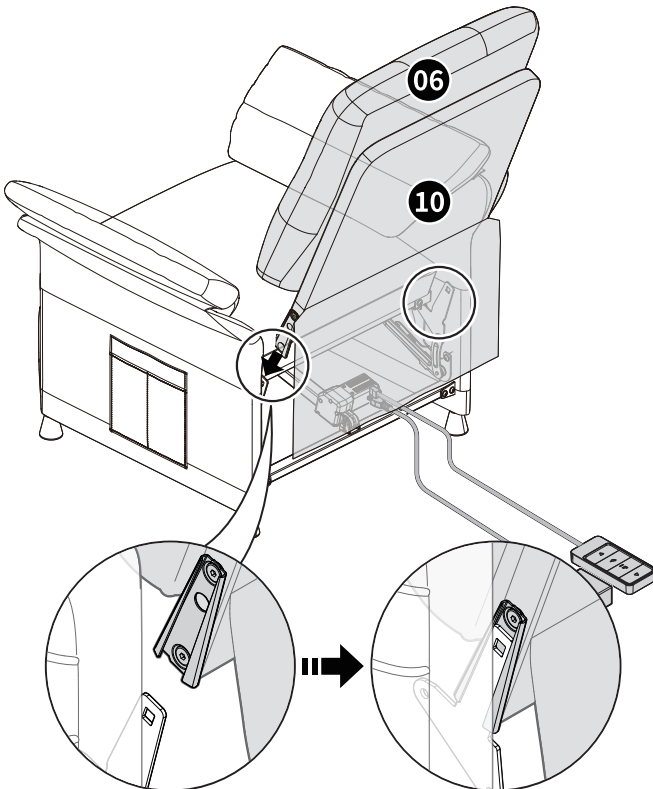 

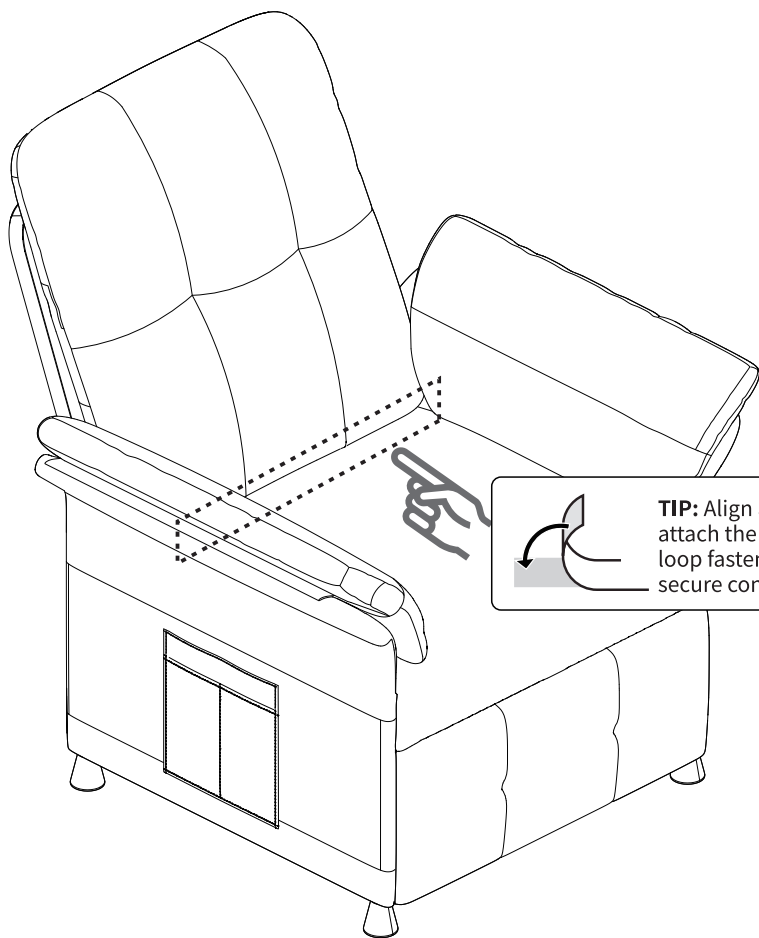 

TIP: Align and attach the hook and loop fasteners for a secure connection.

The sofa is tidied up before use

The sponge requires rebound time after compression, which can be patted to correct the position and accelerate rebound



①



 
②



③





④

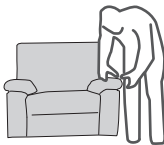


Attention

  Error example

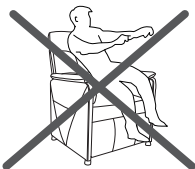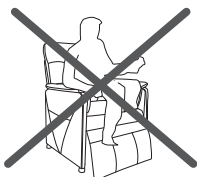

Manual controller instructions

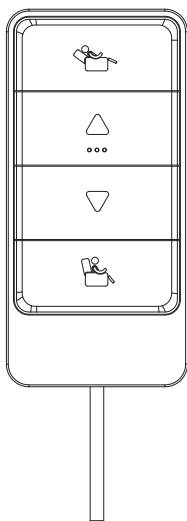 

Operating Instructions:

1. Press and hold the “” button for 3 seconds to save the current sofa position. Press the “” button again to move the sofa to the memorized position..
2. Press and hold the “” button to gradually raise the sofa to the reclined position.
3. Press and hold the “” button to gradually return the sofa to the seated position.
4. Press and hold the “” button for 3 seconds to save the current sofa position. Press the “” button again to move the sofa to the memorized position..
5. Reset Function: Press and hold both the “” and “” buttons for 5 seconds to automatically reset the sofa.

Note: Avoid placing hands or body between the backrest and the seat while adjusting the sofa.