

INSTRUCTION MANUAL

ASSEMBLY INSTRUCTIONS




 
 

 

 

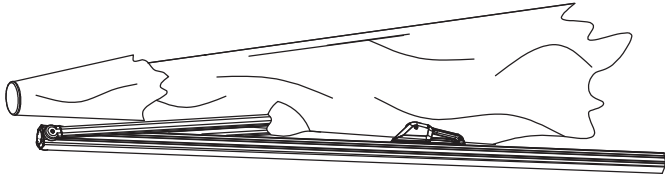
Carefully unpack all the components and verify that all the necessary parts are included as listed in the packaging.

Identify each component and refer to the provided assembly diagram or step-by-step instructions. Assemble the furniture in the order specified to ensure proper alignment and fit.


Use the provided tools or recommended tools for assembly. Do not use excessive force when tightening screws or bolts.

If any difficulties arise during assembly, consult the troubleshooting section or contact our customer support.


PART

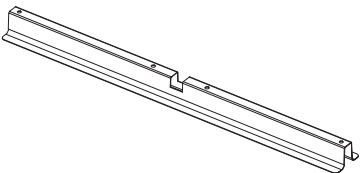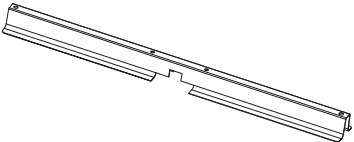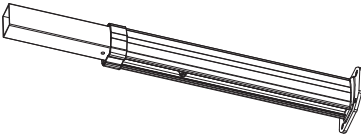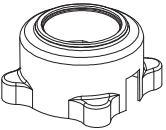NO.	PICTURE	QTY	NO.	PICTURE	QTY
A		1	B		1
C		1	D		1
E		1	F		1
G	 M8x20mm	6	H		10
J	 M8x15mm	4	K		1
L					1


STEP 1

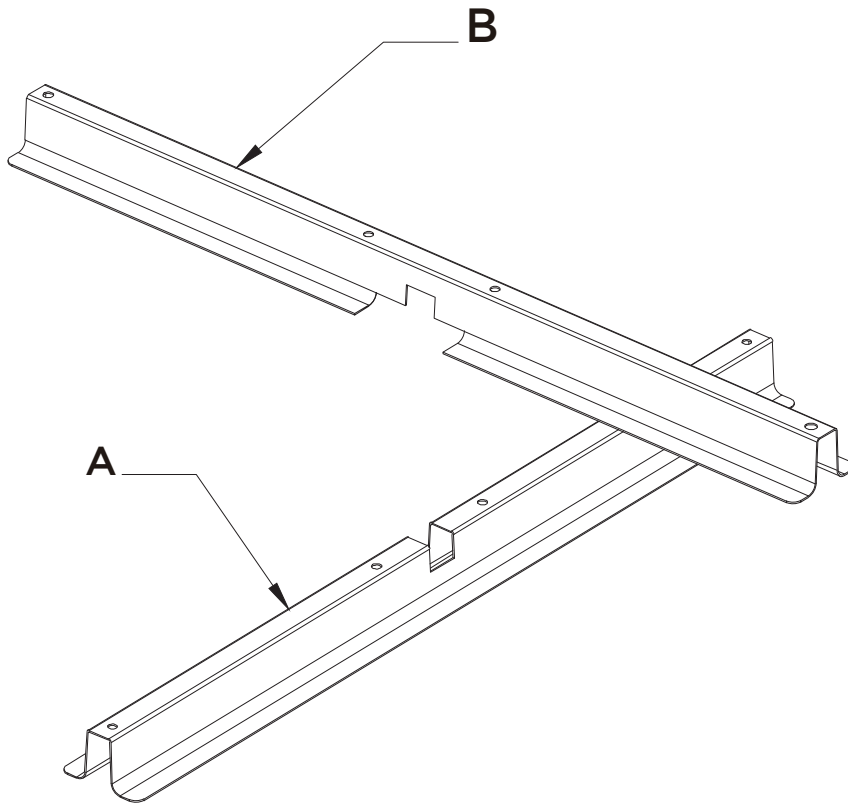


STEP 2

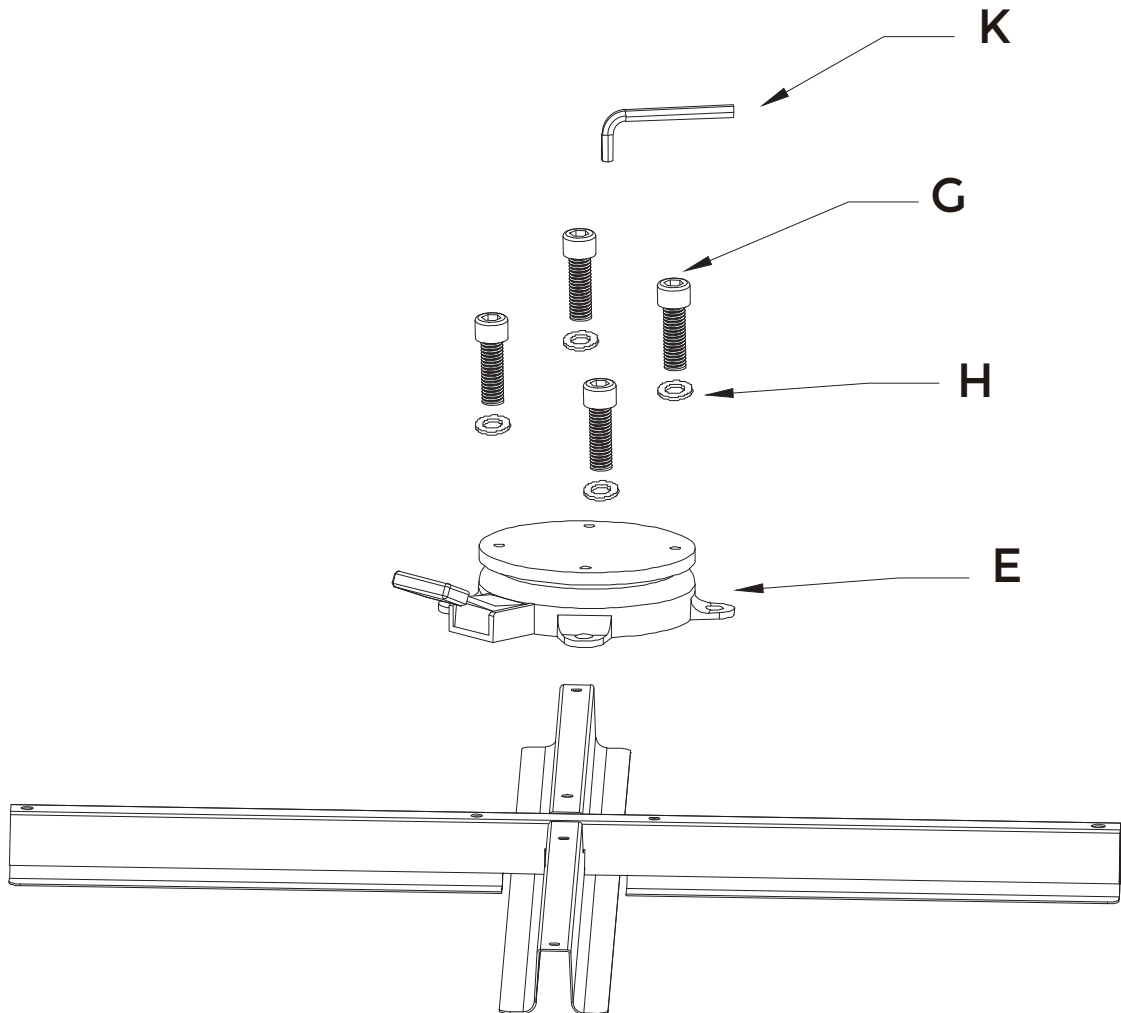


STEP 3

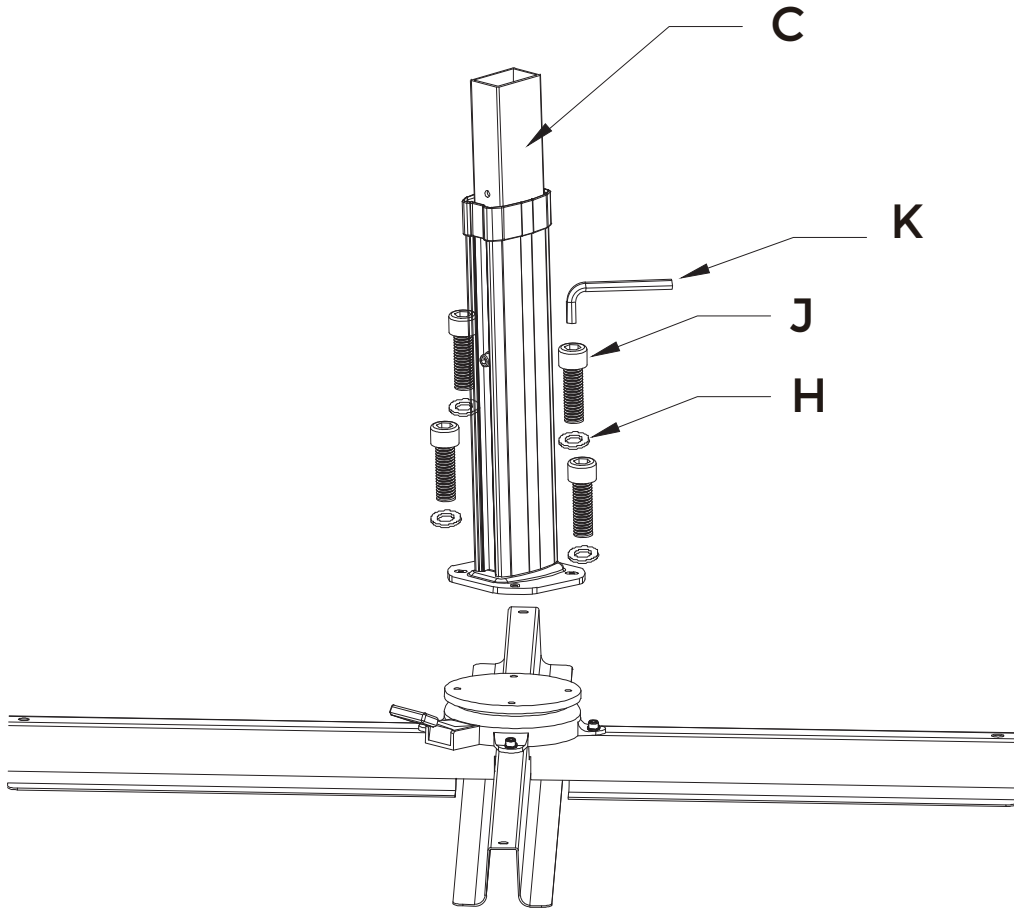

STEP 4

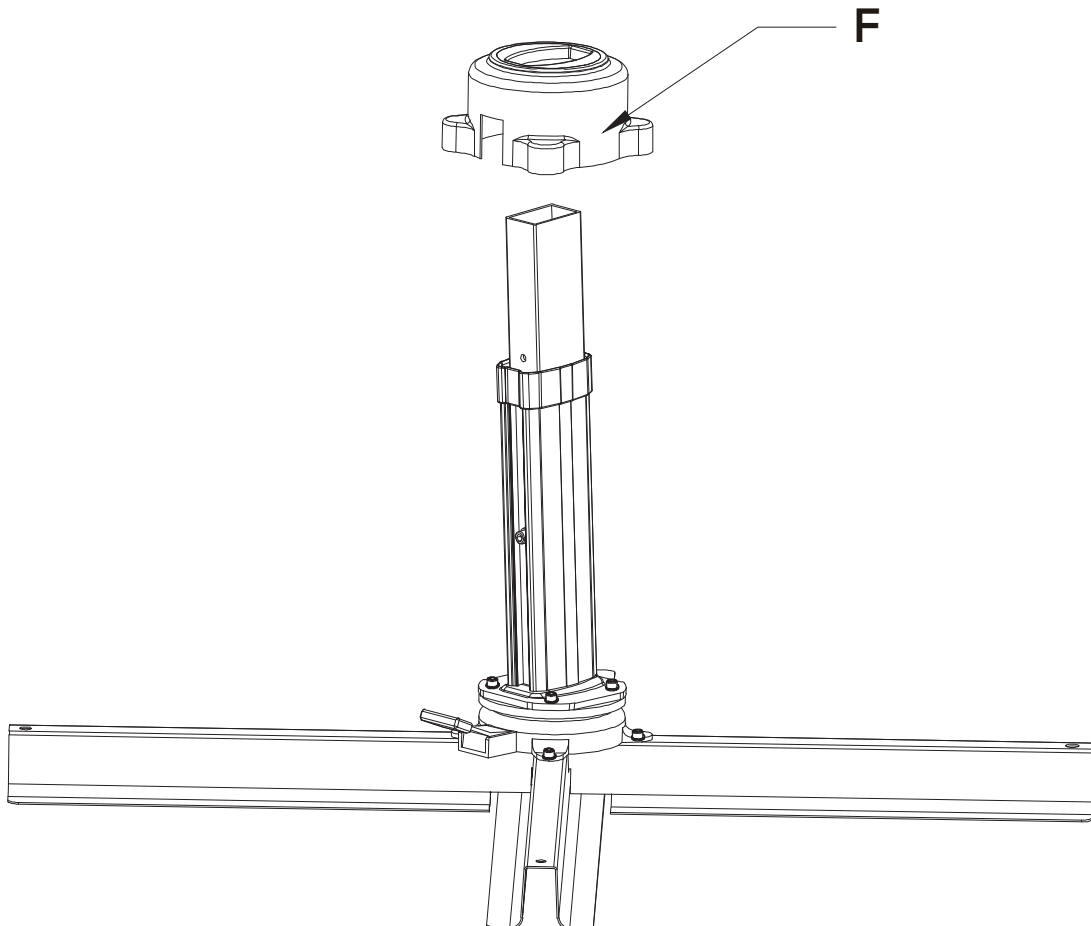


STEP 5

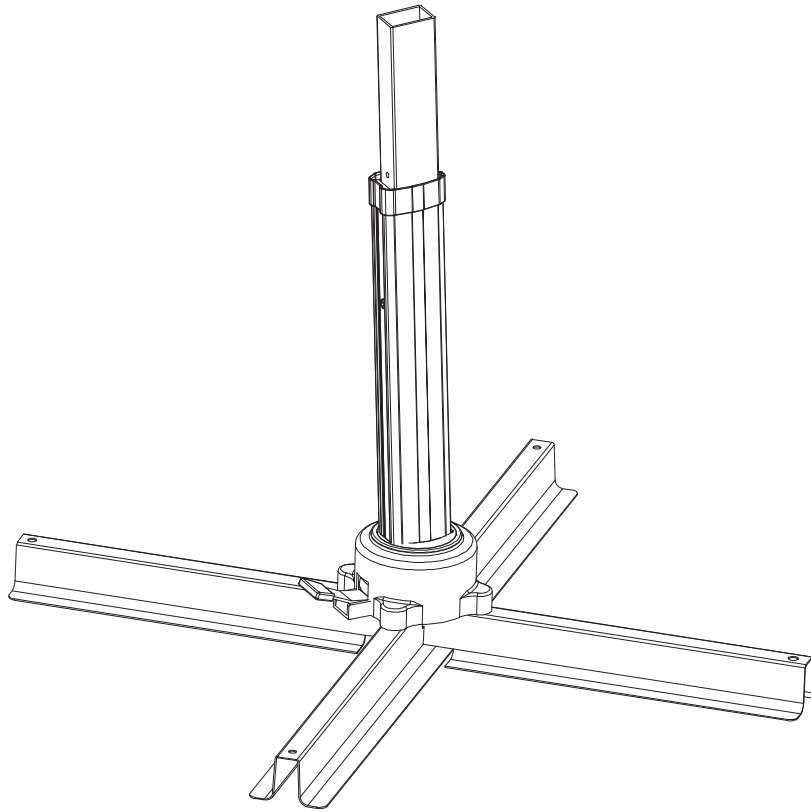


STEP 6


If necessary, pls put umbrella base.

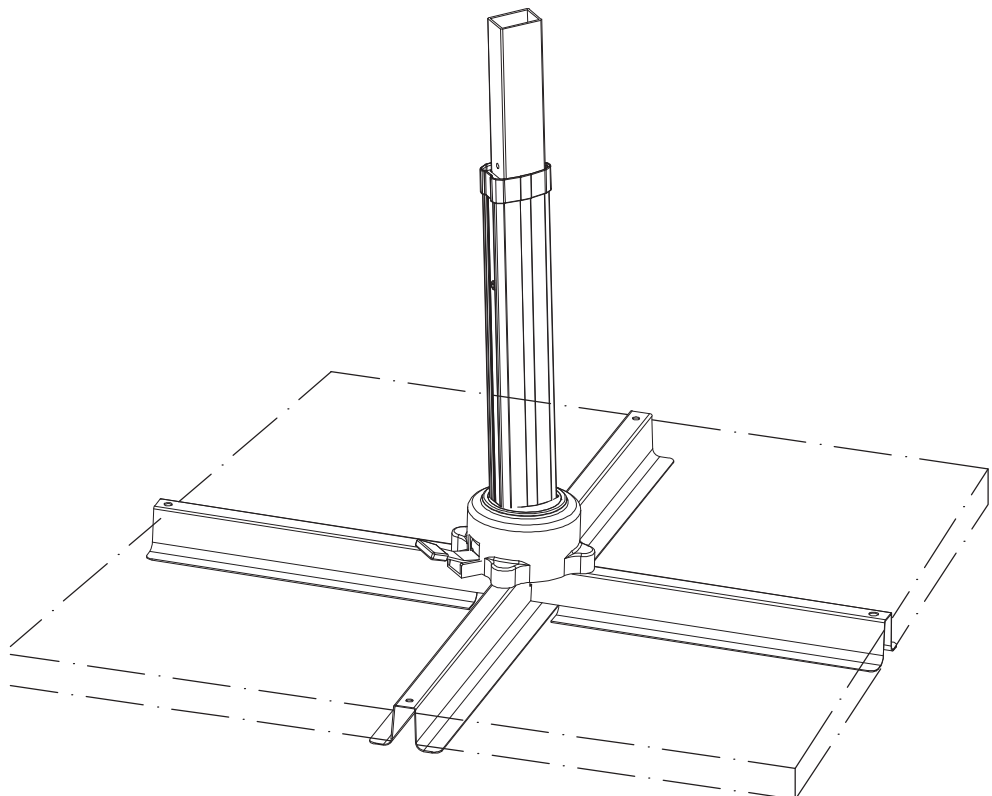


STEP 7

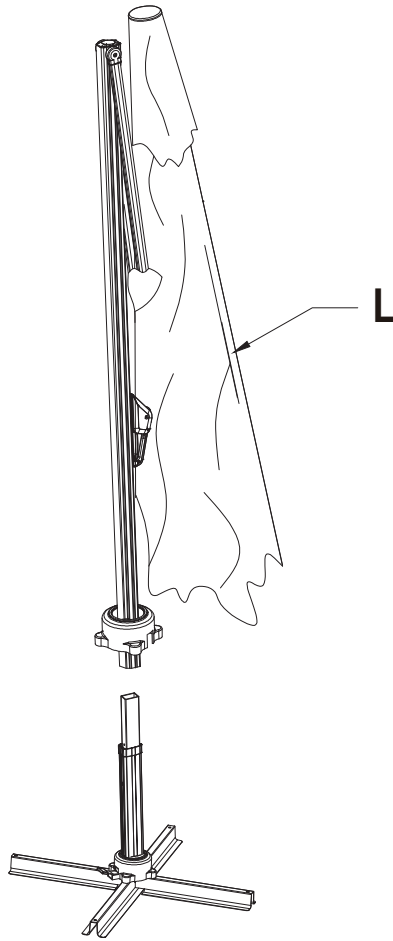


STEP 8

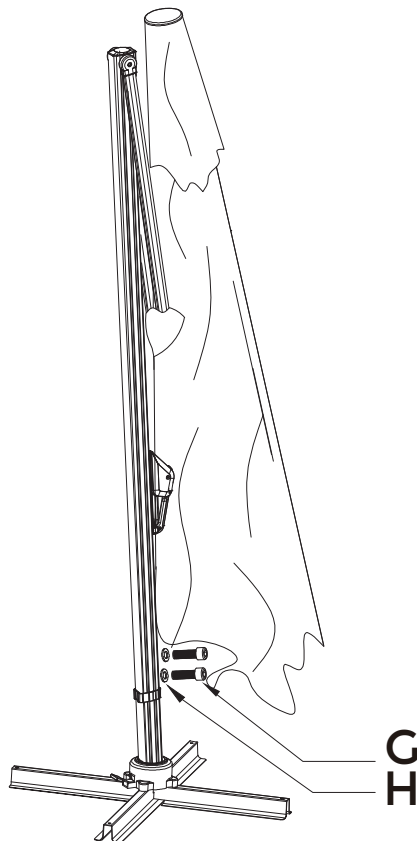


STEP 9

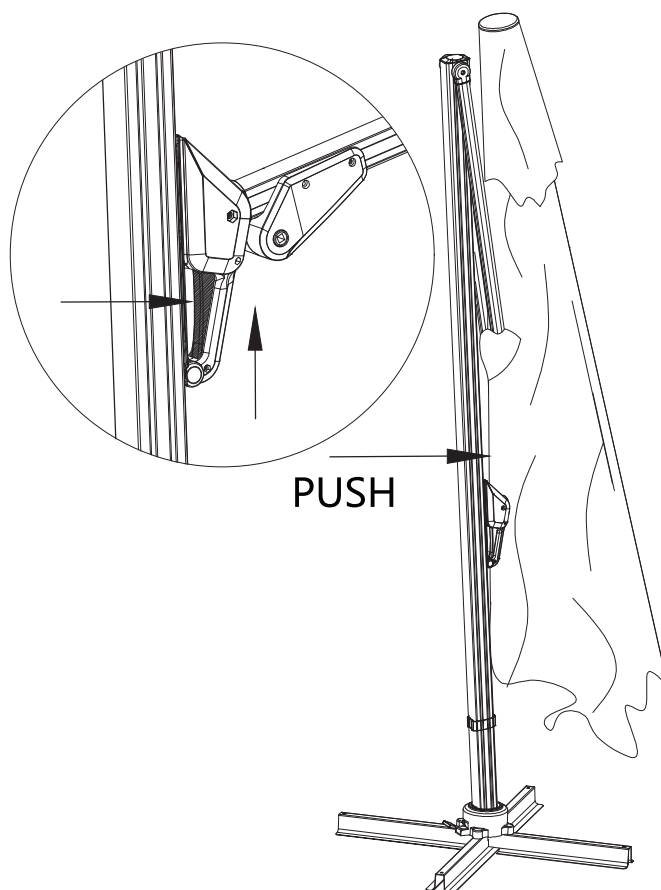


STEP 10

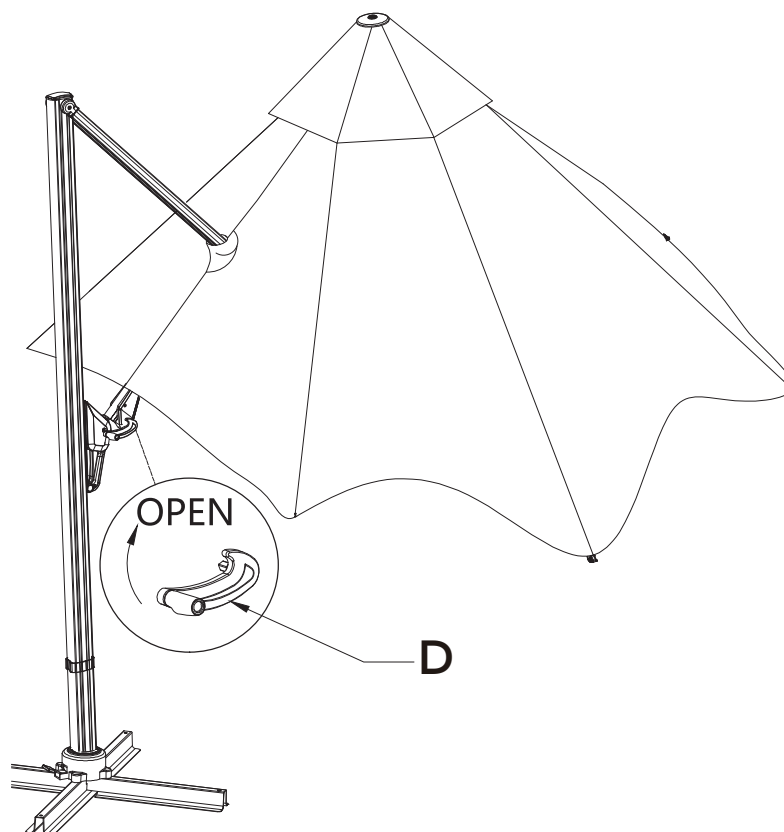


STEP 11

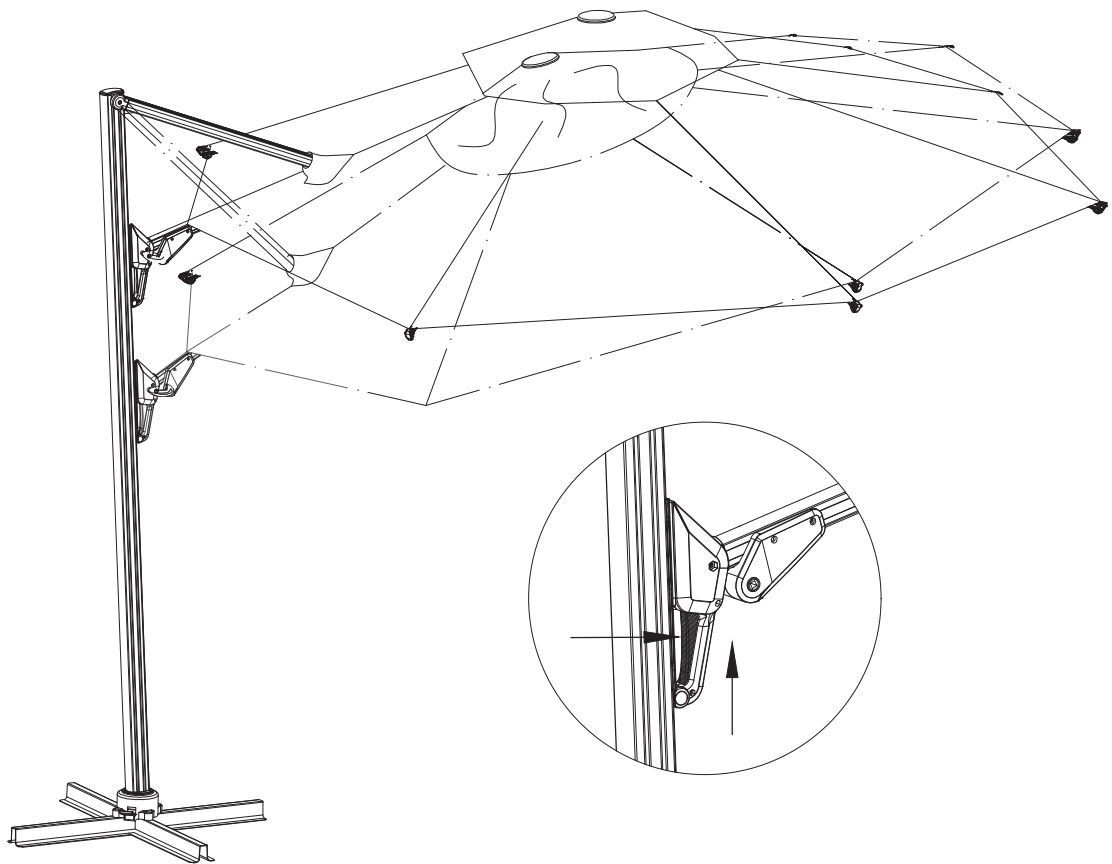

STEP 12

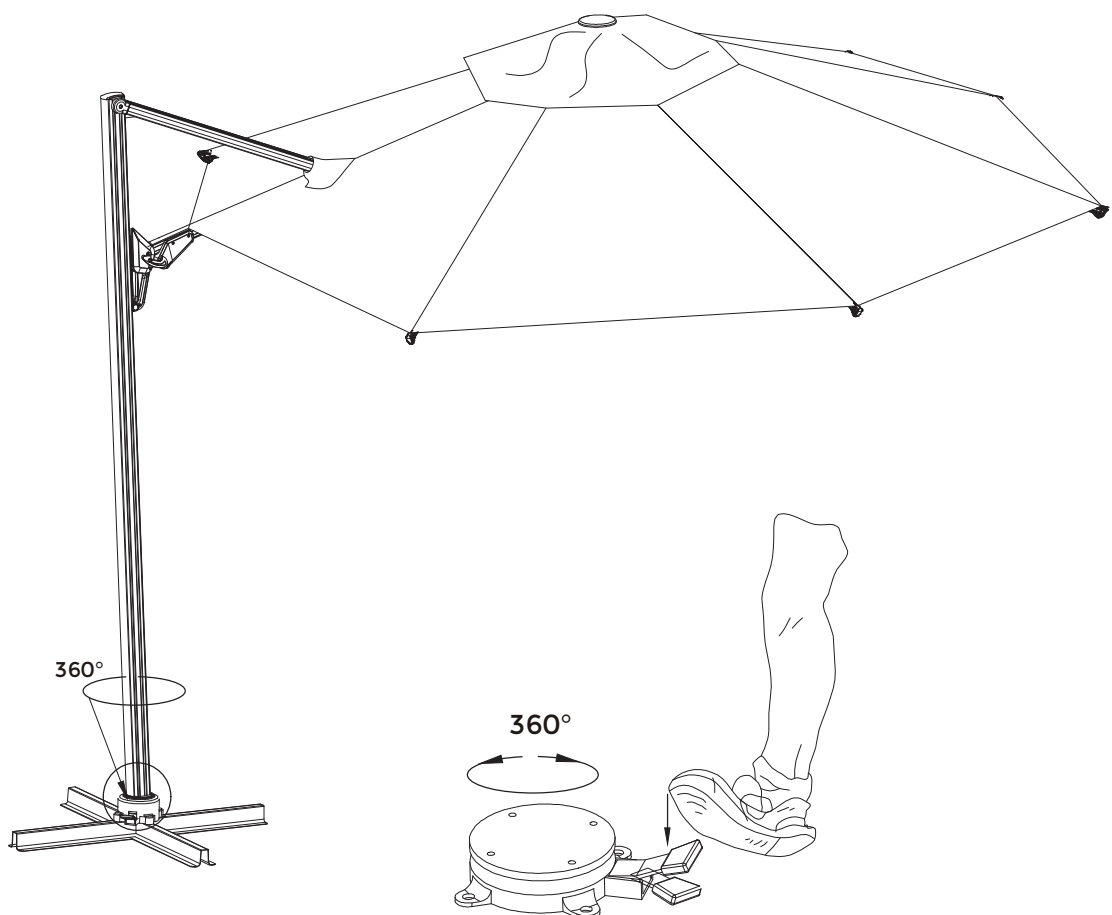

STEP 13 If necessary, pls install the wind rope.

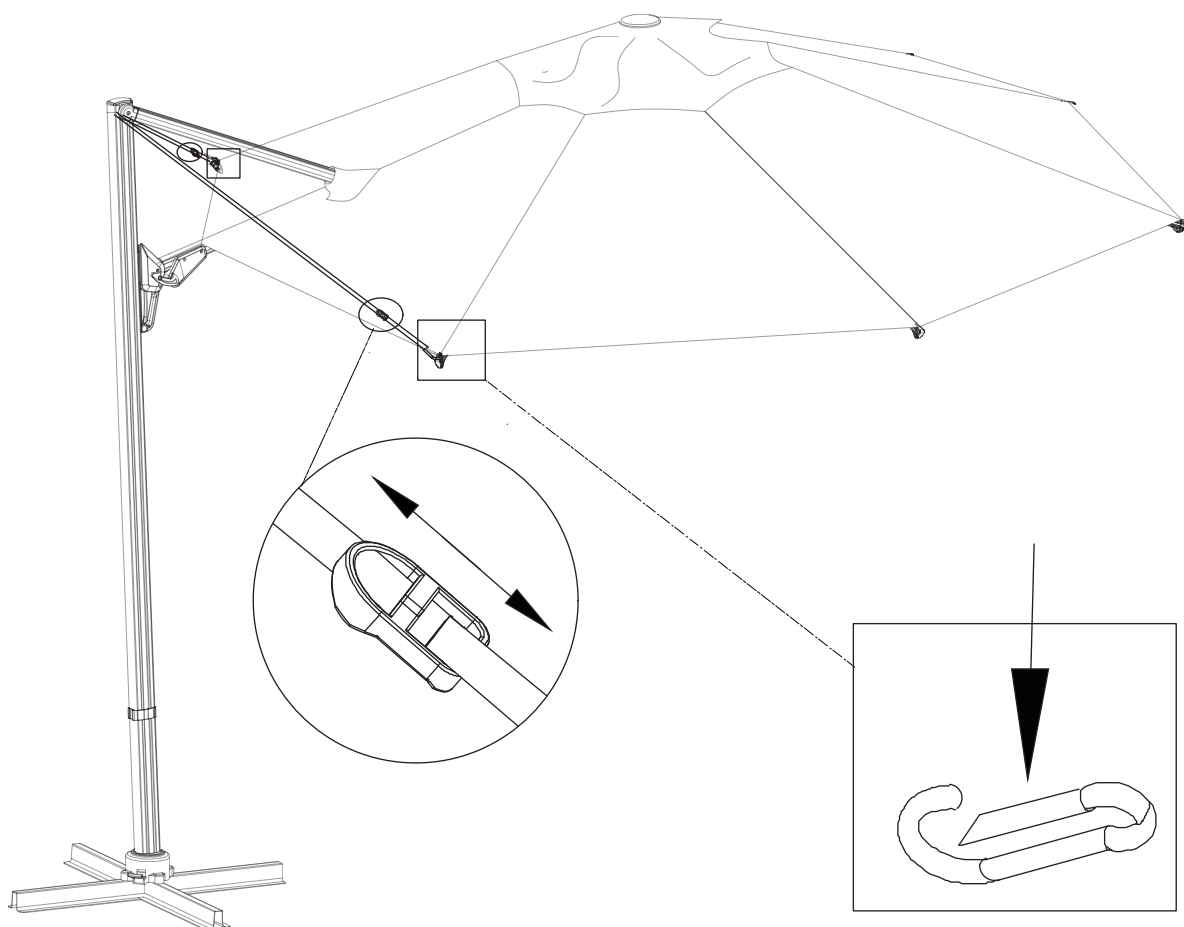



MAINTENANCE AND CARE

Regularly inspect your product for signs of wear, loose strands, or damage. Address any issues promptly.

Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.

Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.

Do not use sharp objects that may scratch the painted surface.

Brush off loose dirt, spray on a cleaning solution of water and mild soap. Use a soft bristle brush to clean. Air dry.

Keep umbrella closed if there are windy conditions or when not in use.

We recommend a base for safe and stable in outdoor use.



WARRANTY INFORMATION

Warranty Coverage: Our warranty provides protection against manufacturing defects in materials and workmanship for a specified period from the date of purchase, as outlined in the accompanying warranty documentation.

Exclusions: The warranty does not cover damages resulting from misuse, negligence, accidents, normal wear and tear, unauthorized repairs or modifications, improper assembly, or failure to adhere to the care and maintenance guidelines provided.

Warranty Claim Process

To initiate a return on , please follow these steps:

- 1 Log into your Amazon account and go to the "Your Orders" section.
- 2 Locate the order containing the item you wish to return.
- 3 Contact our customer service for assistance in obtaining a prepaid return label.
- 4 Once you receive the return label, securely affix it to the package.
- 5 You can then choose to drop off the package at a designated carrier location or arrange for a pickup.
- 6 After we receive and inspect the returned product, we will initiate the refund process.
- 7 The refund will be credited back to the original payment method used during the purchase.
- 8 Typically, refunds are processed within 3-5 business days.