

## **Kitchen 8-channel timer 110V English manual**

### **Product introduction:**

The eight-channel timer has 8 independent time display windows and can provide 8 menus of time reminder functions. Each time window can independently set the total time, and each time can also set 3 more time periods, each Each time period has an alarm prompt function, which is convenient for users to use in complex occasions. The time range can be set arbitrarily from 0 to 99 hours and 59 minutes. The eight-channel timer is divided into two types: touch type and button type: the touch type adopts the popular capacitive touch button, which is super sensitive, and only needs to click the button to respond, and the panel will be durable; the button type uses the traditional point It feels very good by pressing the buttons. The buzzer volume has 4 volume states: treble, midrange, bass and mute, suitable for use in noisy kitchens or quiet coffee shops. The whole body is made of stainless steel shell, which can resist the erosion of kitchen fumes, will not rust, and will still

be as bright as new after years of use.



- a. Menu 1-8 time display window
- b. Menu 1-8 time start/stop button
- c. Total time setting key
- d. Stage time setting key
- e. Power switch key
- f. Set time increase button (digital tuning: increase the buzzer volume in non-set state)
- g. Set time reduction key (digital tuning: adjust the buzzer volume in non-set state)

## **1 Power on and off operation steps**

After the power is plugged in, press the red power button ON/OFF to turn on; if you need to power off, press the red power button ON/OFF and keep your hands on, stay for about 3 seconds to turn off

## **2 Time adjustment of eight channels**

First press the red power button ON/OFF to turn on, and then press the TIME button, after the display shows all END, if you need to adjust the 1 channel time, after pressing the 1 button, the 4 values on the 1 display are flashing. Then press and hold the up arrow button to keep it still. Increase to the time you need to set (after the second is increased to 59 seconds, the time in the previous minute will be increased by 1), if you need to set other channel time, the operation steps are the same as that of button 1, when the eight channels are all After setting, press the TIME button to exit the setting procedure and the set time has been stored.

## **3 About the three-stage reminder setting**

For example, our 1 channel set time is 1 minute, but we want him to remind us three times within a minute.

For example, if we want to remind us in 20 seconds, 30 seconds, 40 seconds, then we first press the red power button ON/OFF and then turn on After pressing the REMINDER button, then all eight channel displays are displayed as AL-1, and then after we press the 1 button, the four values of the 1 button will all move inward, and then we keep pressing the up arrow without letting go, increasing to We need to set 20, and so on. After the eight channels are set, we press the REMINDER button again, the display shows AL-2 and then enters the second reminder setting, and then follow the eight steps just now. After all the channels are set for 30 seconds, then press the REMINDER button again to enter the third reminder setting, and then press the previous operation steps to set all eight channels to 40 seconds, and then press the REMINDER button again to exit the setting. Reminder program, the system will store the value you just set by default after exiting the stage reminder program. (After the alarm in the blue shaking phase, be sure to press the button of the reminded channel again with your hand, otherwise the machine will keep alarming)

#### **4 About the conversion of minutes and hours (The timer minutes can be set up to 99 minutes, and after the hour program, you can set up to 99 hours)**

When the power is off, press and hold the TIME button first, and then press the ON/OFF button at the same time. The eight channel panels display 0-5. This display indicates that the timer is a minute count. If you need to convert to hours, set channels 1-8 After pressing it once, the panel of the eight channels will display H-0. This prompt shows that it has been changed to an hour timer. Then we press the down arrow button to exit the setting program. At this time, it has been saved as an hour timer, (then Then for each channel, follow the operation instruction 3 to set the time you need)

#### **5 Operation steps for adjusting the size of the sound**

First press the rainbow power button ON/OFF to turn on, and then press the up and down arrow buttons, the number 5 will appear, the maximum sound setting value of the machine is 5, if you want to lower the

sound, you need to press the down arrow Just adjust the value.

(The machine can also rotate the black cylinder from the back to adjust the sound level. There are two round holes at the back of the machine, one large and one small. There is a black cylinder in the small hole, and you can rotate it with a flat-blade screwdriver. The electronic version has been upgraded to panel adjustment sound)

## **6 Set up the running operation**

After powering on, all the time has been set to the time you need, if you want to run the timer, just press the 1-8 buttons you want to use and it will run normally.

### **Device parameters:**

Model: CAL-88

Specification: 300\*112\*40mm

Voltage: AC110v

Number of time windows: 8 segments

**Precautions:**

1. The timer is designed with an all-stainless steel body. When using it for a long time and is stained with oil, please wipe the body with a damp cloth and some degreaser. Do not rinse it in water. This timer is not waterproof.
2. The touch timer adopts capacitive touch-sensitive buttons. You need to touch the button surface with the belly of your finger or other skin parts. Do not scratch the button surface with nails or hard objects, which will cause poor touch.
3. The ears on both sides are for convenient hanging on the wall. When using, please contact the installer to put explosive screws on the wall, fix the ears on the wall and then hang the timer. Use the hexagonal star nut to lock the timer. Tighten it to the ears, -cut it firmly before plugging it in.
4. For operating instructions, please refer to the detailed instructions in the manual. If you have any questions, please contact the dealer or manufacturer for handling. Do not disassemble the product by yourself.