 
 


OUTDOOR HANGING LANTERN USE AND CARE GUIDE

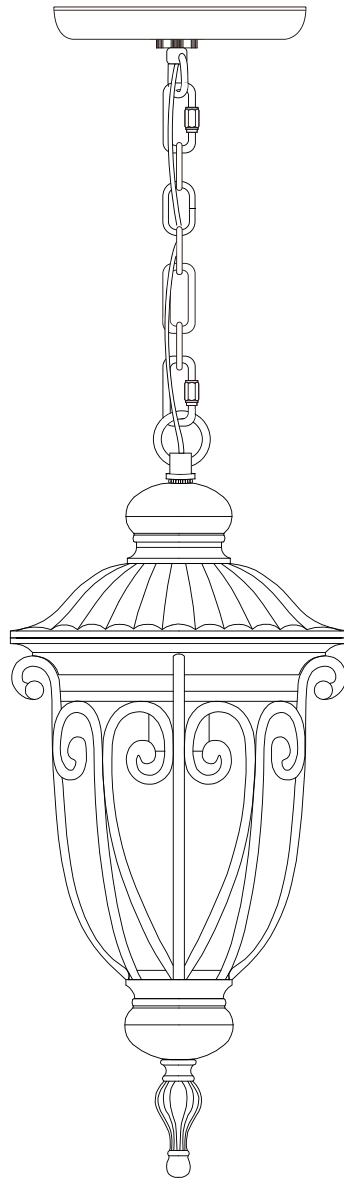

INSTALLATION INSTRUCTIONS FOR OUTDOOR PENDENT LIGHT

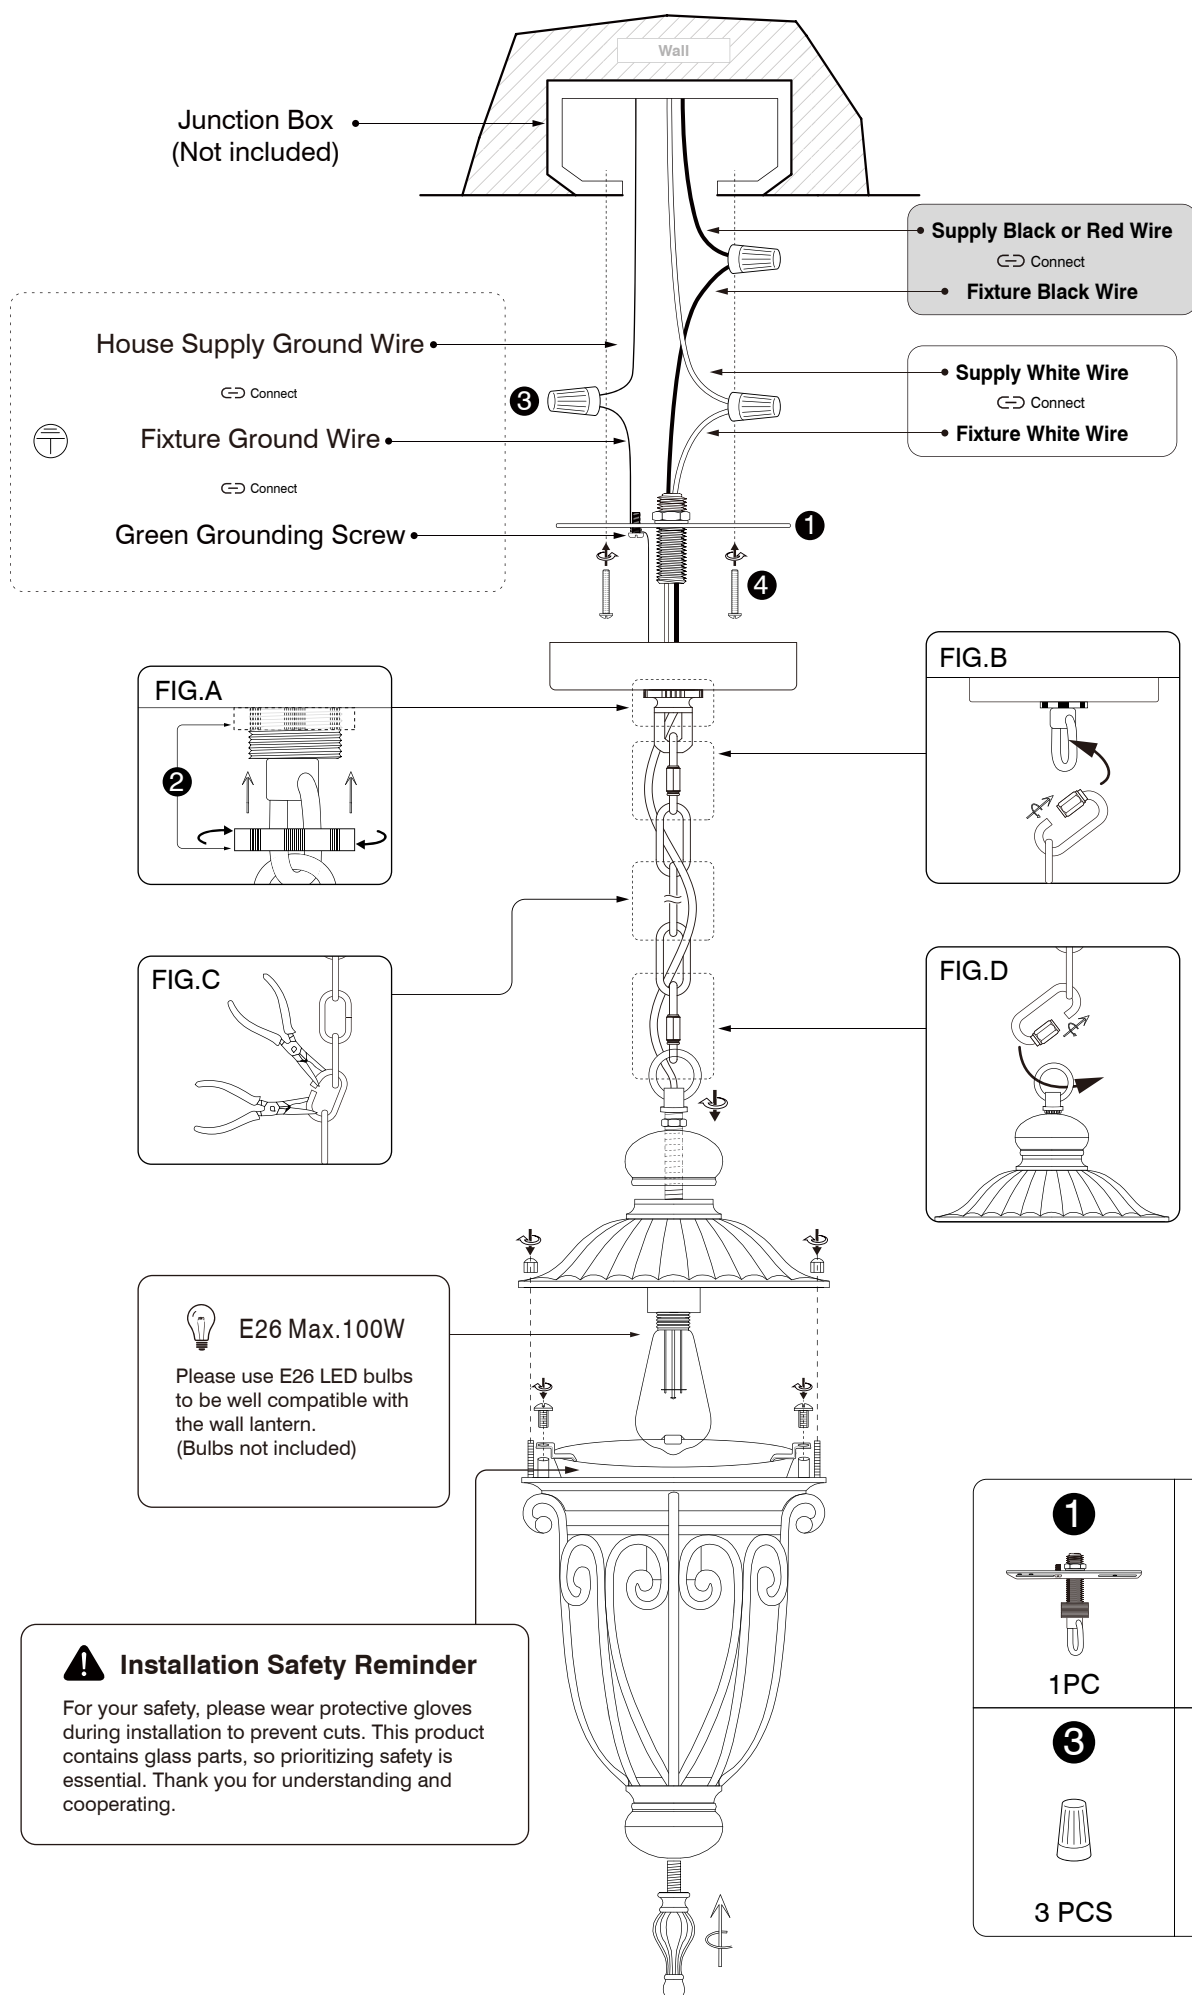

Installation Safety Reminder

For your safety, please wear protective gloves during installation to prevent cuts. This product contains glass parts, so prioritizing safety is essential. Thank you for understanding and cooperating.

ASSEMBLY INSTRUCTIONS



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS
READ ALL INSTRUCTIONS

**IMPORTANT SAFETY
INSTRUCTIONS**
SAVE THESE INSTRUCTIONS

Before starting the installation, disconnect the Power by Turning Off the Circuit Breaker. Turning the Power Off using the LightSwitch is not sufficient to prevent electrical shock. All electrical connections and installation must be following local codes, ordinances, and/or National Electric Code and Must Be Done by an Electrician Only.

TOOLS AND MATERIALS REQUIRED:



Phillips
Screwdriver



 
Wire Cutters



Safety Gloves



Ladder

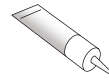

Mastic Silicone
Rubber



Safety Glasses

INSTALLATION STEPS

Before starting the installation, disconnect the Power by Turning Off the Circuit Breaker. Turning the Power Off using the LightSwitch is not sufficient to prevent electrical shock. All electrical connections and installation must be following local codes, ordinances, and/or National Electric Code and Must Be Done by an Electrician Only.

1. Secure the junction box to the outlet box using 2 long screws.
2. Use two pliers to open the links at each end of the chain. Adjust chain length as needed **(FIG.C)**. Thread wire and ground wire (copper) through chain (every 3 links recommended). Thread wire, ground wire (copper) and chain through threaded ring. Attach one end of the chain to the Canopy's loop and close it **(FIG.B)**.
3. Connect the fixture's cord and ground wire (copper) through the canopy to the outlet box's power cord.
4. Attach canopy to outlet box by securely tightening threaded ring **(FIG.A)**.
5. Attach the other end of the chain to the fixture's loop and close it **(FIG.D)**.
6. The installed light bulbs do not exceed the maximum wattage specified on the product (E26 100W Max.)
7. Secure the glass with 3 machine screws.
8. Secure the canopy to the frame with 2 decorative nuts.
9. Turn the top cover to attach it to the frame.
10. Turn on the power to activate the light.

3 YEAR LIMITED WARRANTY*

This Light Fixture is warranted against defects in material and quality for 3 year from the purchase date.

This warranty does not cover acts of nature such as lighting damage or corrosion and discoloration of components. Nor does it cover damages caused through abuse, improper installation, surges in electric current, or acts of third parties.

This warranty does not cover the costs of removing and resealing the lighting fixture.

If this product falls for any reason covered by this warranty, feel free to contact us.