

### ADJUSTABLE ARMS – HEIGHT



Push the button in and pull the arms up or down until the desired height. Release the button to lock the arms into place.

### TILT TENSION HANDLE – BACKREST TILT



Twist the handle to change how much weight is required to tilt the backrest.

### **LEFT LEVER – BACKREST TILT**



Twist lever and push backrest back to desired tilt lever. Twist lever back to lock the backrest into place. The tension handle may have to be altered to push the backrest. The chair can remain on a tilt function to allow the backrest to tilt freely.

### **RIGHT MIDDLE LEVER – GAS LIFT (HEIGHT ADJUSTMENT)**



Twist the lever to adjust the height of the chair. Release the lever to lock the height in place.