

Animated Snowman Sliding



Animated Snowman Sliding is made in three pieces, (3) snowman sliding pieces. Plug the male end of the first snowman sliding into the first female end on the 2-channel controller. Using the provided extension cords, plug the male end of the second snowman sliding into the female end of an extension cord. Plug the extension cord male end into the second female end on the provided 2-channel controller. Repeat this process with the third snowman sliding. Plug the controller directly into power. Adjust the speed by turning the knob at the top of the controller. This will create animation to look like the snowman is sliding across the ground.

We advise that you cover the animation controller with a plastic bag and point the animation cords downward to reduce potential water damage. Leave one side of the bag open to reduce condensation. Please do not place the animation controller on the ground.