

## 1.7 Litre Cordless Jug Kettle



For models:

**IG7270 - White**  
**IG7280 - Black**

PO number:

**Please read these instructions carefully before use and retain for future reference**

**Before switching on you appliance**

**Always check for any damage which may have been caused in transit**

## **CONTENTS**

Important Safety Instructions.....	3-4
Appliance Overview .....	5
Operating Instructions.....	5
Cleaning & maintenance .....	6
Fuse Replacement .....	6
Trouble Shooting Guide.....	7
Disposal Information.....	8
Igenix Warranty .....	10-11

## SAFETY INSTRUCTIONS

Please read this user manual carefully before using your appliance to ensure proper use and maintenance.

1. This appliance is intended for domestic use; to be used in a household or similar applications such as
  - a. Staff kitchen areas in shops, offices and other working environments;
  - b. By clients in hotels, motels and other residential type environments;
  - c. Bed and breakfast type environments.
2. Do not operate the unit with a damaged cord or plug, after it malfunctions or has been dropped or damaged in any way.
3. All electrical repairs must be carried out by a qualified electrician. Inadequate repairs may result in a major source of danger for the user and invalidate the warranty.
4. Make sure the voltage in your home corresponds to the one shown on the rating label of the appliance.
5. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
6. Cleaning and user maintenance shall not be made by children
7. Keep the appliance and its cord out of reach of children aged less than 8 years.
8. Children shall not play with the appliance.
9. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
10. Do not let the cord hang over the edge of a table or counter or touch a hot surface.

11. Do not place on or near a hot gas or electric burner or a heated oven.
12. Do not operate the appliance without water to avoid damaging the heat elements.
13. Ensure that the kettle is placed on a level and flat surface out of reach of children, to prevent the kettle from overturning and to avoid damage or injury.
14. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
15. While water is boiling, or just after the water has boiled, avoid contact with steam from the spout.
16. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast. Be careful when refilling the kettle when it is hot.
17. Do not touch the hot surface. Use the handle or the button.
18. Extreme caution must be used when moving an appliance containing hot water.
19. The use of accessories, which are not recommended by the manufacturer, may result in fire, electric shock or personal injury.
20. Unplug the appliance from the wall socket when not in use and before cleaning. Allow the appliance to cool before cleaning.
21. Do not use the appliance or the attached base for anything other than its intended use, which is to boil water.
22. The kettle can only be used with the stand provided.
23. If the kettle is overfilled, boiling water may spill out.
24. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the boiling cycle.
25. Do not use the appliance near facilities containing water, such as bath tubs, showers or wash basins.

## APPLIANCE OVERVIEW

1. Power base
2. Water gauge
3. Body
4. Spout
5. Lid
6. Handle
7. On/Off Switch



## OPERATING INSTRUCTIONS

### Before first use

Before using the kettle for the first time, fill with water to the MAX level, boil and pour away. Repeat this several times using fresh water each time you boil the kettle.

### Using your kettle

- Place the cordless base on a level firm surface.
- Where ever possible fill the kettle through the spout as this will help to reduce the amount of limescale that builds up on the filter.
- The amount of water can be measured by the level mark on the outside of the kettle. Never fill the kettle above the MAX level and ensure it is always above the MIN level.
- Only fill the kettle with the amount of water you need as this will save electricity.
- Always make sure that the lid is properly firmly closed.
- Place the kettle on the cordless base making sure it is positioned correctly.
- Plug in and switch on at the wall socket.
- Put the ON / OFF switch to its 'ON' position and the switch will illuminate.
- When the water boils the kettle will switch off automatically. The kettle can be switched off manually by putting the switch to the 'OFF' position.
- To re-boil the kettle, switch on again. If the appliance has just switched off you may have to wait a few minutes before switching back on.
- When the kettle has boiled the water may be poured out through the spout.
- This kettle is fitted with a safety cut-out to protect the kettle from damage in case of inappropriate use. Should the kettle be accidentally operated without water or if all of the water has evaporated, the safety cut-out will automatically switch off the heating element. In such a case, remove the plug from the wall socket immediately and refill the kettle. Allow the element to cool for a few minutes and then start using the kettle as normal.

# CLEANING AND MAINTENANCE

## Descaling

**IMPORTANT:** As this kettle is fitted with an immersed element it must be regularly descaled. The frequency of descaling depends on usage and the hardness of the water in your area.


Excessive amounts of scale can cause the kettle to switch off before reaching boiling point and cause damage to the element which is not covered by the guarantee.

- Any regular descaling agent may be used, provided the relevant instructions are observed.
- Do not fill the kettle to the upper mark to avoid spillage if the descaling agent causes the water to foam.
- To clean the kettle thoroughly of any decalcification residues, let it go through several boiling cycles using clean water with each cycle. Rinse the kettle with clean water afterwards.

## Cleaning

- Before cleaning the kettle, ensure it is disconnected from the power supply and has cooled down completely.
- Do not use abrasives or harsh cleaning solutions.
- Do not immerse the base or the kettle in any liquid. To clean the exterior, use a slightly damp lint free cloth.
- It is advisable to remove limescale deposits at regular intervals.

# MAINS PLUG FUSE REPLACEMENT

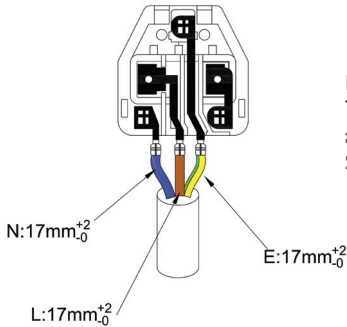

## Fuse Replacement

The appliance must be earthed. Remove the central fuse cap and take out the fuse. Replace with a new fuse of the same Amp. Securely fix the fuse cap back into place.

# TROUBLE SHOOTING GUIDE

Problem	Possible Cause	Solution
The kettle does not work	<ol style="list-style-type: none"><li>1. Not properly plugged into the mains wall socket.</li><li>2. No electricity in the mains wall socket.</li><li>3. On/Off switch not turned on.</li><li>4. Safety cut-out activated.</li></ol>	<ol style="list-style-type: none"><li>1. Plug in firmly</li><li>2. Check fuse or breaker.</li><li>3. Push on/off switch to on.</li><li>4. Fill the kettle and allow to cool for a few minutes.</li></ol>
The kettle cuts out before it boils.	<ol style="list-style-type: none"><li>1. Large build up of scale in the kettle.</li></ol>	<ol style="list-style-type: none"><li>1. Use a descaling agent to clean the kettle.</li></ol>
Kettle scales up quickly.	<ol style="list-style-type: none"><li>1. You live in a hard water area.</li></ol>	<ol style="list-style-type: none"><li>1. Regularly de-scale your kettle</li></ol>

## DISPOSAL INFORMATION

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.





## Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the guarantee, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The guarantee does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The guarantee will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

**Customer Service Department  
38 Bluestem Road, Ransomes Europark  
Ipswich, IP3 9RR**

Please quote the Product Code which begins 'IG' or 'DF' and the PO Number on the front of the instruction manual and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed guarantee period, the guarantee for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the guarantee period you will be charged for the repair and any carriage costs.



## **Thank you for choosing Igenix**

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. **[www.igenix.co.uk](http://www.igenix.co.uk)**