

User Manual

Swing Chair

I. About

With the mission of "bringing more convenience to family and travel life", the vision of "becoming the first choice and trusted brand of customers in outdoor series", and the core value of "providing high-quality and high-standard outdoor products", awakens people pay attention to the outdoor garden life itself, extend the time to play with family and partners in the outdoor garden, and enjoy a healthier and more comfortable life.

This user manual is **for 3-person swing chair**. We reserve the right to change, update any content contained herein without prior notice.

Please read, understand, and follow this user manual before assembling and using the swing. Save this manual for future reference. It's the responsibility of the user for potential risks of injuries due to inappropriate use not obeying safety instructions in this manual.

II. Safety Guidelines

WARNING

For your own safety, please strictly follow the instructions in this manual and follow the proper order, otherwise personal injury may result!

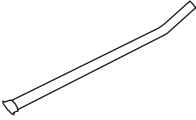
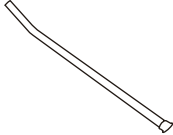
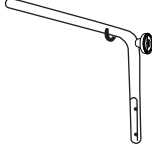
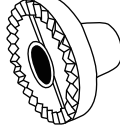
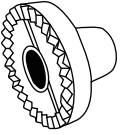
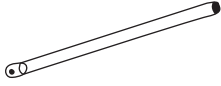
 
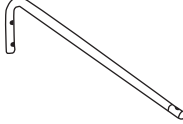
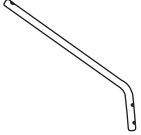
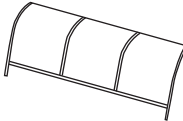
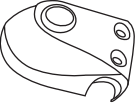
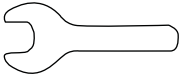
Before you proceed, please read the following safety precautions:

- Separate and count all parts and hardware.
- Install not less than 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Tighten all nuts and bolts securely.
Never use power tools or excessive force during assembly and tightening of bolts.
- Always place the product on a flat, steady and stable surface.
- It is recommended to protect in case of strong wind or rain and in your absence.
- Do not use candles, matches, or any open flames in or near the swing.








III. Maintenance

- Wash frame parts and fabric with mild soap and water, rinse thoroughly.
- Dry frame completely and allow the fabric to drip dry.
- Do not use bleach, acid, or other solvents on the fabric or frame parts.
- Please inspect and tighten all bolts or fasteners on a regular basis to ensure proper performance and safety of your swing.

Part List

A  2PCS Front Leg	B  2PCS Back Leg	C  1PC Right Top Bar	C1  1PC Rotation Base <i>(preinstalled on part C)</i>	D  1PC Left Top Bar
D1  1PC Rotation Base <i>(preinstalled on part D)</i>	E  2PCS Connecting Bar	E1  4PCS Arm Bar	F  1PC Right Back Support	G  1PC Left Back Support
H  2PCS Spring Hook	I  2PCS Handle	J1  1PC Seat	J2  1PC Back	K  2PCS Canopy Frame (Right & Left)
K1  2PCS Rotation Connector <i>(preinstalled on part K)</i>	L  2PCS Canopy Frame (Front & Back)	M  1PC Canopy	Y  2PCS Knob	Z1  1PC Allen Wrench
Z2  1PC Double-ended Spanner				

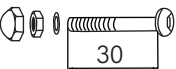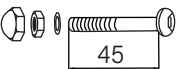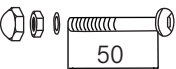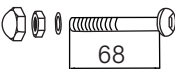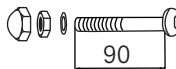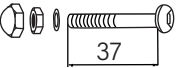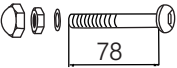Screw Pack

O  1PC M6*30mm Bolt Set	P  2PCS M6*45mm Bolt Set	Q  4PCS M6*50mm Bolt Set	R  4PCS M6*68mm Bolt Set	T  4PCS M6*90mm Bolt Set
U  4PCS M8*37mm Bolt Set	X  4PCS M8*78mm Bolt Set			

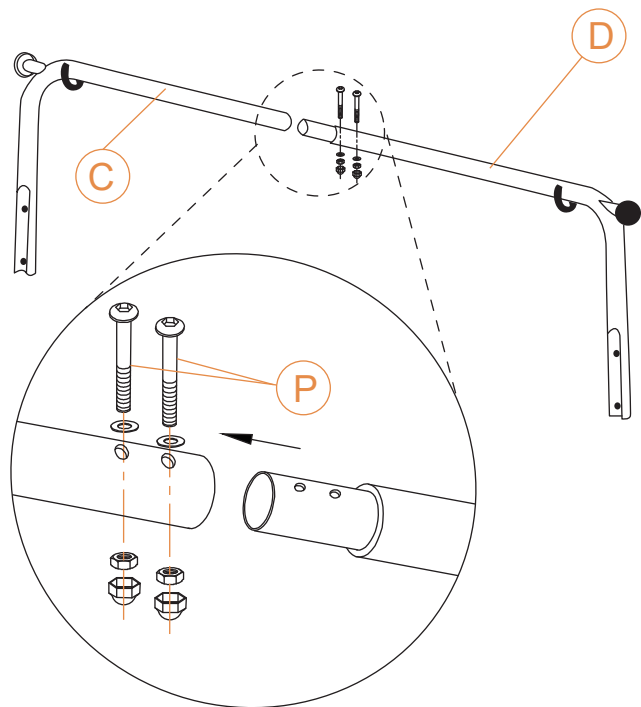
IV. Assembly Steps

Preparation

Please remove all protective foam. Before assembling, make sure that you lay out and identify all parts listed below in the parts list. install on level ground.


Tips: For a smooth installation, keep the parts horizontal during the installation of the screws.

1




Put Right Top Bar (#D) into the Left Top Bar (#C). Connect them by **two M6*45mm Bolt Sets (#P)**. Then, you will get a completed top bar.

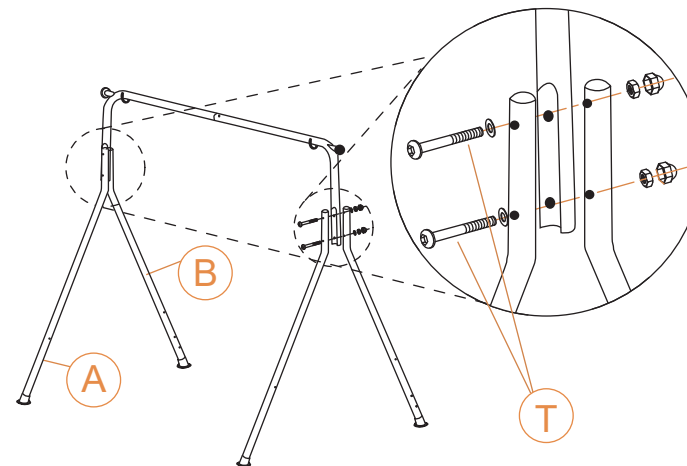2




Put assembled top bar in the middle of Front Leg (#A) and Back Leg (#B), then align their holes. Connect them by **M6*90mm Bolt Set (#T)**.

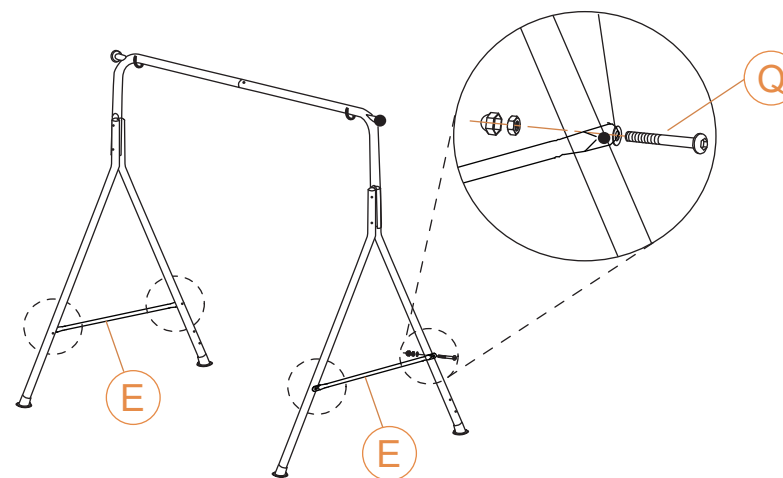
3



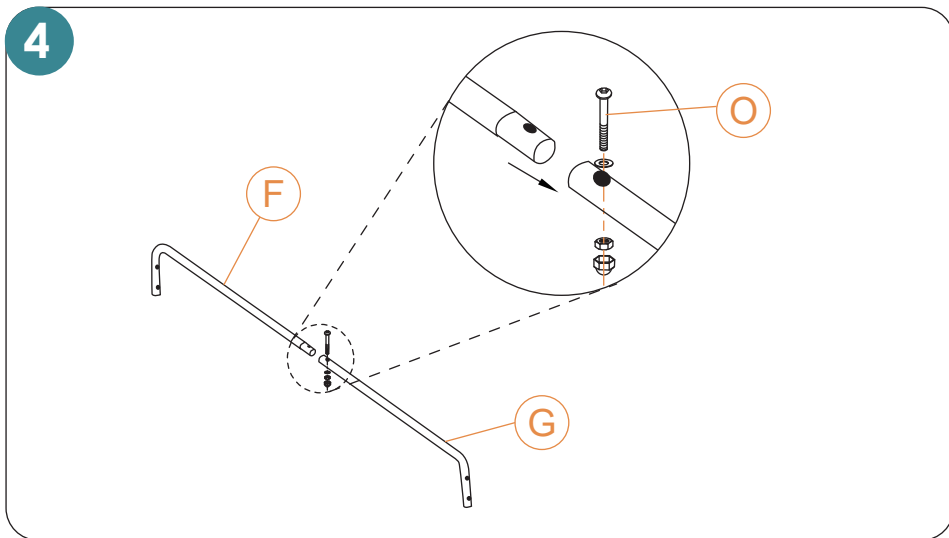
Align the holes of Connecting Bar (#E), Front Leg (#A) and Back Leg (#B). Then fixed them by **M6*45mm Bolts Set (#Q)**,



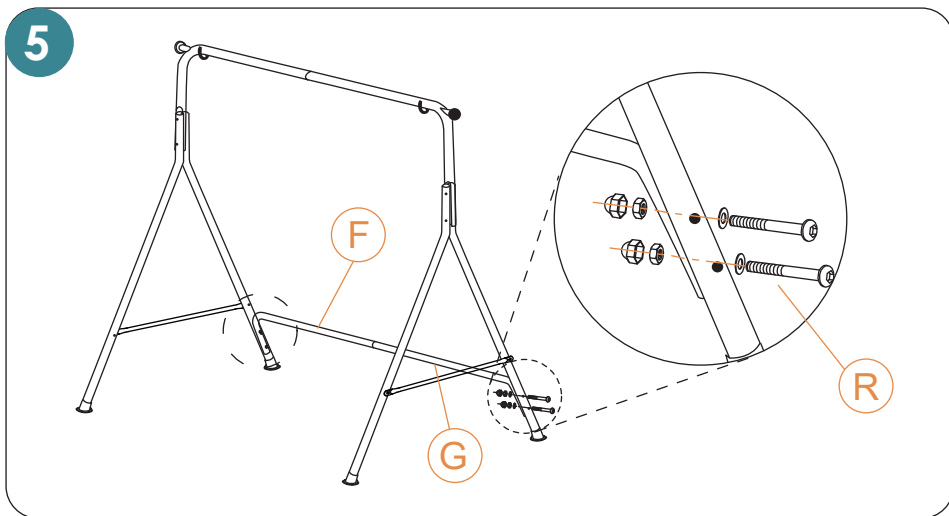
Insert Right Back Support (#F) into the Left Back Support (#G). Connecting the back supports by **30mm Bolts Set (#O)**. Then, you will get an assembled back support bar.



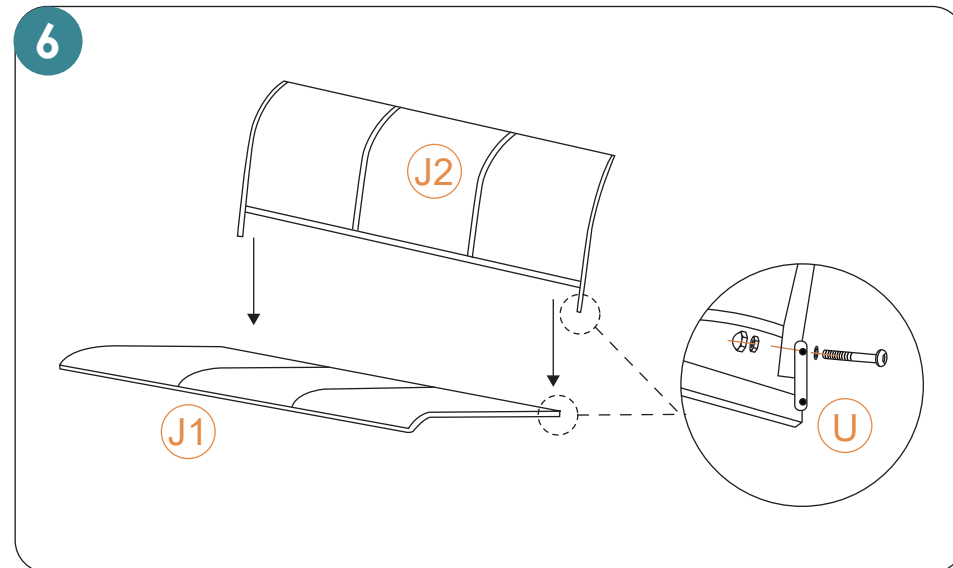Place the assembled back support bar in **Step 4** as arch shaped and then put it in the middle of right legs and left legs. Thread the **M6*68mm Bolts (#R)** into the holes of legs, back supports and washers successively, fixed the bolt by hex nut and acorn cap nut finally.




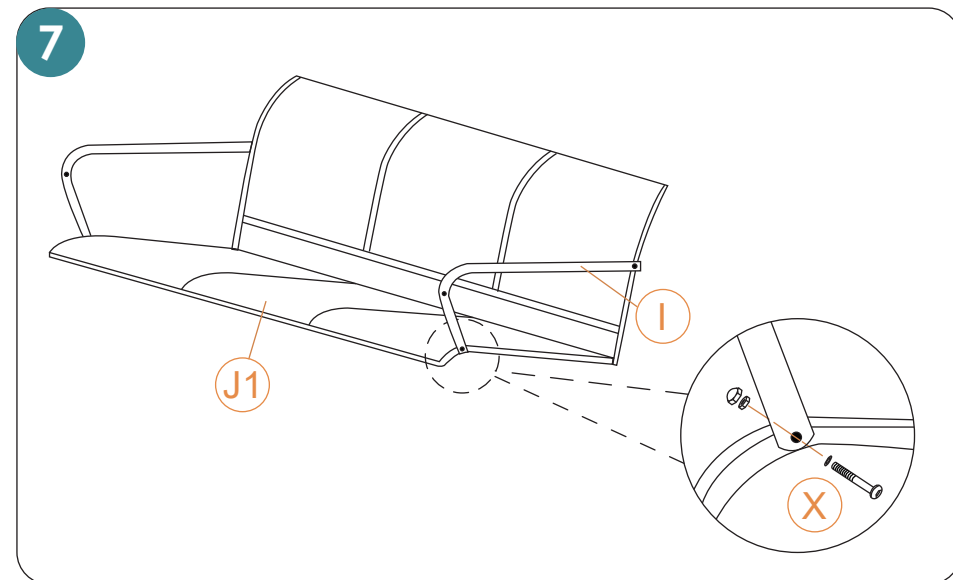Align the holes of mesh Back (#J2) and Seat (#J1), then fix them with **M8*37mm Bolt Set (#U)**.




Attach Handles (#I) to the Seat (#J1) by using **M8*78MM Bolt Set (#X)**.

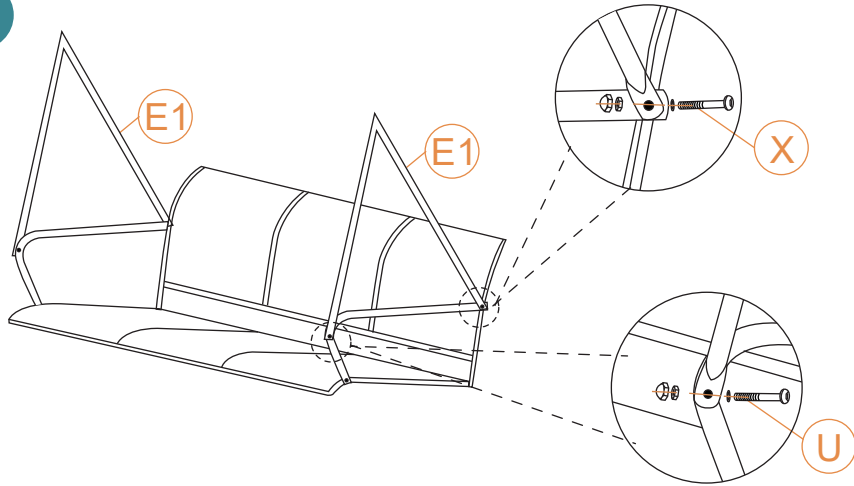8




Connect the Arm Bars (**#E1**) with handle by using **M8*37mm Bolt Set (#U)** at the turning of handle and **M8*78mm Bolt Set (#X)** on the end.

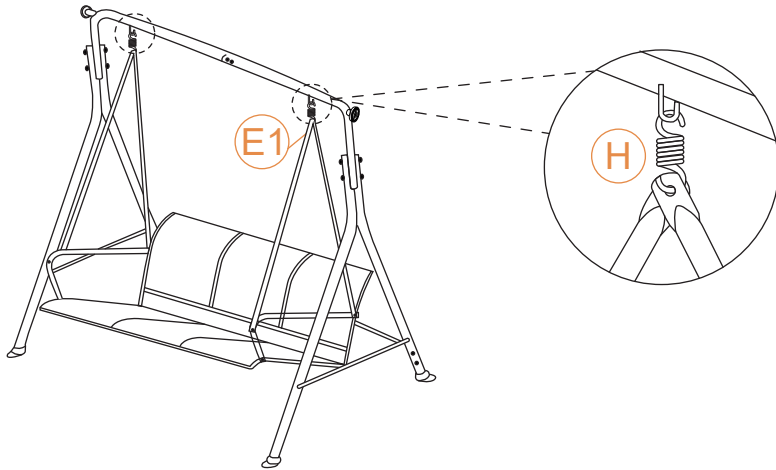9



Thread a Spring Hook (**#H**) through the holes of Arm Bars (**#E1**). Then hang the assembled chair below the assembled swing frame in **step 5** by using Spring Hook (**#H**).

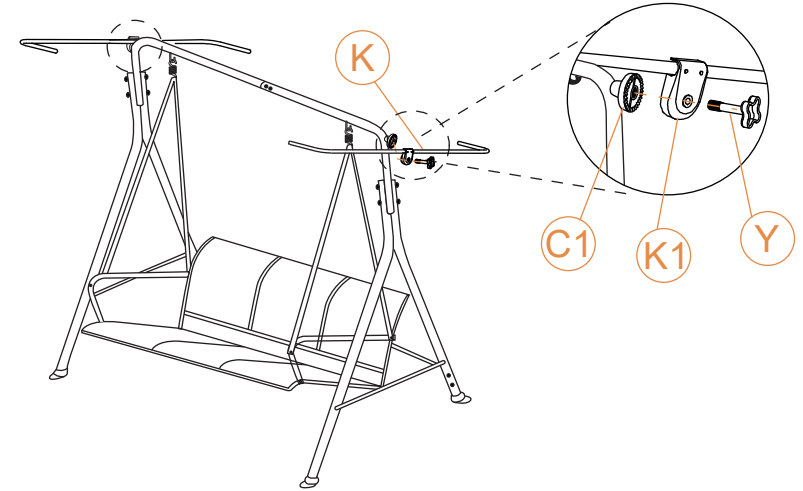
10



Align the gear of the Ceiling Rotation Base (**#C1 & D1**) of top bar and the gear of Rotation Connector (**#K1**) of Canopy Frame (**#K**), then screw in the cross Knob (**#Y**) lightly.


Tips: Do not tighten the Knob (**#Y**) before completing the installation.

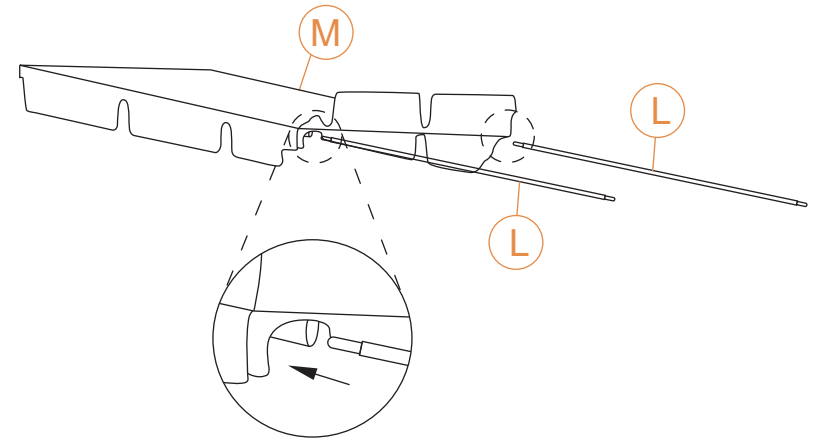11




Insert the front and back Canopy Frame (**#L**) into the tube of the Canopy (**#M**).

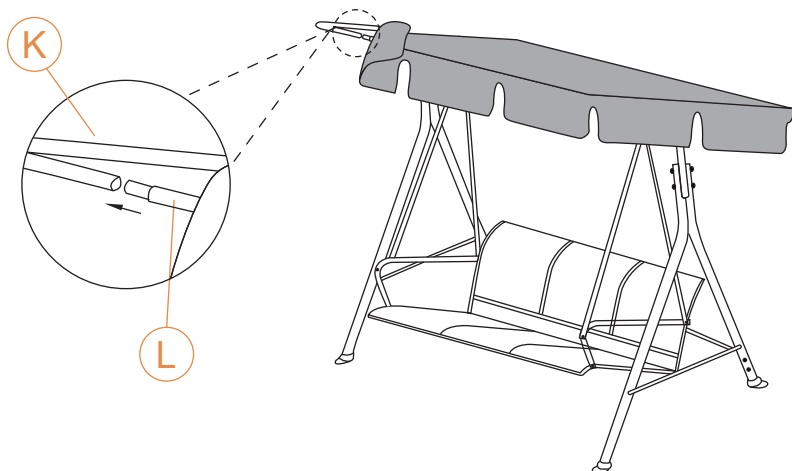12



Insert the front and back Canopy Frame (#L) into the tube of right and left Canopy Frame (#K).

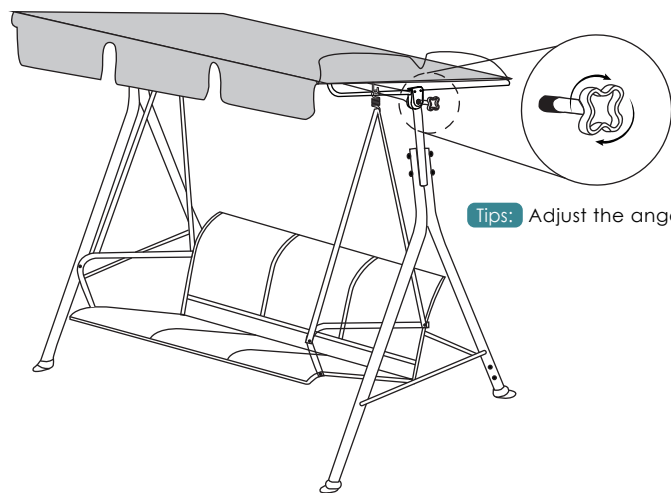13



Tips: Adjust the angel of canopy

In the end, check all screws are fixed tightly before use. Your swing has been installed successfully. Enjoy and try it!

V. Warranty Disclaimer

Thank you for your interest in the products and services

This Limited Warranty applies to physical goods, and only for physical goods, purchased from us

What does this limited warranty cover?

This Limited Warranty covers any defects in material or workmanship under normal use during the Warranty Period.

During the Warranty Period, We will repair or replace, at no charge, products or parts of a product that proves defective because of improper material or workmanship, under normal use and maintenance.

How long does the coverage last?

The Warranty Period of Physical Goods purchased refers to the table below. A replacement Physical Good or part assumes the remaining warranty of the original Physical Good or 180 days from the date of replacement or repair, whichever is longer.

Swing Frame

1 YEAR

Swing Fabric

6 MONTHS

This Limited Warranty does not cover any problem that is caused by:

Conditions, malfunctions, or damage not resulting from defects in material or workmanship

To obtain warranty service, you can contact us. Contact us to determine the issue and the appropriate solution for you. Before this, you can take some photos of your product and send them to us, so that we can reply to you more quickly and accurately.

VI. Return/Replacement Policy

All of item come with a 30-day return/replace policy. During this time, we will cover the shipping cost of return and replacement for defective and damaged item, through provide pre-paid return label or pick up service for customer's convenience.

Please disassemble the item before you return it, unless there will be huge costs as oversized.

We are not responsible for the returns that customer bought by mistake or changed their mind and other non-quality issues. The customer is responsible for freight costs unless the item is defective. Items returned due to being refused by the customer or deemed undeliverable by freight carrier are subject to fees for freight both ways and a 15% restocking fee.