 


Otto Fish Tank Rack

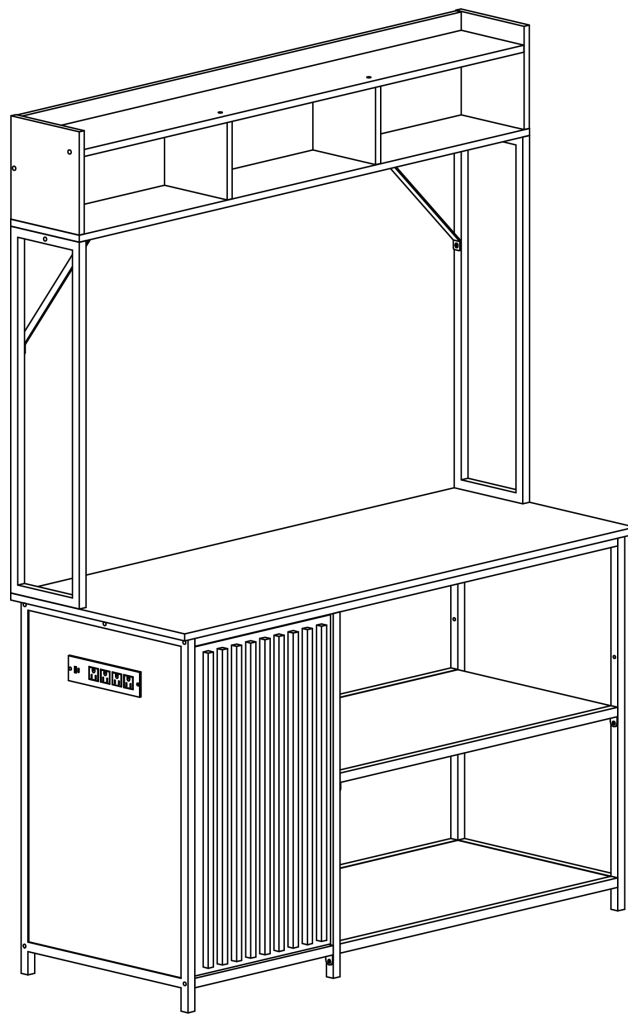

 


 
Estimated time for assembly:

100 mins



Weight limitations are as follows:

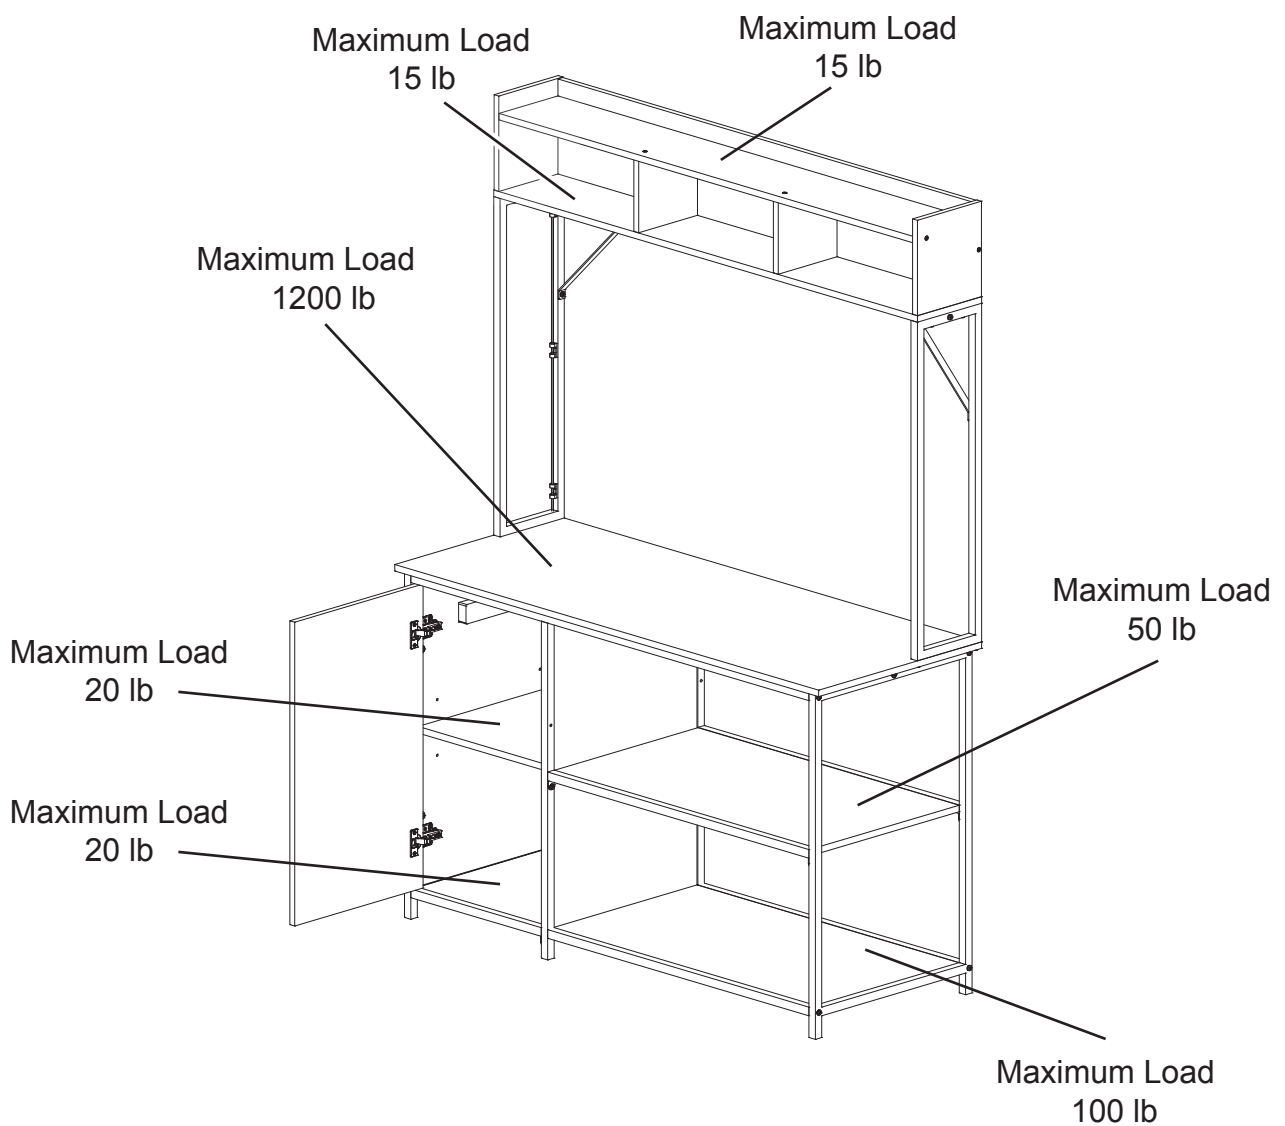


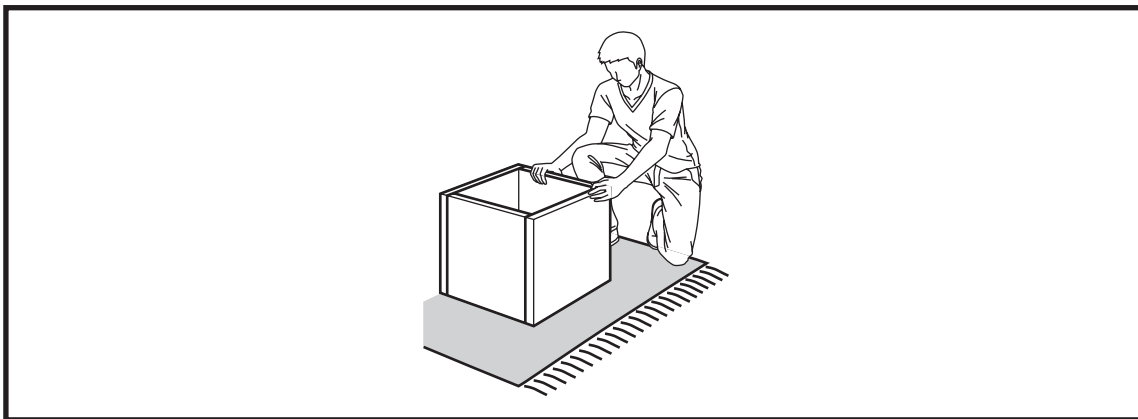

Assemble the furniture on an empty carton, carpet, or rug to prevent scratches or damage.

For safety, please keep pets and children away from the assembly area.

 Ensure the product is fully assembled before use. If you are missing any hardware or products, do not use it until you have restored the missing parts.

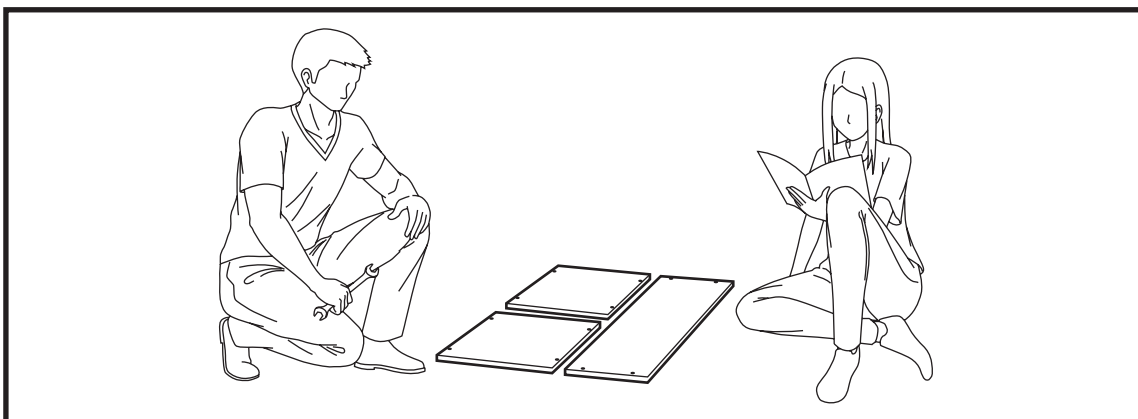

This furniture requires 2 people for assembly.

Read this instruction manual prior to assembly to familiarize yourself with the various steps.

Lay out all components and hardware separately on a flat surface and make sure that no parts are missing or damaged before assembly. Do not destroy or discard any packaging until you are certain that you have all the necessary parts for assembly.

 
Hand tight all hardware and careful not to over tighten to avoid damaging the product.

CAUTION

There are small components used in the construction of this product. Loose items should be kept away from pets and children to avoid a choking hazard.

Keep all plastic bags and packaging film away from pets and children to avoid suffocation.

PACKAGE CONTENTS

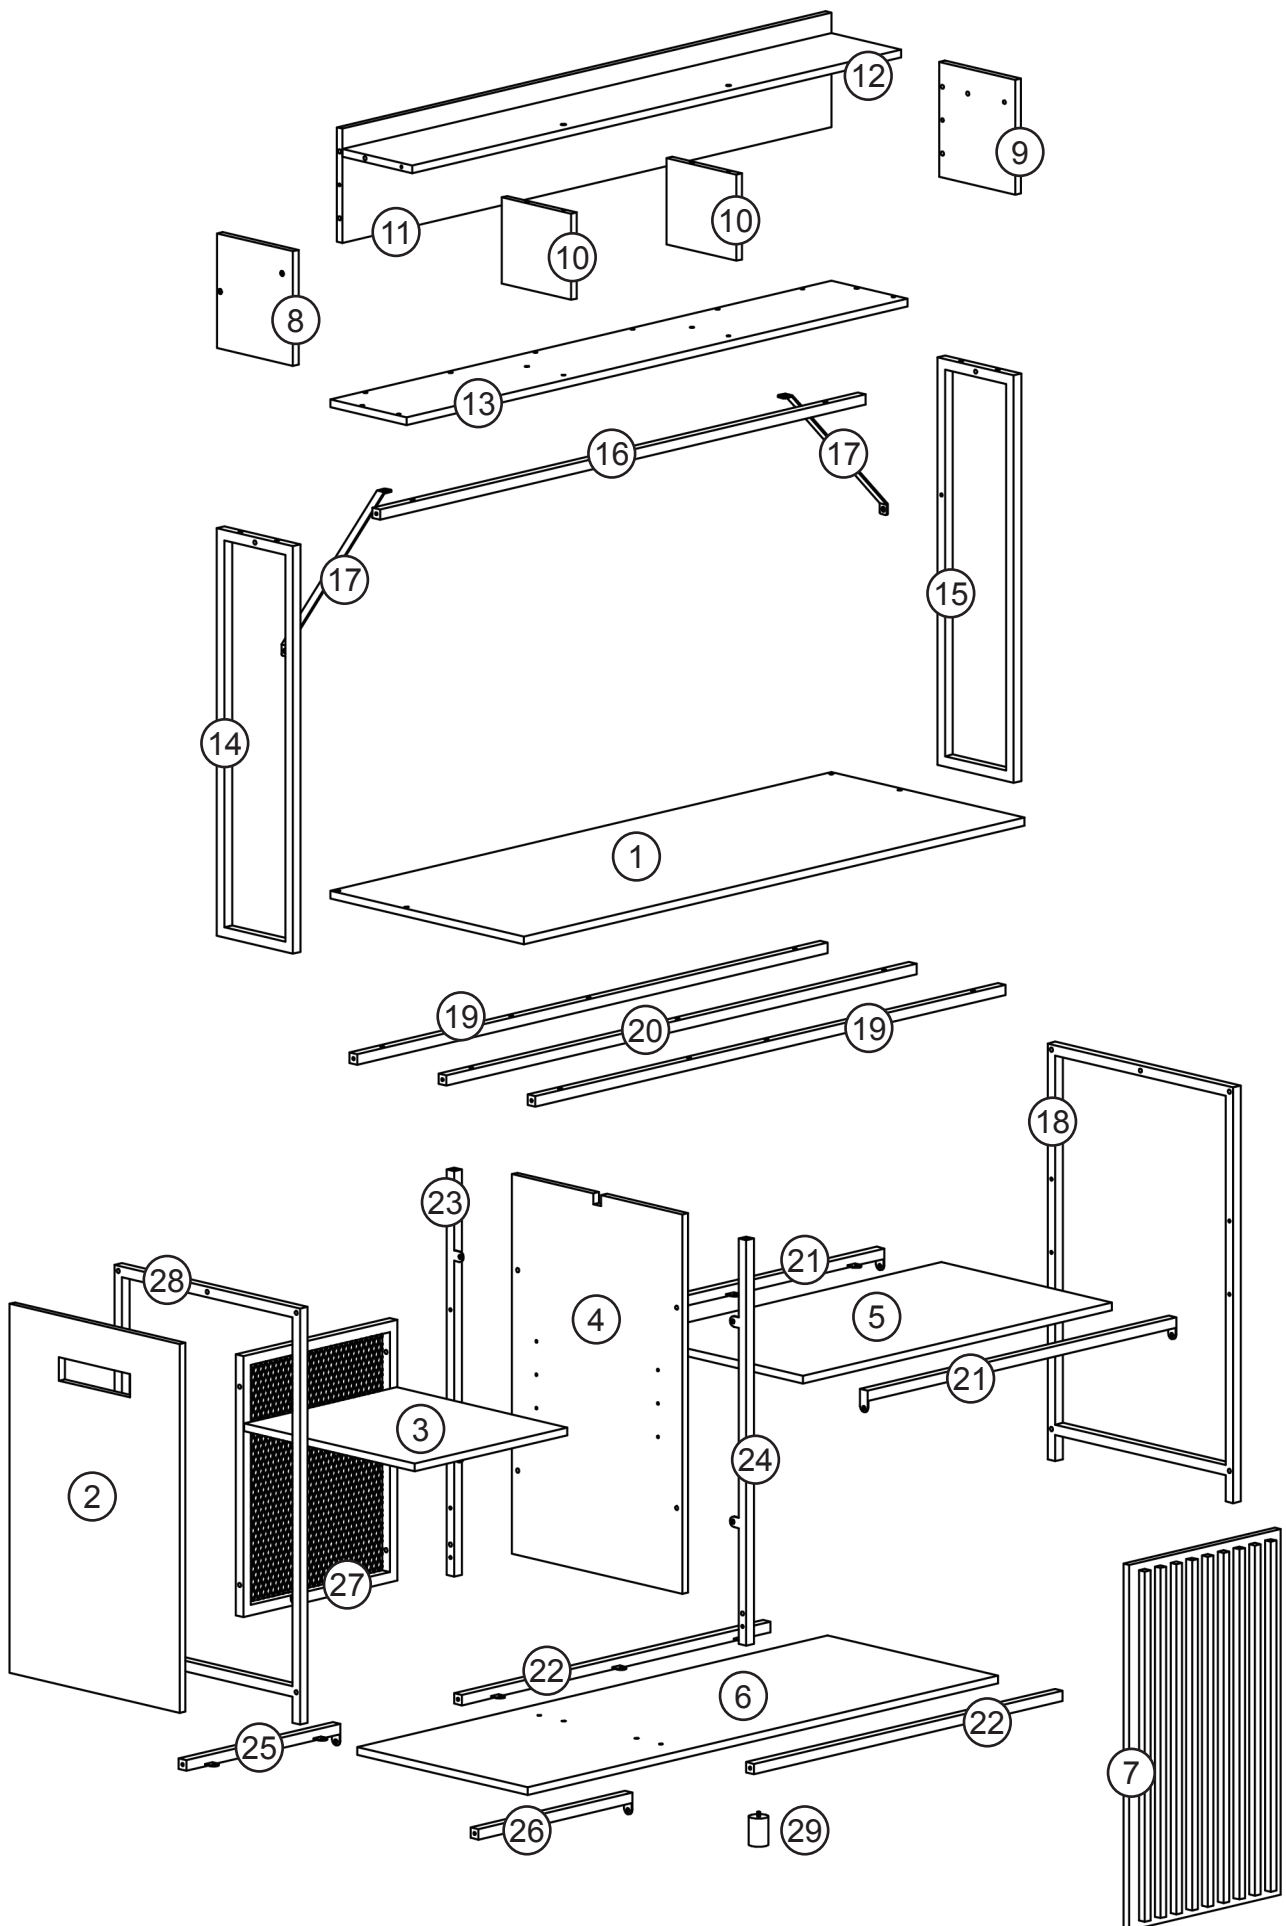


PACKAGE CONTENTS

CODE	DESCRIPTION	QTY
1	Shelf Top Panel	1
2	Shelf Left Panel	1
3	Shelf Adjustable Storage Panel	1
4	Shelf Medial Panel	1
5	Shelf Panel	1
6	Shelf Bottom Panel	1
7	Cabinet Door	1
8	Hutch Left Panel	1
9	Hutch Right Panel	1
10	Hutch Medial Panel	2
11	Hutch Back Panel	1
12	Hutch Top Panel	1
13	Hutch Bottom Panel	1
14	Hutch Left Support Frame	1
15	Hutch Right Support Frame	1
16	Hutch Crossbar	1

PACKAGE CONTENTS

CODE	DESCRIPTION	QTY
17	Hutch Corner Brace Frame	2
18	Shelf Right Frame	1
19	Shelf Crossbar	2
20	Shelf Crossbar	1
21	Shelf Frame	2
22	Shelf Frame	2
23	Shelf Frame	1
24	Shelf Frame	1
25	Shelf Frame	1
26	Shelf Frame	1
27	Shelf Back Panel	1
28	Shelf Left Frame	1
29	Support Leg	1

 PACKAGE CONTENTS



19x + 1x



 
38x + 3x



34x + 3x



18x + 1x



4x



 
12x + 1x



2x




1x

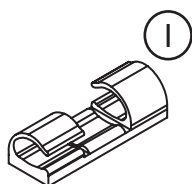

4x



 
4x

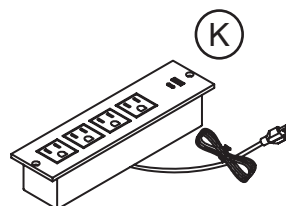


1x



 2x



2x

 


2x



2x



 2x

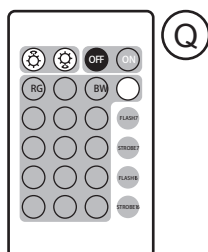

1x

 


2x






Install all hardware perpendicular to the opening.

Required tools for assembly (Not included)

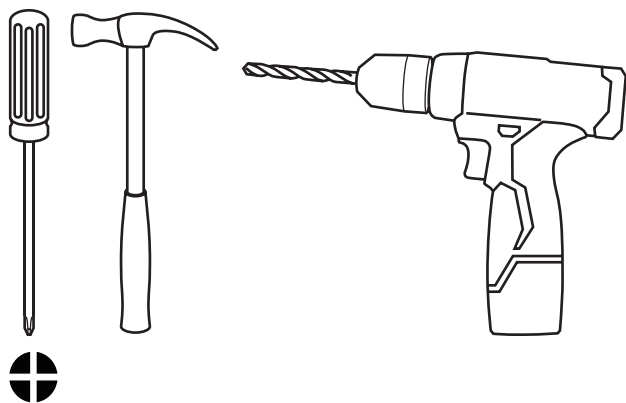


1

   Attach frame (23, 24) to the shelf medial panel (4).

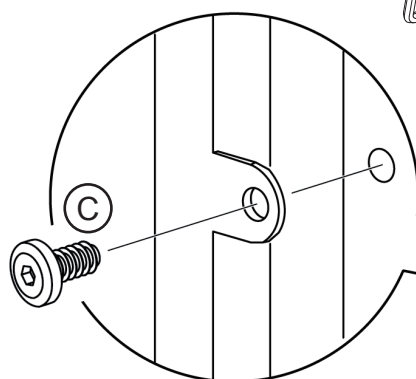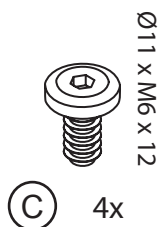
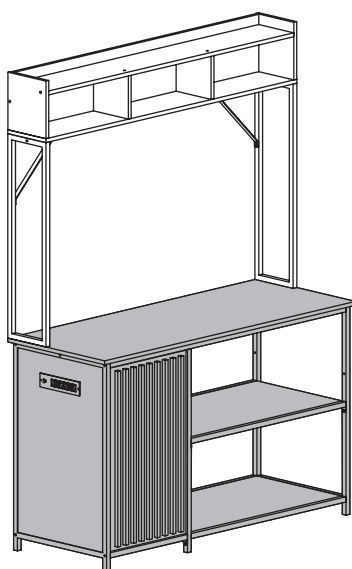


 Note: Tighten the bolts to 80% in this step

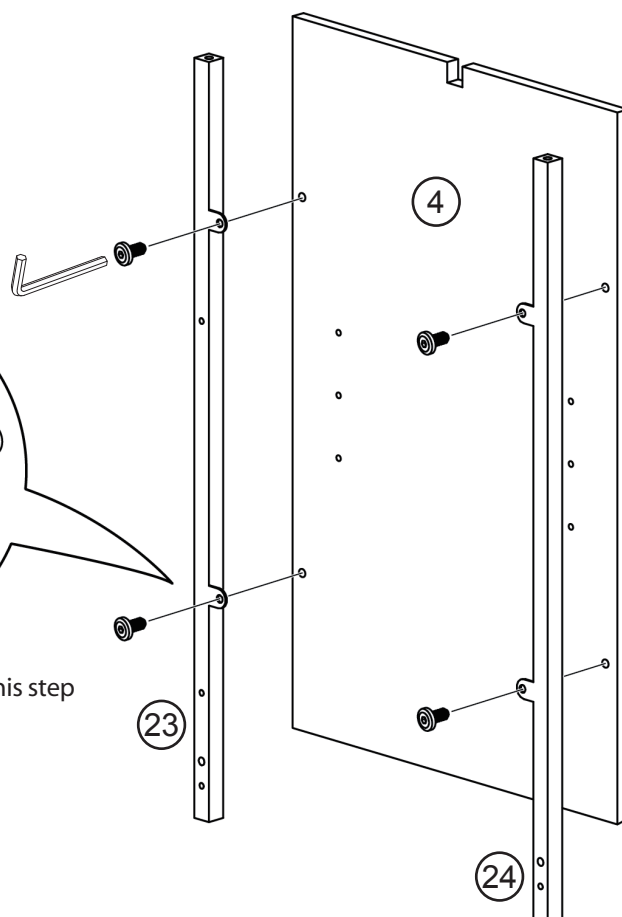



2

  Insert wood dowels to the shelf medial panel (4).

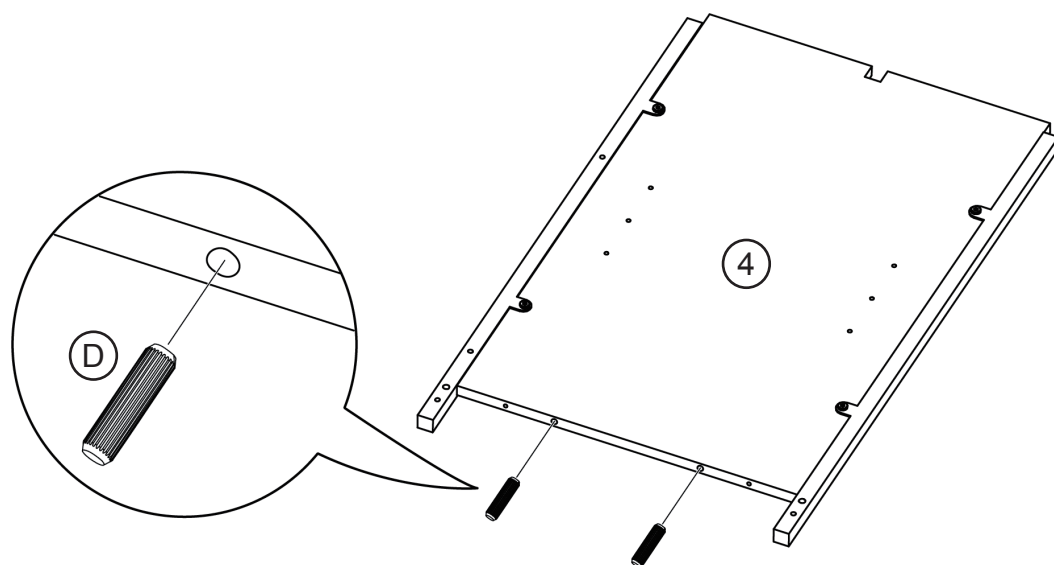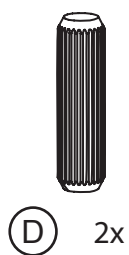



3

  Assemble the shelf medial panel (4) to the shelf bottom panel (6).

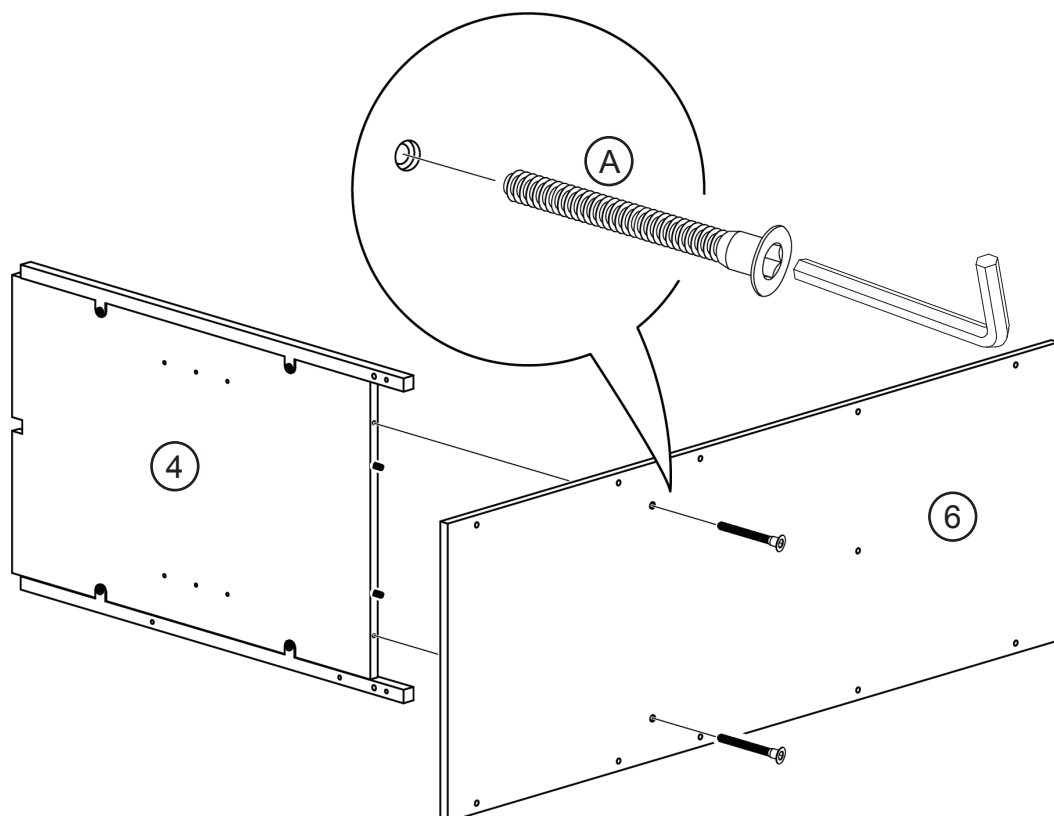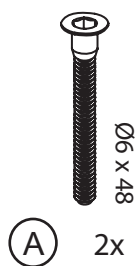


4

  Assemble frames (22) to the shelf bottom panel (6).

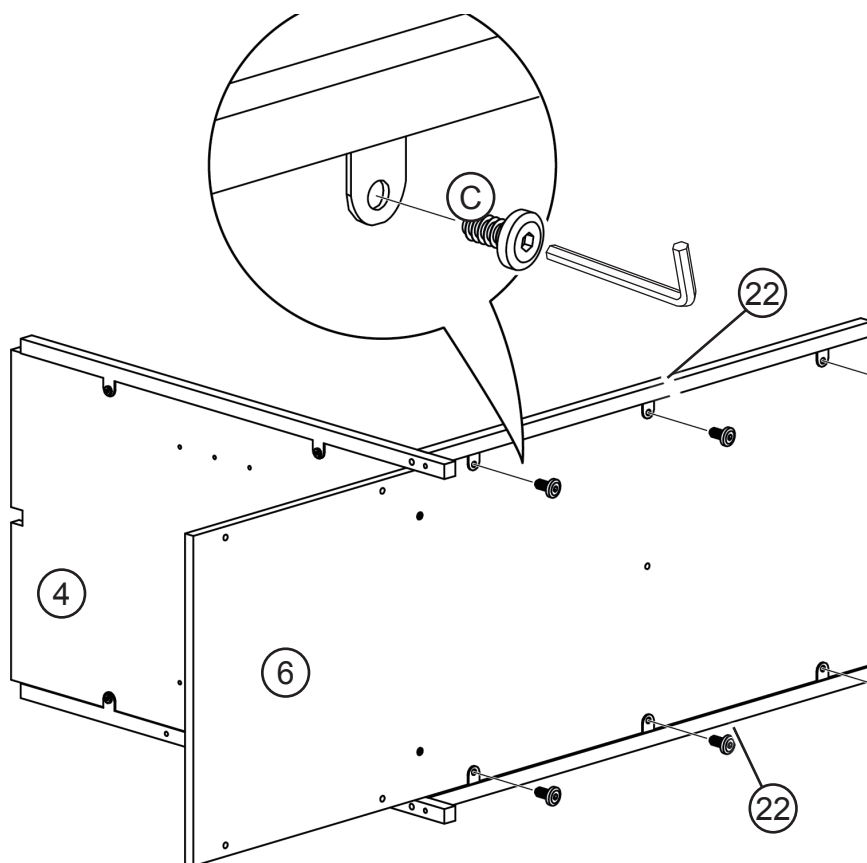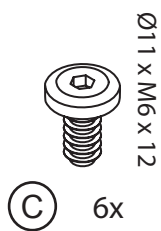



5

 Connect the frames (22) to (23, 24).

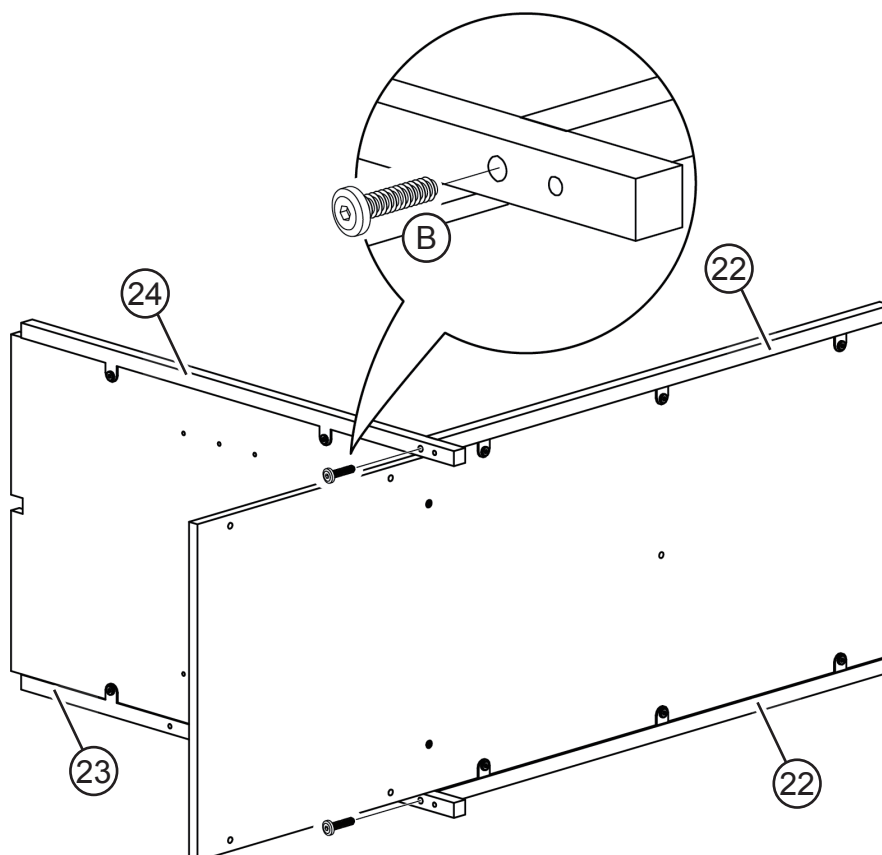


6

  Assemble frames (25, 26) to the shelf bottom panel (6) and shelf frames (23,24)

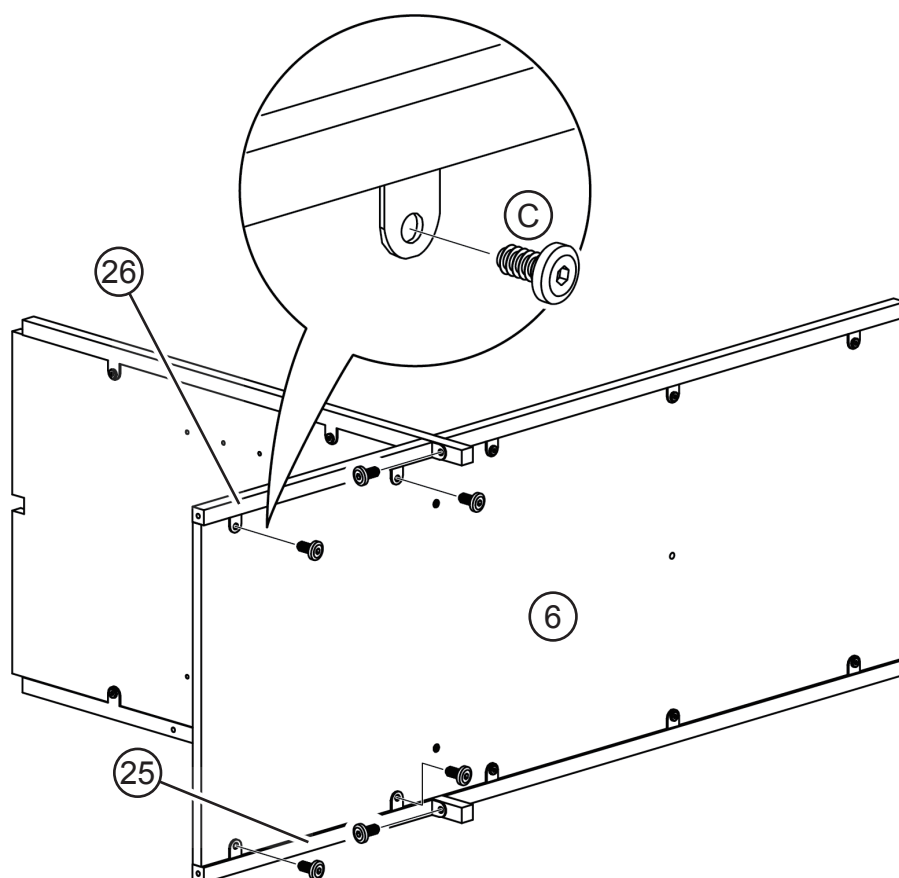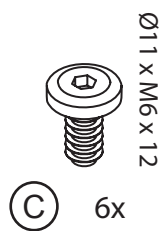



7

 Fully tighten all the bolts on the frame (23,24).

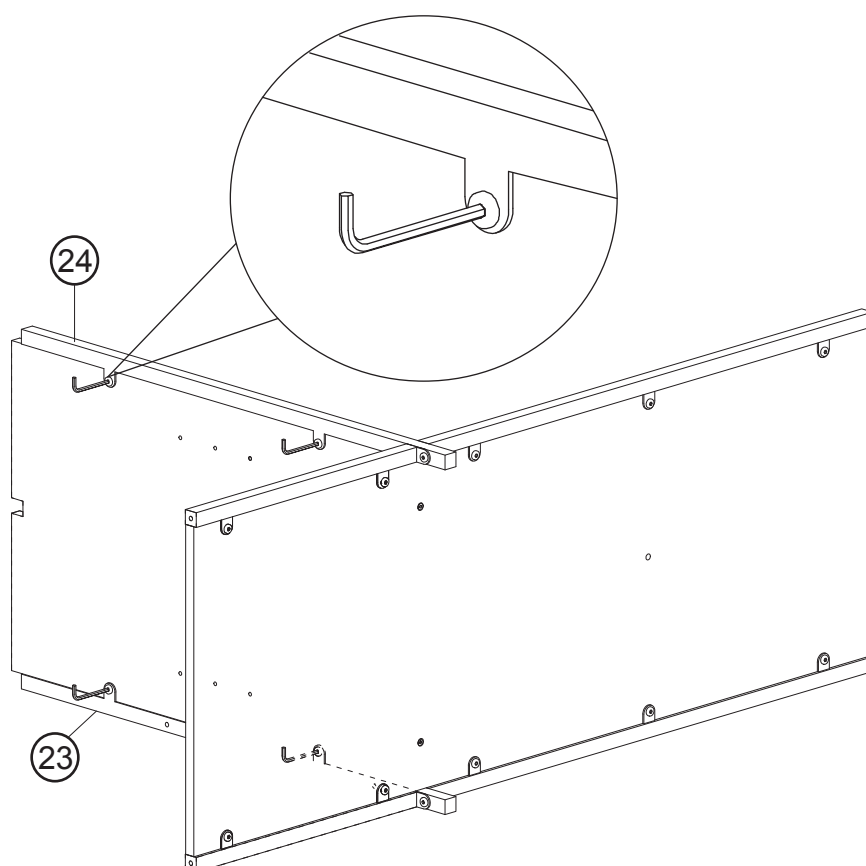



8

  Attach frames (21) to the shelf panel (5).

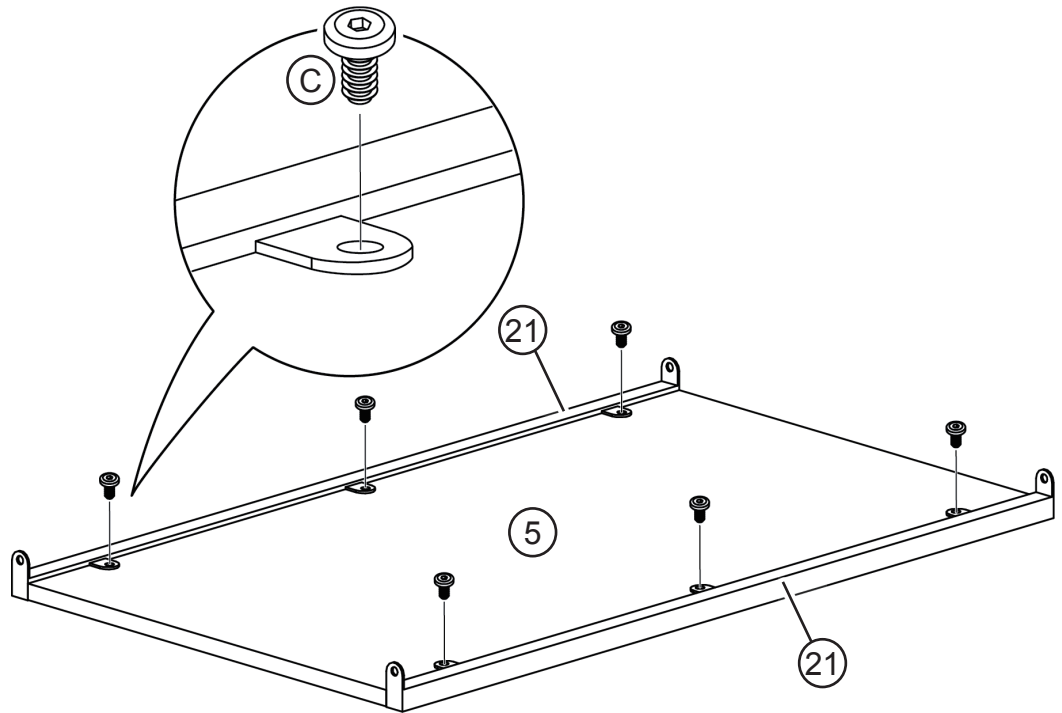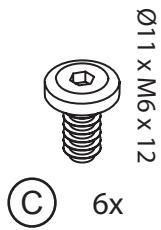



9

  Assemble the shelf frames(21) to the side of the shelf medial panel(4).

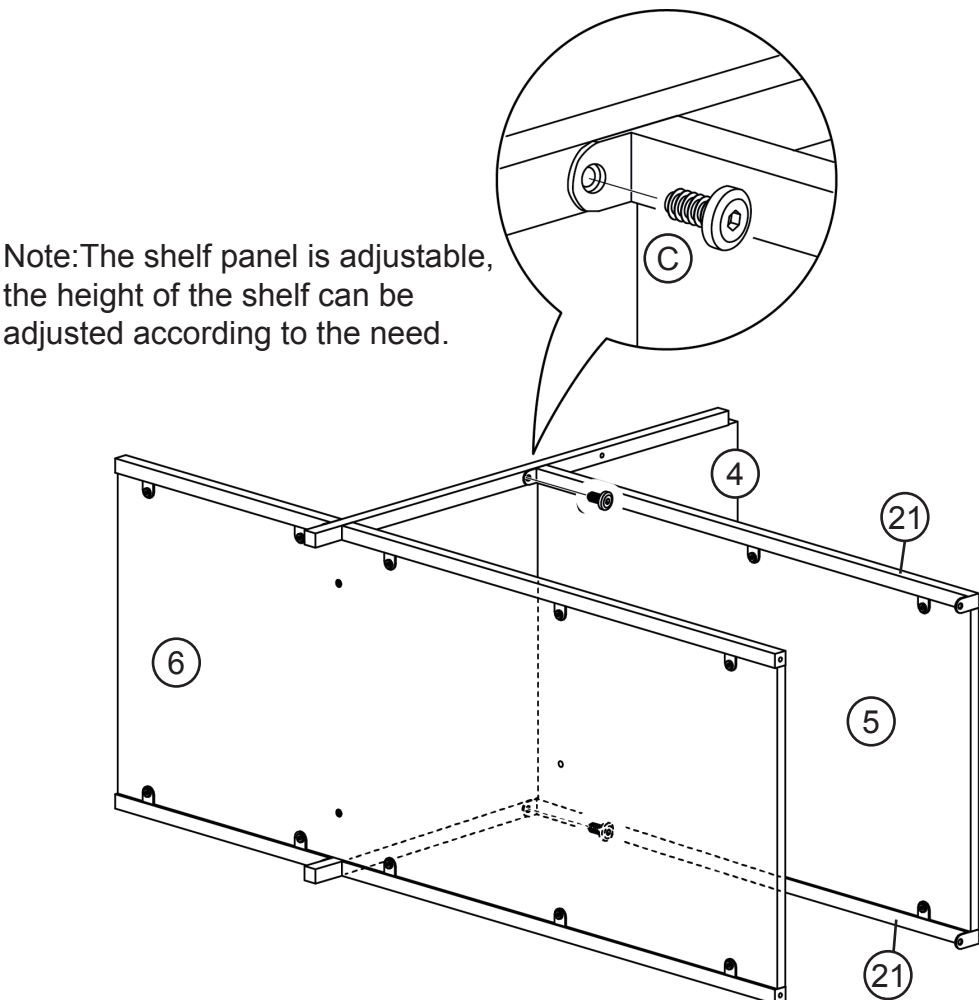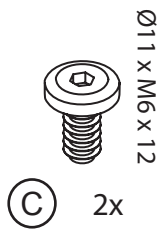



10

  Assemble the shelf right frame (18) to the other side of the shelf panel (5).

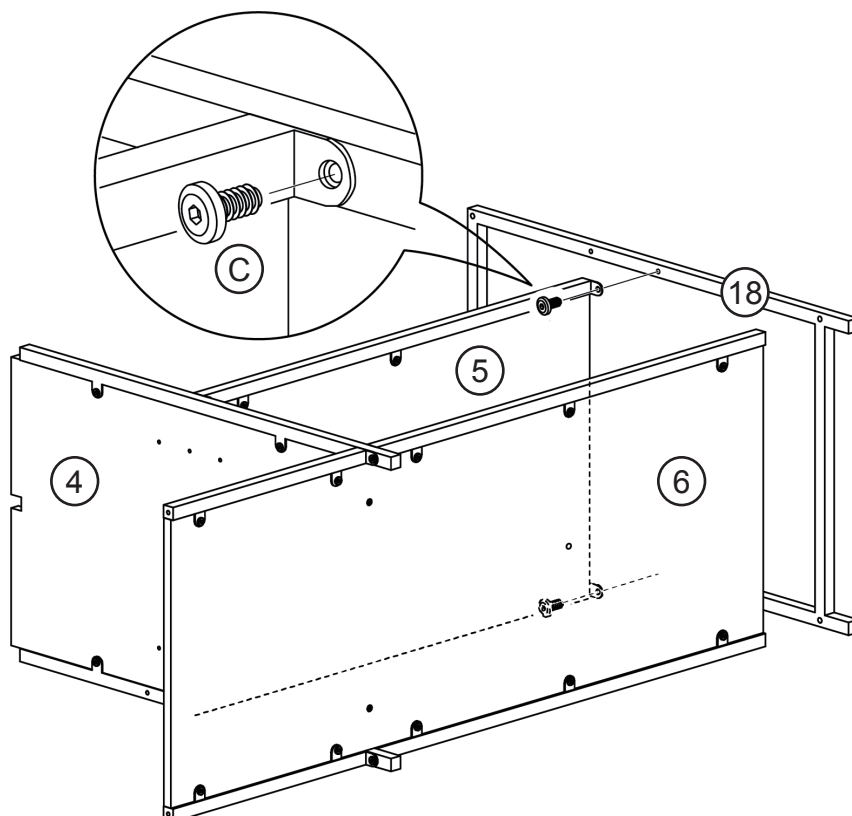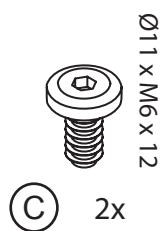


11

  Secure the shelf right frame (18) to the shelf bottom frames.

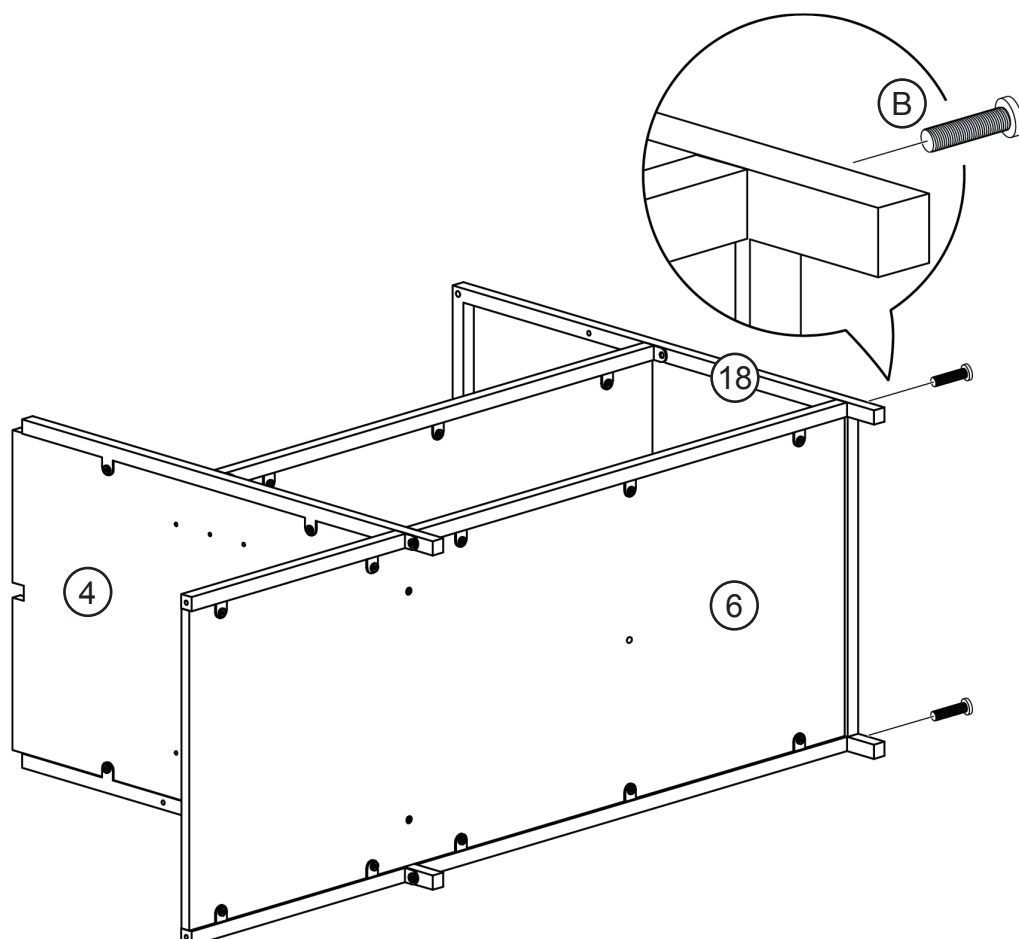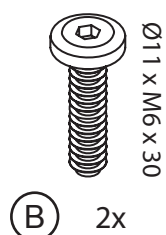



12

 Attach support leg (29) to the shelf bottom panel (6).

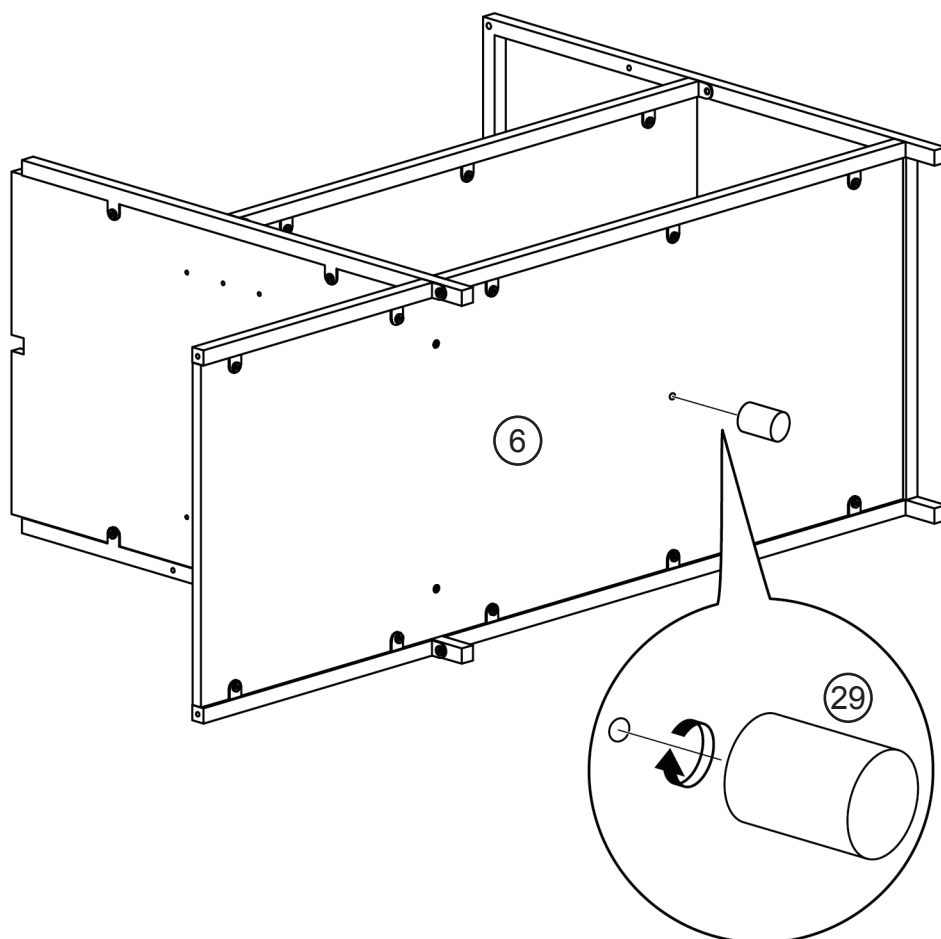



13

  Assemble the shelf back panel (27) to the side of the shelf medial panel (4).

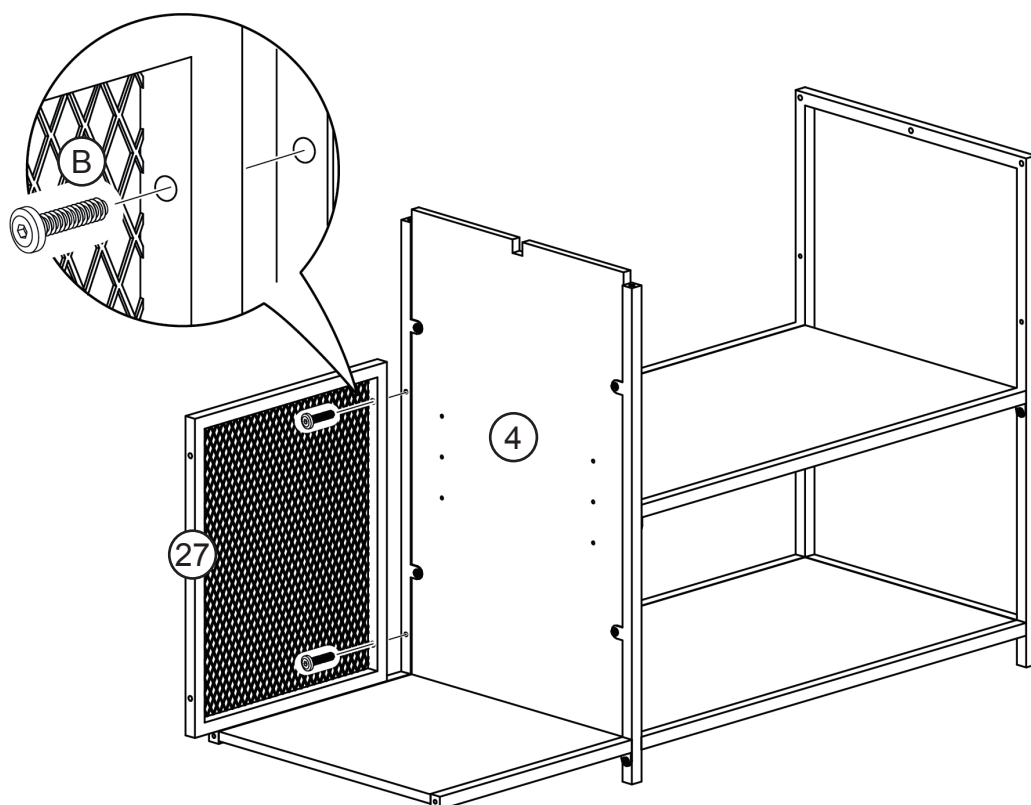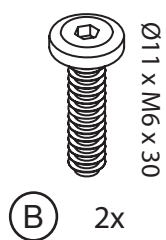



14

  Assemble shelf crossbars (19, 20) on top of the shelf assembly.

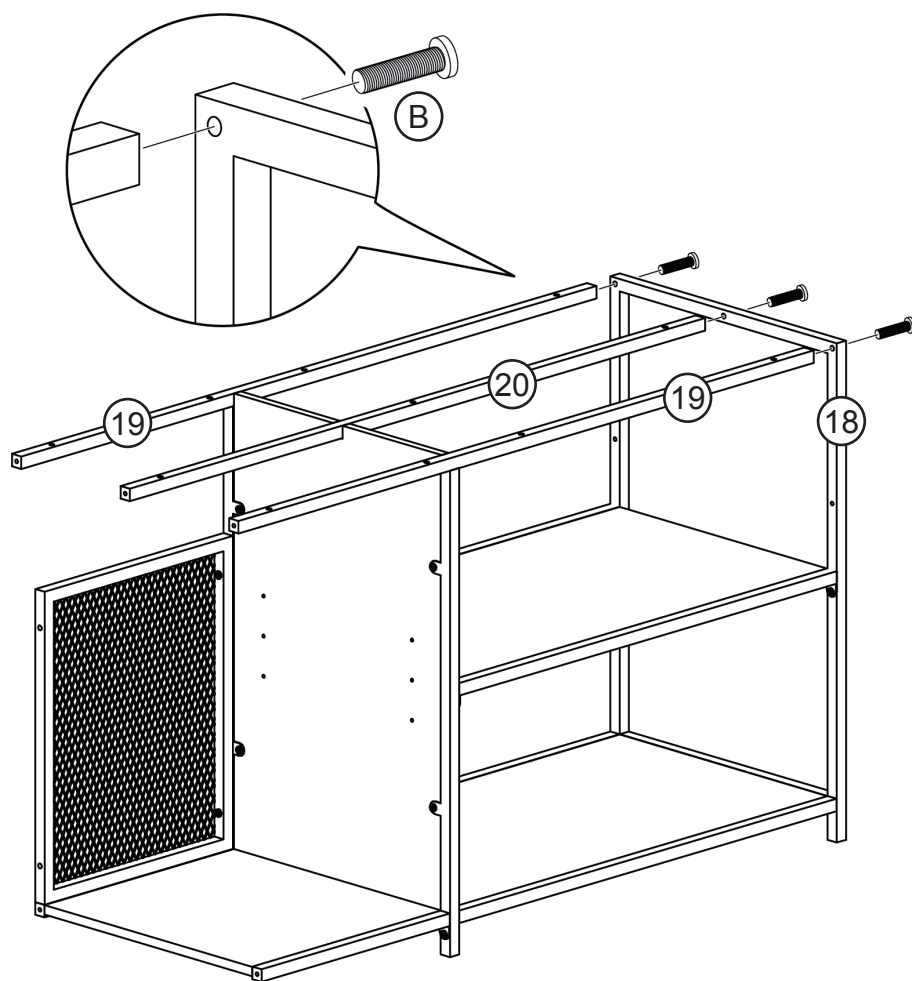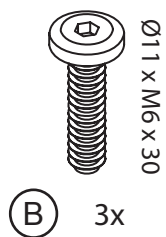


15

  
Secure the shelf crossbars in place.

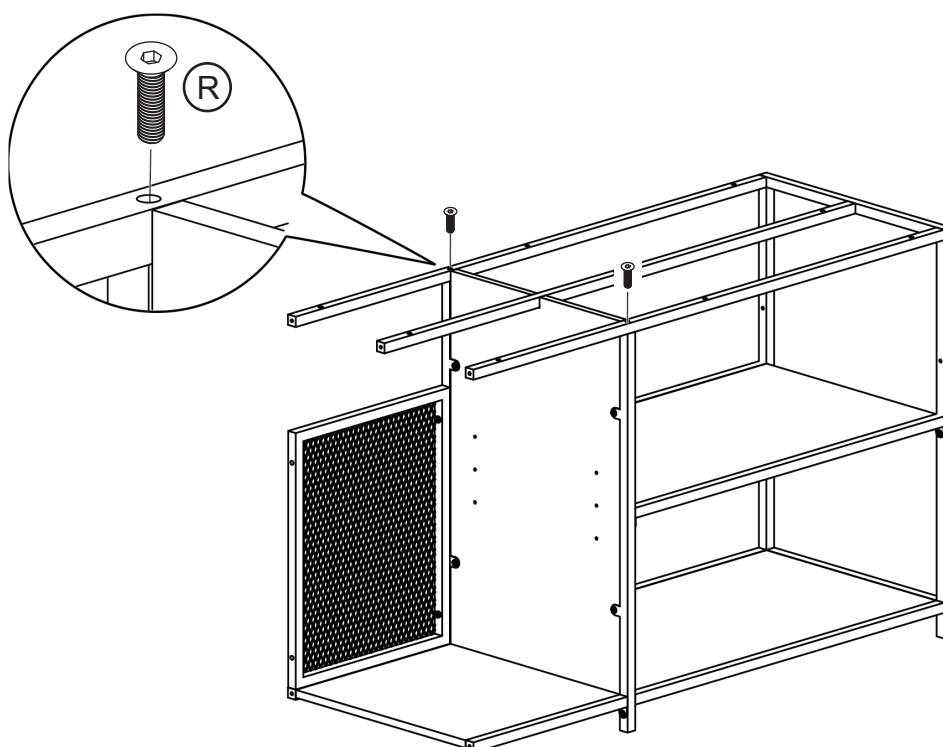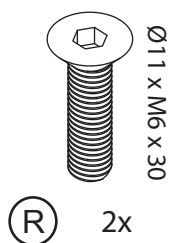


16

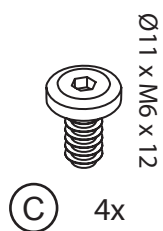 

 
Assemble the shelf left frame (28) to the shelf left panel (2).

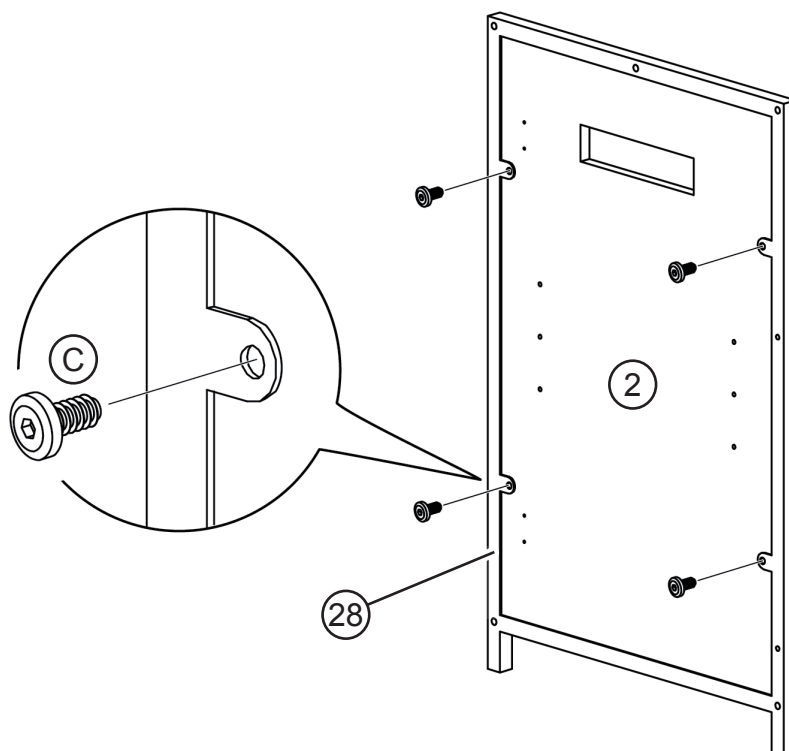



17

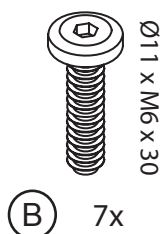 

 
Assemble the shelf left frame (28) to the left of the shelf assembly.

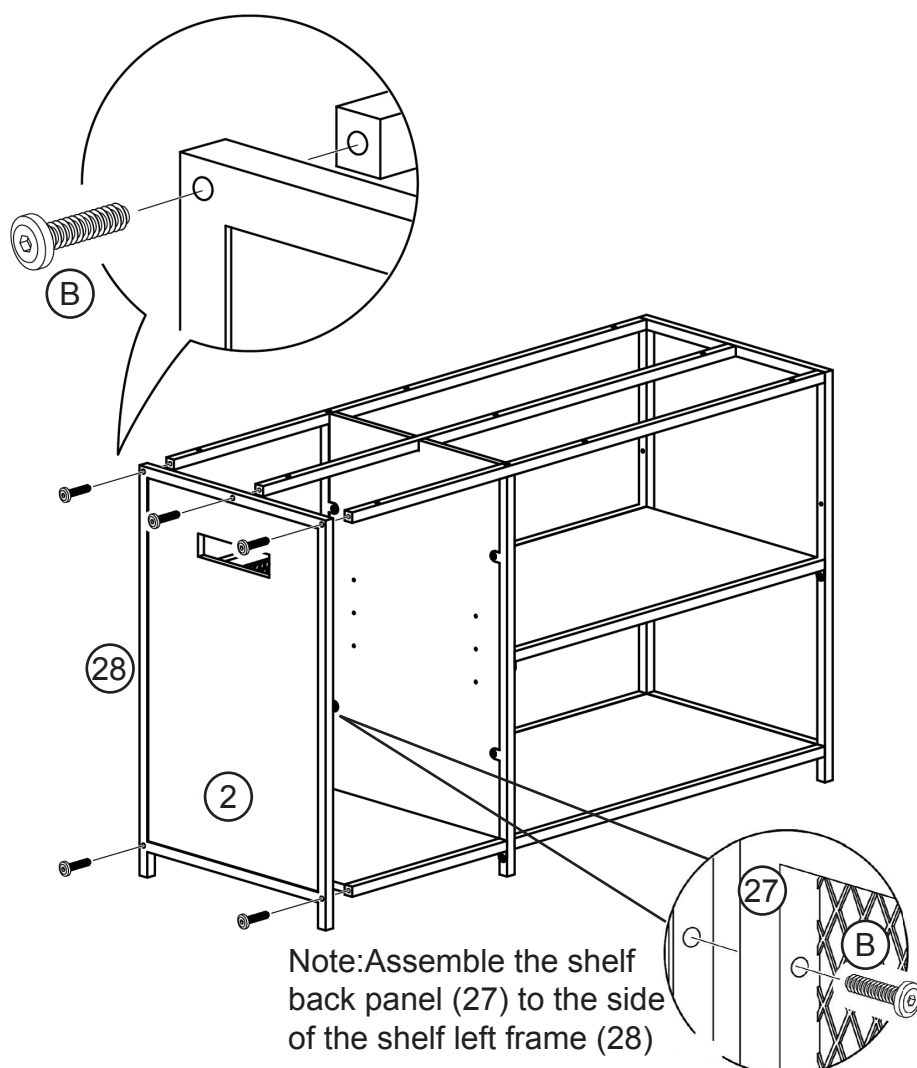

  Assemble the shelf top panel (1) on top of the shelf assembly.

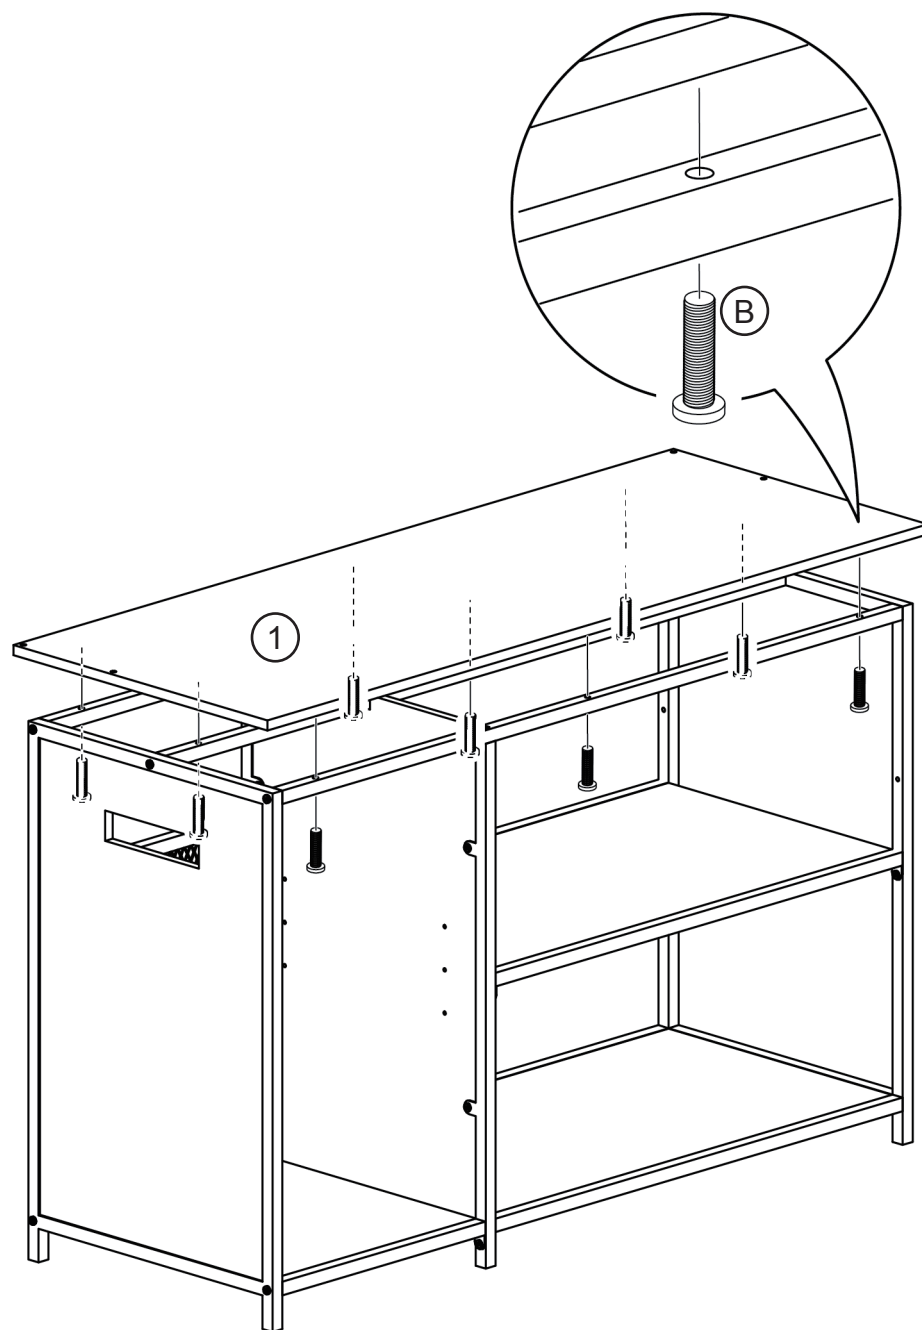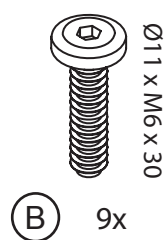


 
Insert and secure the power hub to the shelf left panel (2).

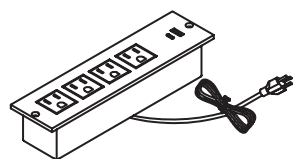

(K) 1x





  (L) 2x

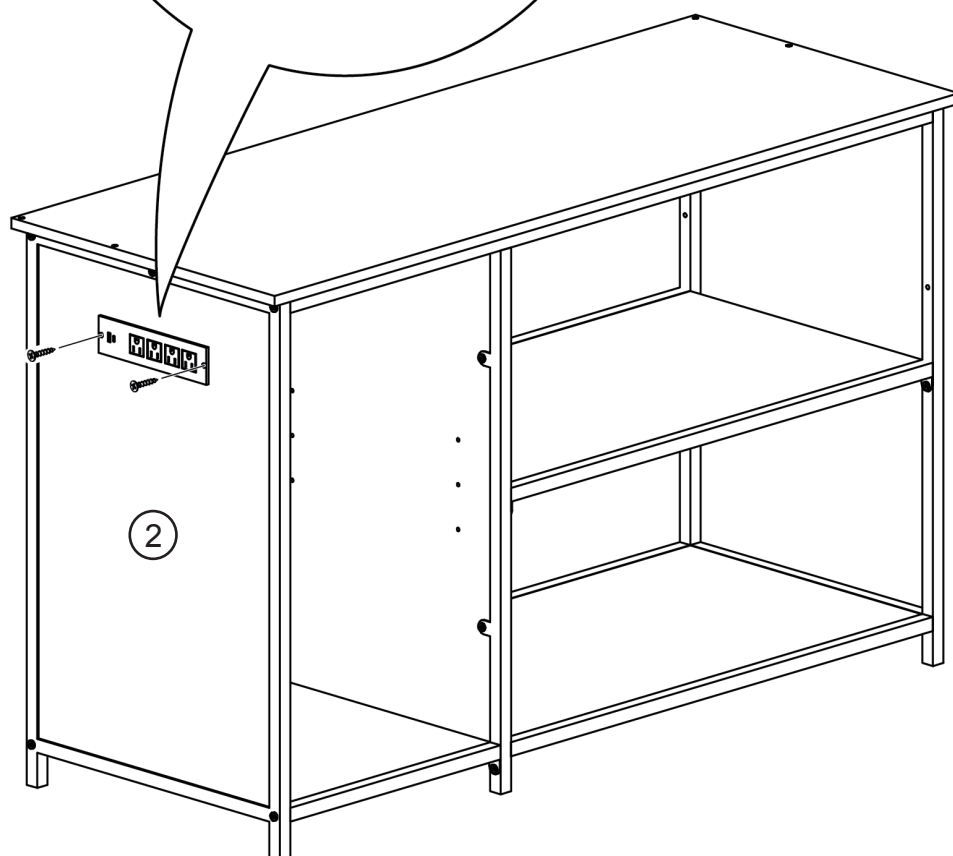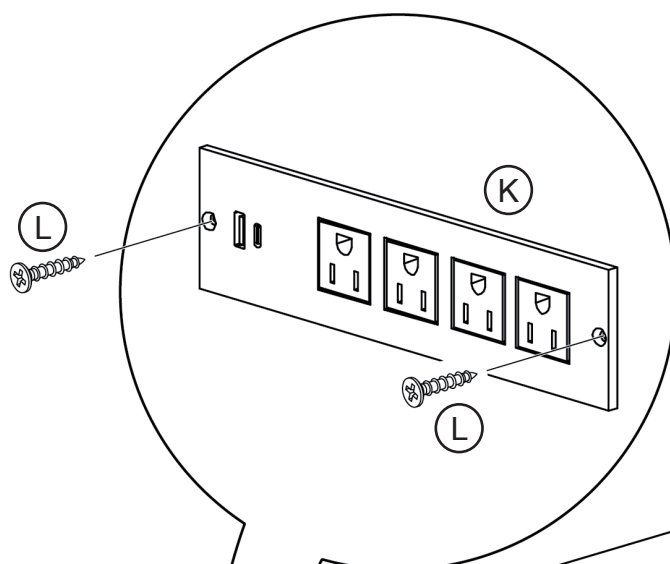


20

  Insert wood dowels to the hutch metal panels (10).

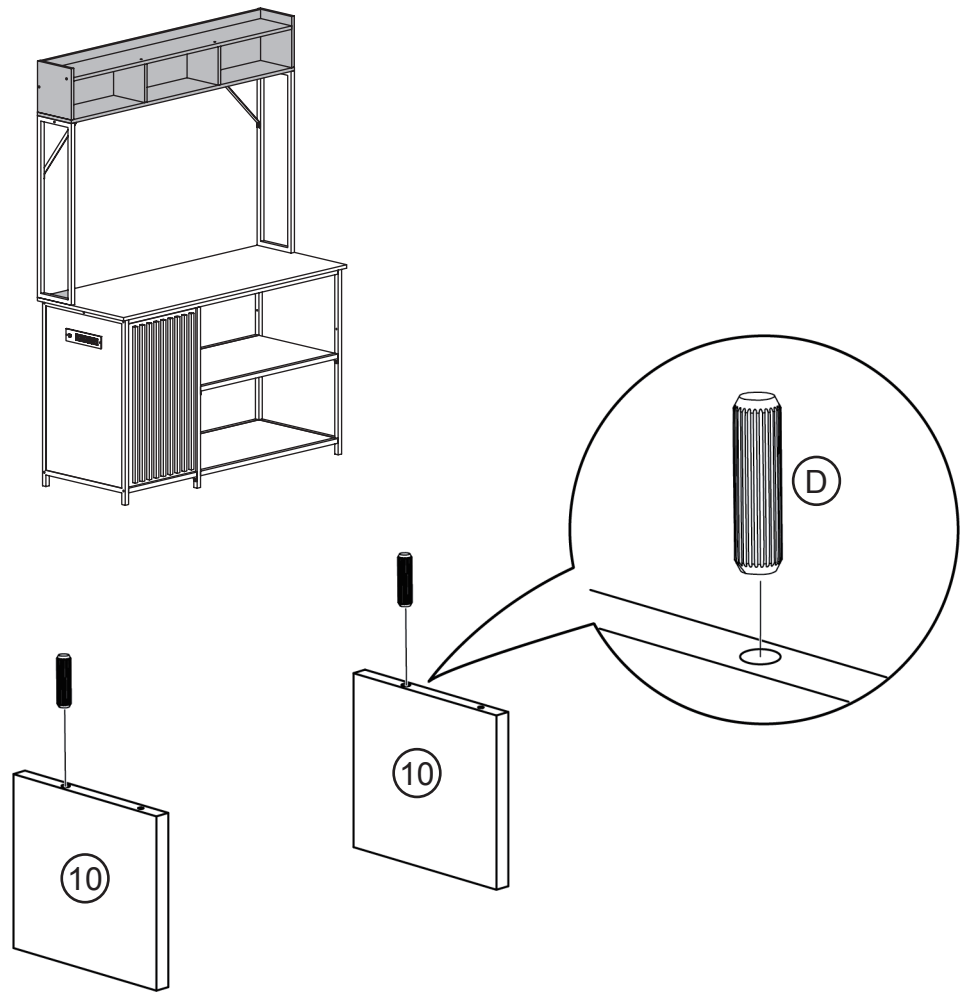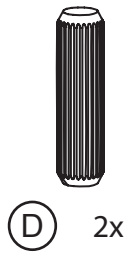


21

 Assemble the hutch top panel (12) on top of the hutch medial panels (10).

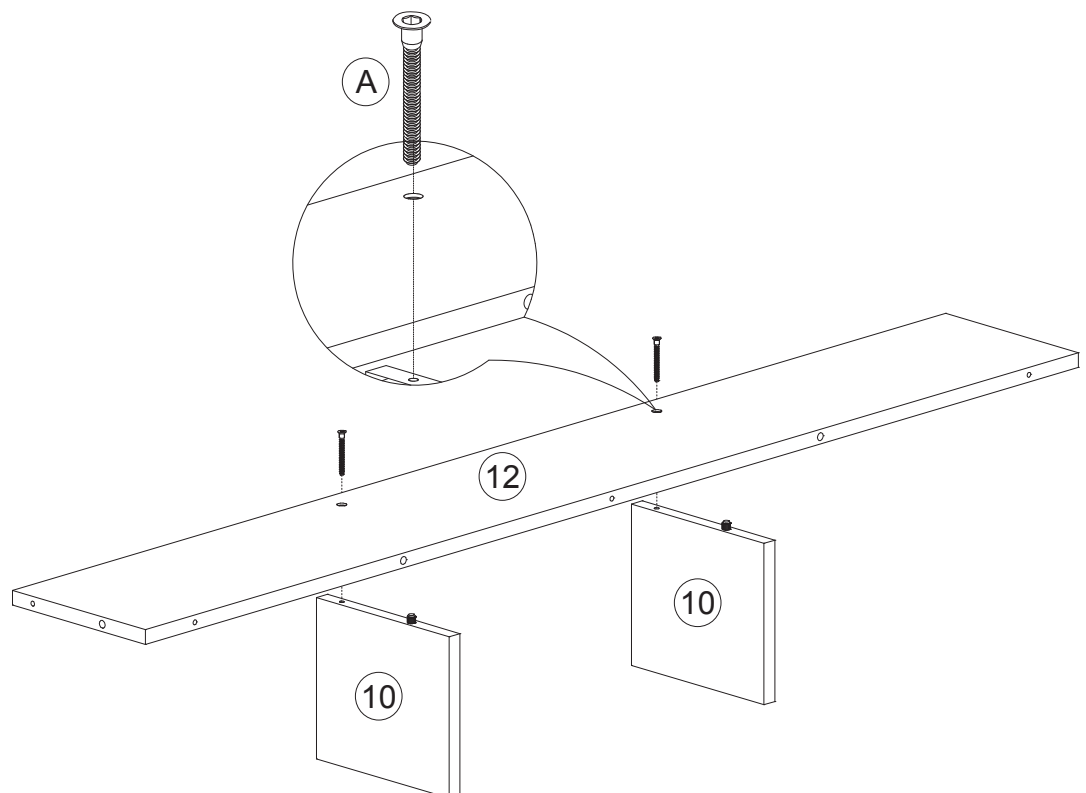


22

 Insert wood dowels to the hutch top panel (12).

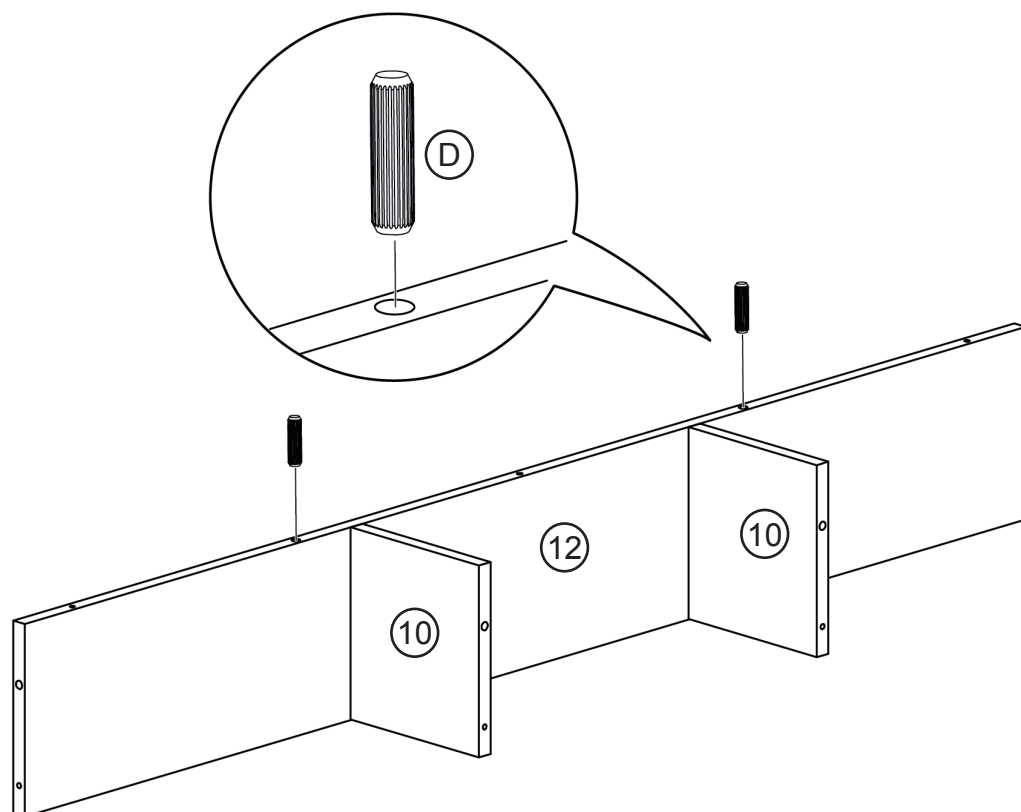



23

 Assemble the hutch back panel (11) to the hutch assembly.

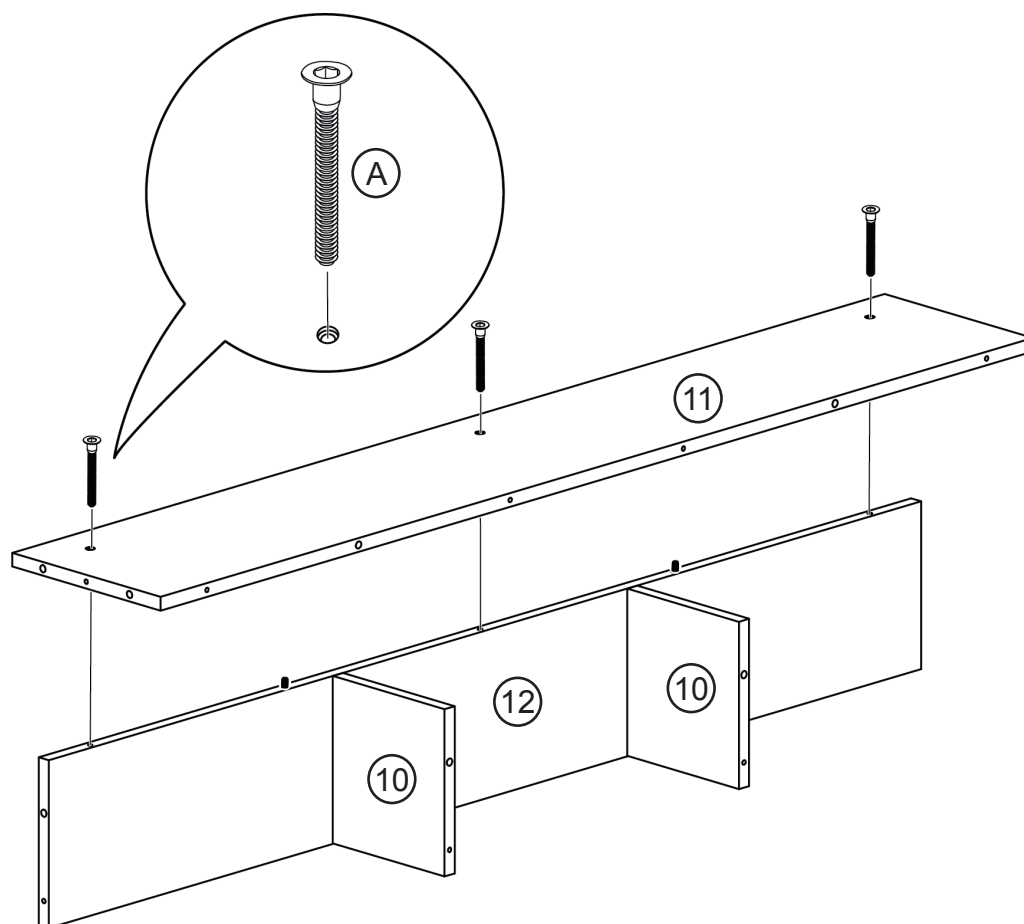



24

  Insert wood dowels to the hutch assembly.

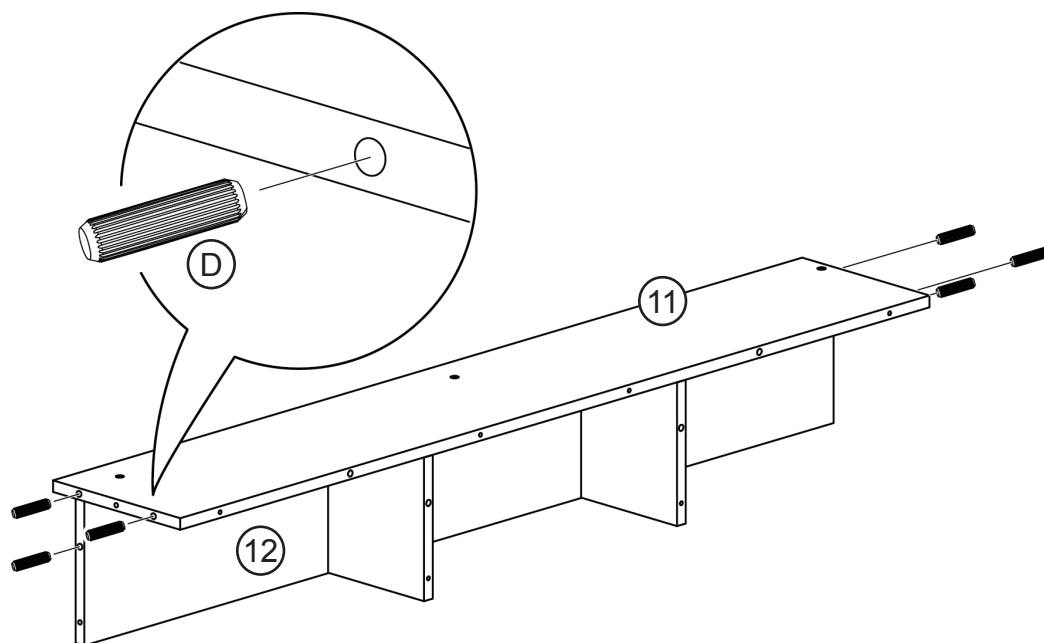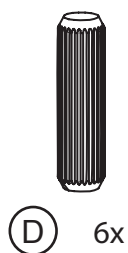



25

  Assemble the hutch side panels (8, 9) to the hutch assembly.

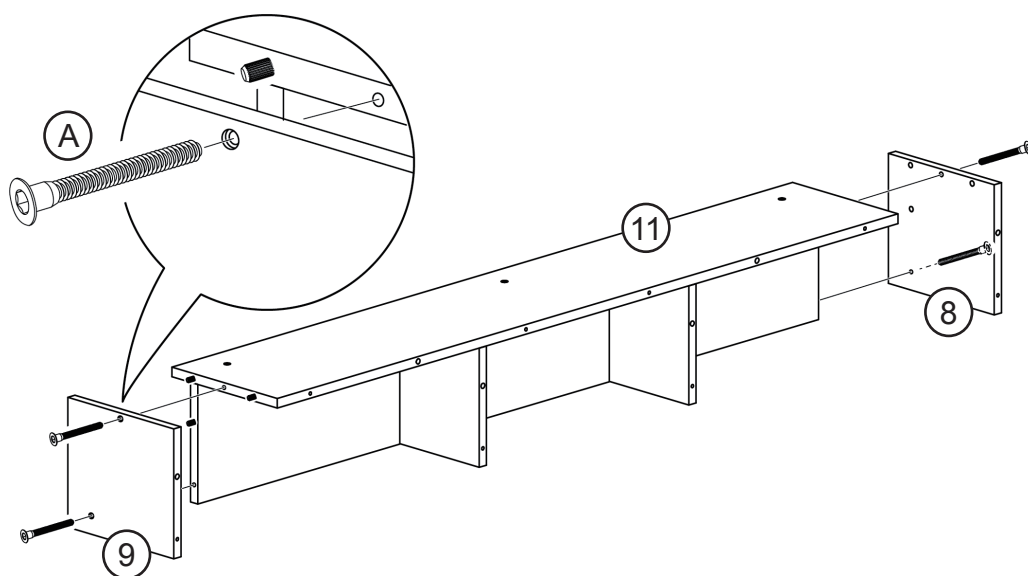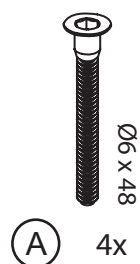


26

  Insert wood dowels to the hutch assembly.

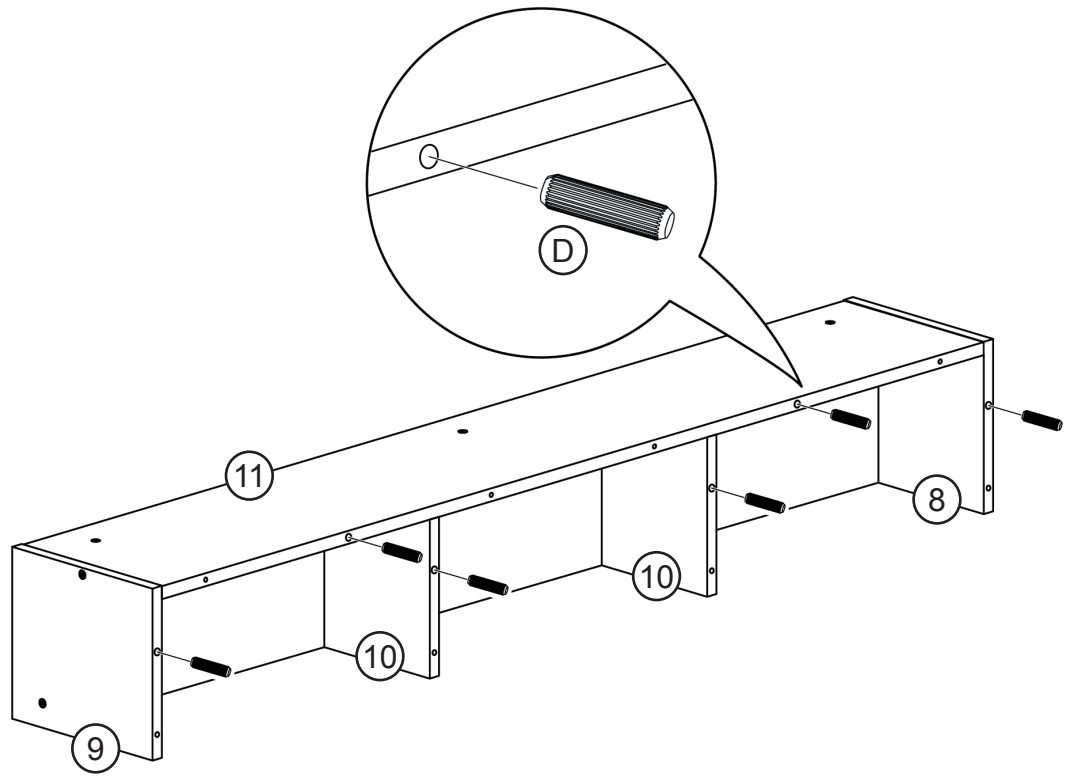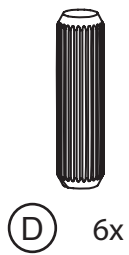



27

 Assemble the hutch bottom panel (13) to the hutch assembly.

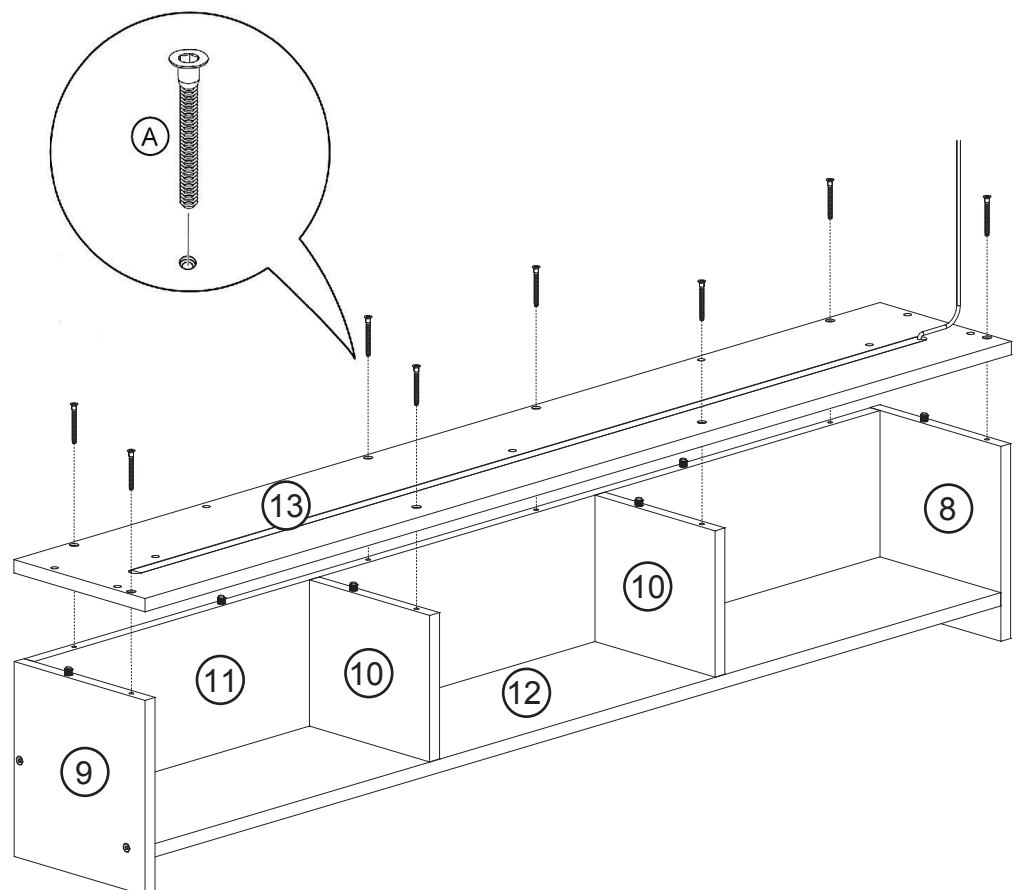

28

 
 
Attach hutch corner brace frame (17) to the support frames (14, 15).

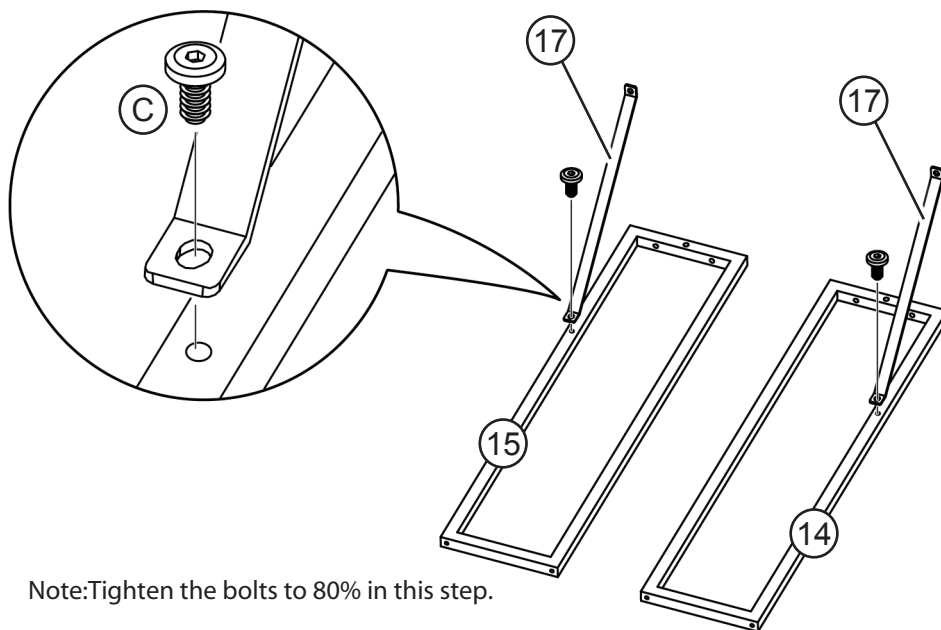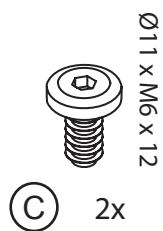

Note: Tighten the bolts to 80% in this step.

29

 
 
Assemble the hutch crossbar (16) between the hutch support frames (14, 15).

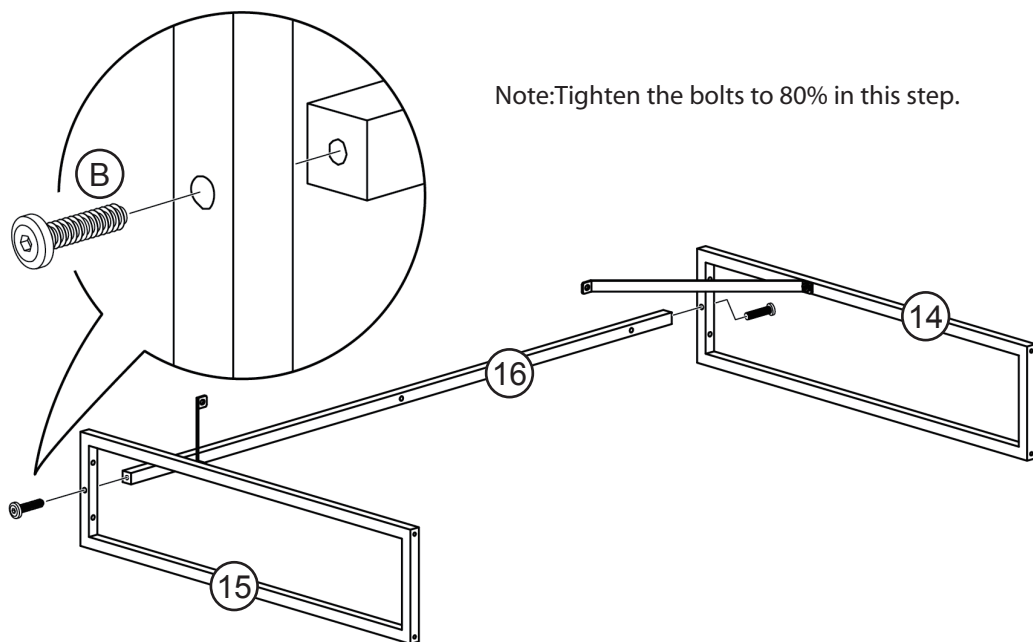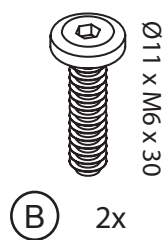

Note: Tighten the bolts to 80% in this step.



30

  Attach the hutch support frame to the hutch shelf.

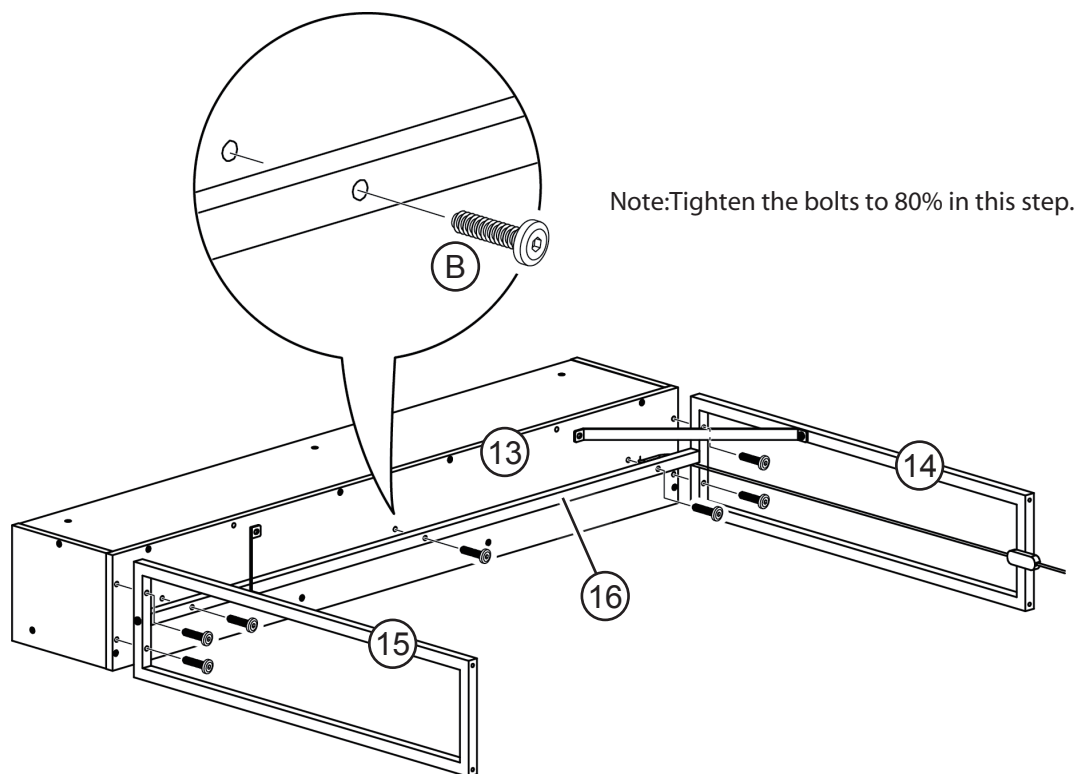
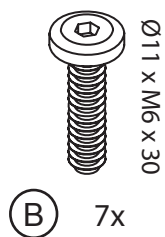


31

  Further secure the corner brace frame to the hutch shelf.

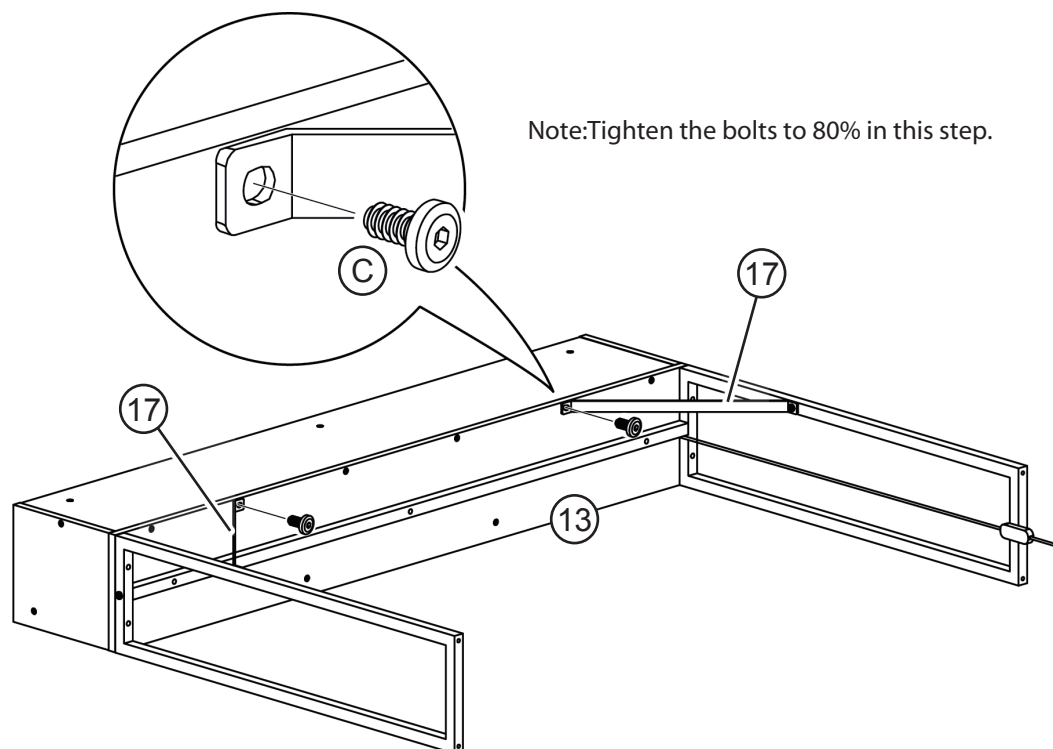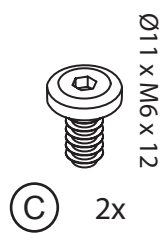


 
 
Assemble the whole hutch on top of the shelf assembly.

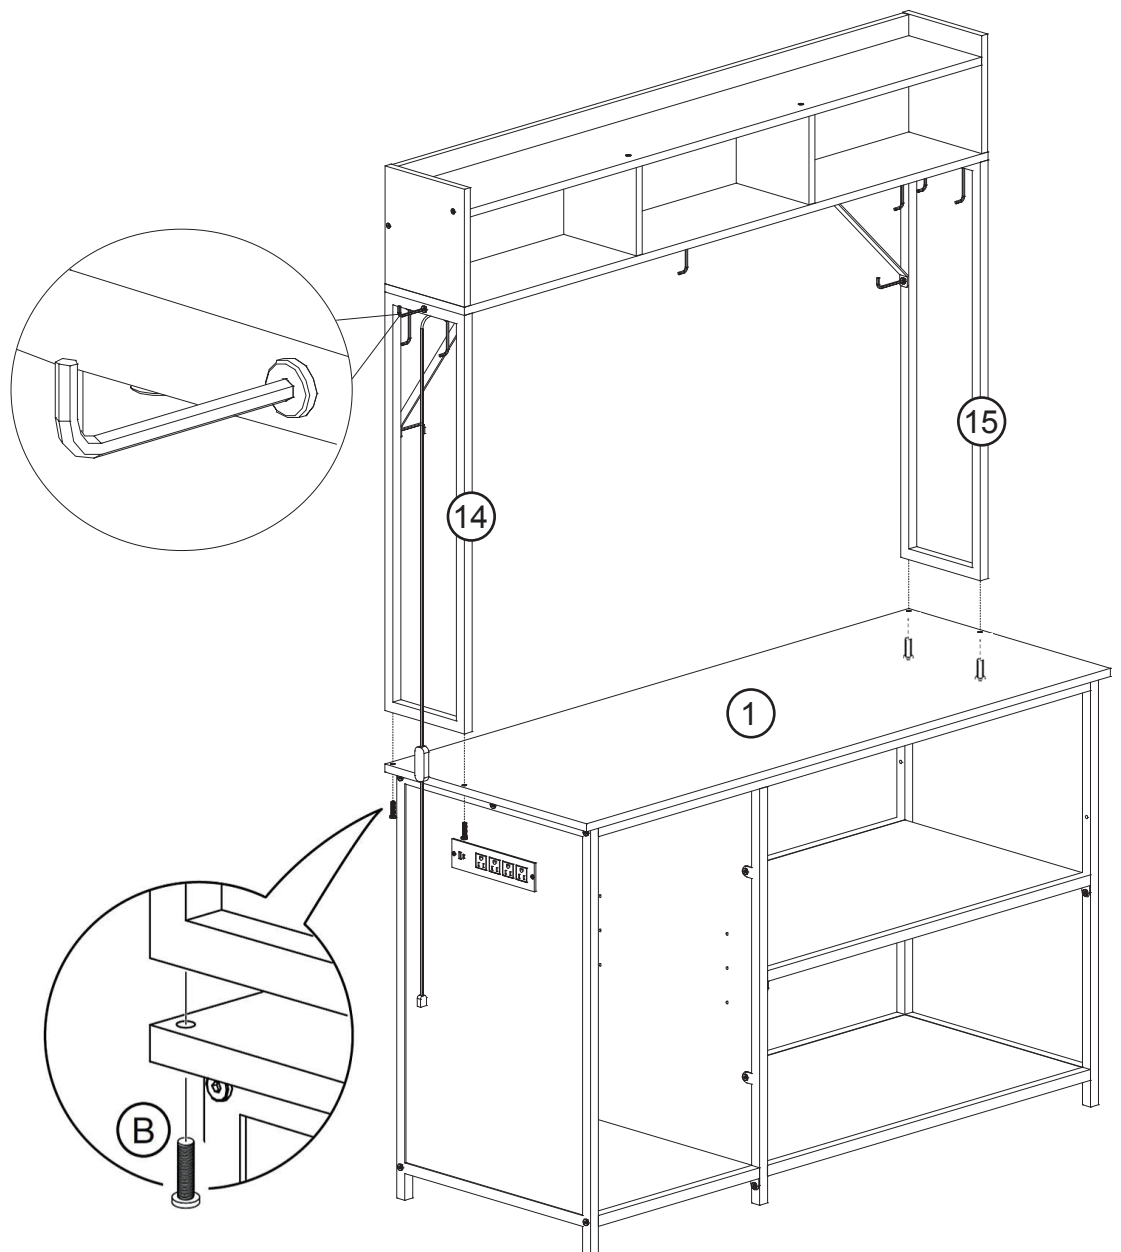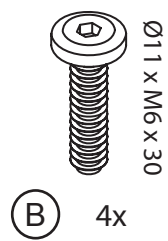

Note: Fully tighten all the bolts on the frame.




33

   Insert shelf pegs into the shelf and put the shelf panel (3) on top of the pegs.

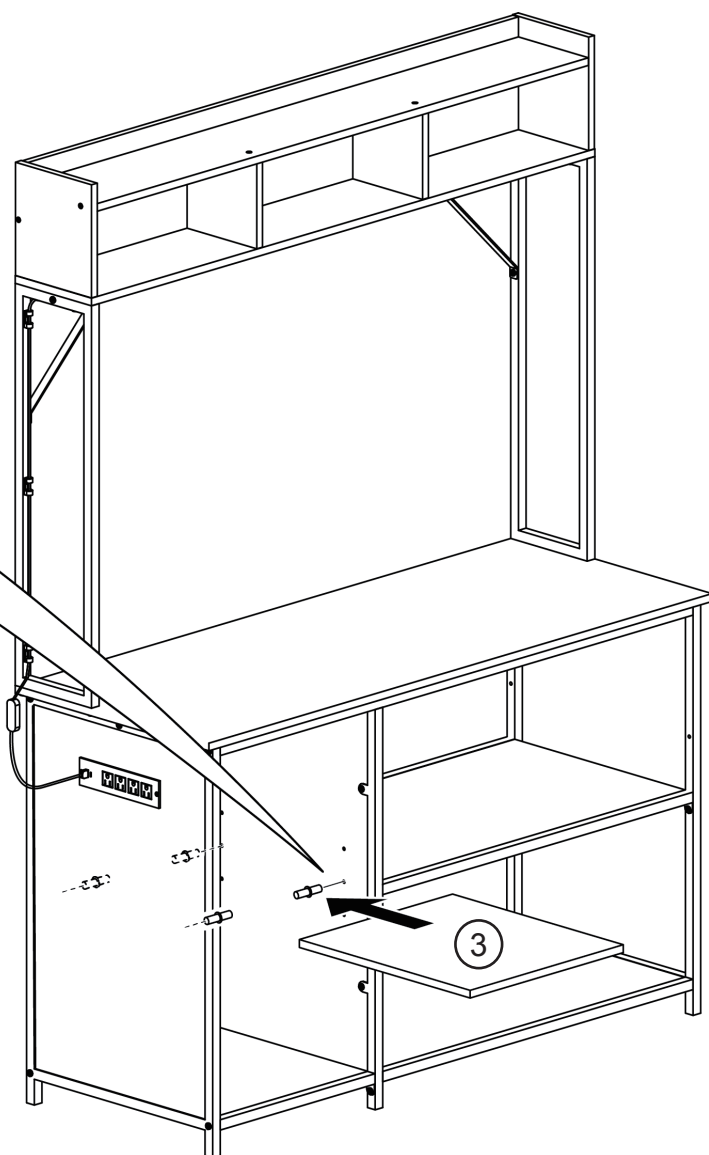
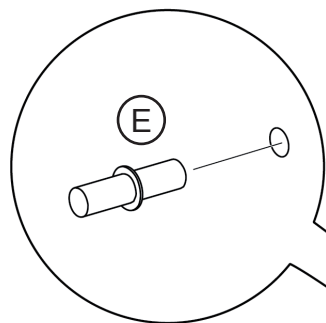
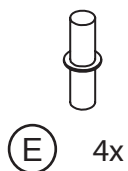


34

  
 
Attach door hinges to the cabinet door (7).

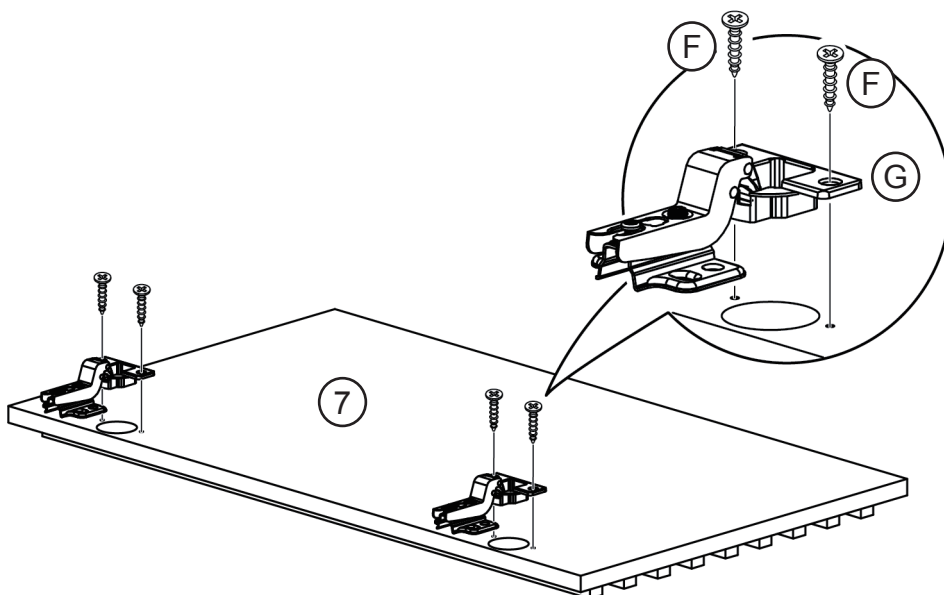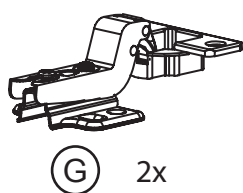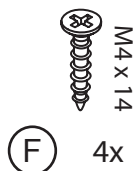


Install the cabinet door to the shelf.

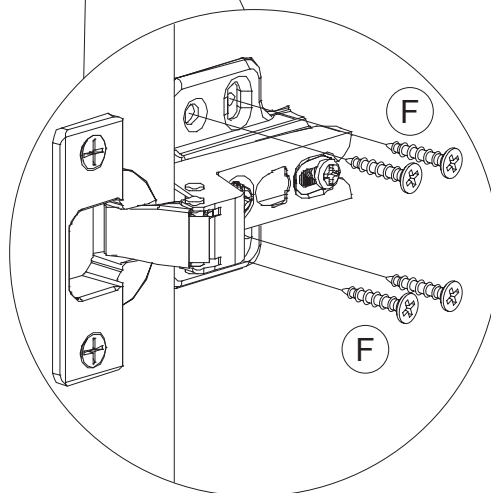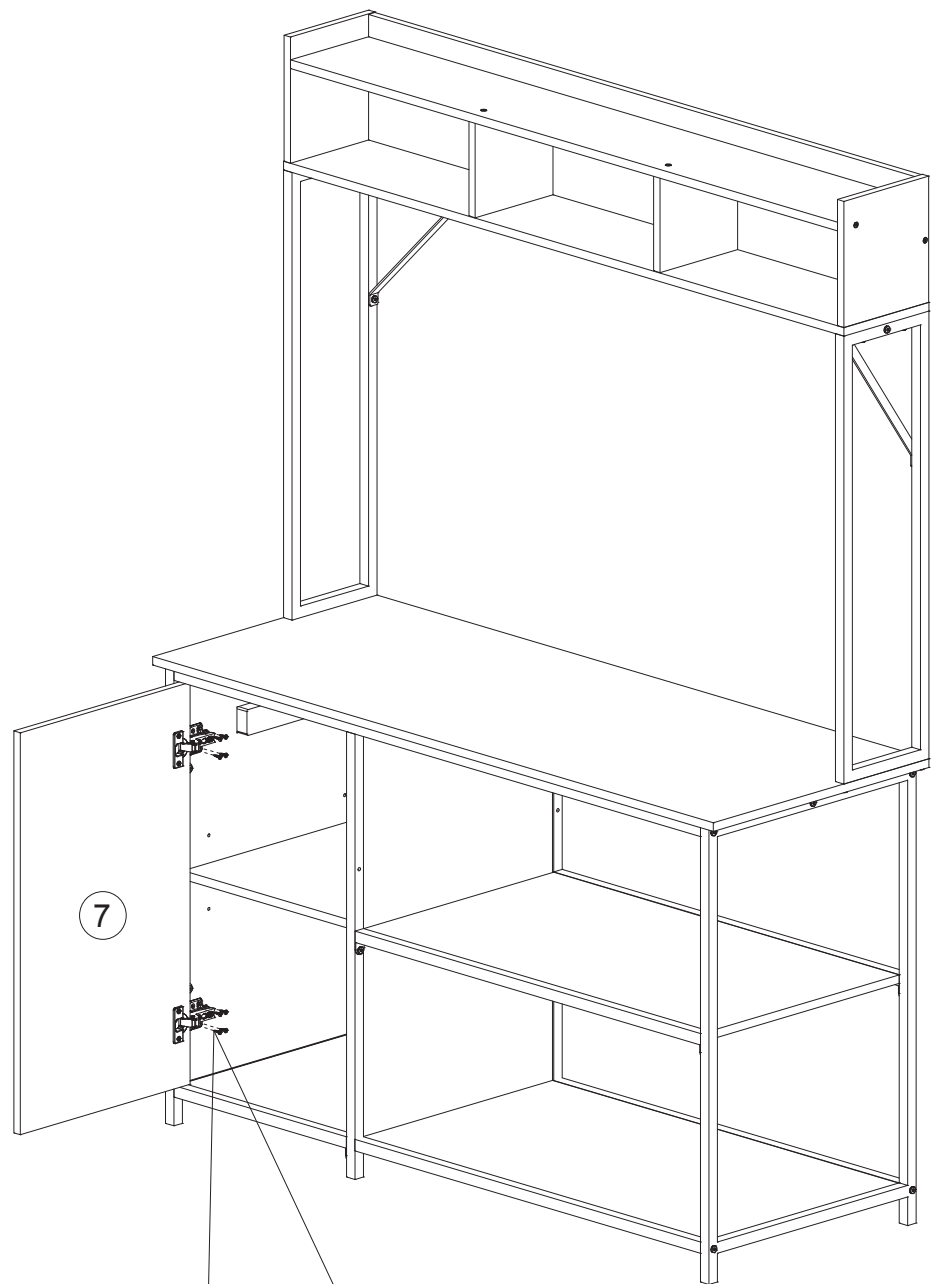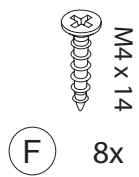   

 
 
When the clearance of the door is uneven, Adjust the cabinet door according to the figure. If you still have trouble while adjusting the door, please contact us.

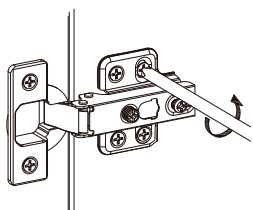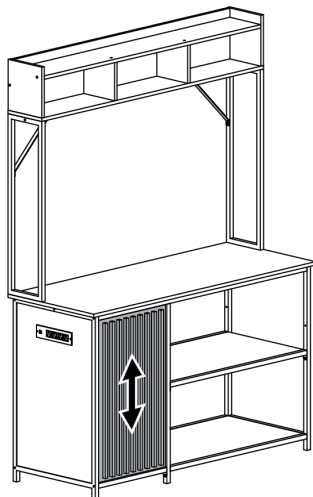


 
Note: loosening the four mounting screws.

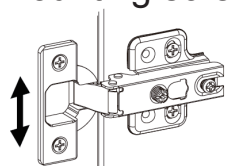

  Up and down adjustment by loosening the screws on the mounting plate.

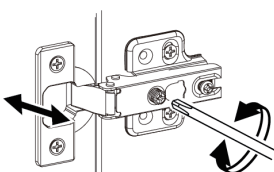
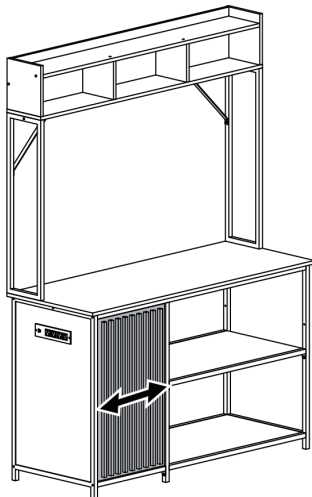


  Side to side adjustment using the front adjustment screw on the hinge.

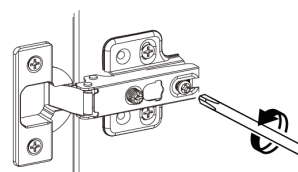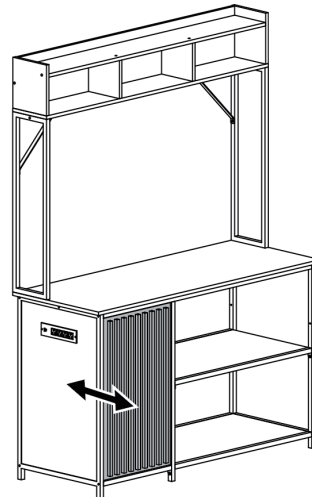


In and out adjustment by loosening the screws on the hinge arm.




 
 
Attach anti-tipping straps to the back of the rack.

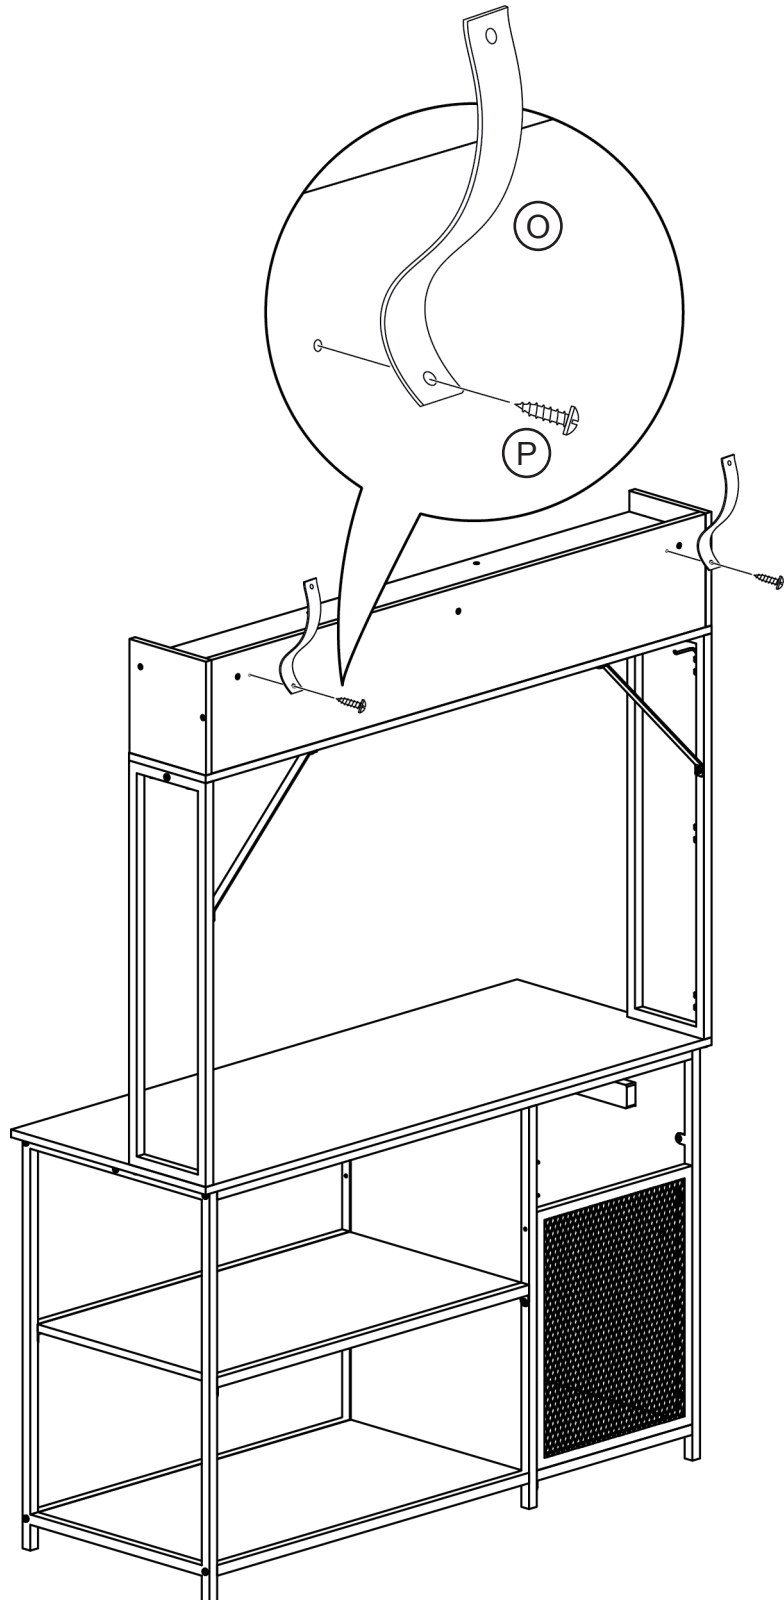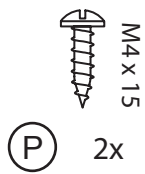

37

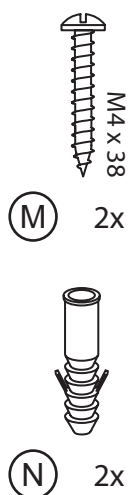 

Affix the rack to a wall.

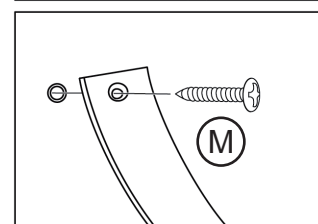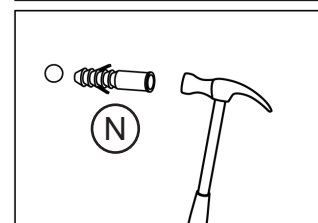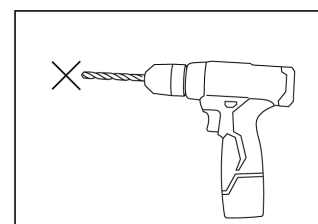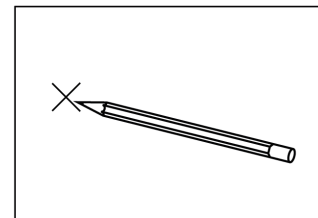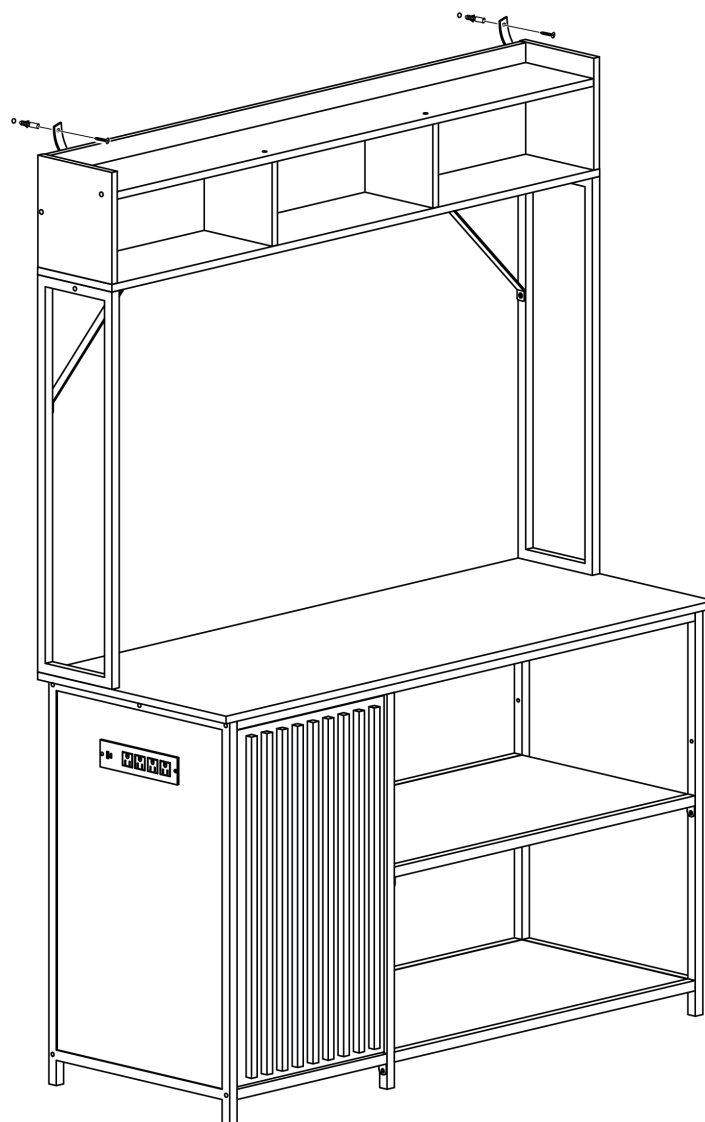     


Furniture must permanently fixed to the wall stud with included anti-tipping device to prevent the furniture from tipping over.

- Mark the drill position on the wall with a pencil.
- Drill a small hole on the marked position.
- Insert a wall anchor into the drilled hole.
- Fixed the anti-tipping strap to the wall with provided screws.

YOU'RE FINISHED!

 
Connect the LED light power cable to the USB power hub and use the cable management tools to attach the cable to the hutch support frame.

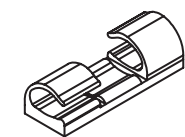




I 4x



 J 4x

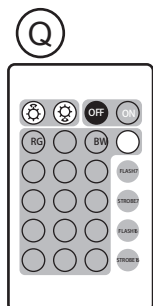


1x

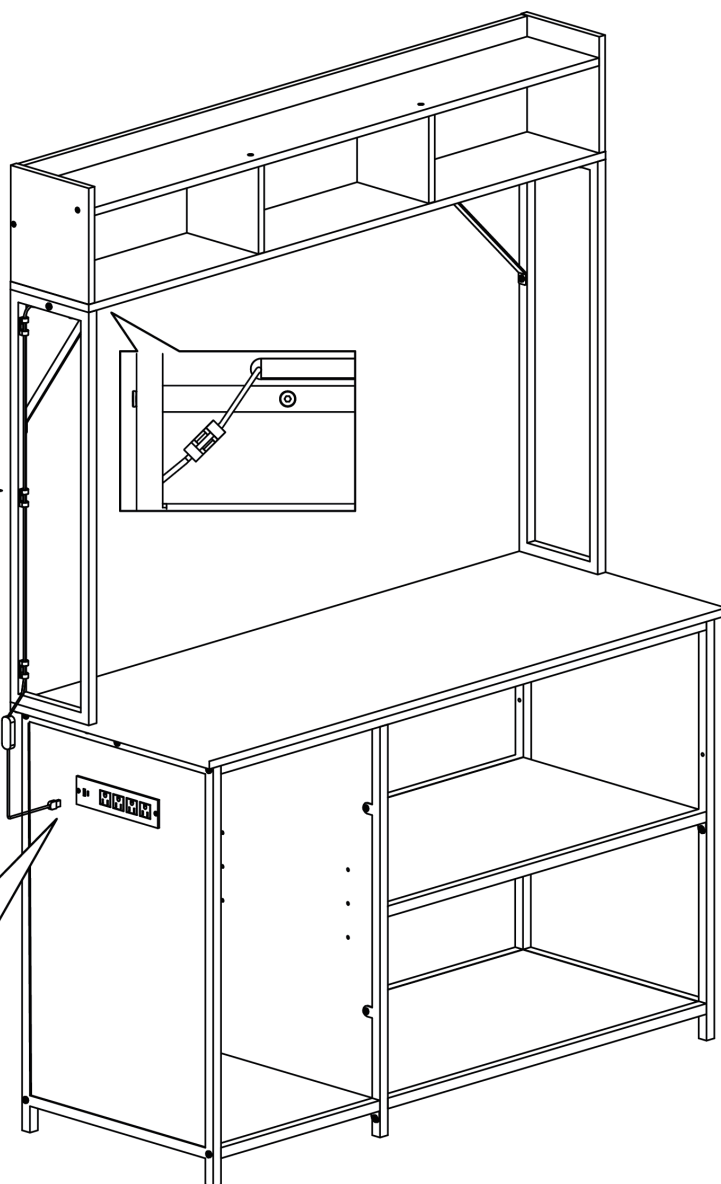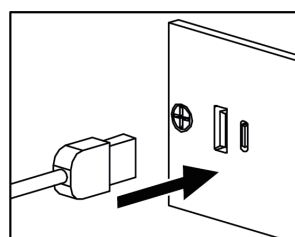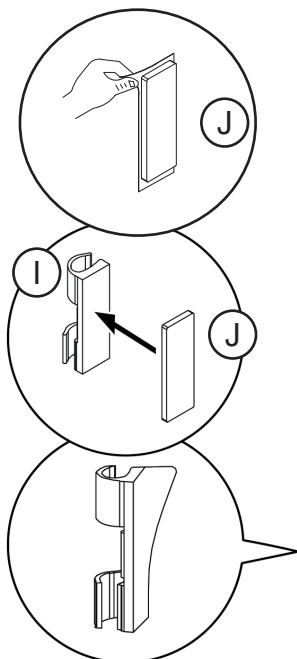   


READ ALL INSTRUCTION BEFORE USE

 1. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
2. Even used batteries may cause severe injury or death.
3. Call a local poison control center for treatment information.
4. Battery type: Button cell(CR2025).
5. Nominal battery voltage: (5-24)V.
6. Non-rechargeable batteries are not to be recharged.
7. Do not force discharge, recharge, disassemble, heat above 60 °C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
8. Ensure the batteries are installed correctly according to polarity (+ and -).
9. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
10. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
11. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.

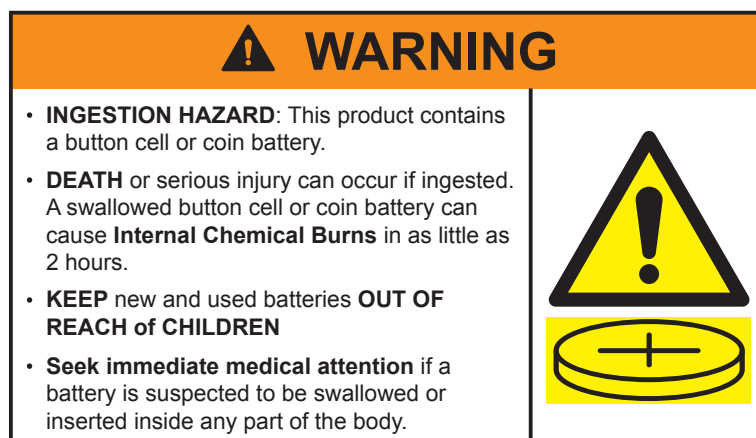

USER INSTRUCTION (REMOTE CONTROL)

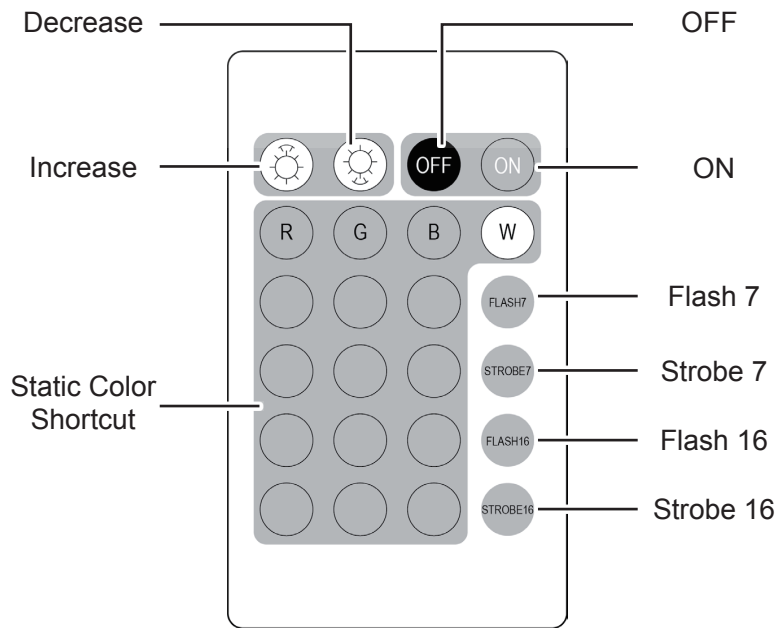 

ON

Press the ON button to turn on the light.

OFF

Press the OFF button to turn off the light.

Static Color Shortcut

Each button is assign to a color, press the button to select your desire color.

Increase

Press the increase button to increase brightness in static color mode.
Press the increase button to increase effect speed in light effect mode.

Decrease

Press the increase button to decrease brightness in static color mode.
Press the increase button to decrease effect speed in light effect mode.

Flash 7

Press the button to enable spectrun cycle mode.
The colors will cycle between red, green blue, orange, cyan, violet, and white.

Strobe 7


Press the button to enable color breathing mode.
The colors will cycle between red, green blue, orange, cyan, violet, and white.

Flash 16

Press the button to enable spectrun cycle mode.
The colors will cycle between all 16 colors.

Strobe 16

 
Press the button to enable color breathing mode.
The colors will cycle between all 16 colors.

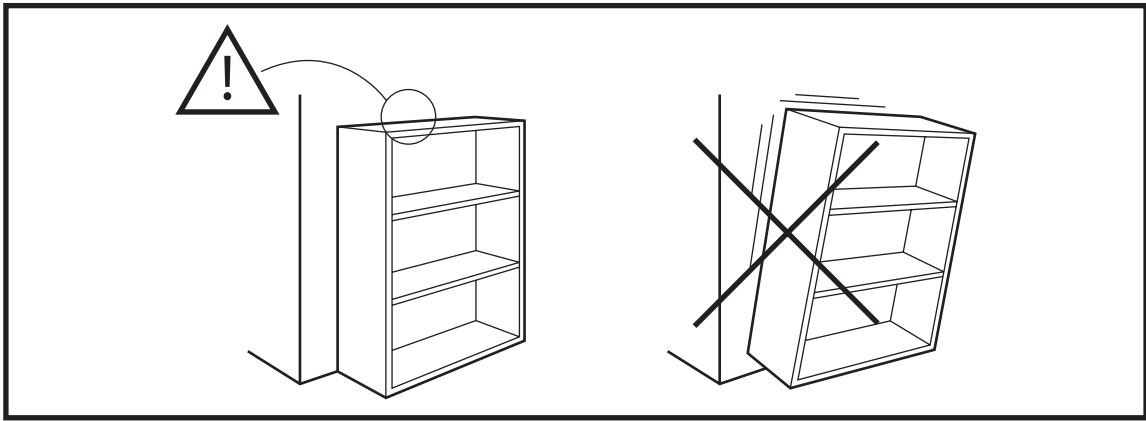

Warning

Serious or fatal crushing injuries may occur if the furniture tip-over. Furniture must permanently affixed to the wall with included anti-tipping device in order to prevent the furniture from tipping over.

 Different wall materials requires different types of wall anchors or screws. Use a suitable wall anchors or screws for your specific wall in order to secure the stability and load bearing capacity of the furniture. If you are uncertain about which type of device to use, Please contact us or your local hardware store.

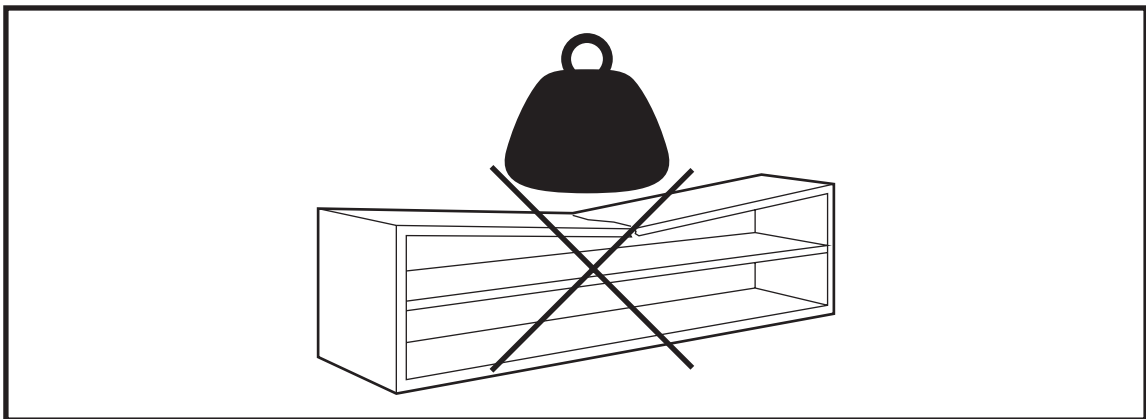

Warning

Only place items on top of the product if they meet the recommended size and weight limits.

Climbing on, stepping on, or placing overweighted objects on the product may cause property damage and/or injuries.

Items placed onto this product must be resting on a support surface without hanging over the edges.

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of longevity, please follow the recommendations in this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly.
- Check the tightness of all bolts every 2 months and tighten them if necessary.



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) with a lightly dampened cloth.
- A small amount of mild soap can be used if necessary.
- Dry the surface immediately after cleaning.

- ☒ DO NOT use bleach or alcohol to clean the surface.
- ☒ DO NOT apply wood treatment on parts made with MDF.

MDF will swell and distort when exposed to water damage. Make sure to dry the furniture immediately after cleaning.

WARNING

The manufacturer and seller are not responsible for any and all liability relating to personal injury, property damage or losses, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification or neglect of this product.

WARRANTY

Our products come with a 1-year warranty from the date of delivery. **Register your product on our website to enjoy our limited lifetime warranty!**

AFTER-SALE SERVICE



Encounter any difficulties or missing parts?



Contact us or email us



We will send you replacement.



Hassle free!
No need to worry about repackaging and sending your item back.