

## Baby high chair installation instructions

Age range: Suitable for infants over 12 months

Pay attention to preservation for future reference

## Precautions for installation and use

1. Ensure that the support is fully open before use. If it is not fully open, the dining chair will lean forward!
2. Ensure that the gears of both sides of the bracket are in the same gear, and keep the two ends level!
3. When installing or adjusting the plate, please pay attention to the child's hands not on the armrest!
4. When opening the bracket, you will hear a "snap" sound to confirm that the opening is in place!

## A Installation instructions

### 1. Name of parts and components:



1. Seat



2. L/R joint leg



3. Front and back feet



4. Plate



5. Dinner plate jockstrap



6. Foot



7. Handrail



8. Seat link



9. Seat belt



10. Seat cover

## Second, installation steps:

### 1. Install foot pedals and handrails

Install the foot on the seat, secure it with screws (Figure 1-1), and press down hard to install the armrest (Figure 1-2,1-3).

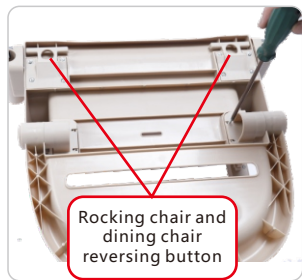


figure1-1



figure1-2



figure1-3

### 2. Install the L/R joint leg

Align the buckle with the corresponding holes and install it.

After it is installed in place, there will be a crisp "click" sound, and pay attention to distinguish the left and right joint legs. (Figure 3, Figure 4)

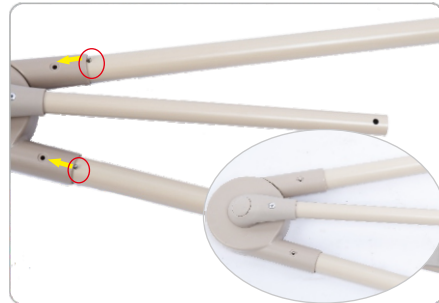


figure3



figure4

### 3.Install front and rear soles

Please press and hold the snap button as shown in the figure, insert it into the bottom of the foot (Figure 5), and install it as shown in Figure 6.



figure5



figure6

05

### 4.Mounting seat

Lift the seat up and place the articulated leg into the seat hole (Figure 7).



figure7

06

## 5. Install seat connection bar

Press the connecting rod snap to load the rocker rod

figure9



## 6. Mounting seat cover

The seat cover should cover the body of the seat to prevent the seat cover from sliding (Figure 10), and the seat belt should pass through the seat hole.

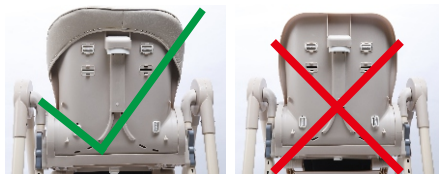


figure10



## 6. Install the serving plate set

Insert the jockstrap into the card slot under the plate until you hear a "click" sound (Figure 11). Hold the plate adjustment switch on the left and right side of the plate set (figure12), push it in along the chute of the armrest, release the adjustment switch, and pull the plate back and forth to ensure that the plate is fixed on the armrest (figure13). Please make sure it is secure.



figure11



figure12



figure13

## 7. Install the plate lid

Take out the top plate lid and put it into the top plate group. There are 2 slots between the top plate and the bottom plate group. Please press down one by one to ensure the lid fits the top plate group.

**Warning: If the buckle is not pressed in place, it will hurt the child. Please check with your parents.**



figure14

## B Adjust the use of various parts

### 1. Seat belt use

Put the seat belt through the seat hole. When using, please insert the buckle of the waist seat belt vertically into the top of the crotch connecting the big white buckle. Please be sure to fasten the seat belt properly and adjust the seat belt properly so that the baby does not have too much space to move, so as to avoid danger.



figure15

## 2.Adjustment of the seat back

Hold the backrest adjustment switch (FIG. 16) by hand to adjust the backrest gear. Back 3 adjustable, can sit ---1 file, can lie ---2 file, can lie ---3 file



figure16



figure17

## 3.High-low adjustment

At the same time, hold down the height adjustment switch on the left and right brackets (Figure 18), move it up and down and then release it to adjust and fix the high and low gear .The height of the seat is adjusted in 7 shifts. Please keep the gears on both sides of the seat at the same level and avoid tilting .Please do not let the child sit on the dining chair.



figure18

#### 4. Multi-function pedal adjustment

Press and hold the adjustment buttons at both ends of the foot at the same time to adjust the Angle of the foot (Figure 19) The big foot can be adjusted in three gears, and the small foot pedal can be adjusted in three gears to meet the different needs of the baby's growth.



figure19



figure20

#### 5. Plate adjustment

Hold the plate to the right and left of the plate to unlock the adjustment switch upward (Figure 21). The front end of the plate can be adjusted or disassembled. Slide adjustment, front and rear 4 speed reduction.



figure21



figure22

## 6. Rocking chair mode adjustment

Pull the seat lock handle outward to adjust the seat to rocking chair mode (Figure 23,24).

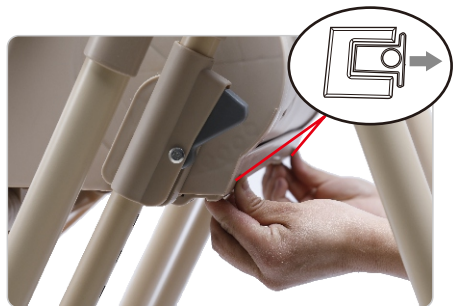


figure23



figure24

## 7. Rocking chair mode

Pull the knuckle-leg buckle outward (Figure 25-1, 25-2), open the rocking chair mode upward (Figure 26), turn it downward, and close the rocking chair mode when the buckle is stuck on the connecting rod (Figure 27).



figure25



figure26



figure27

## 8. Folding storage

Stand behind the dining chair and hold down the folding switch on both sides at the same time to fold. (Figure 28, 29) When folding storage, it is best to adjust the height of the dining chair to the lowest level to save space and facilitate storage or carrying



figure28



figure29

# WARNING!

1. Please strictly follow the instructions to install and use to ensure the safety of your child, otherwise it may lead to serious injury to your child!
2. The carer must not leave when using the dining chair, so as to avoid danger!
3. In order to prevent the child from slipping out or falling during use, please be sure to fasten the seat belt at all times, and adjust the seat belt to the appropriate position according to the age group, even when sleeping!
4. Do not allow children to stand, jump, climb and chew on the dining chair!
5. This chair is for personal use, please do not allow two or more children to use it at the same time!
6. When using the dining chair, do not put the dining chair on the place with sloping surfaces, steps, stairs or places with oil stains!
7. Please wipe the dining chair often to keep it clean, and do not use it in places where the temperature is too high or too low, so as not to affect the service life of the product.
8. Please check frequently whether the joints of each part of the dining chair are loose or damaged, if so, please contact the seller immediately!
9. When installing or adjusting the dinner plate, please pay attention to the child's small hands not on the armrest!
10. The maximum bearing capacity of this dining chair is 15KG, not overweight use!

### Maintenance method: Wipe with a soft cloth

Product bearing: 0-50KG

Applicable age: Product material:

12-36 months Environmentally friendly PP material

**Warning: Please do not go near the fire source, when not in use should be removed in time, and Store in a cool place. Use under adult supervision.**