

B8-0011



Please read these instructions and warranty information carefully before use and keep them properly for future reference.

OPERATING INSTRUCTIONS

Part List



A



M 4PCS




B 2PCS



C



D

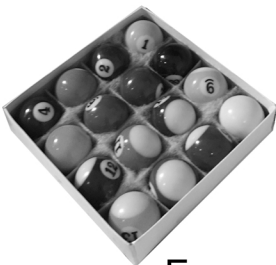

E



F



G 4PCS



H 4PCS



J 8PCS




K 16PCS




L

Assembly Instructions

STEP1

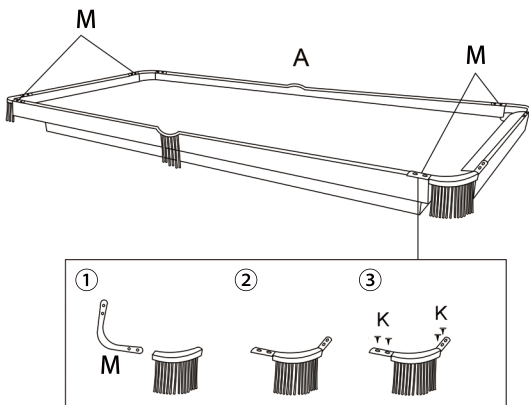

STEP2

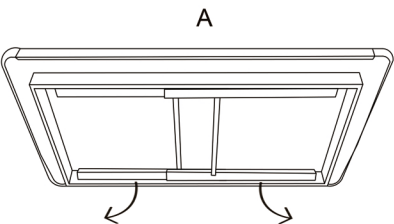

STEP2

