

尺寸：284x198mm 彩色铜版纸 分正面反面 需要对折



USER'S MANUAL
Foldable Outdoor Cart

Product Specifications

Net Weight	12.2kg
The Wheel Size	17x10cm
Pull Rod Length	57.5-77cm
Material	Polyester, PE, Steel
Tires Material	EVA Foam+PP

Thank you for choosing us.
This product is suitable for camping, BBQ party, grocery shopping, having a picnic or other occasions. Please read the manual thoroughly and keep it for future reference.

Warning

1. Take care when assembling/disassembling the product so as to avoid finger pinch accidents.
2. For safety concerns, only allow children to use this product under the supervision of adults.
3. This wagon holds a maximum load of 150 lbs (68 kg) on firm ground, 110 lbs (50 kg) on beach, 220 lbs (100 kg) when kept still. Exceeding maximum load capacity may cause damage to the product.
4. Do not use it in an extremely wet or high-temperature environment in order to extend its service life.

Package Contents



How To Set Up

1. Take out the wagon. Fully extend the wagon frame. Secure the cloth of the wagon to the frame using loop enclosure.



2. Insert the handle. Please check the picture to make sure that you are not installing the handle in reverse. (Long screw should be inserted to the upper position. Short screw should be inserted to the lower position.)



3. Secure the extra storage basket to the wagon using the hook. (Secure it to the long hook and then to the short hook)



4. Install the canopy. (Insert the canopy pole into the holes on the corner board. Secure the canopy using strap.)



How To Fold Down

1. Pull up the webbing loop located at the center of the wagon.
2. Squeeze the wagon together and secure the wagon in a closed position.

