 
 



ASSEMBLY INSTRUCTIONS

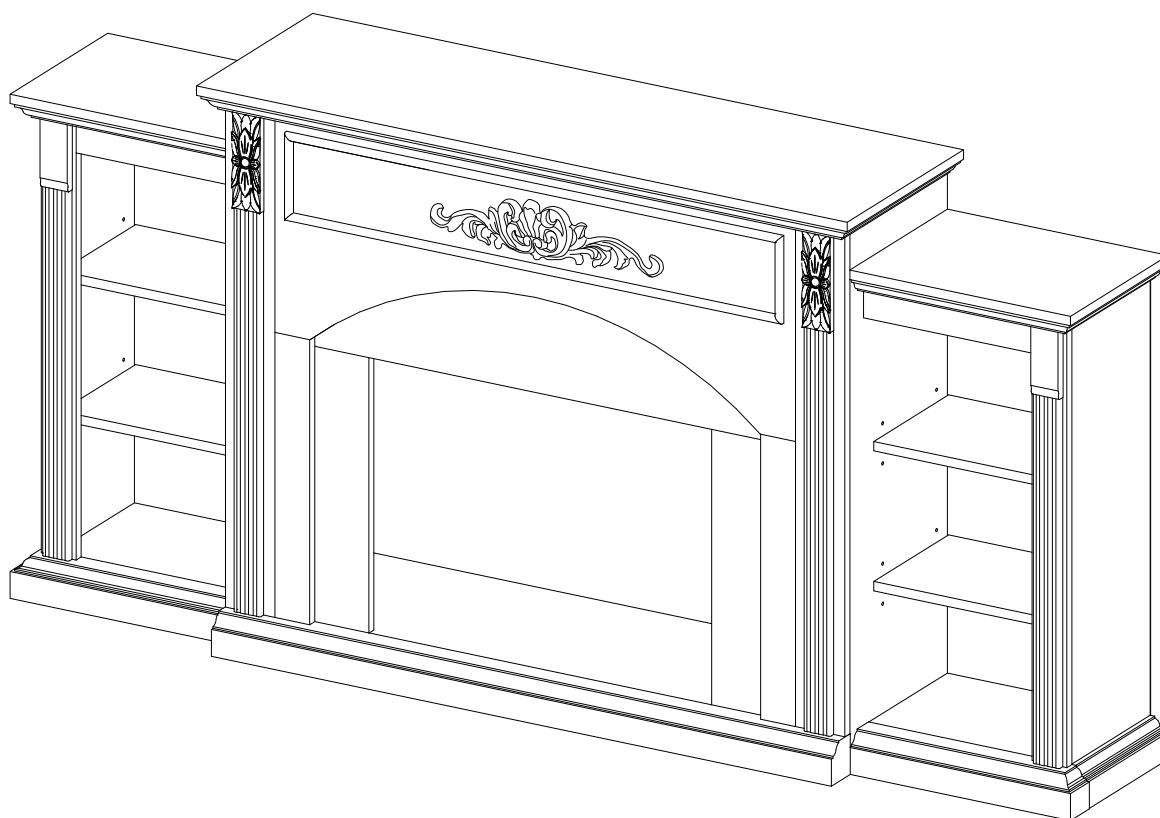


How to use the cam lock system

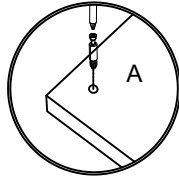

 
1. Screw cam bolt into panel

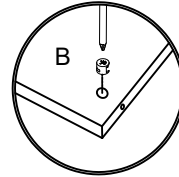

 
2. Push cam into panel - arrow feature on cam top points to panel edge

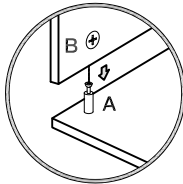

 3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

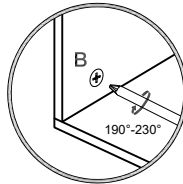


 4. Rotate cam(s) clockwise 190°-230° to lock panels together

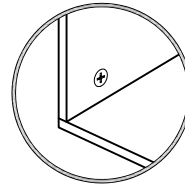

5. Panels should be tight against each other and connection should be rigid

 
Insert the wood dowel [C] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

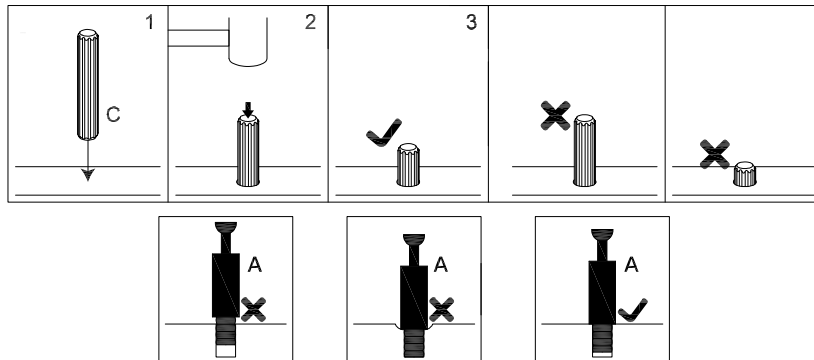

WARNING


- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

 PACKAGE INCLUDE

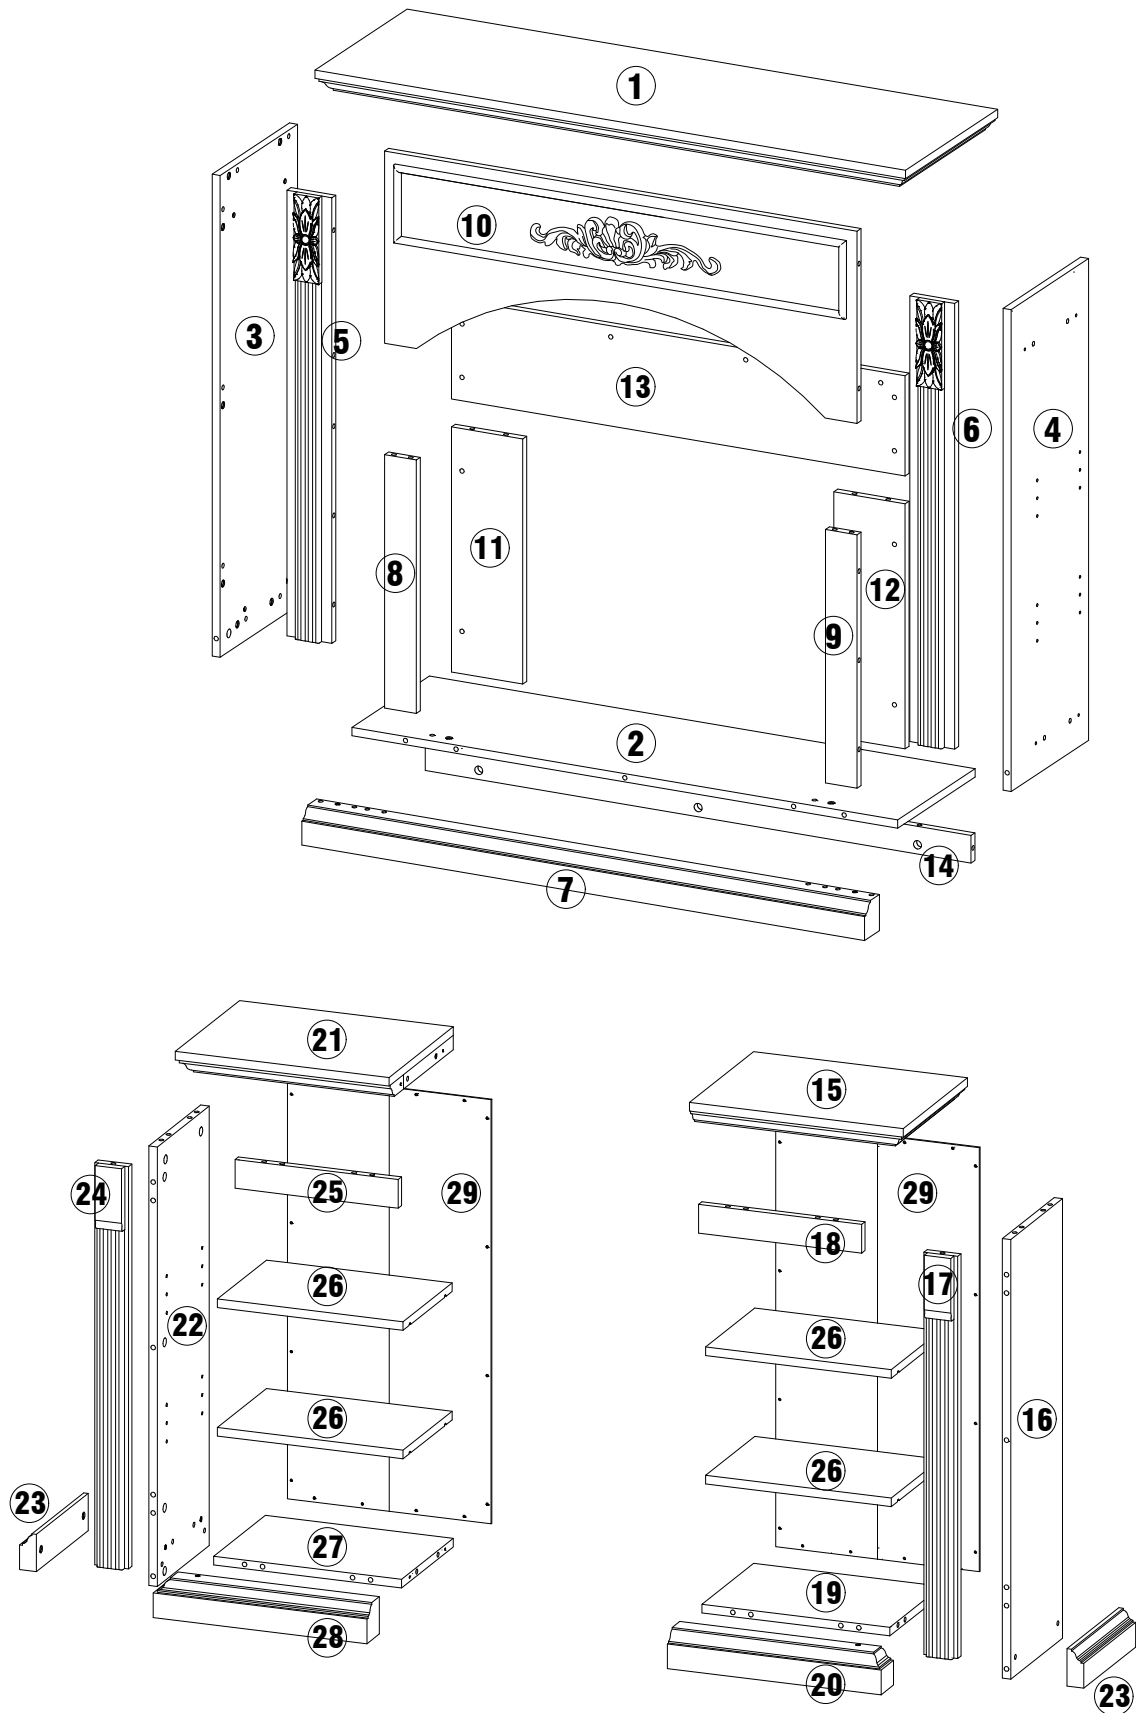


PACKAGE CONTENT

 Ø8X30MM

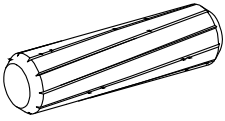


A

 64X+2

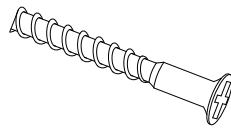


B

 8X

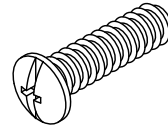


C

 16X+1



D

 
19X+1



E


38X+1

 Ø3.5X12MM




F

 58X+2




G

 12X



H

 16X+1

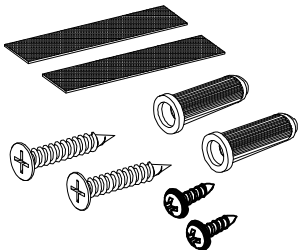


J

1X



L

 34X+2





M



34X+2

STEP 1


		
A	L	M
X4	X8	X4

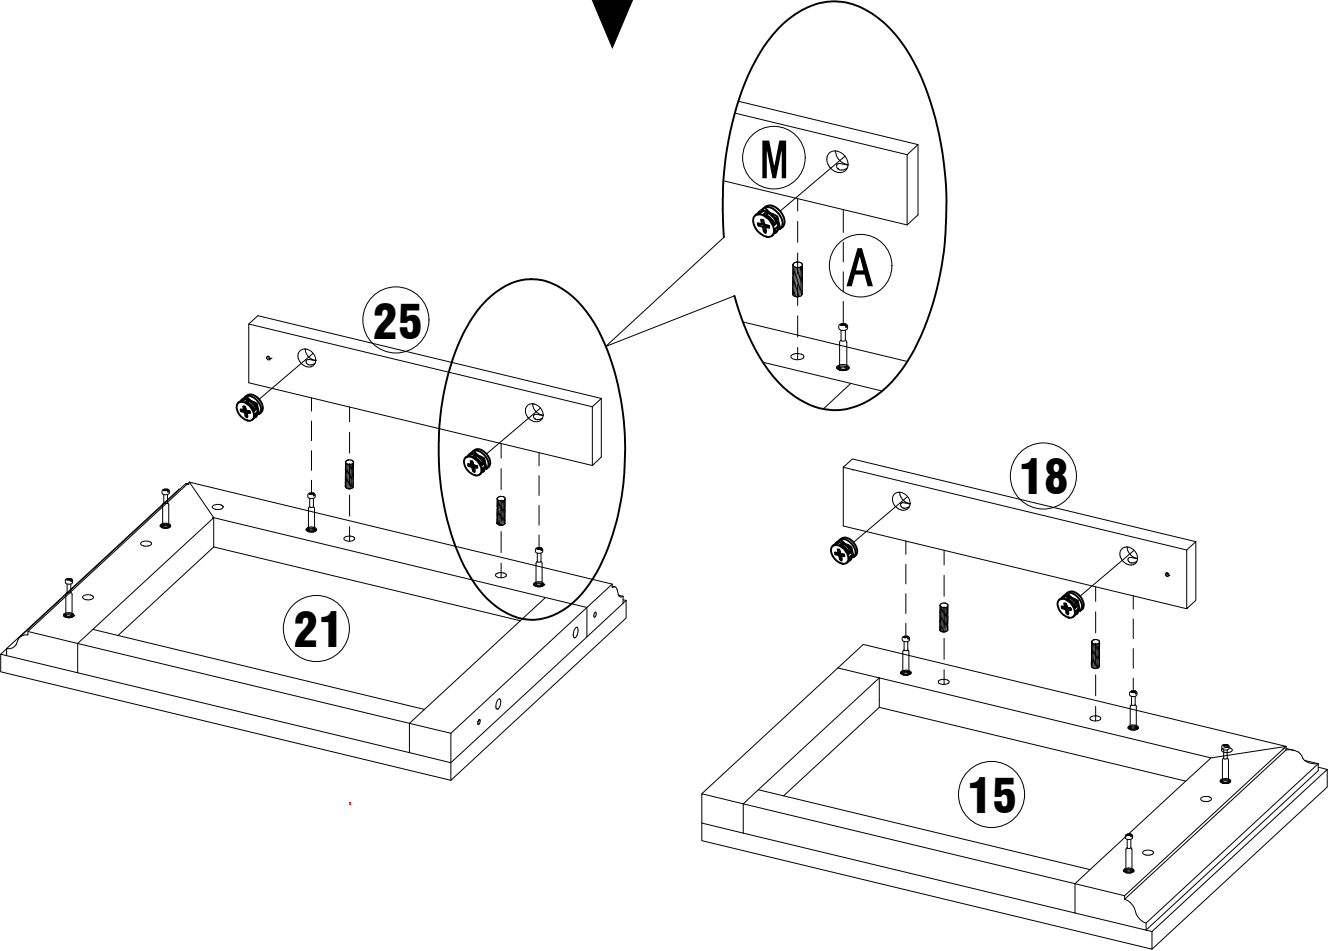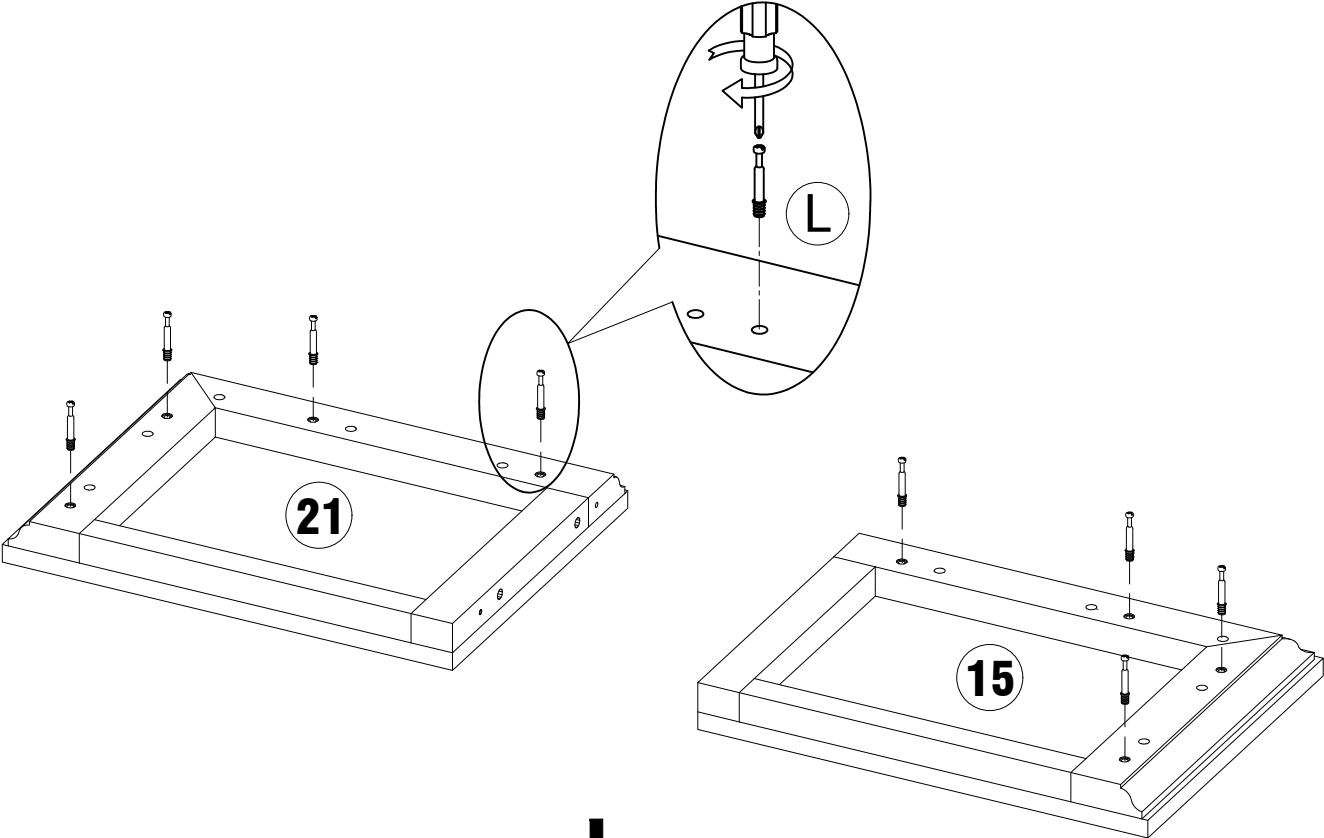  


  STEP 2

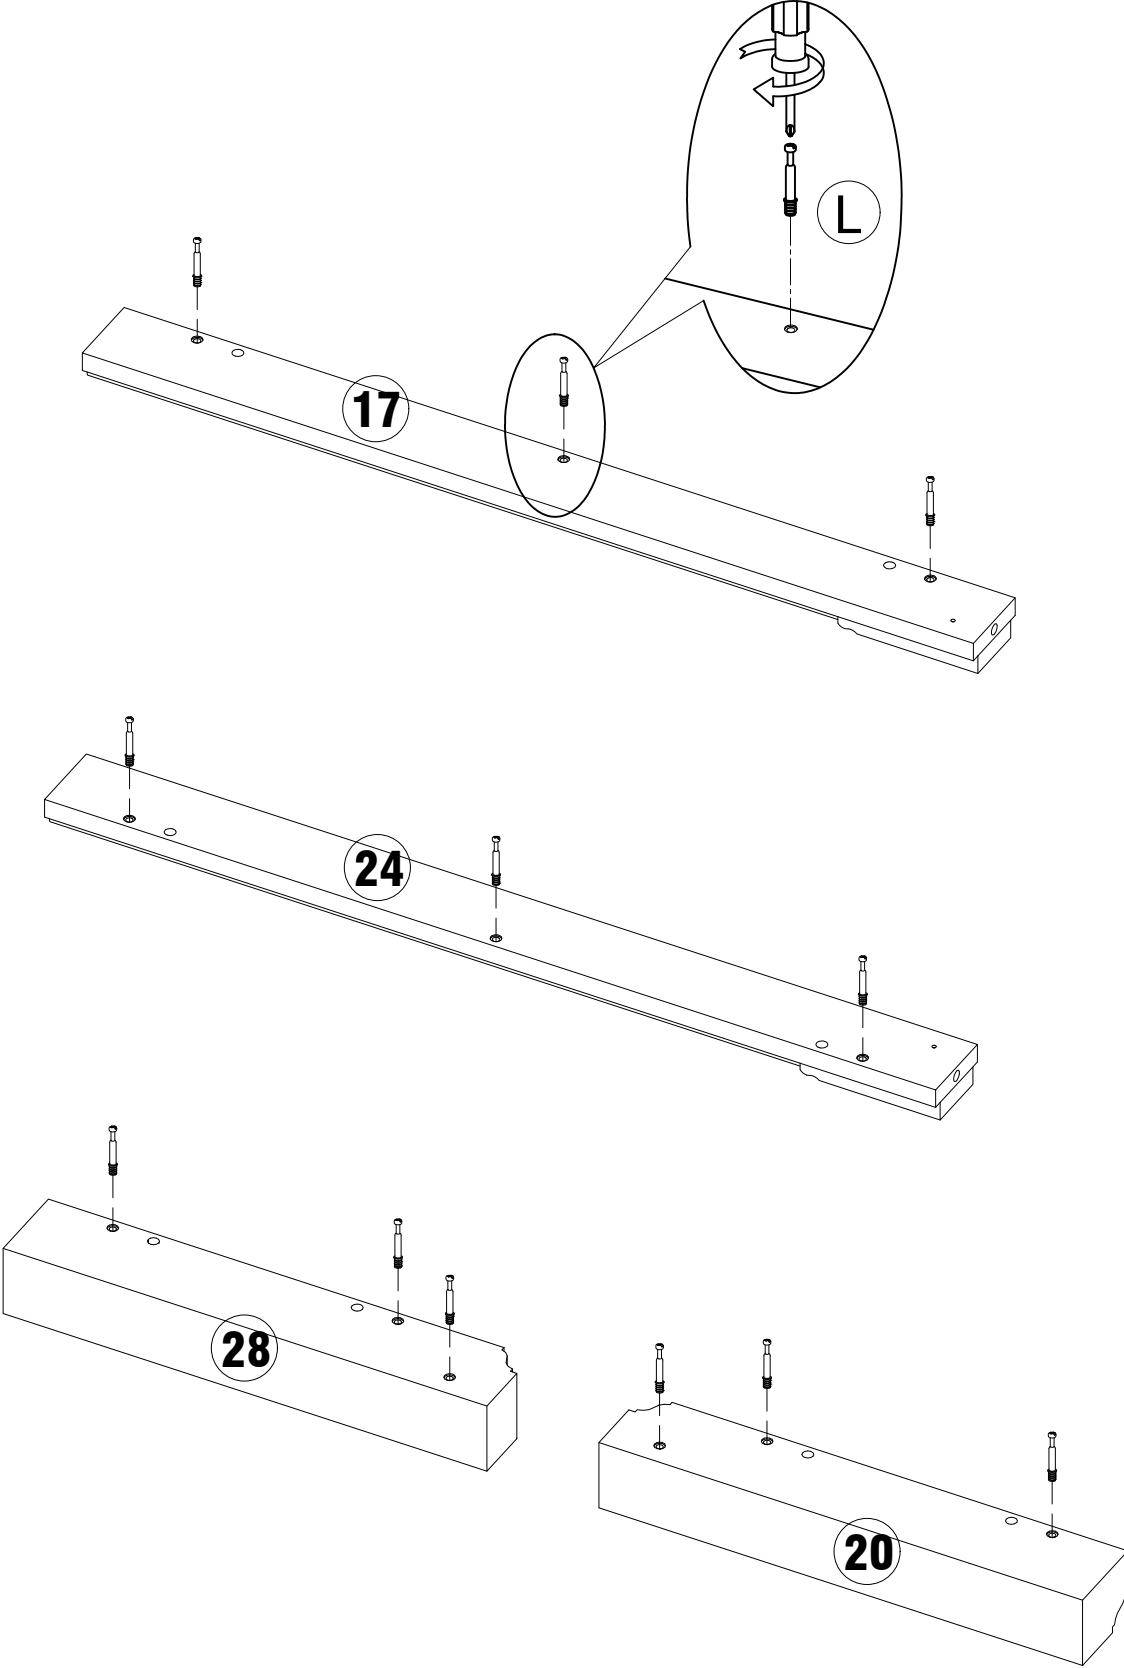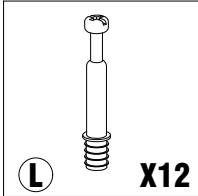

 
STEP 3

 L	X4	 C	X4
--	-----------	--	-----------

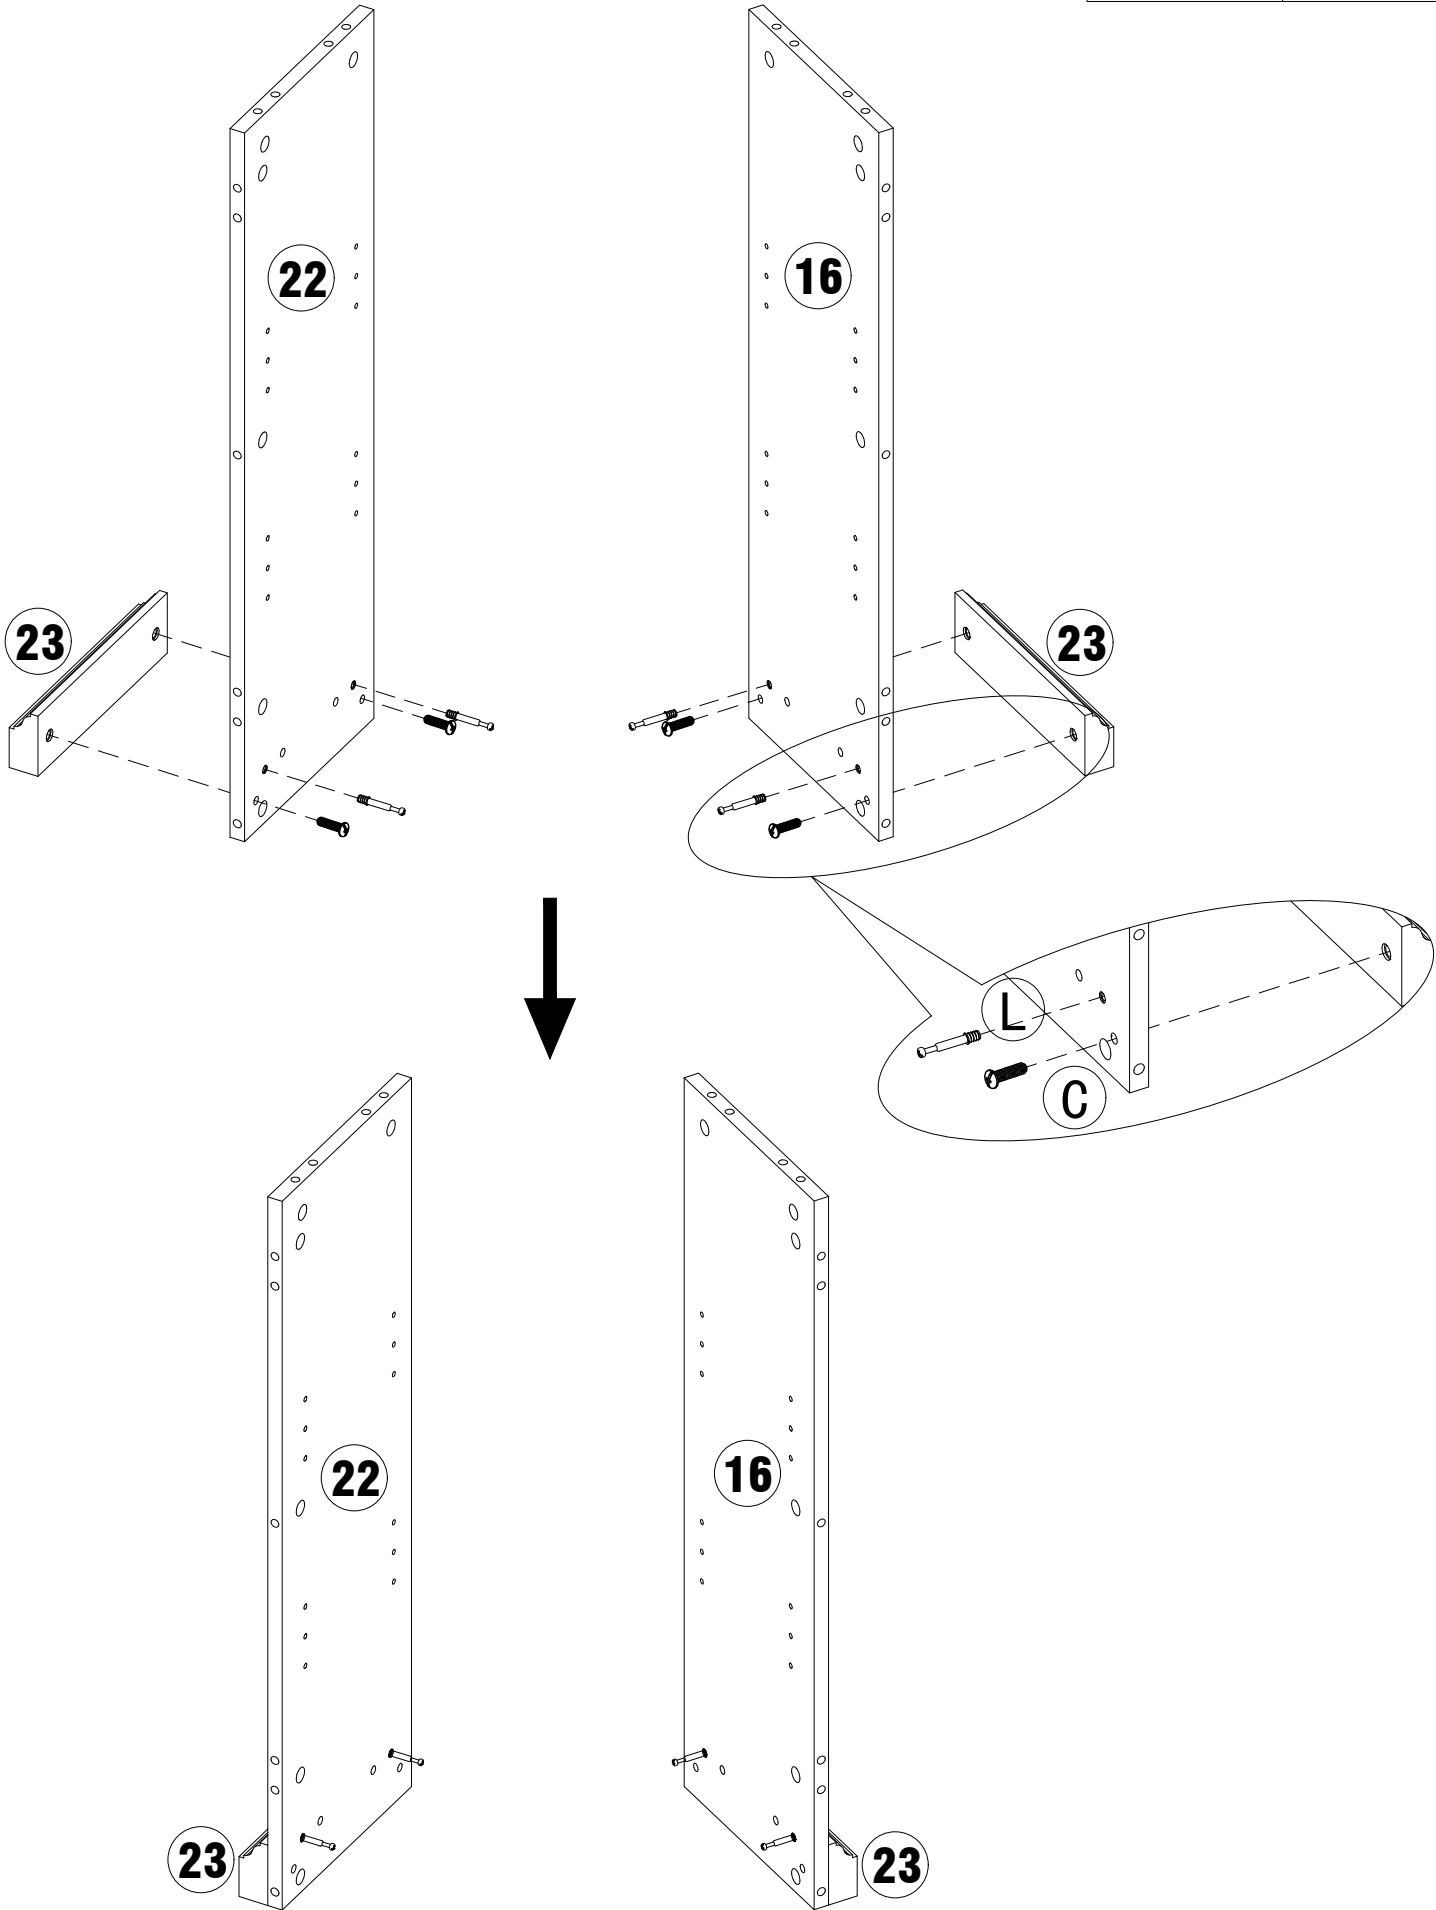 


STEP 4

	
A	M
X4	X4

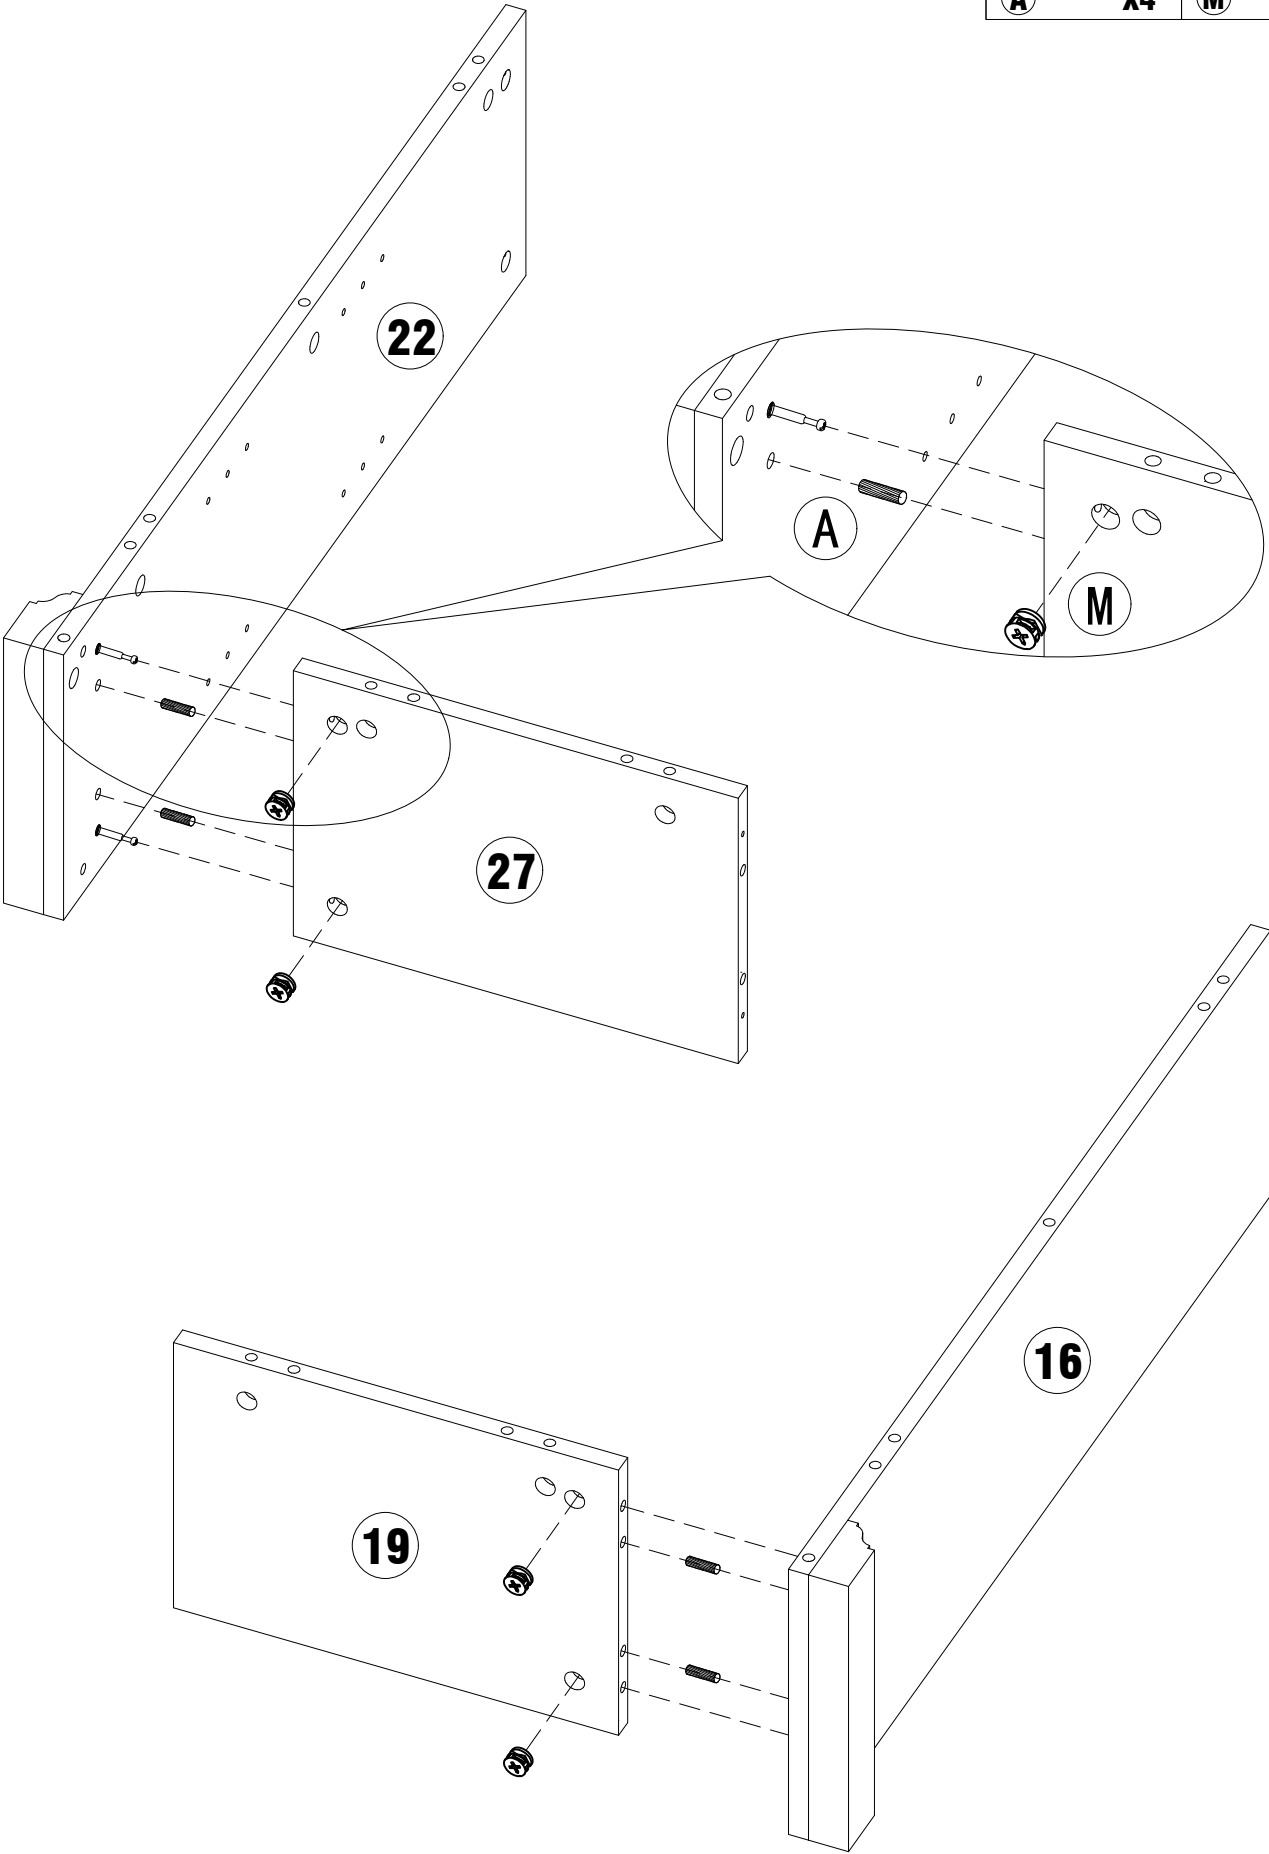 



STEP 5

	
A	M
X5	X6

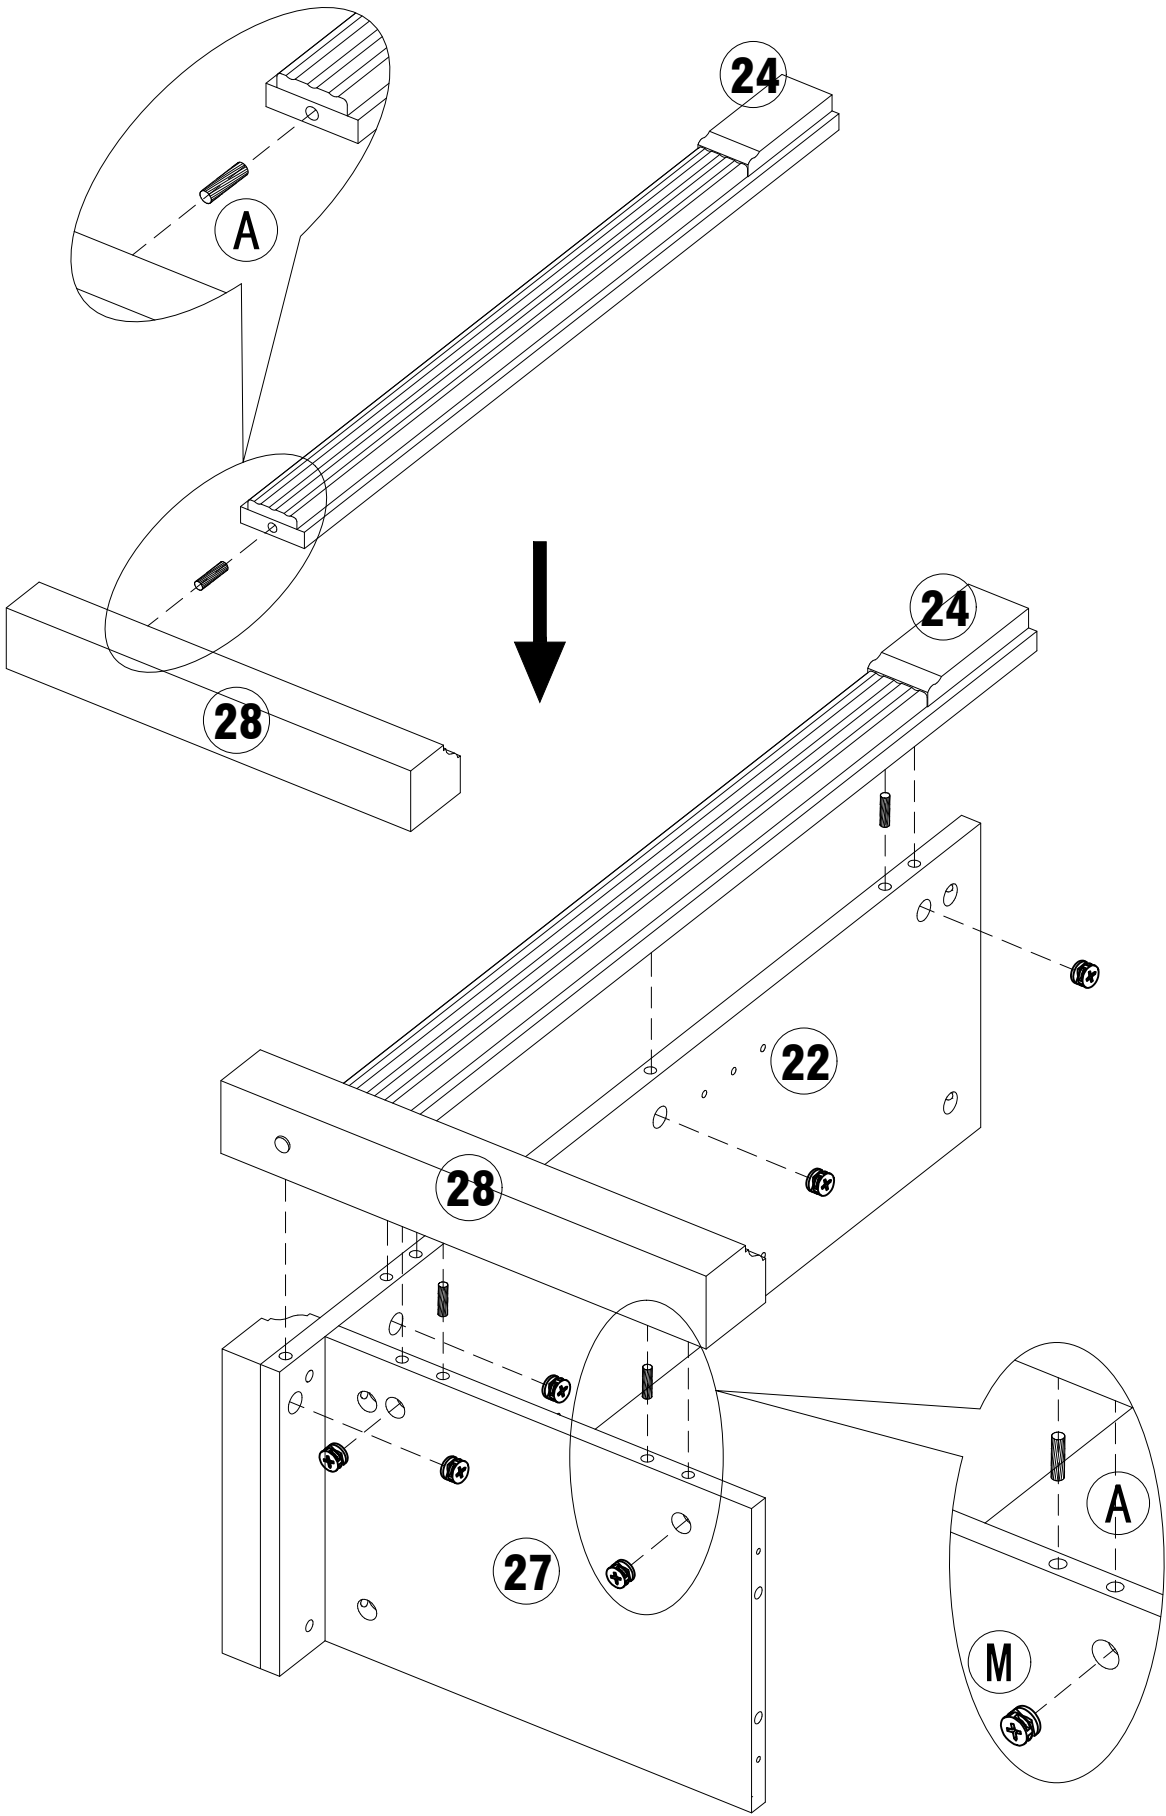 


STEP 6

	
A	M
X5	X6

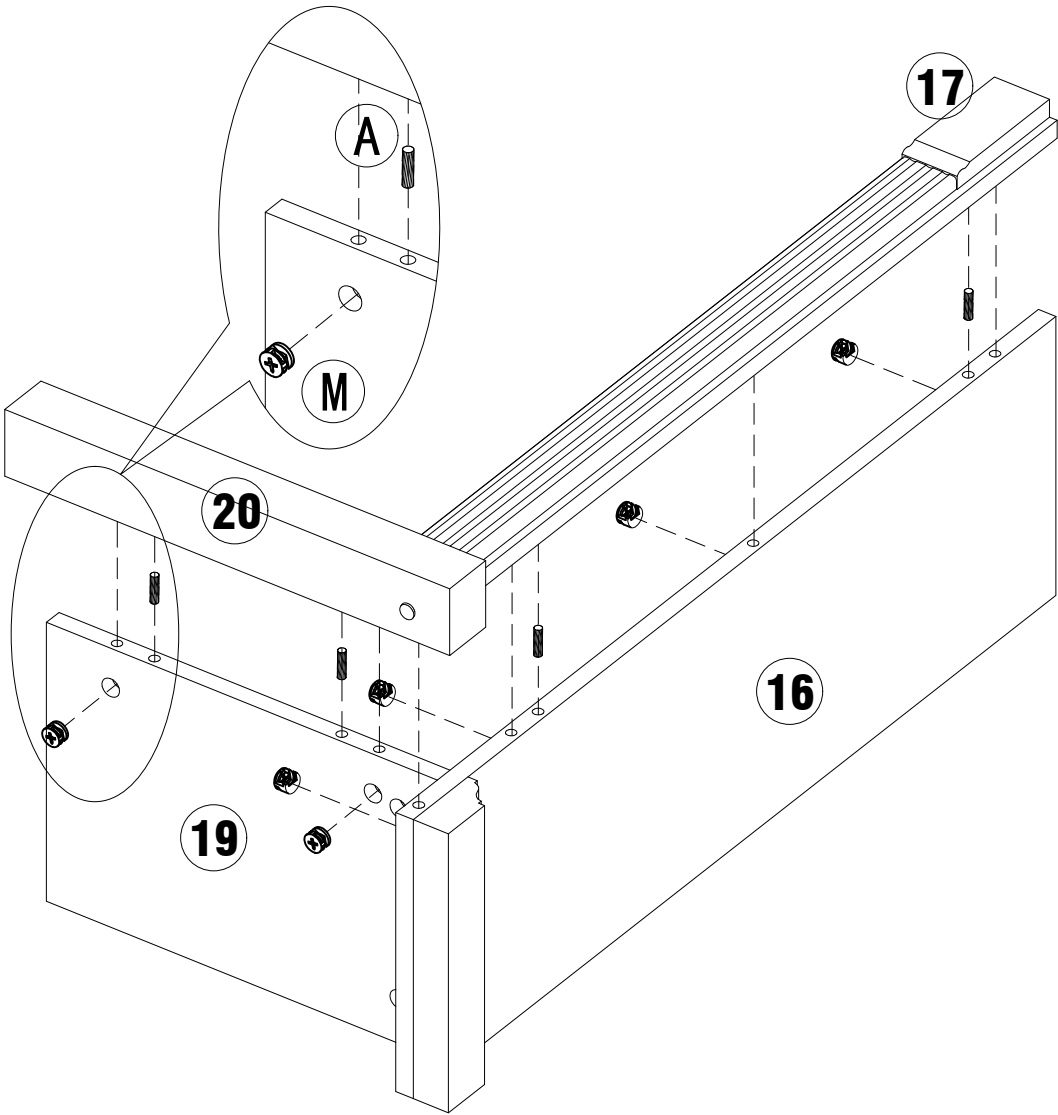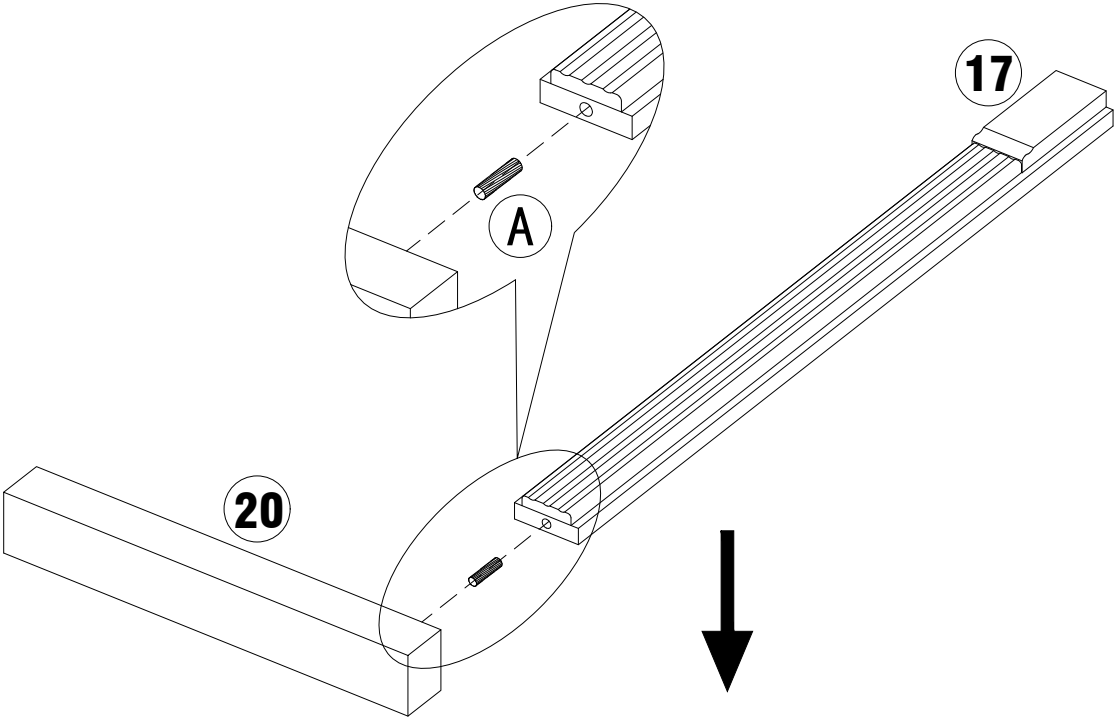  



STEP 7

	
A	M
X6	X4

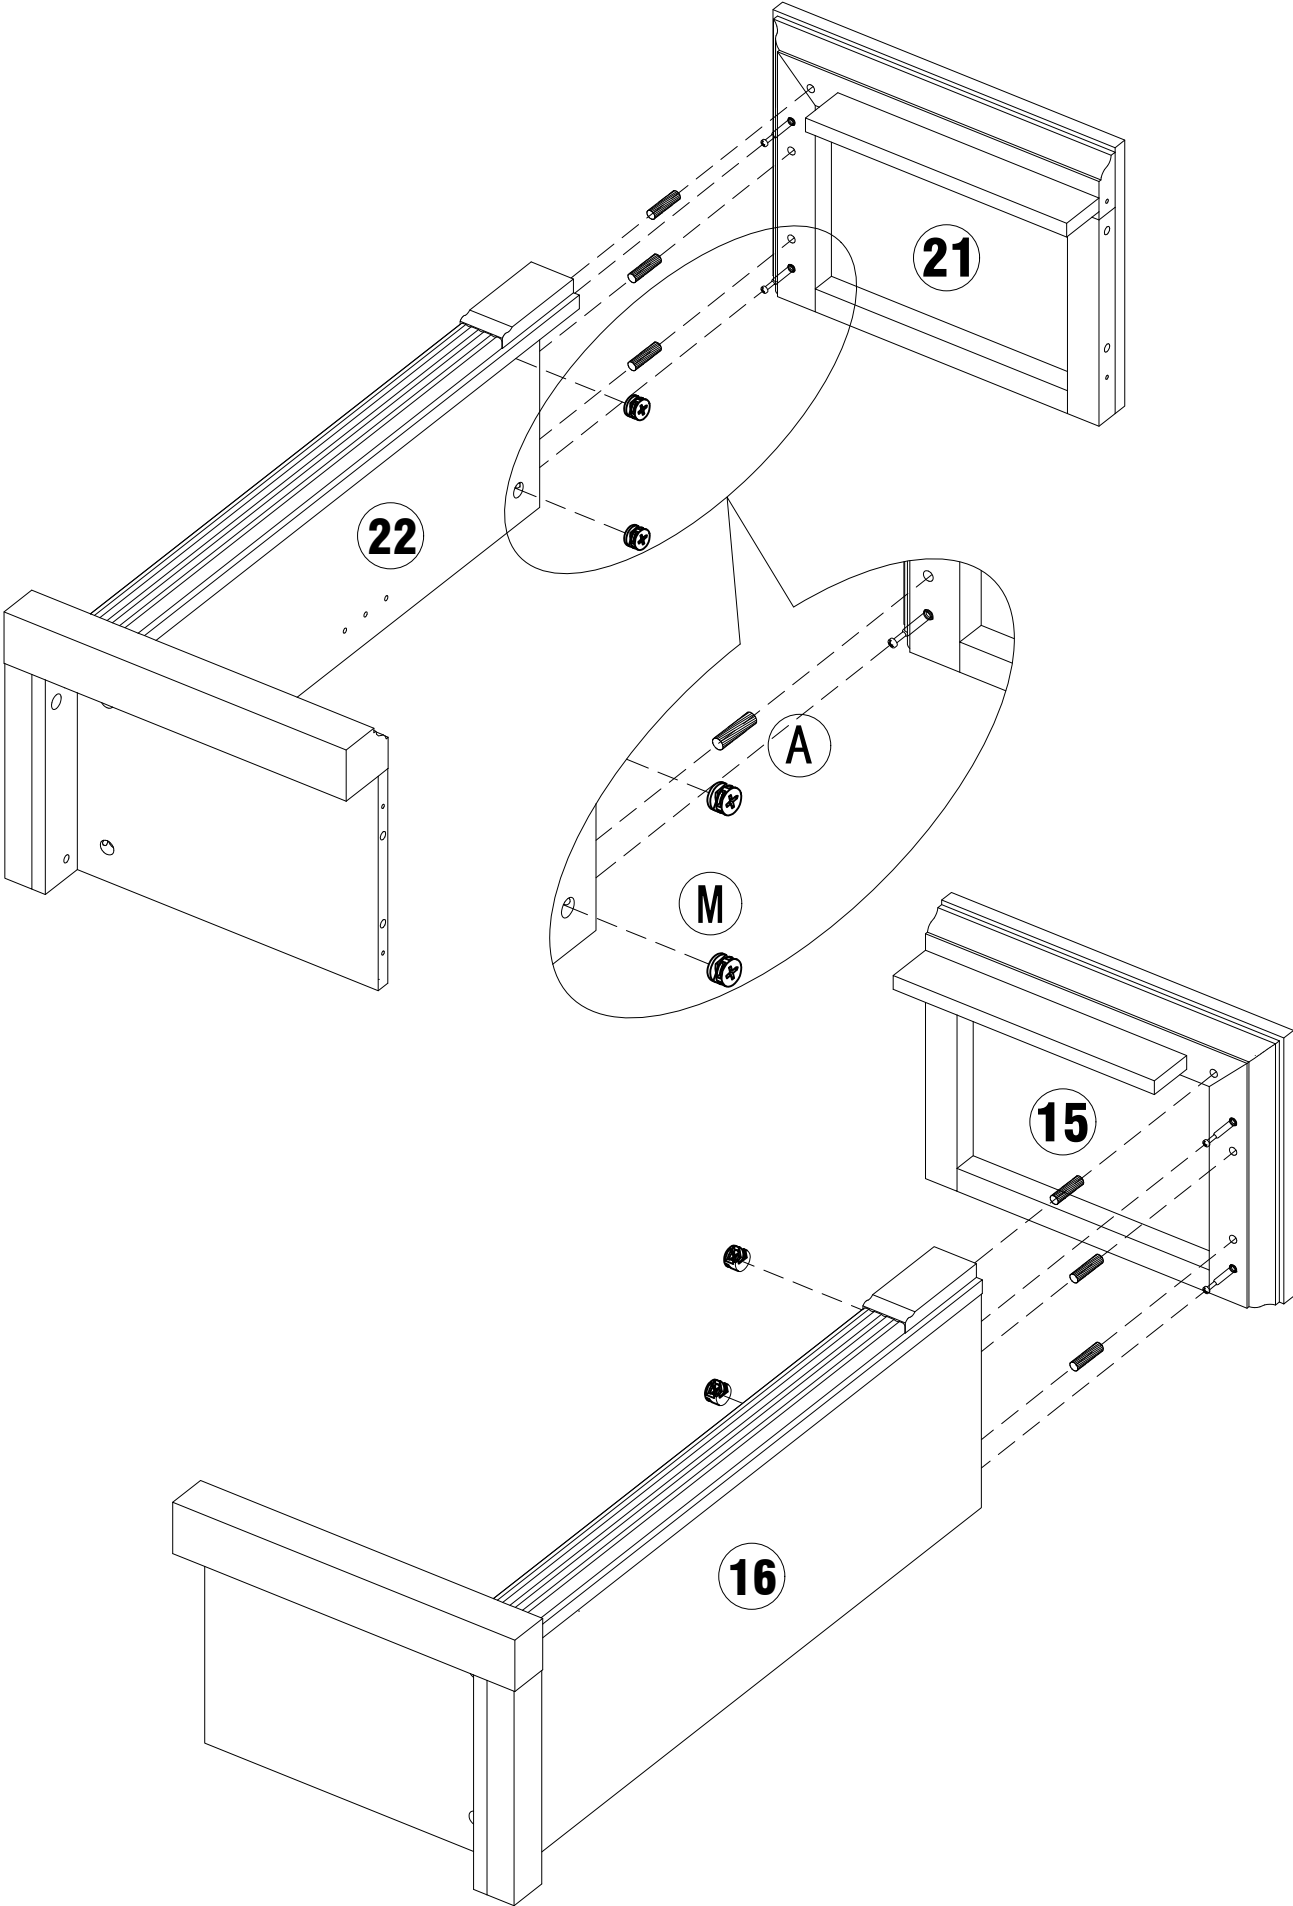 




STEP 8

	
F	G
X4	X2

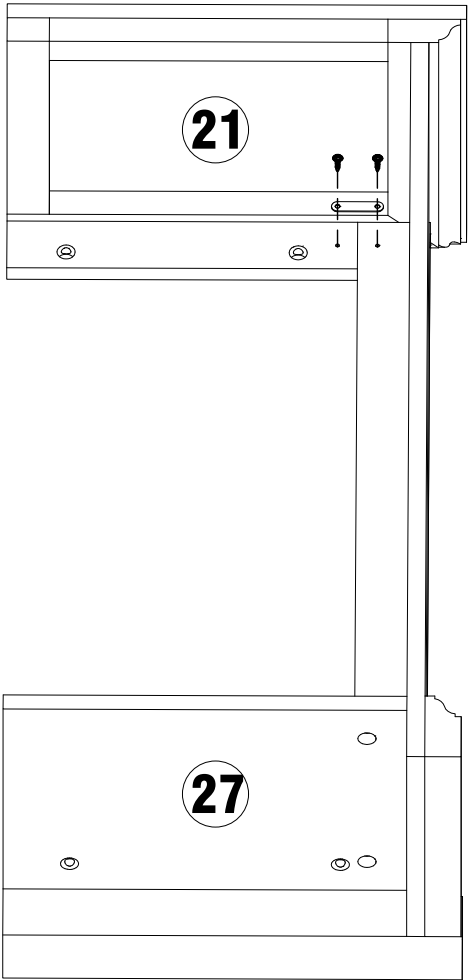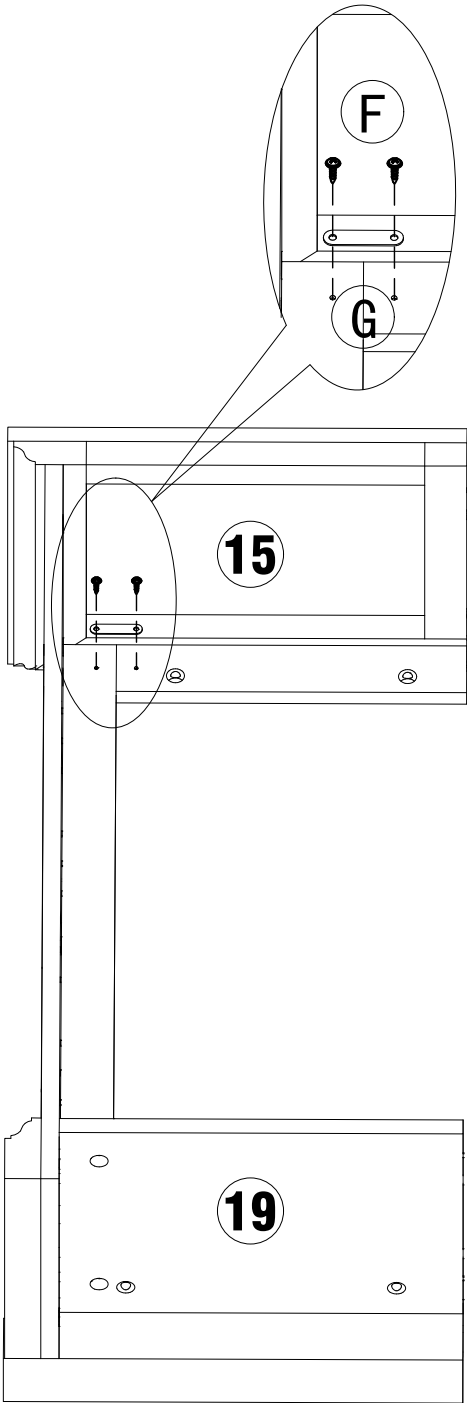  


 
STEP 9

	
D X10	E X10

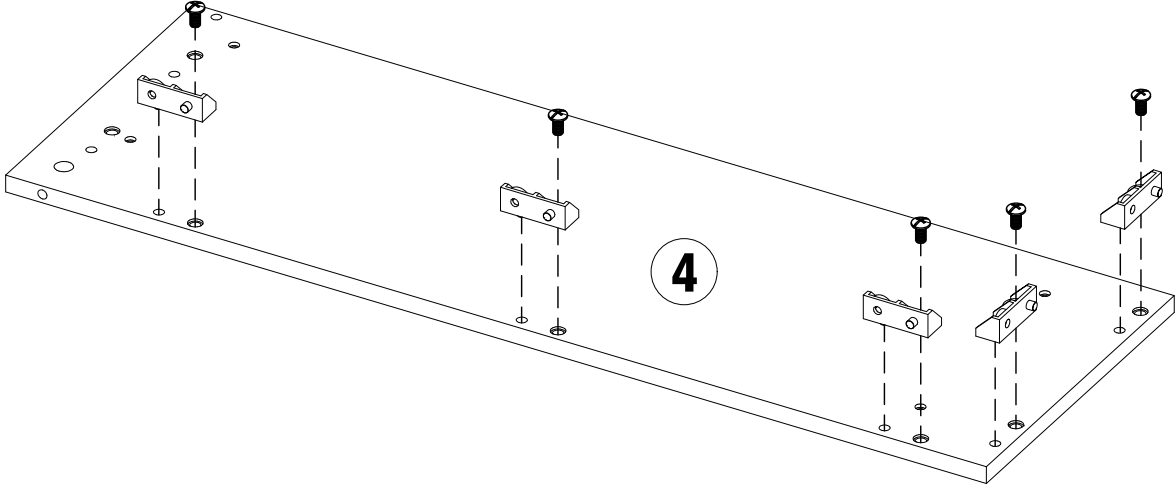 
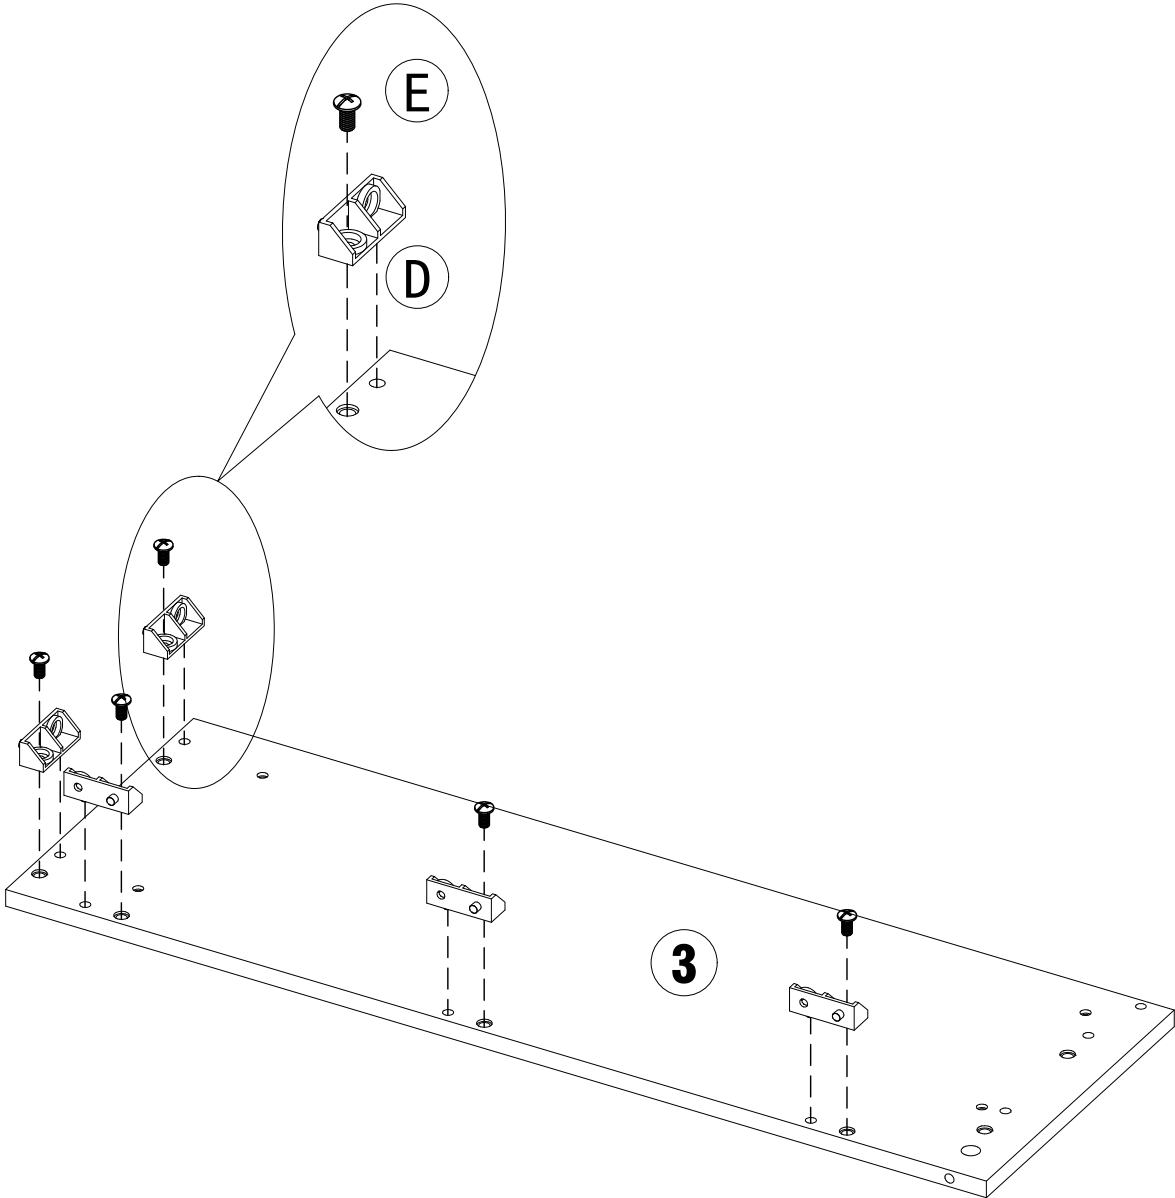 


 
STEP 10

	
A	B
X8	X8

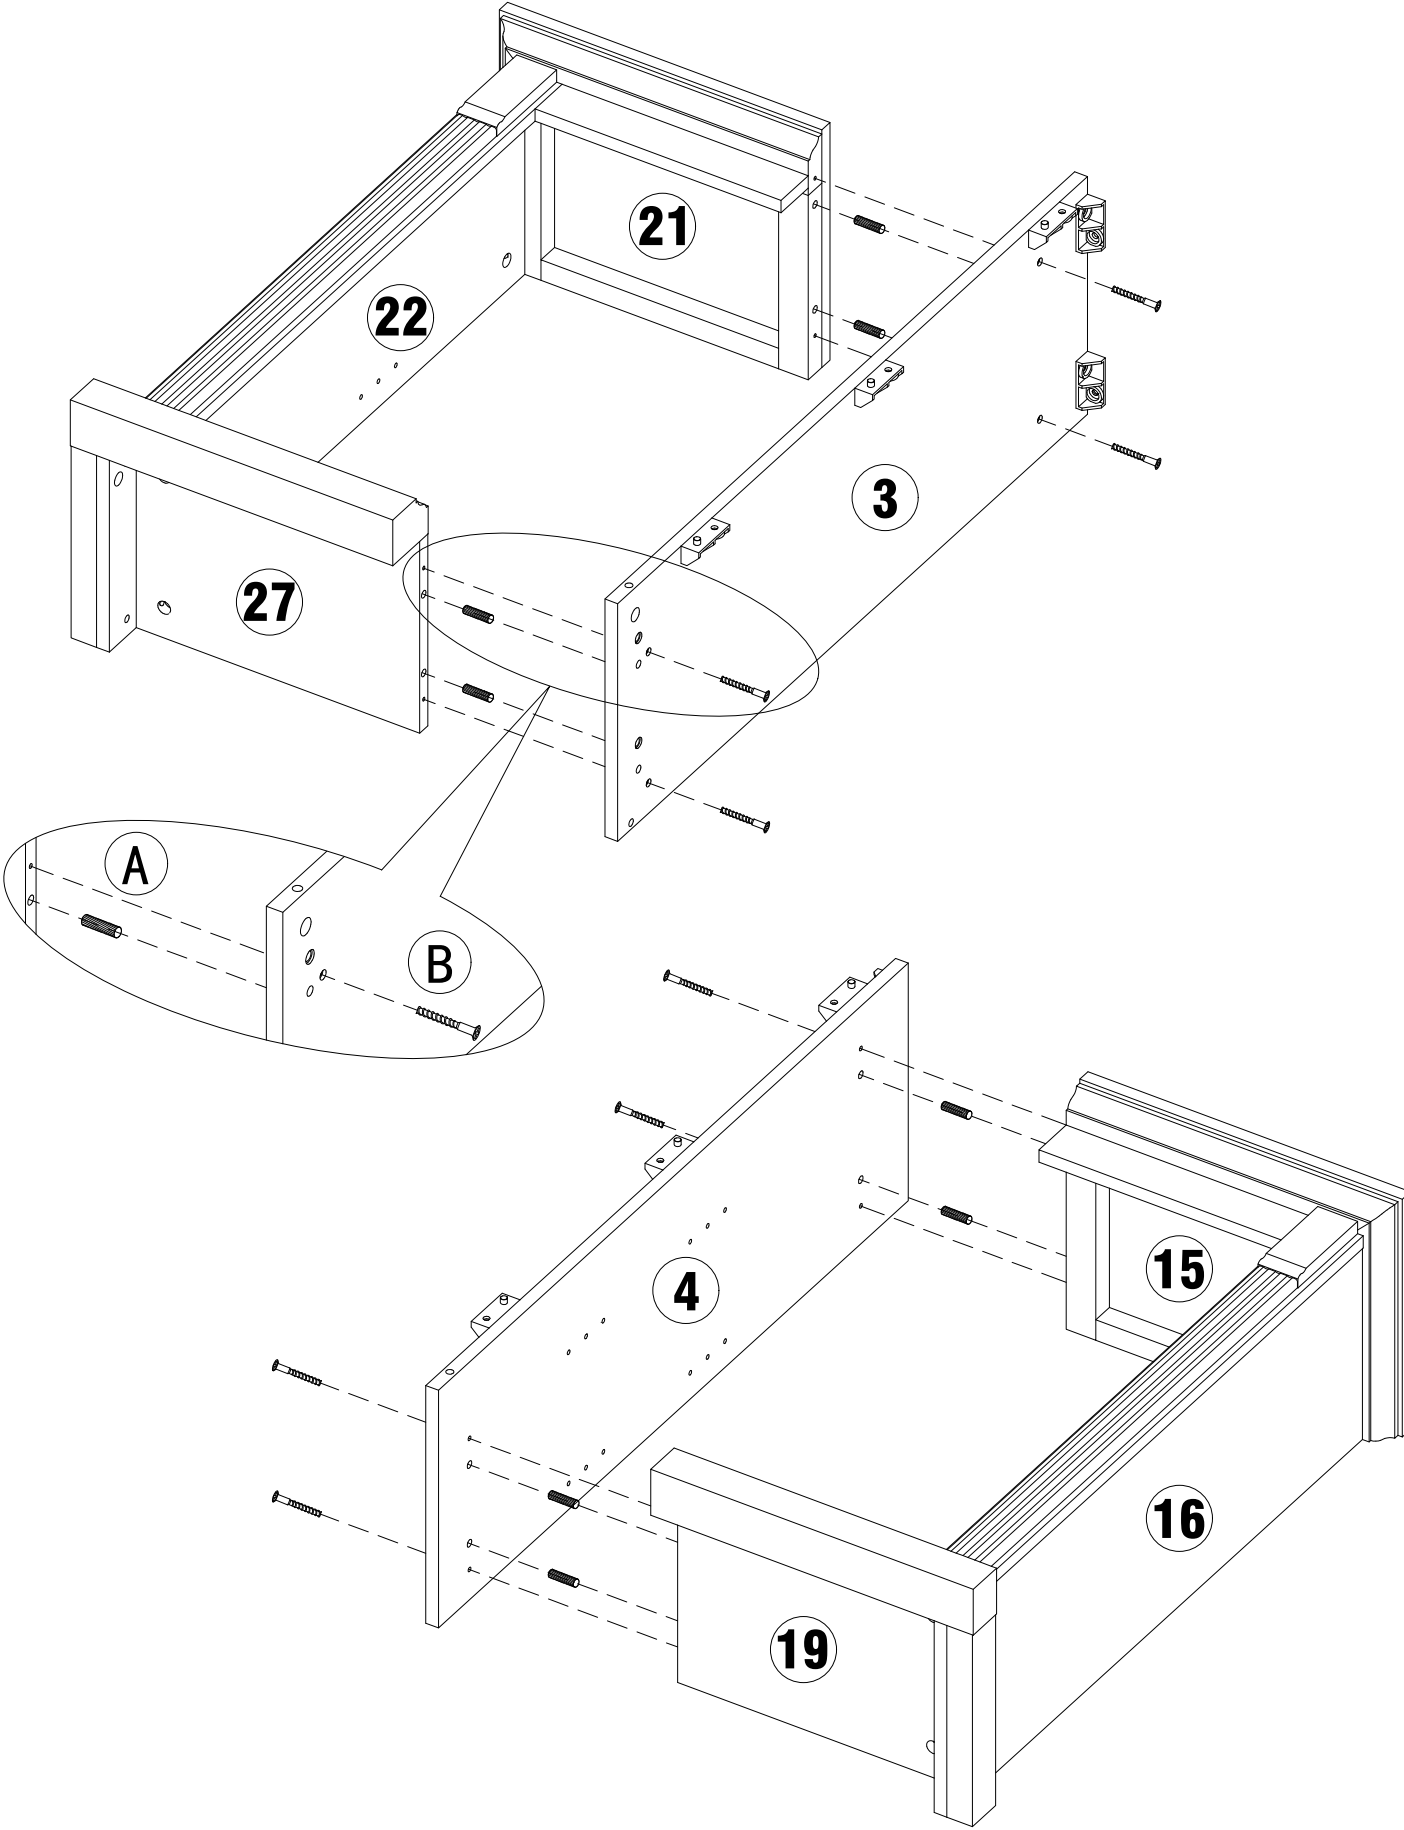 

 
 
STEP 11

				
A	D	E	L	M
X2	X4	X4	X3	X3

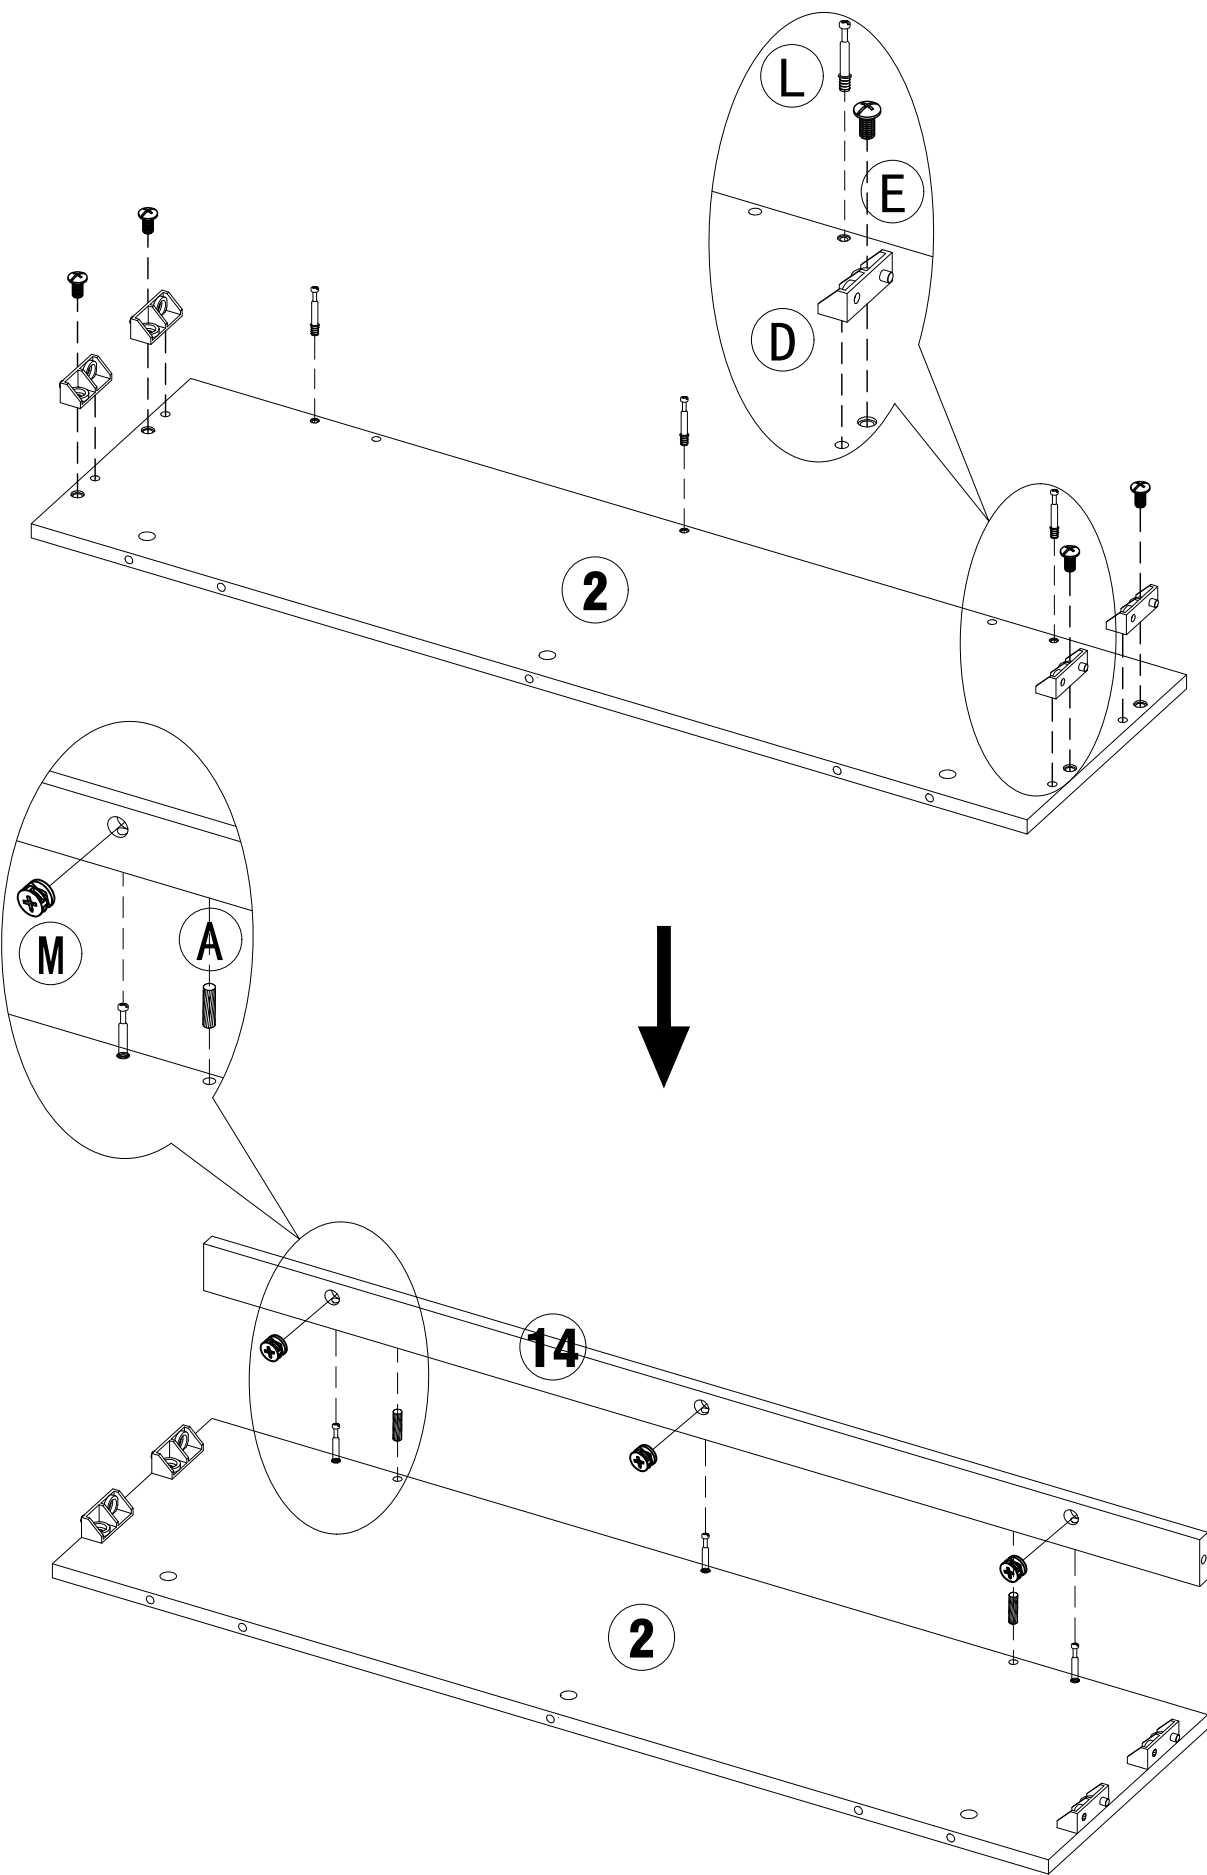 



STEP 12

	
A	E
X2	X4


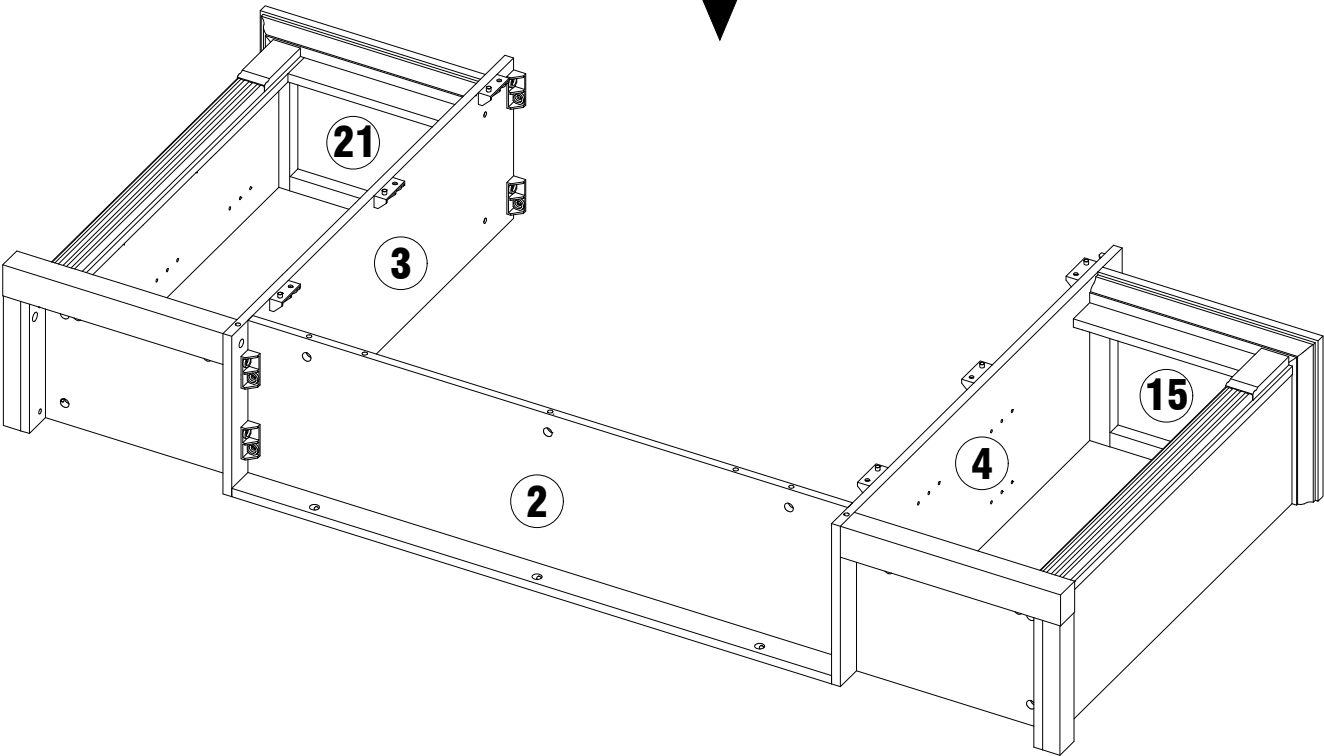 
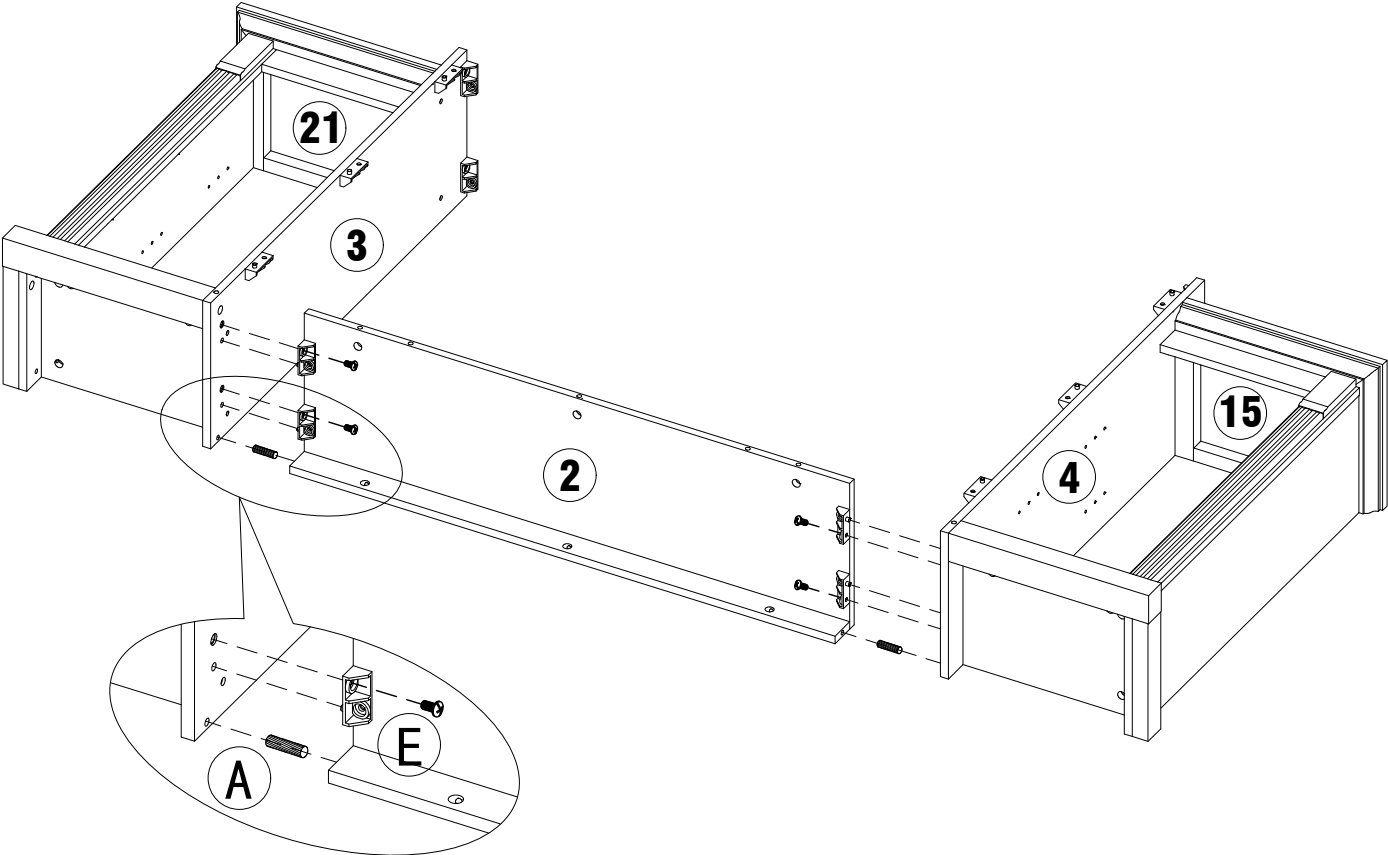 


 STEP 13

		
D	E	L
X3	X3	X7


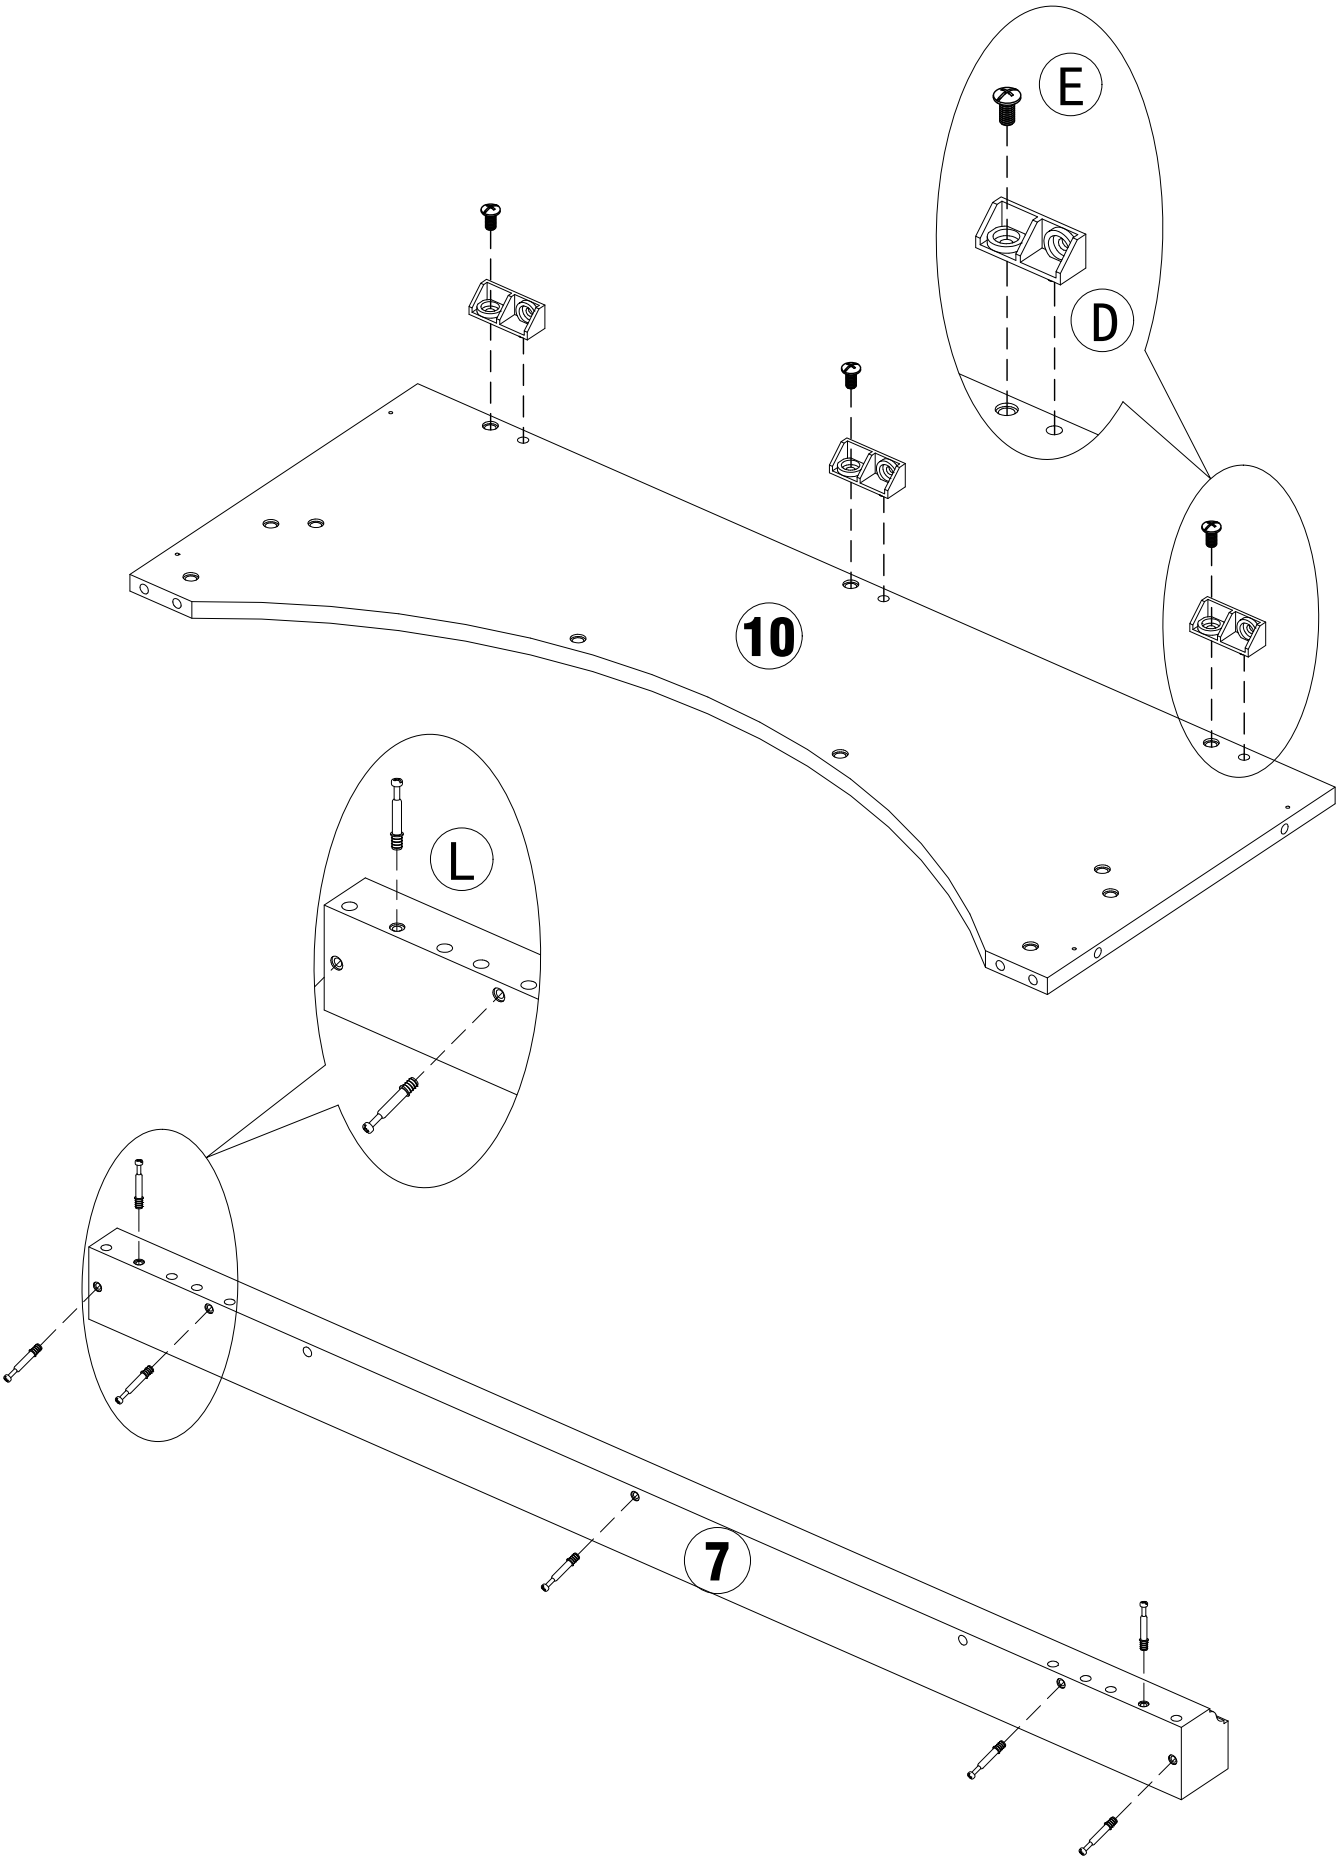 


   STEP 14

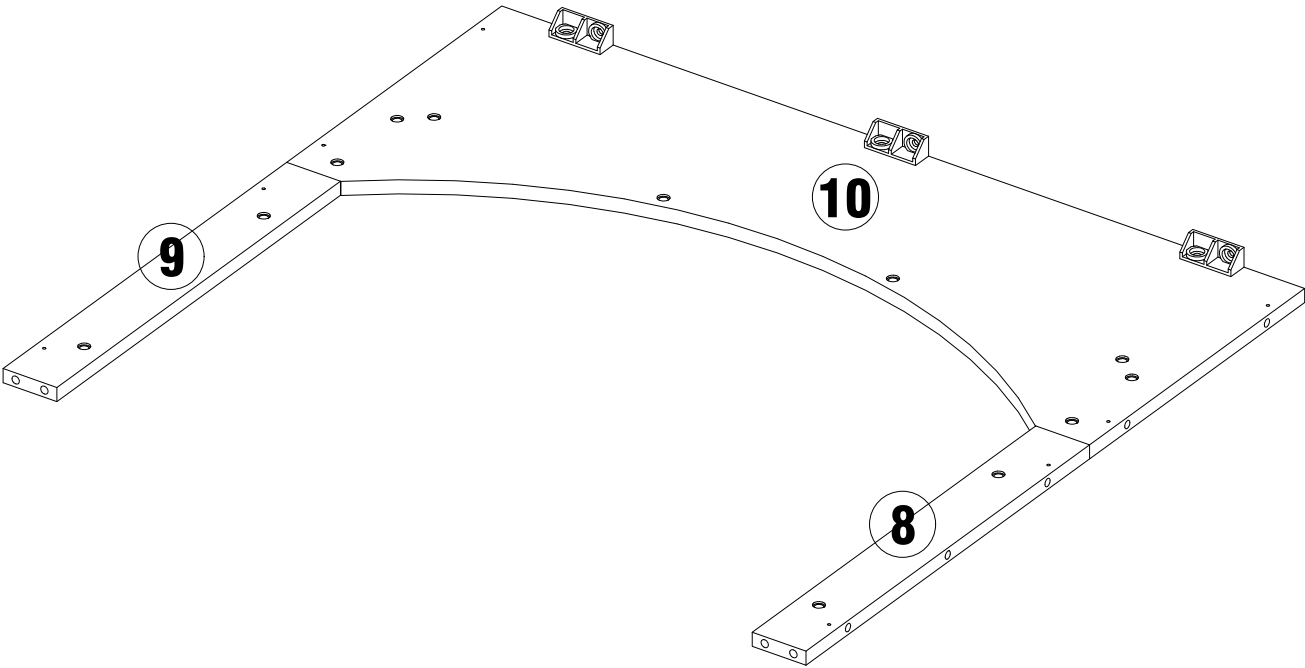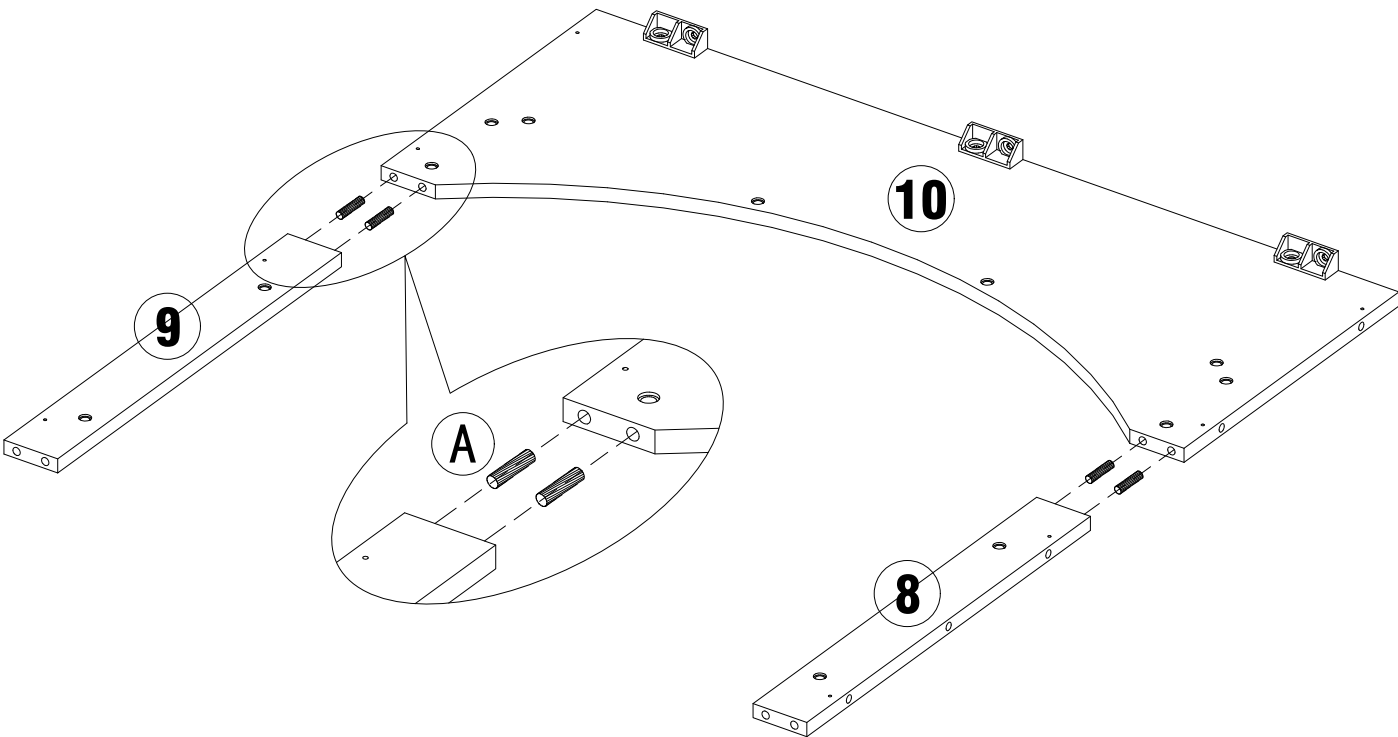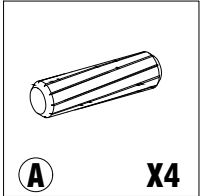



STEP 15

		
A	F	G
X10	X16	X8

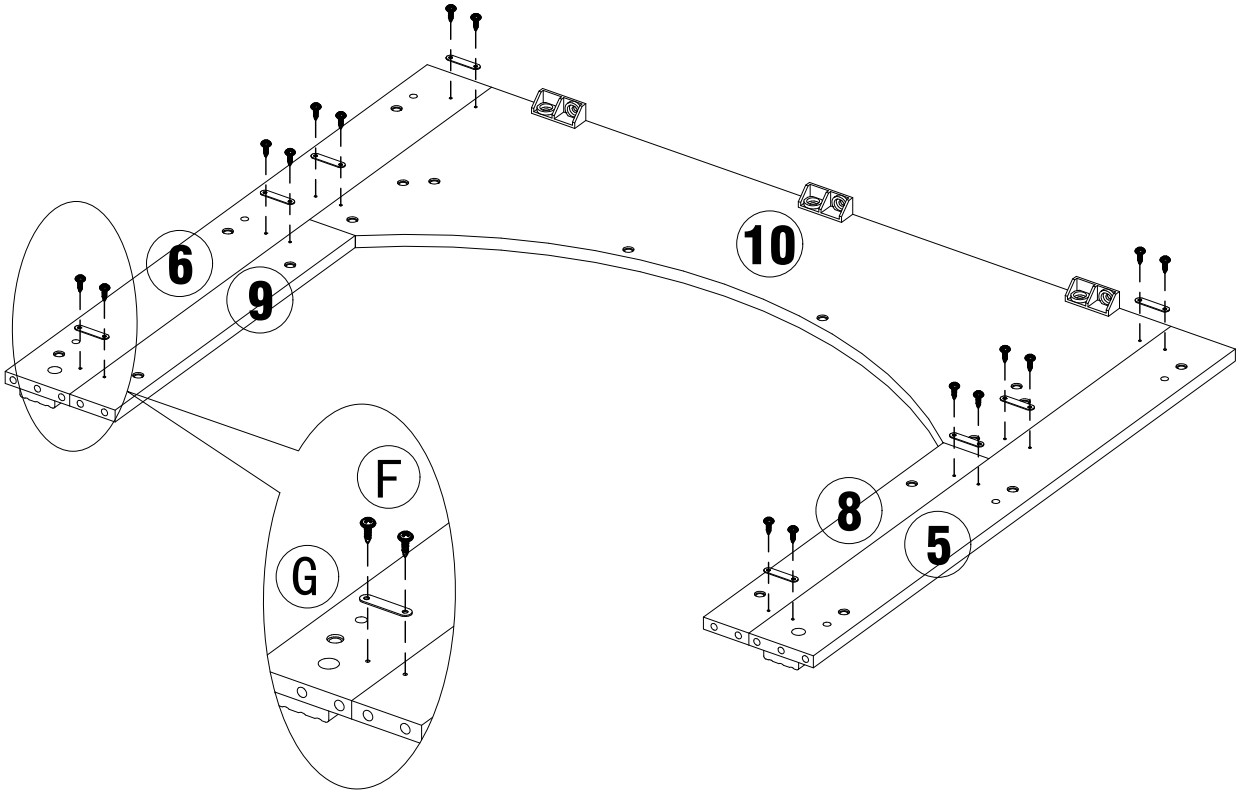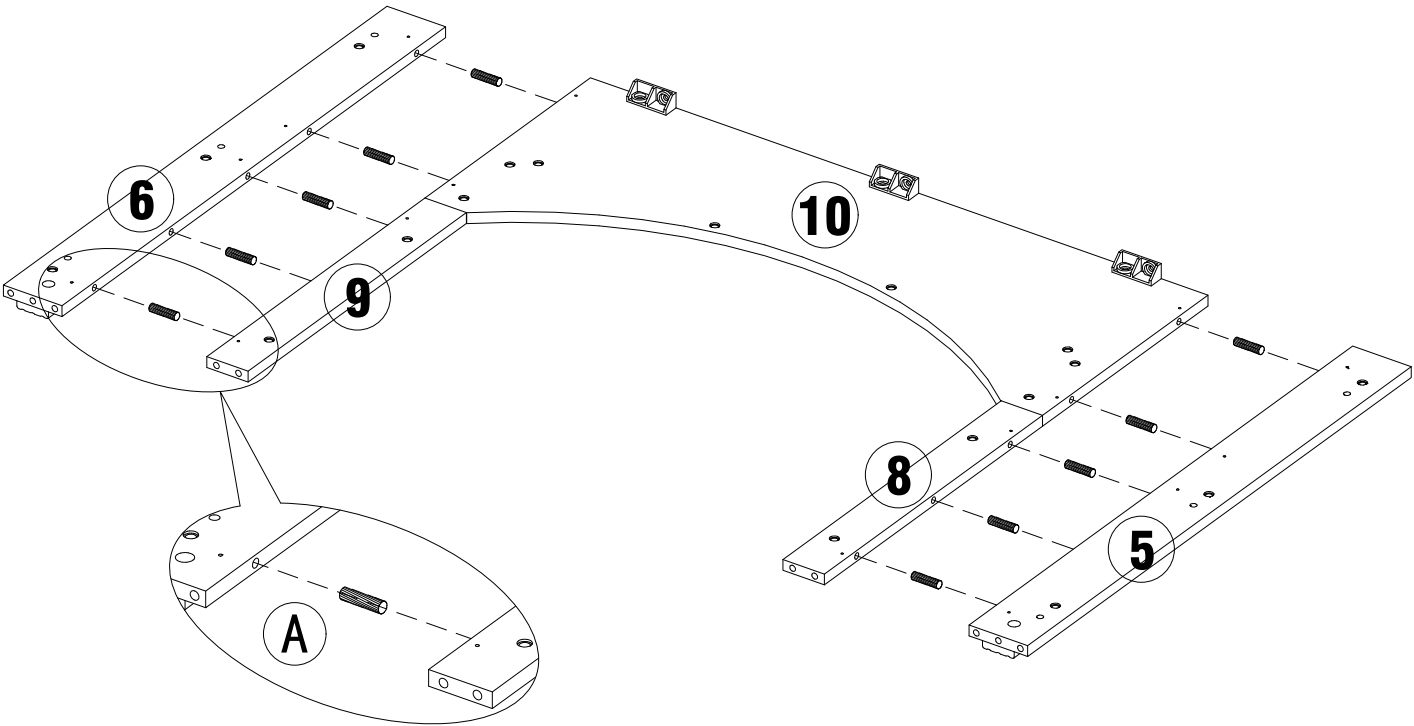  

STEP 16


	
A	M
X8	X2

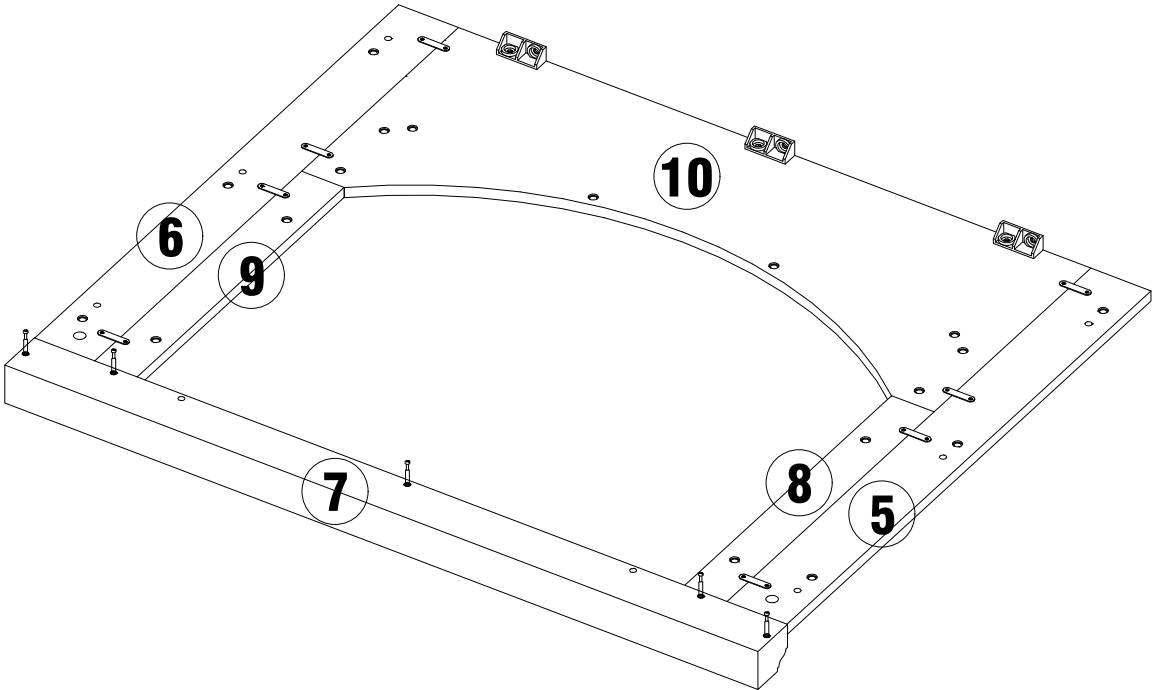 
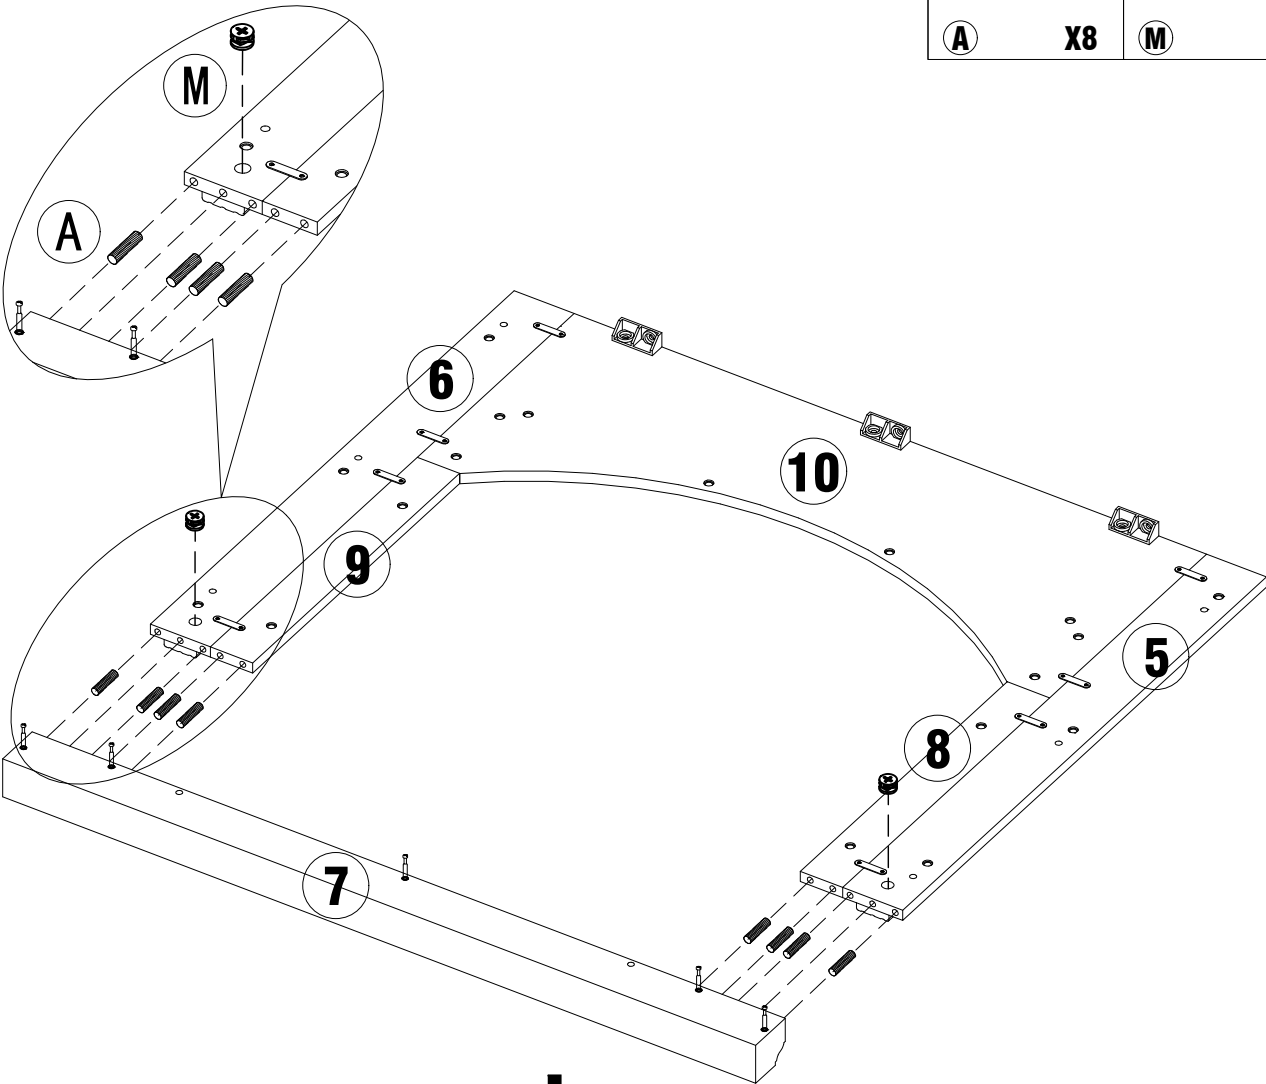 


STEP 17


A **X2**

 

M **X5**

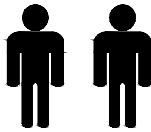
2 People

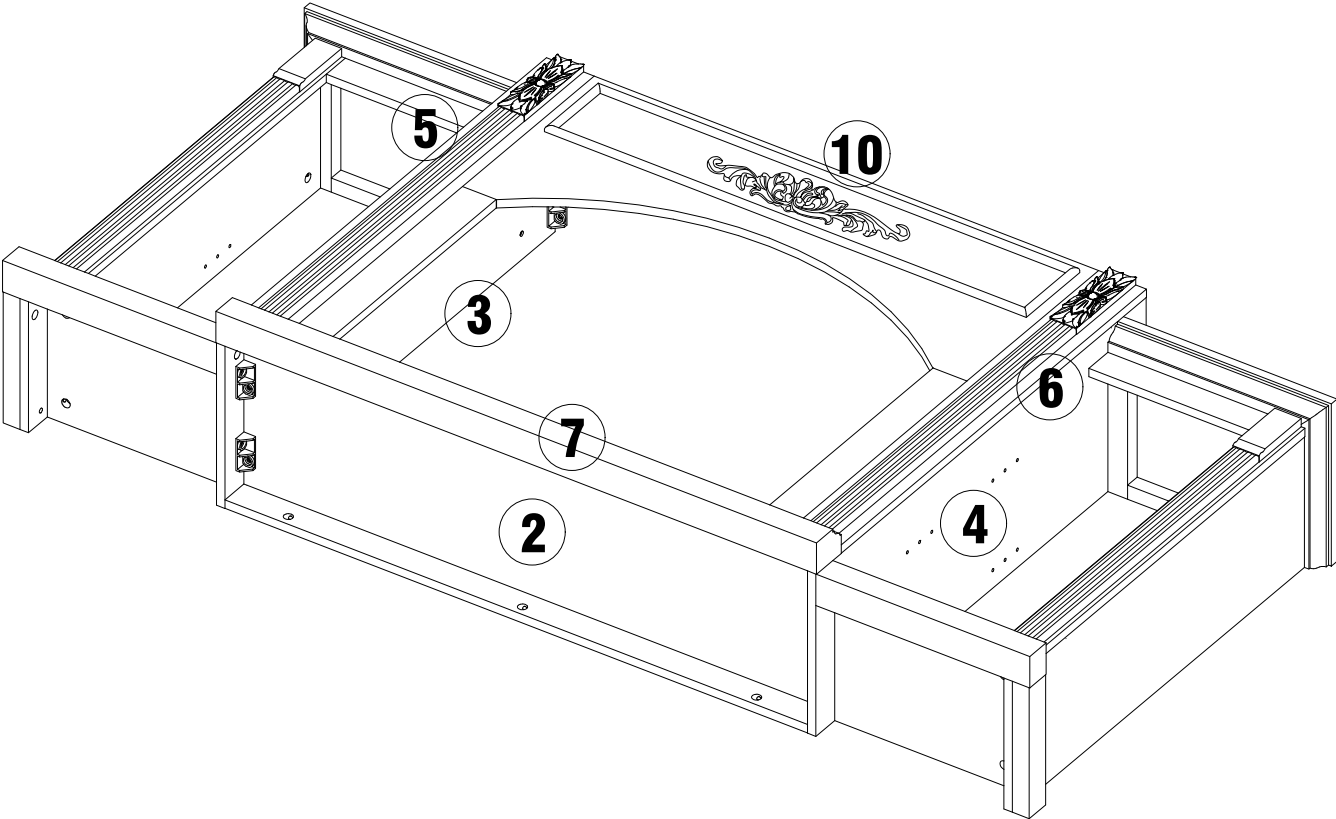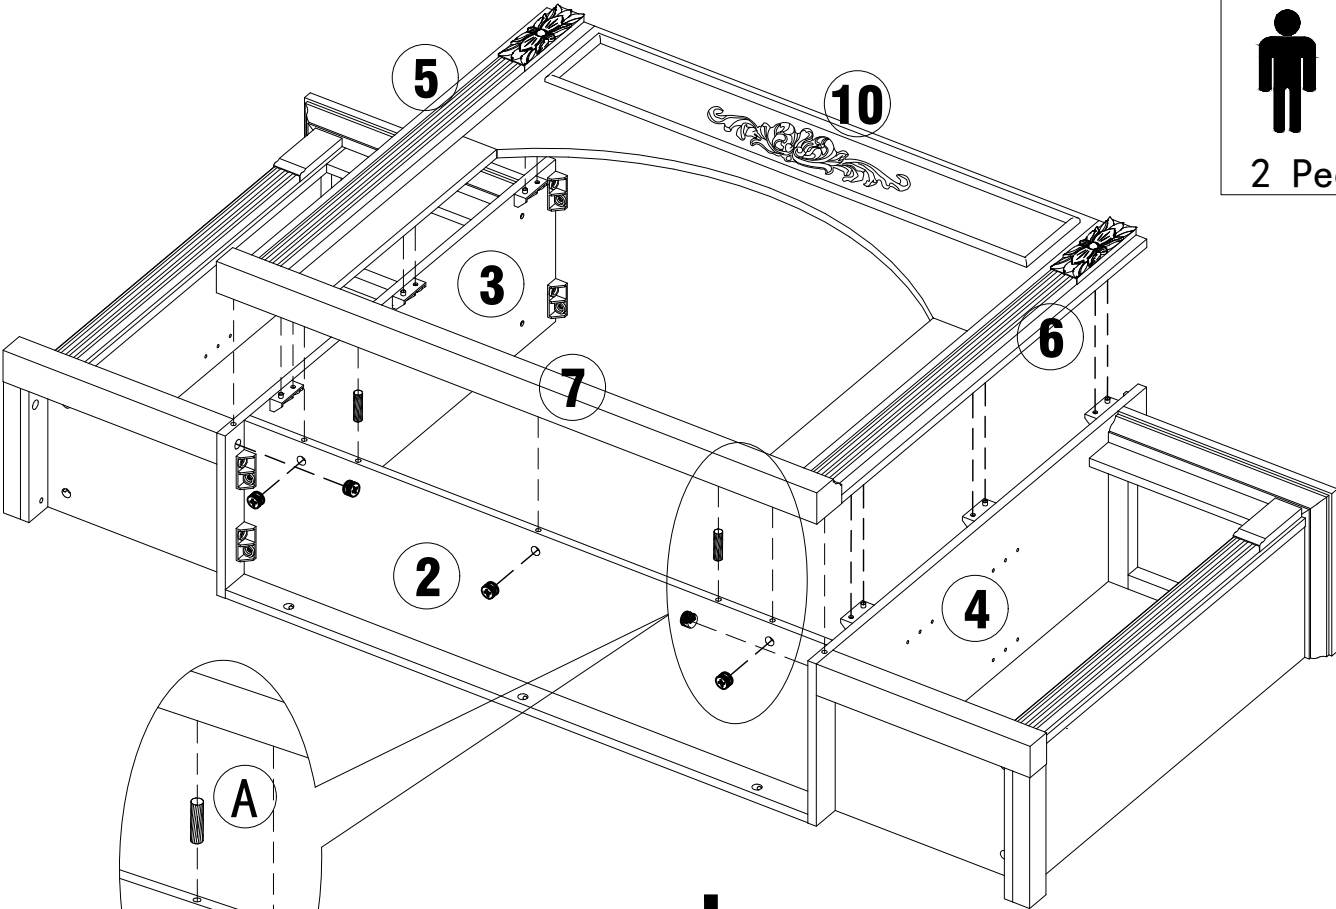  

STEP 18

 
E **X6**

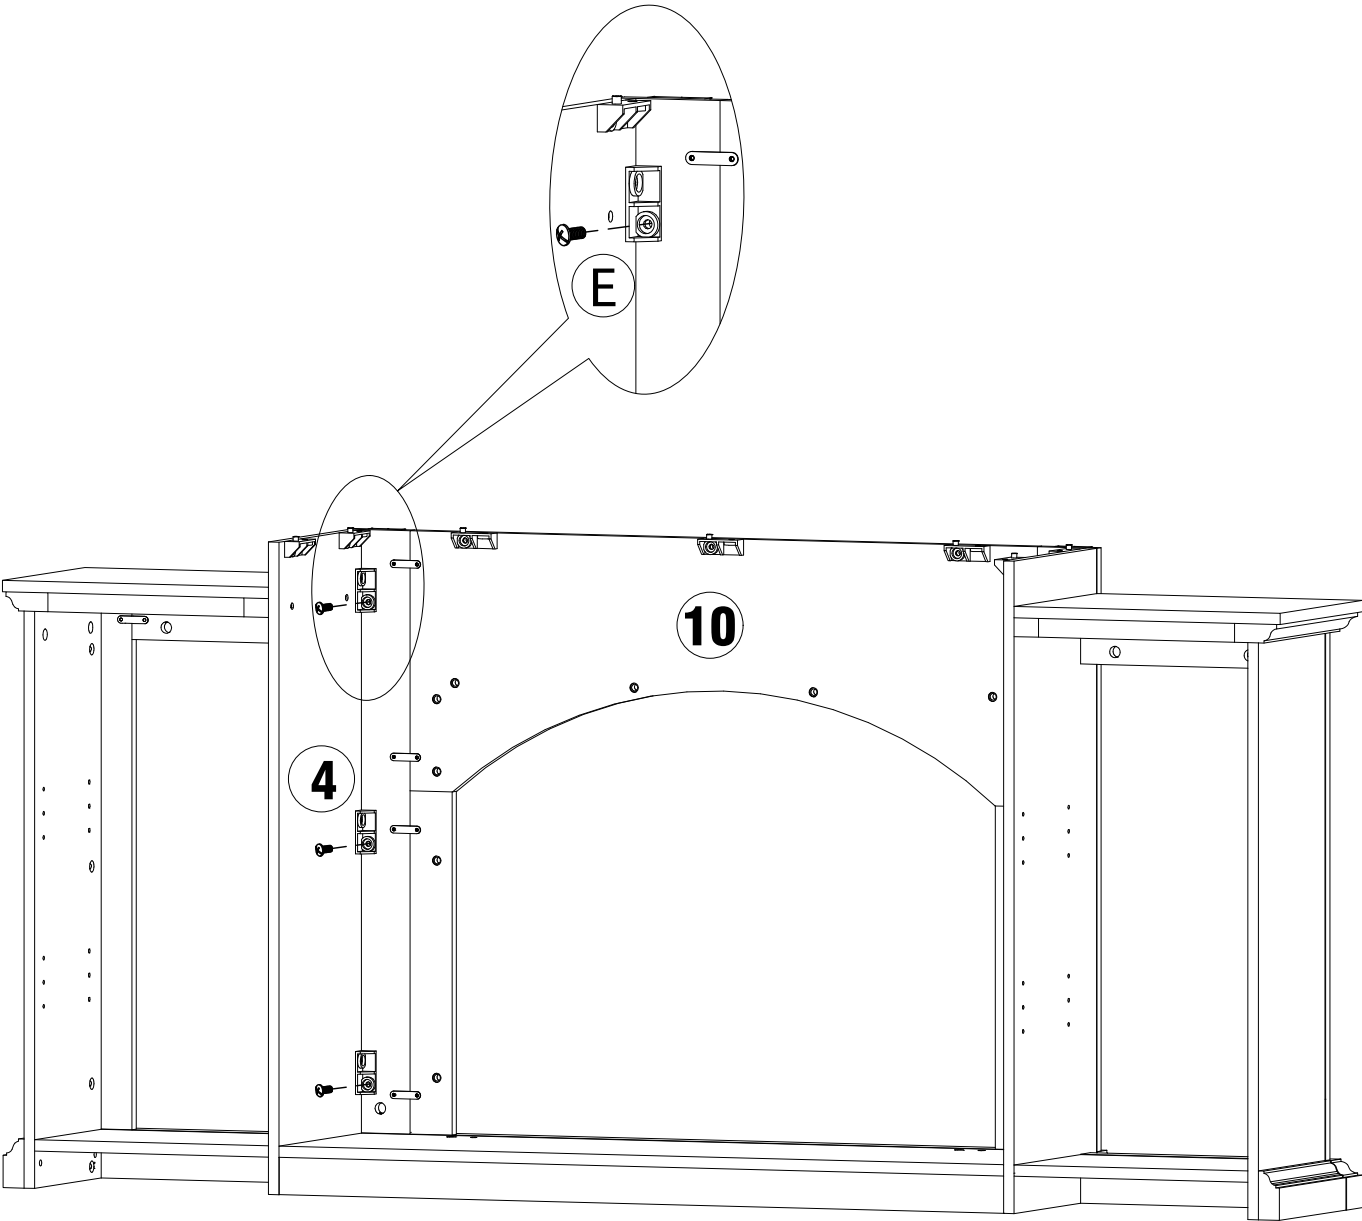


STEP 19







E

 X7

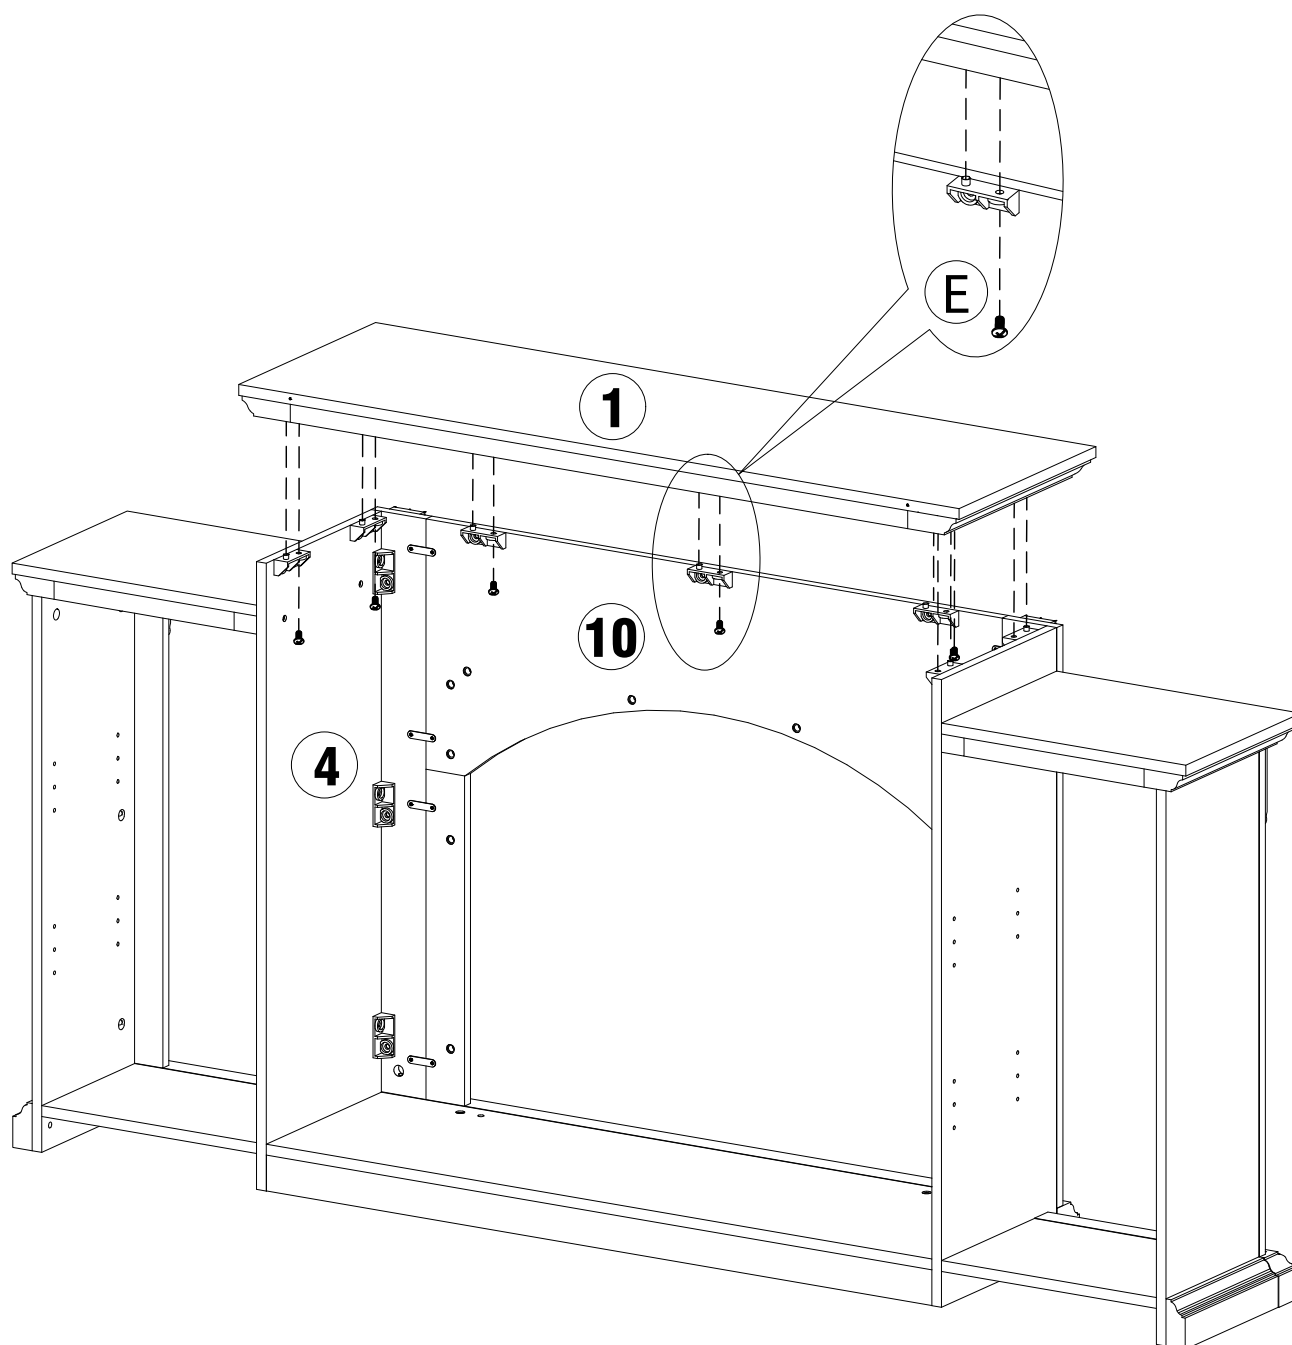


  
STEP 20

									
A	X4	D	X2	E	X2	F	X4	G	X2

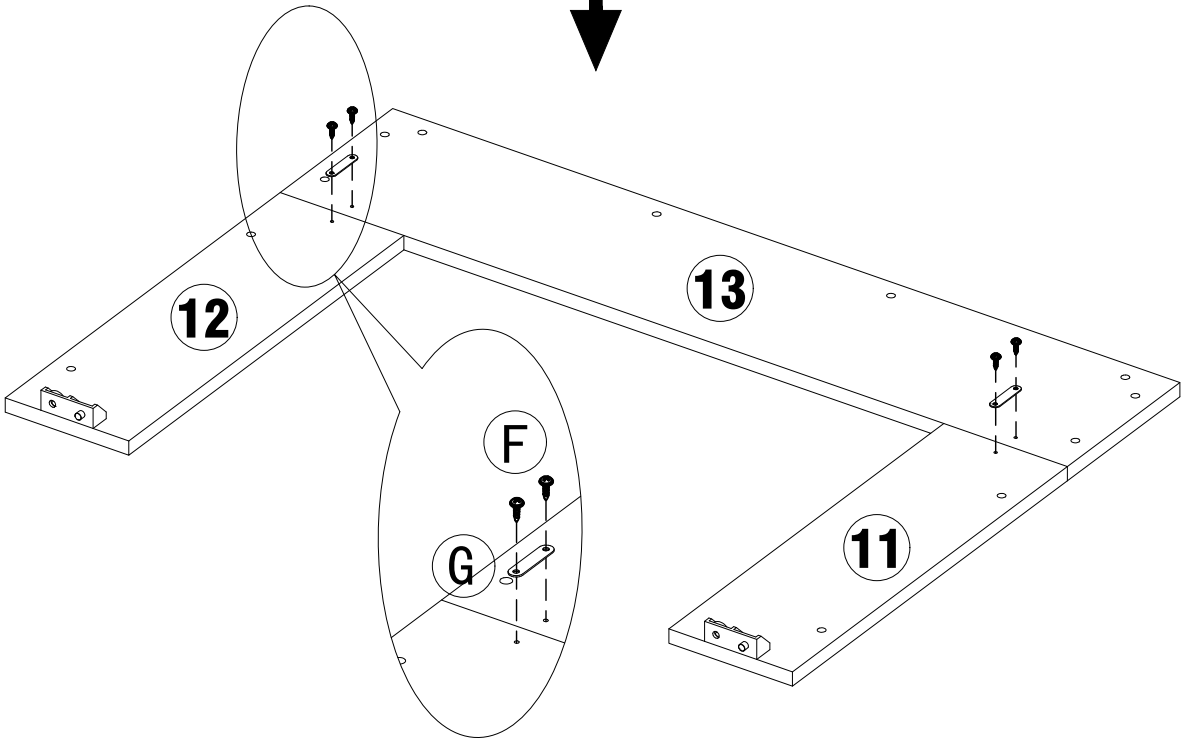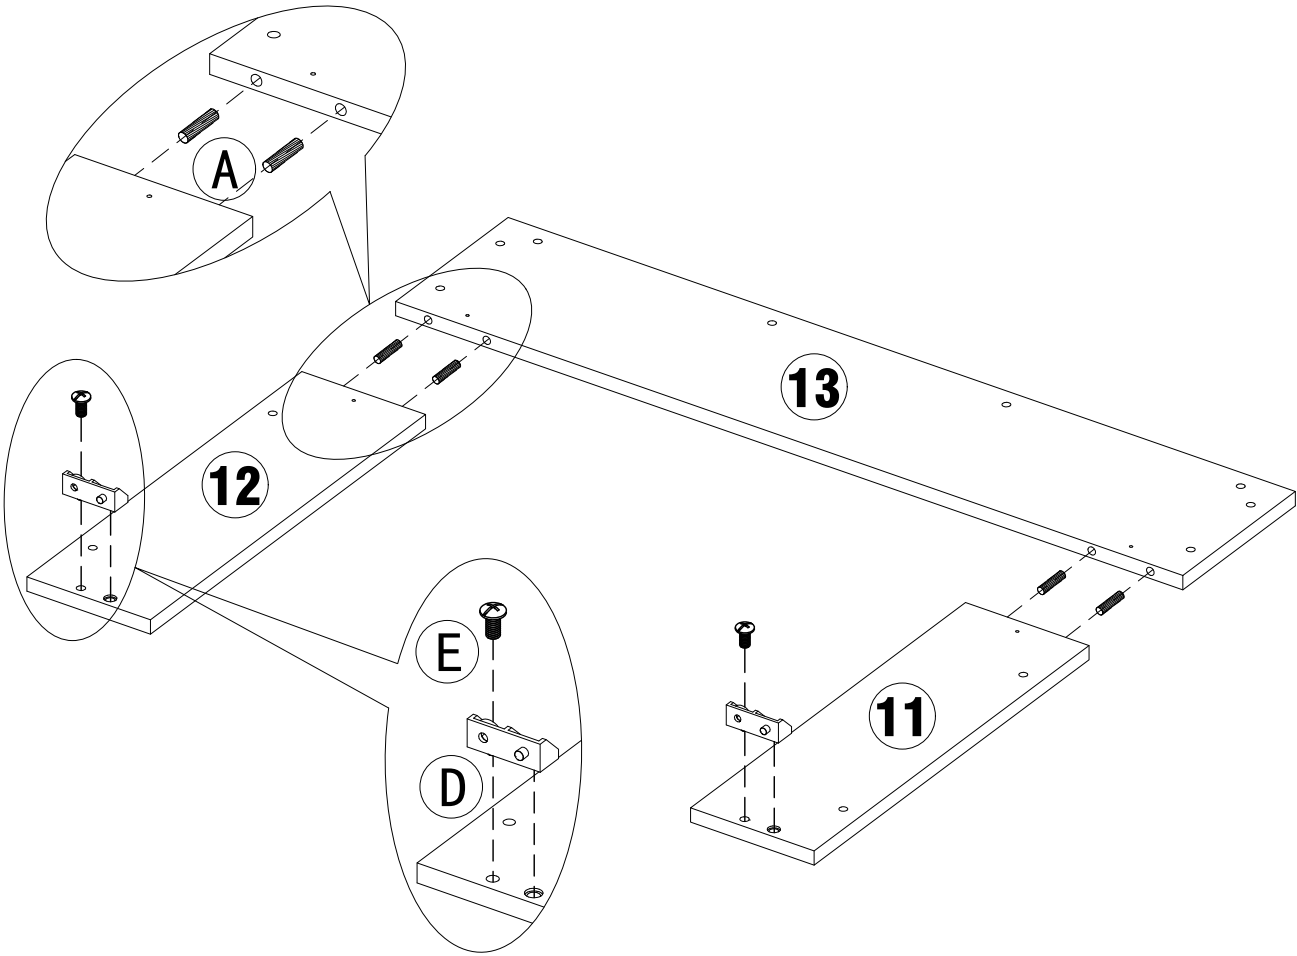  

 STEP 21

	
C	E
X12	X2

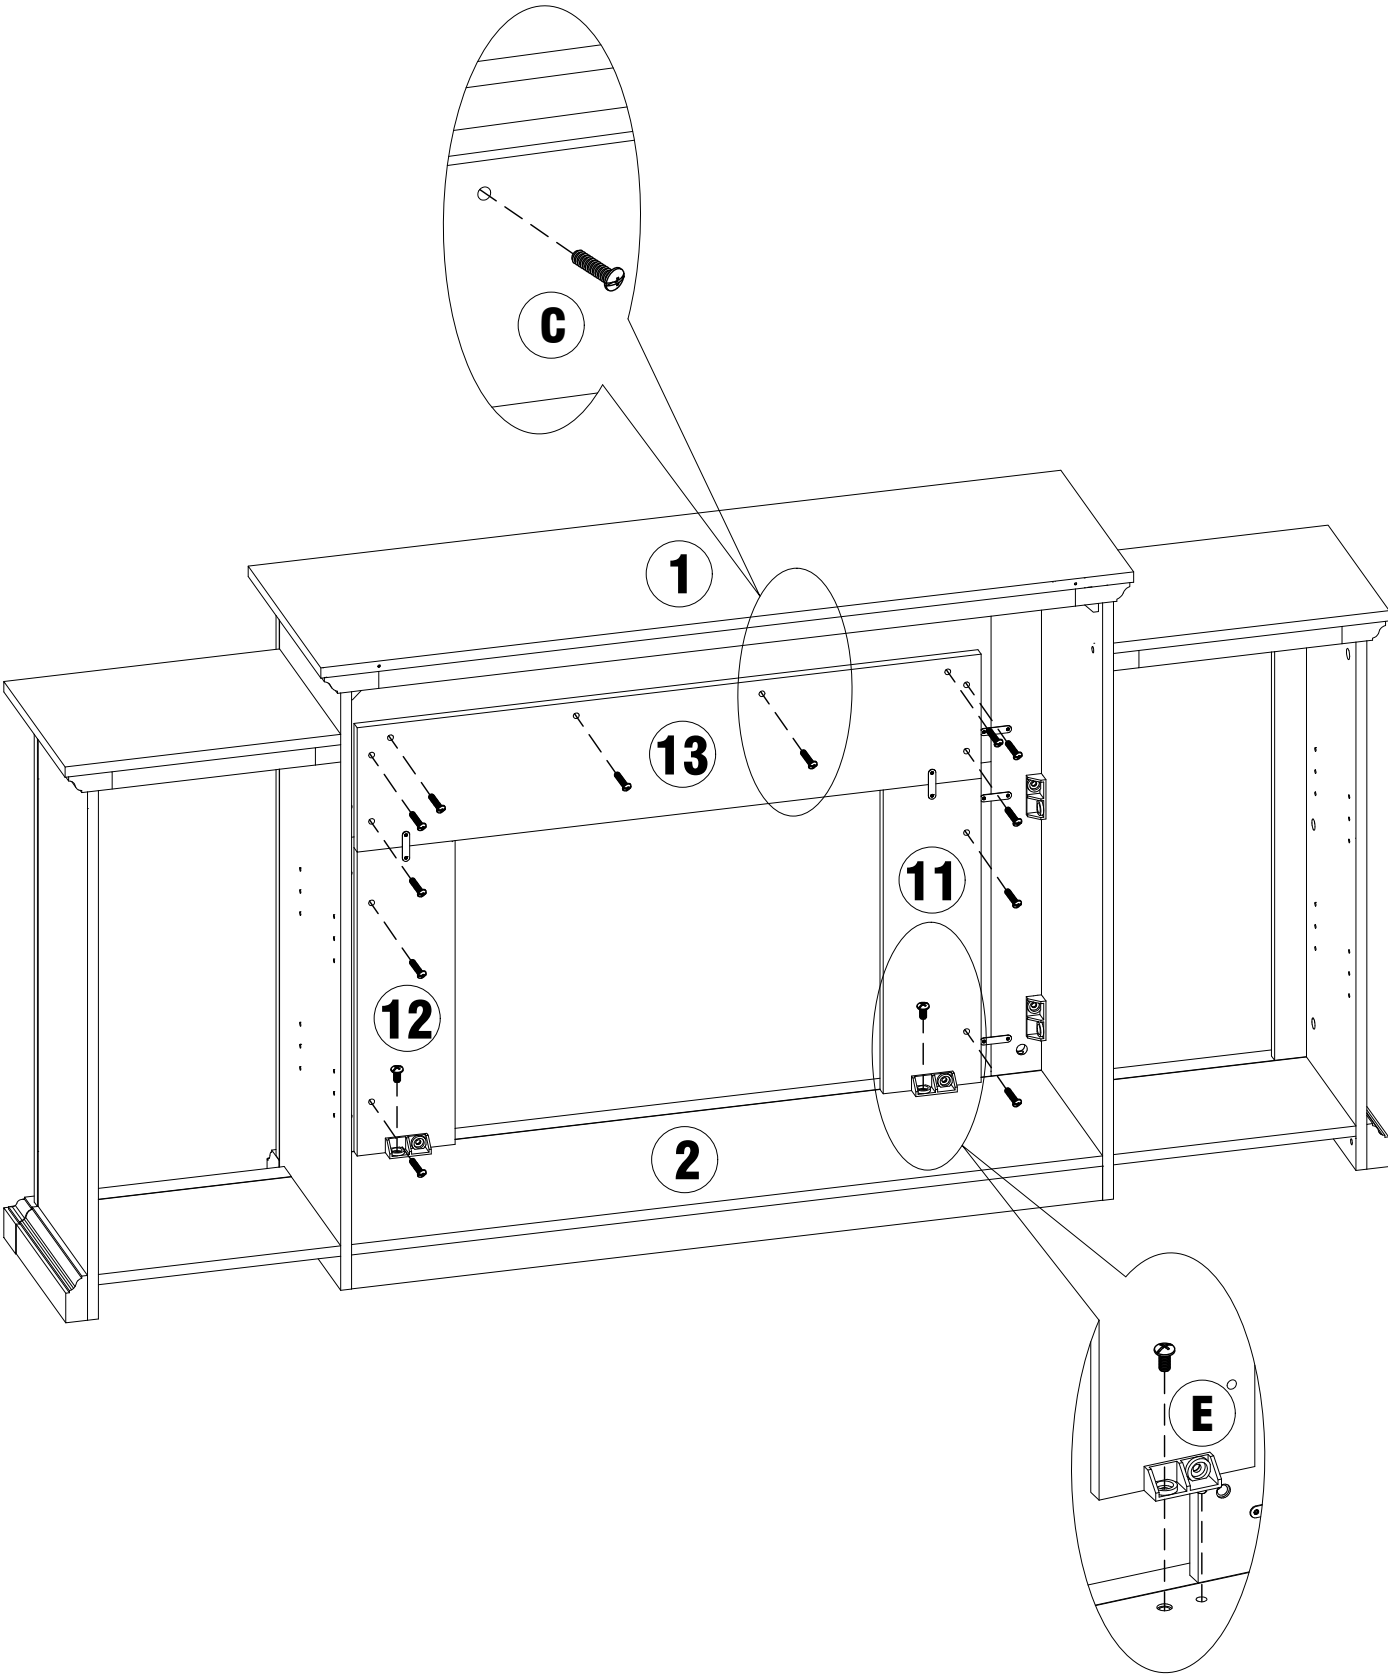 


STEP 22





F


 
X32

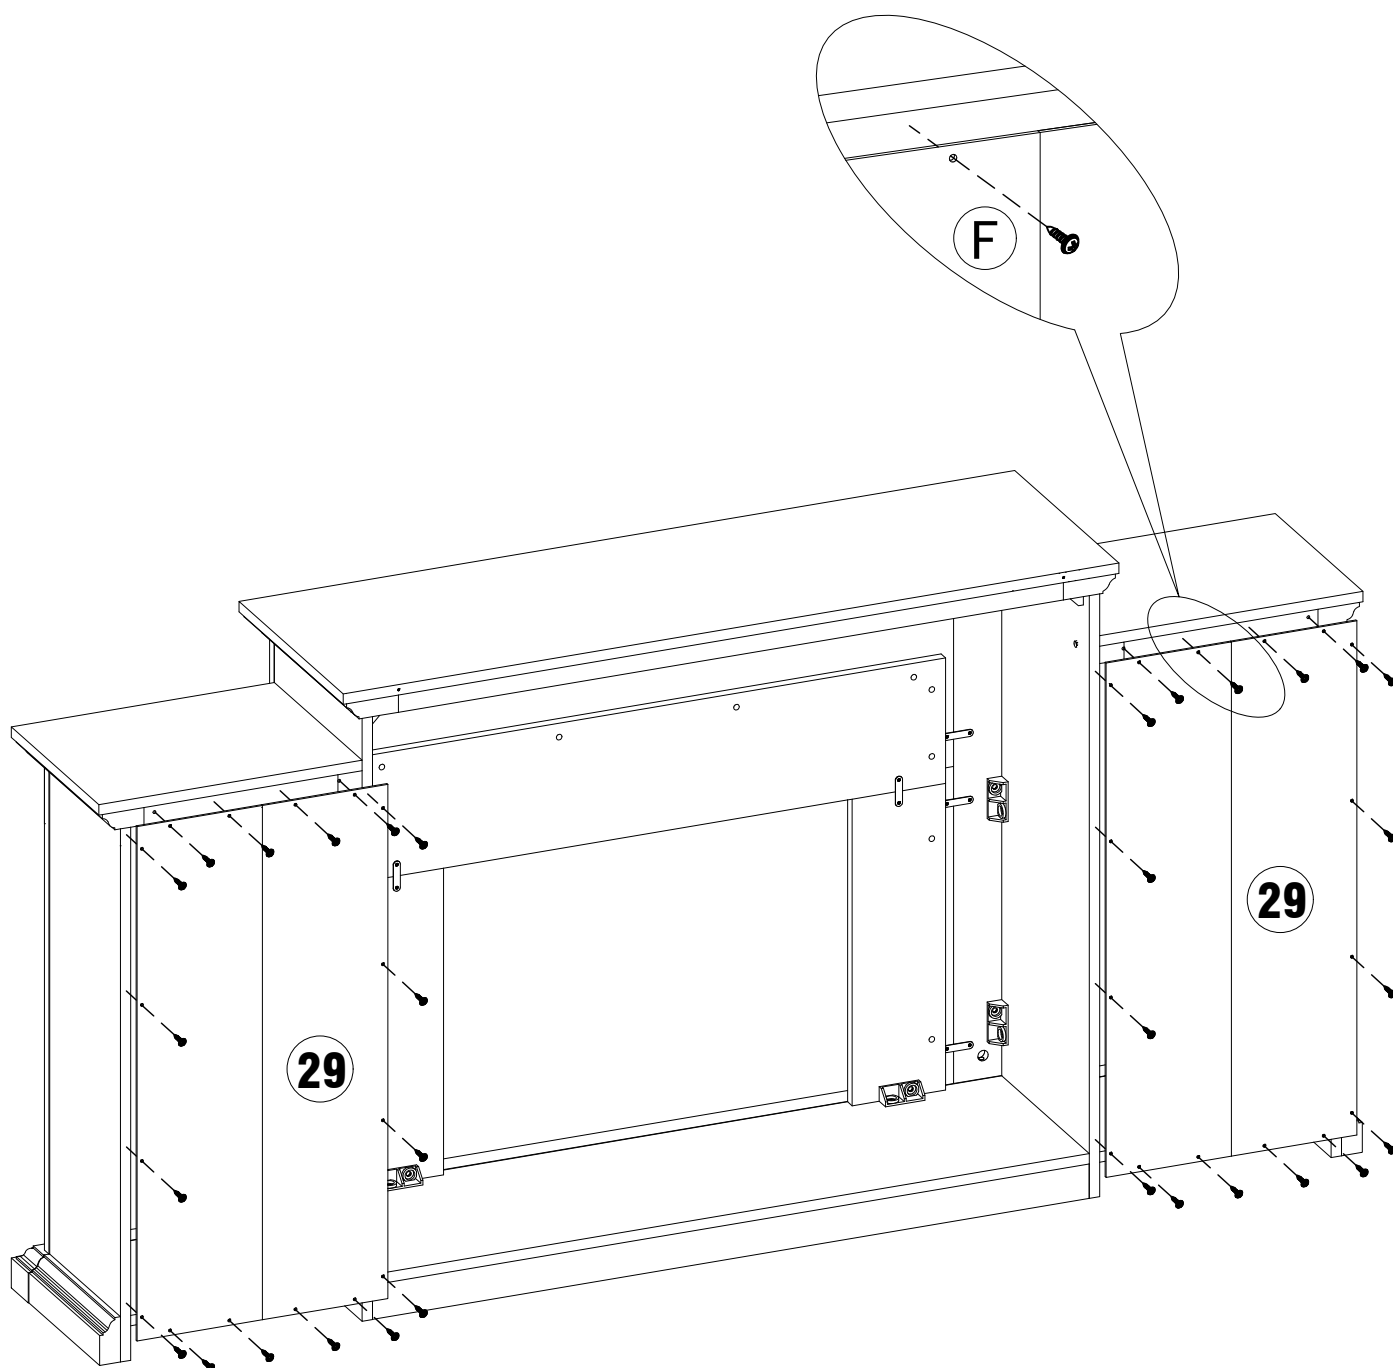

 
 
STEP 23

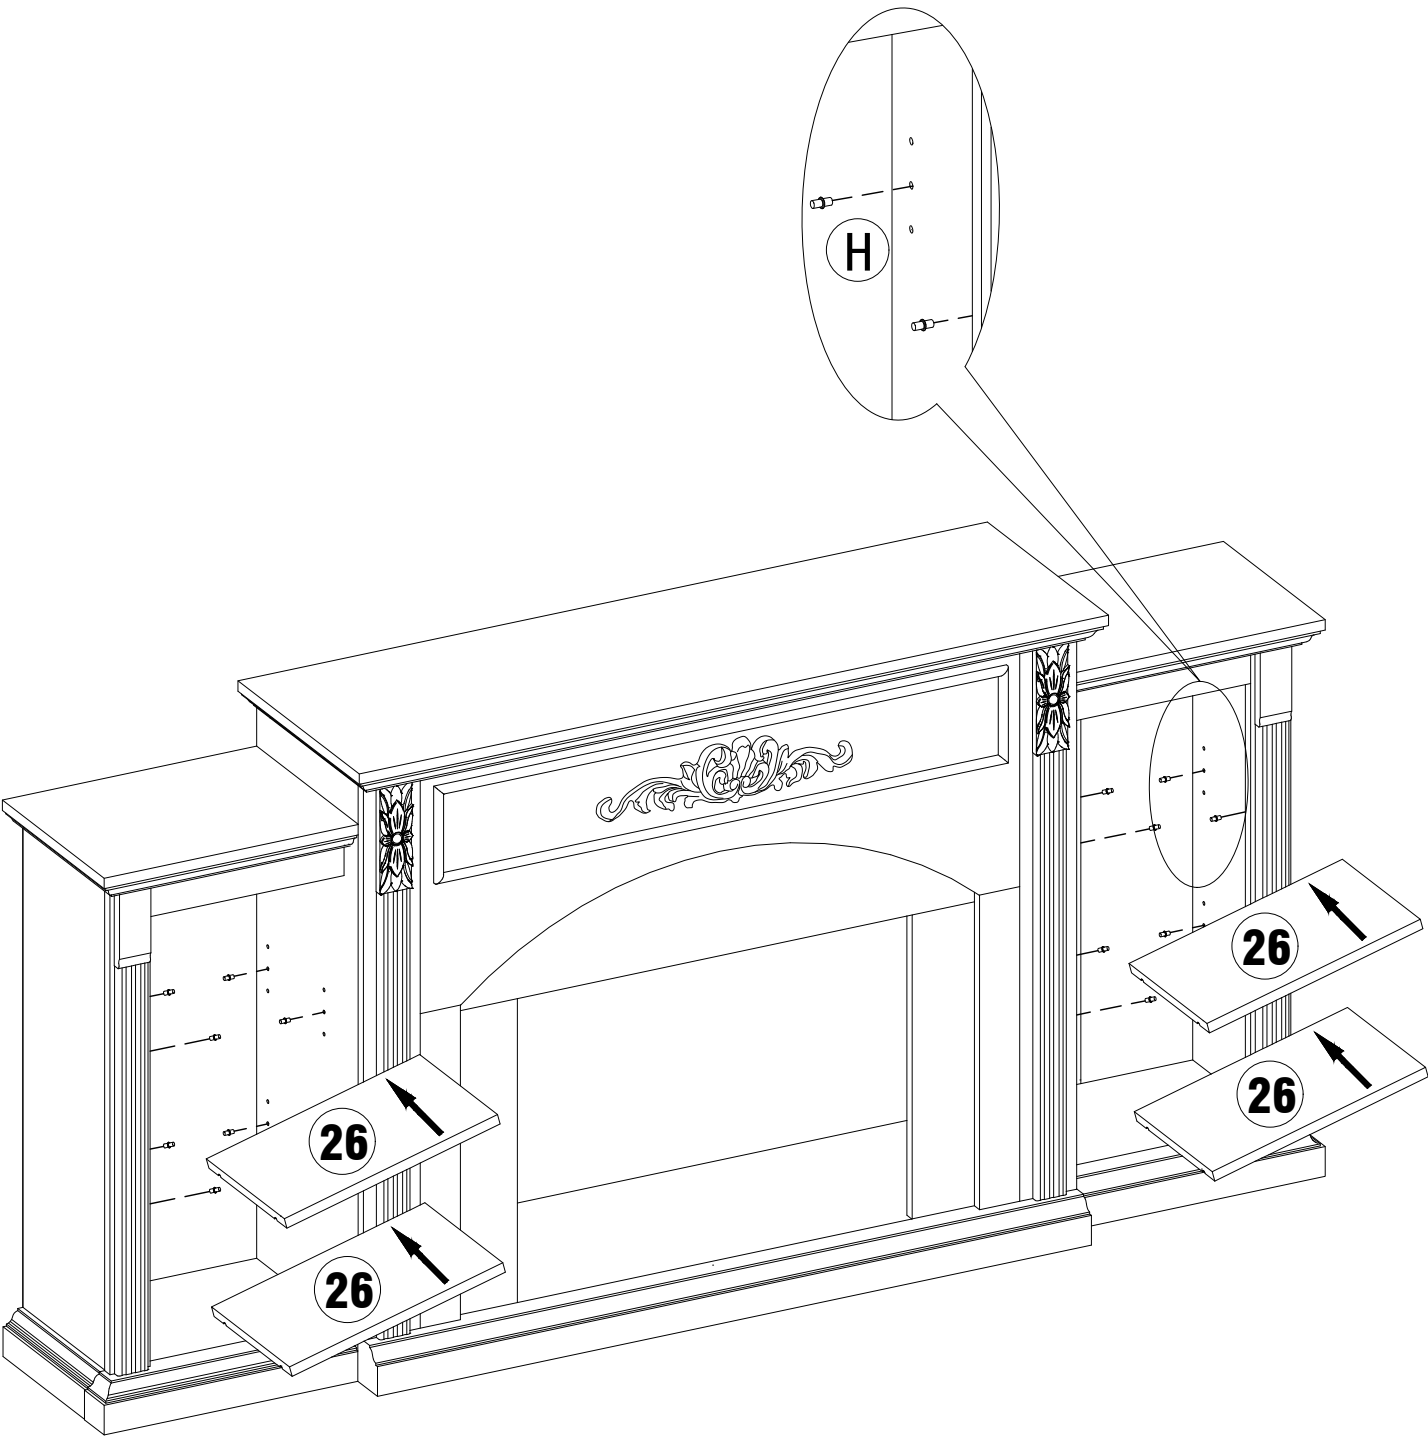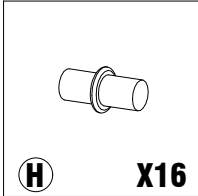

  STEP 24

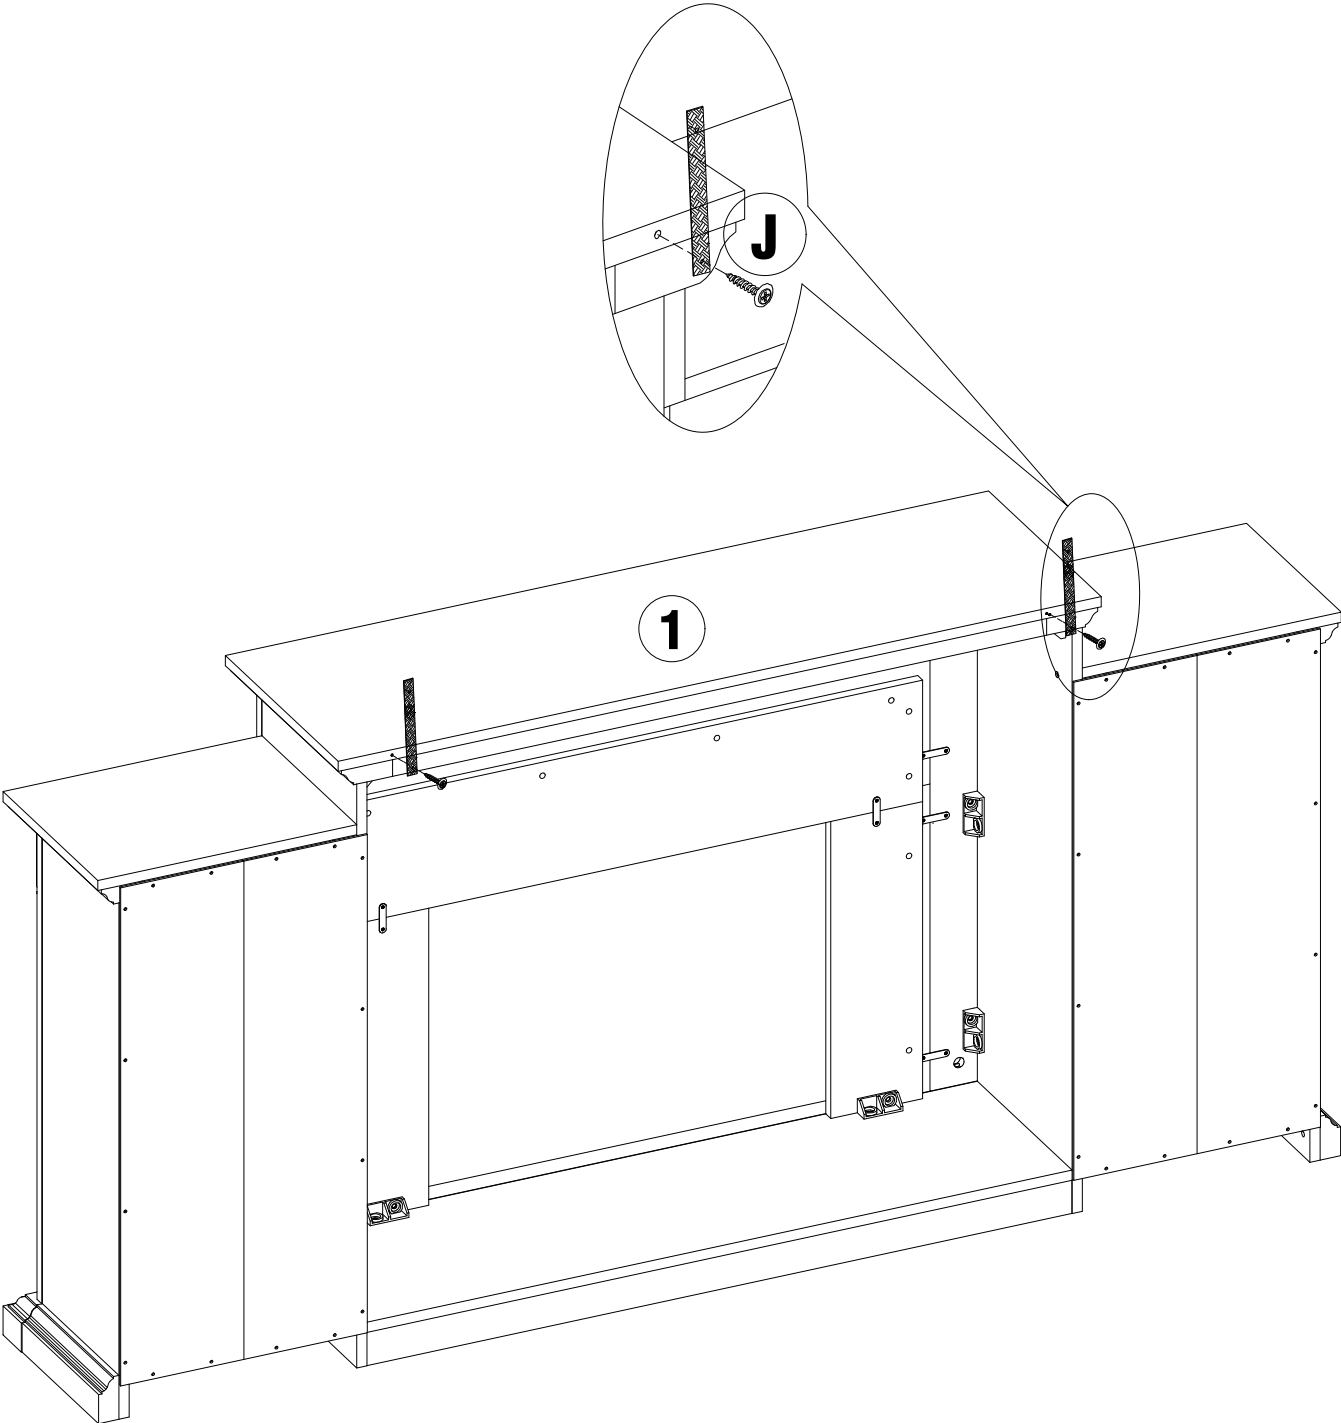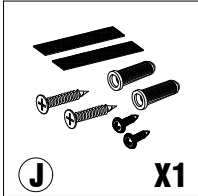

  STEP 25

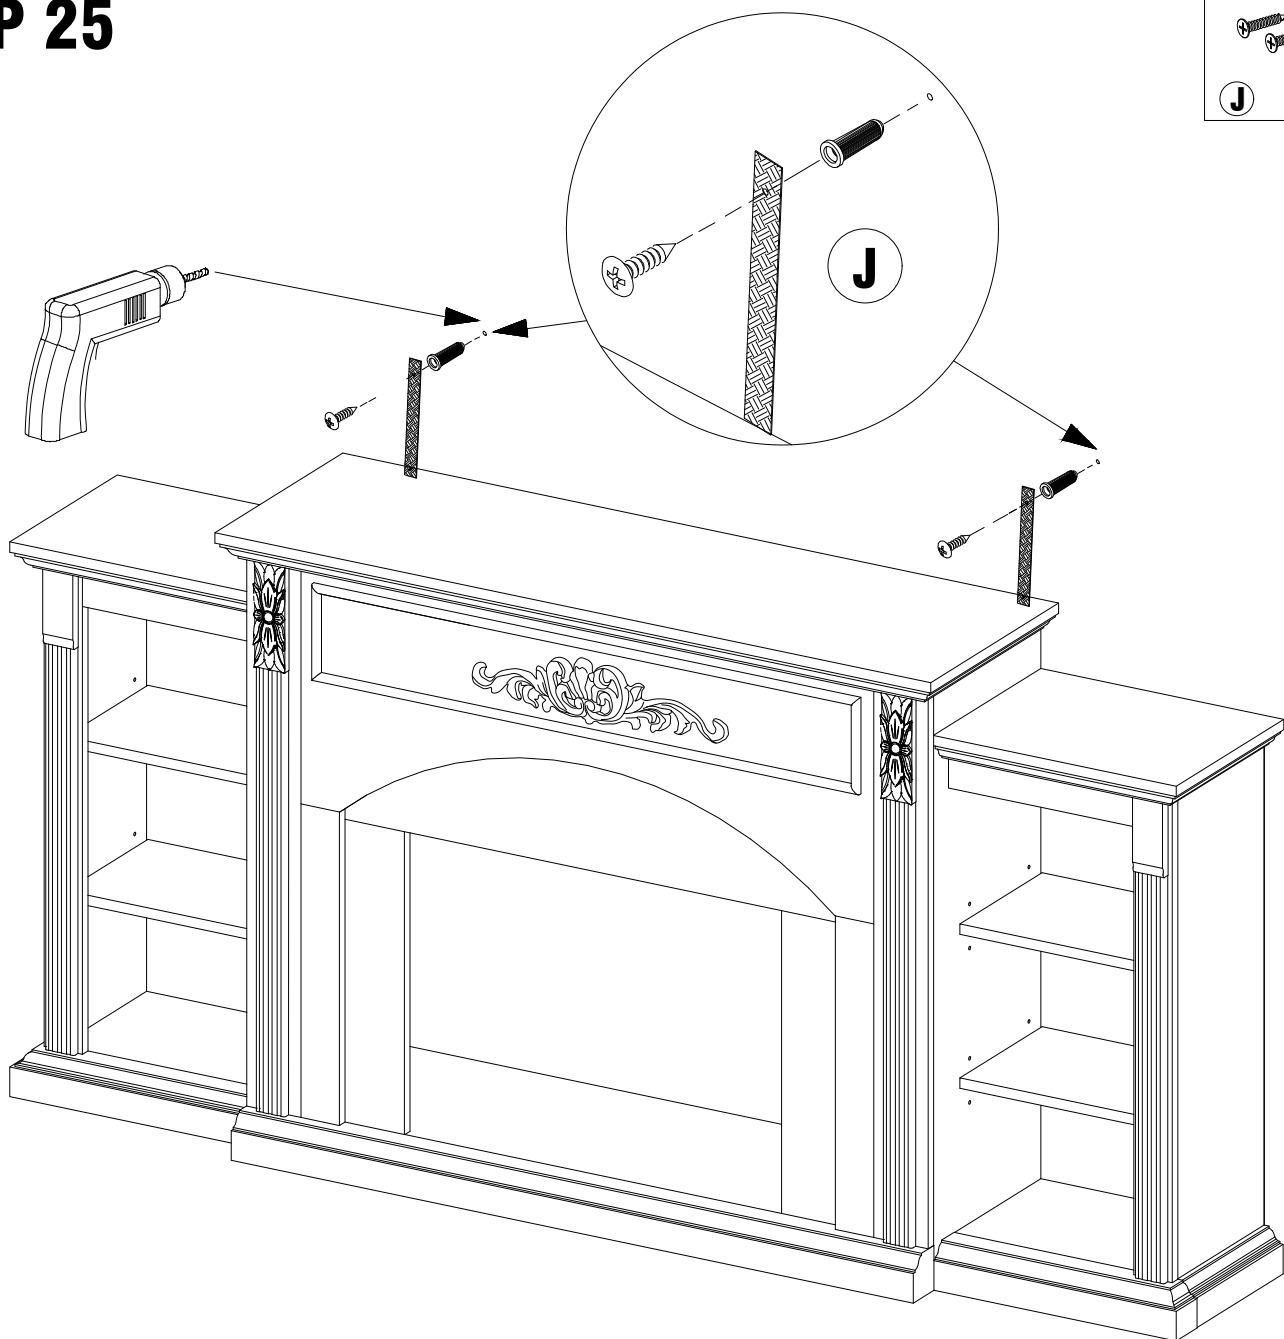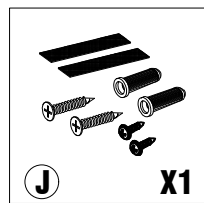

⚠ WARNING



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

