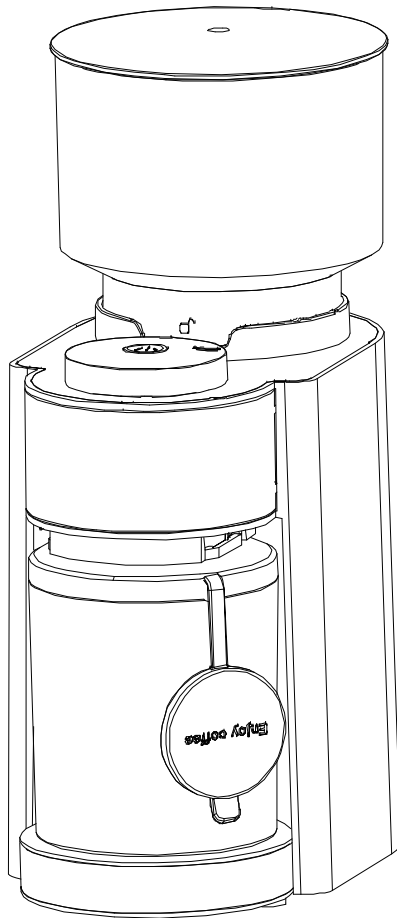


COFFEE GRINDER INSTRUCTION MANUAL

Model: HB-583



Read this manual thoroughly before using and save it for future reference.

**REGISTER
NOW!**

for an additional

**12^{months}
Warranty**

As a special thank-you for registering your aromaster unit, you'll automatically receive an additional 12 months added to your limited manufacturer's warranty!

All you need to do is send your Amazon order ID to our Email: support@aromaster.net.



FREE upgrade to FULL Replacement Guarantee - no need to return.



Once registered, you will be ensured that if anything goes wrong with your product, we will either send you a brand new unit as a replacement (Absolutely FREE) or provide a FULL refund of your order.



Just send your Amazon Order ID to Email support@aromaster.net to activate the extended warranty.



Send:

Subject:

Amazon Order ID:

NOTE: Must register within 7 days after receiving your new product.

CONTENTS


| | |
|--|----|
| IMPORTANT SAFEGUARDS | 01 |
| I. PARTS IDENTIFICATION | 02 |
| II. OPERATION | 02 |
| III. ASSEMBLY | 03 |
| IV. GRIND SIZE SETTING RECOMMENDATIONS | 05 |
| V. COFFEE GRINDER USE TIPS | 05 |
| VI. CARE AND CLEANING | 06 |
| VII. CLEANING THE GRINDING CHAMBER, HOPPER & BURRS | 07 |
| VIII. SAFETY INDEXES | 08 |
| IX. TROUBLESHOOTING | 09 |
| X. WARRANTY | 10 |

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions. Use this product only as described in this manual.
2. Keep the packaging material (cardboard, plastic, etc.) out of the reach of children (danger of asphyxiation or injury).
3. To protect against electrical shock, do not immerse the power plug, power cord or grinder in water or any other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Always use the appliance on a dry, level surface.
6. Do not place the appliance near the edge of a bench or table during operation. Vibration during operation may cause the appliance to move.
7. Do not place the appliance on or near a hot gas or electric burner, or where it could touch any other source of heat.
8. Do not allow the power cord to hang over the edge of a table or counter, touch hot surfaces or become knotted.
9. Avoid contact with moving parts.
10. Check the bean hopper for presence of foreign objects before using.
11. Do not put any substances other than coffee beans and grinder cleaner into the Grinder.
12. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
13. Do not use appliance without lid properly placed on hopper.
14. Keep area around scale clean to ensure proper function.
15. The use of attachments not sold or recommended by AROMASTER may cause fire, electric shock or injury.
16. Do not leave the appliance unattended when in use.
17. This appliance is not intended for use by young children without supervision. Young children should be supervised to ensure that they do not play with the appliance.
18. Regularly inspect the power plug, power cord, burrs and appliance for any damage. Do not operate if damaged in any way or after the appliance malfunctions. Immediately cease use of the appliance and contact after sales email: support@aromaster.net.
19. This appliance is for household use only. Do not use the appliance for anything other than its intended purpose as described in this manual. Do not use outdoors. Do not use in moving vehicles or boats.
20. Do not use outdoors.

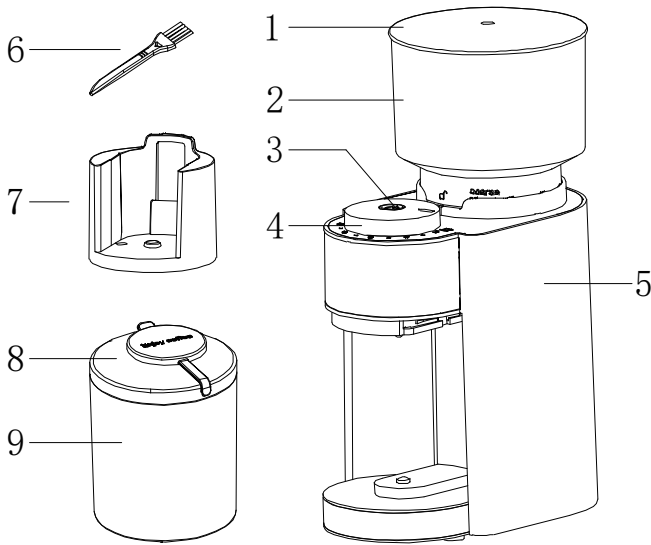I. PARTS IDENTIFICATION



Note: The cleaning brush can be only used for cleaning the appliance after use.

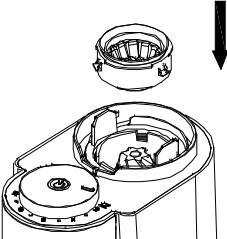
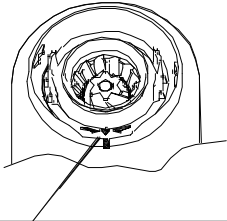
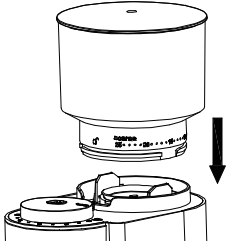
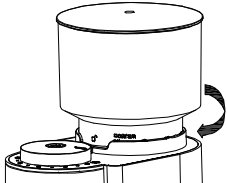
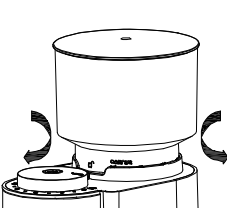
- 1.Bean Hopper lid 2. Bean hopper 3. ON/OFF Button 4. Cup Selection Dial
5. Housing 6. Cleaning brush 7. Porta-Filter Holder 8. Grinding Chamber lid
9. Grinding Chamber





II. OPERATION

Important to know before using your grinder.

1. Be sure all parts are washed, dried, and clean. If you need further instructions, check out the VI. CARE AND CLEANING.
2. You should Wash the bean hopper and grinding chamber in warm soapy water for better using your grinder for the first time.
3. Be sure to fully dry these parts before re-installing. See the section on VI. CARE AND CLEANING for instructions on how to remove and reinstall these parts.

III. ASSEMBLY

| | | |
|---|---|--|
| 1 |  | <p>Install the upper burr: Align the 3X punches of upper burr with 3X dies of base.</p> |
| 2 |  | <p>Check: The icon “▽” is aligned with “I”. If not, the bean hopper can not be installed.</p> |
| 3 |  | <p>Install the bean hopper into the correct position of the appliance. Align the icon “☐▽” on the bean hopper with the icon “▽” of base.</p> |
| 4 |  | <p>Push and rotate the bean hopper clockwise to lock it, the coffee grinding size can be set. NOTE: The “I” (Color red) on base indicates the setting size.</p> |
| 5 |  | <p>Rotate bean hopper clockwise (or counterclockwise) to adjust the grind size setting (1 = fine, 25 = coarse). If you need further instructions, check out the IV. GRIND SIZE SETTING RECOMMENDATIONS.</p> |
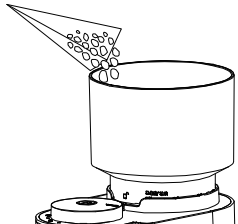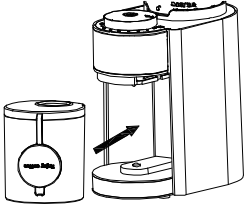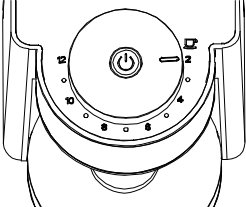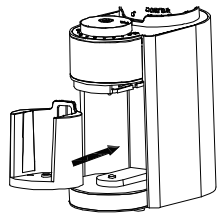
| | | |
|---|---|---|
| 6 |  | <p>Add coffee beans (freshly roasted) and replace the lid.</p> |
| 7 |  | <p>Using the Grinding Chamber: Fit the Grinding Chamber (IMPORTANT: With the sealing ring opened.) under the ground coffee outlet.</p> |
| 8 |  | <p>Setting and Running the Grinder:</p> <ol style="list-style-type: none"> ① Check that all parts are in right positions. ② Plug in the grinder. ③ Check your grinding size setting state. ④ Rotate the Cup Selection Dial to select your desired cups. ⑤ Press the ON/OFF Button to start. Appliance stops automatically when setting cups reached. <p>Warning: When grinding, twisting the Cup Selection Dial will change your grinding time. Do not twist the Cup Selection Dial when grinding!</p> <p>TIPS: You can stop the appliance anytime by pressing the ON/OFF button.</p> |
| 9 |  | <p>Using the Porta-Filter Holder:</p> <ol style="list-style-type: none"> ① Fit the Porta-Filter Holder. ② Place your Porta-Filter onto the filter holder. <p>NOTE: Fits for 53mm Porta-Filter, also comes with a 53mm dosing ring.</p> |

Warning: The appliance can not work for 3 minutes continuously, and it must rest for 30 minutes if the working time exceeds 3 minutes.

IV. GRIND SIZE SETTING RECOMMENDATIONS

This Coffee Grinder has 25 unique grinding size settings that are suitable for a large range of brewing styles, from the finest setting for espresso to the coarsest setting for French press. By adjusting the Cup Selection Dial, you can choose from 2 to 12 cups of coffee grounds as desired.

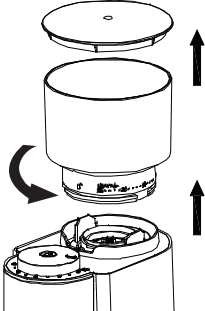
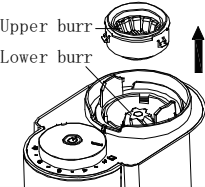

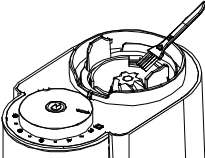
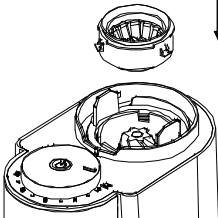
| | | | |
|-----------------------------|-----------|-----------------------|--------------|
| Brewing Method | Espresso | Pour Over Drip Coffee | French Press |
| Suggested Grind Size | Fine | Medium | Coarse |
| Grind Setting | 1-7 | 8-16 | 17-25 |
| Cups Selection | 2-12 Cups | 2-12 Cups | 2-12 Cups |


V. COFFEE GRINDER USE TIPS

Freshly ground coffee is the key to making coffee with more flavor and body.

1. Use freshly roasted coffee beans with a “roasted on” date to maximize flavor, not a use-by or best before date.
2. Use coffee beans between 5 and 20 days after the “roasted on” date for optimal freshness.
3. Coffee flavor and strength is a personal preference. Vary the type of coffee beans, amount of coffee and fineness of grind to achieve the flavor you prefer.
4. Store coffee beans in a dark, cool and dry place. Vacuum seal if possible.
5. Buy whole beans in small batches to reduce the storage time of coffee beans.
6. Once coffee is ground, it quickly loses its flavor and aroma. For the best results, grind beans immediately before brewing.
7. When storing the appliance, run grinder empty to clear ground beans left in chamber.
8. Run grinder for 10-15 seconds to purge some coffee before each use, for maximum freshness.
9. Clean the Bean hopper and conical burrs regularly.
10. It is best to change the grind size while the Coffee Grinder is running.

VI. CARE AND CLEANING


| | | |
|---|---|--|
| 1 |  | <p>① Empty all beans from the hopper then press the ON/OFF button to grind any remaining beans through the grinder.</p> <p>② Unplug the coffee grinder.</p> <p>③ Remove the hopper by rotating it counter-clockwise and then lift the bean hopper.</p> |
| 2 |  | <p>Remove the Upper burr by lifting.</p> |
| 3 |  | <p>Clean the Upper burr with the cleaning brush.</p> <p>Warning: Do not wash the burrs with water or any other liquids, or they will rust.</p> |
| 4 |  | <p>Clean the Lower burr with the cleaning brush or use a vacuum cleaner to remove coffee residue.</p> <p>Warning: The Lower burr can not be removed.</p> |
| 5 |  | <p>Replace the ring burr well in position.</p> <p>Align the 3X punches of upper burr with 3X dies of base, then push down firmly, upper burr will be replaced.</p> <p>Warning: Be sure that ring burr is replaced before grinding, grinding without ring burr will cause appliance damaged.</p> |

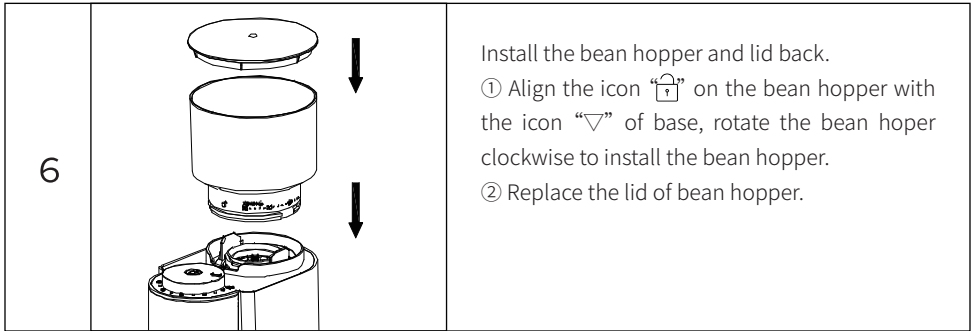


VII. CLEANING THE GRINDING CHAMBER, HOPPER & BURRS

NOTE: Unplug the Coffee Grinder before cleaning.

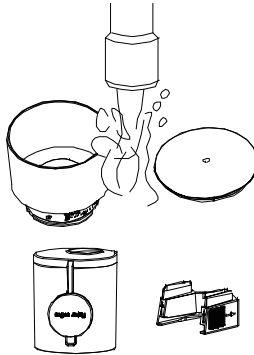
1.Wash the grinding chamber, hopper, hopper lid, and porta-filter holder in warm soapy water, then rinse and dry.



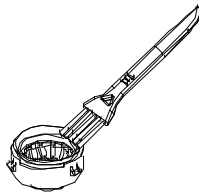2.If the grinder is used daily, the burrs should be cleaned regularly using brush (Warning: Do not clean the ring burr with water or any other liquids to avoid damaged).



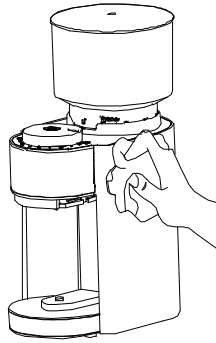3. Wipe the main body of Coffee Grinder with a soft, damp cloth. Dry thoroughly with a soft dry cloth.



4. Proper cleaning enables the burrs to achieve the most consistent grind possible. Cleaning also removes some coffee oils, which will stale and degrade the flavor of the ground coffee.

5. If you don't grind regularly, make sure to clear the ground coffee from the chute before each use, as some older coffee dust may be sitting inside your Grinder and will affect the quality of your next batch. Without adding beans to the hopper, select 5 seconds and grind. Discard the grounds. You are now ready to grind your fresh beans.

Caution:

Hand wash only!

Do not wash the burrs with water, or they will rust!

VIII. SAFETY INDEXES

| | |
|----------------------------------|----------------|
| Product Name | Coffee Grinder |
| Product Model | HB-583 |
| Rated Voltage | AC 120V |
| Frequency | 60 Hz |
| Power | 150 W |
| Bean Hopper Capacity | 250g |
| Grinding Chamber Capacity | 160g |

IX. TROUBLESHOOTING

If your coffee grinder malfunctions or fails to operate.

| Problem | Possible Cause | Solution |
|---|--|---|
| Grinder does not turn on after press the On/Off button. | Grinder does not plug in | Plug into a power outlet (AC 120V 60Hz). |
| | Grinder overheated. Appliance would overheat if grinding time exceeds 3 minutes within 10 minutes. | Rest appliance for 30 minutes for cooling down. |
| Appliance beeps after press the On/Off button, and not turn on. | Bean hopper not installed properly. | Install the bean hopper properly. |
| Grinder starts but produces no coffee grounds. | Grounds chute is clogged. | The burrs require cleaning or are worn. |
| Grinder is louder than normal. | Grinder blocked with foreign item. | Unplug power cord and remove hopper. Inspect hopper, Upper burr and lower burr. Remove any foreign objects. |
| Grinder stops abruptly when grinding. | A coffee bean, may have jammed the burrs. | Empty the hopper, unplug power cord and remove hopper. ① Disassemble the upper burr, clean up the residue beans/grounds. ② Replace all the parts. Refer to “III. ASSEMBLY”. |

X. WARRANTY

We are delighted that you have chosen the AROMASTER grinder and hope you have a fun with it. The manufacturer' s warranty covers the product for a period of 12 months from the date of purchase against manufacturing faults.

If you have any questions about the device and about spare parts/accessories, contact the customer service department via



support@aromaster.net



www.aromaster.net



facebook.com/Aromaster.shop

Through the following channels,
you can quickly contact us.



support@aromaster.net



www.aromaster.net



facebook.com/Aromaster.shop