



## Caden Swing LED Floor Lamp Assembly Instructions

1. Screw the bottom pole (B) into the base (A) clockwise until it's tight. Then screw the middle pole (C) into the bottom pole (B) and the top pole (D) into the middle pole (C).
2. Screw the socket (E) attachment into the top pole (D). Gently pull any excess cord through the poles.
3. Place the harp (F) into the small brackets on either side of the socket (E).
4. Place the lampshade (G) on top of the harp (F) and secure it with the finial (H).
5. To assemble the shade (G), please refer to the attached shade assembly instructions.

### Extend Your Warranty To Five Years Free:

If you would like to extend your warranty from three years to a total of five, free, register your purchase using the brief form on our. site: [brightech.com/pages/extended-warranty](http://brightech.com/pages/extended-warranty).

### GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.

### IMPORTANT SAFETY INSTRUCTIONS:

AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK, THIS LAMP HAS A POLARIZED PLUG. THIS MEANS ONE PRONG IS LARGER THAN THE OTHER. THEREFORE, THE PLUG WILL ONLY FIT IN A POLARIZED OUTLET IN ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, TAKE IT OUT AND TURN THE PLUG OVER TO INSERT THE PRONGS IN THE OPPOSITE WAY. IF IT STILL DOES NOT GO IN, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

Thank you for purchasing this product !

We offer a three year warranty on manufacturing defects. Proof of direct purchase from Brightech or purchase in new condition from one of our authorized sales partners is required for all warranty requests. Coverage starts from purchase date, and is not transferable. If you experience an issue with your product, please reach out to us via our website and we will be happy to assist you !

**Brightech®**  
[www.brightech.com](http://www.brightech.com)

