


ASSEMBLY INSTRUCTION

ASSEMBLY PROGRAM

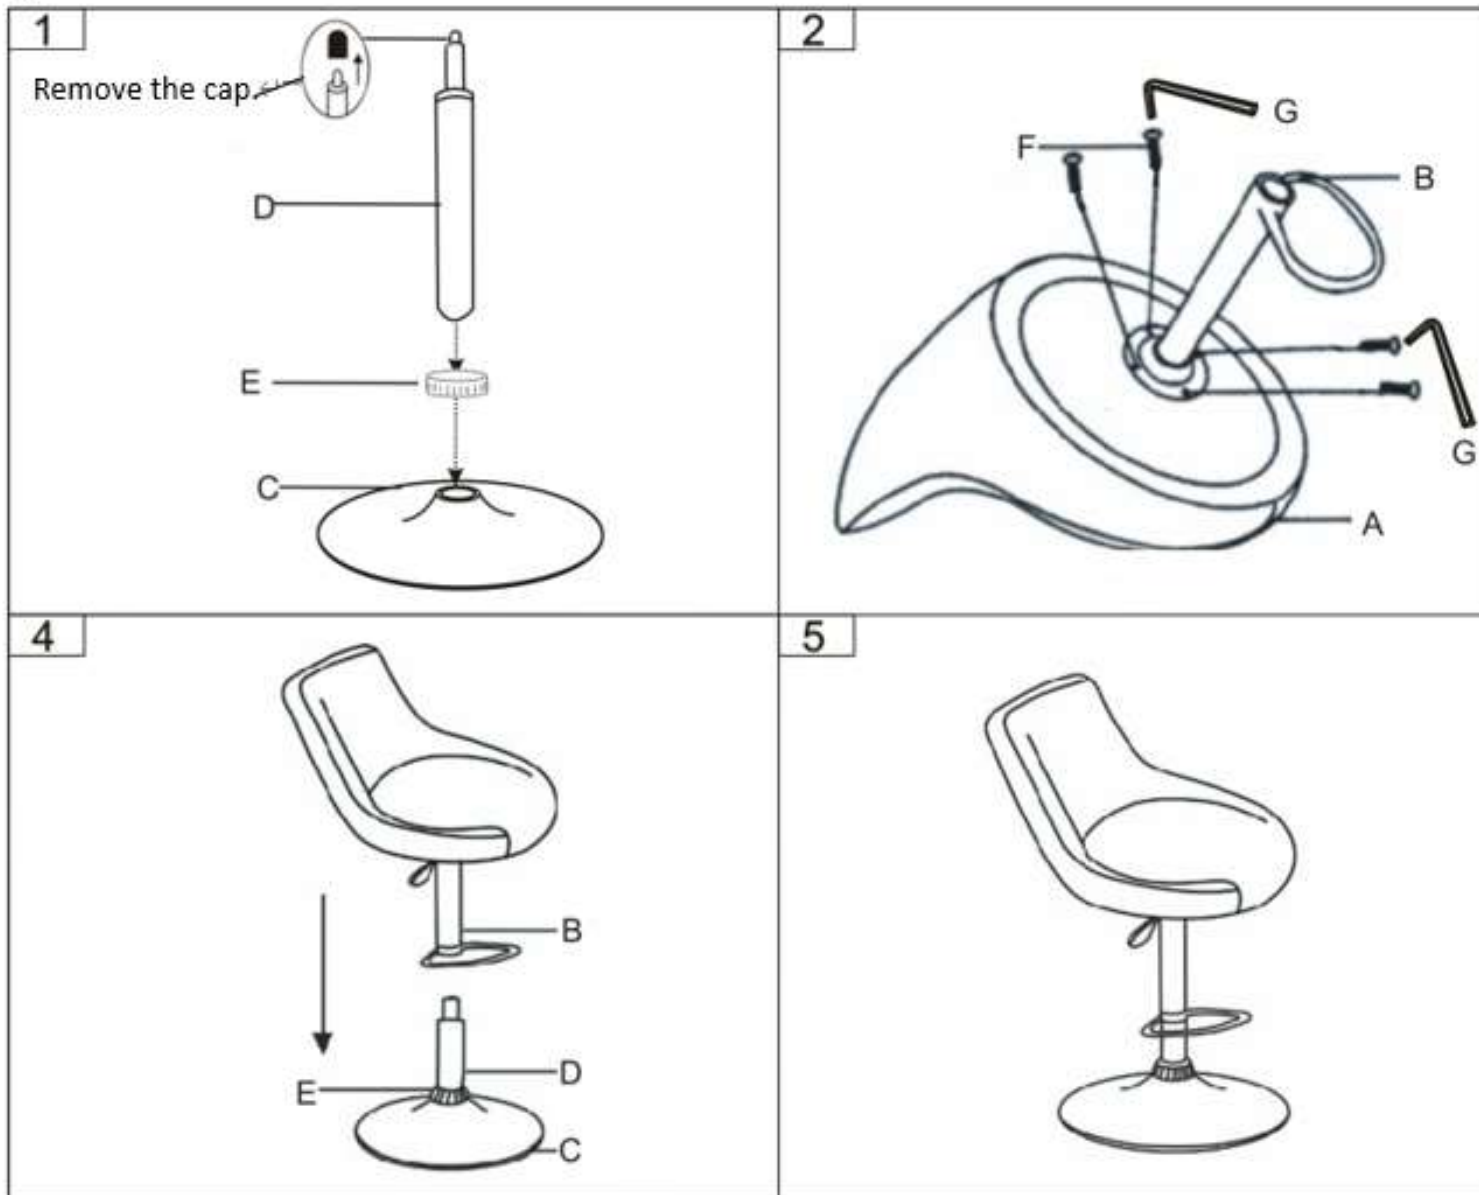

PARTS X QTY

Ax1	Ex1
Bx1	Fx4
Cx1	Gx1
Dx1	