



Swan

designed for life



5 Speed Hand Mixer

Model: SP20130N

Helpline

01733 404703

v2.0





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

When using any electrical appliance, basic safety precautions should always be followed including the following:

- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use the appliance on a gas or electric cooking top or over or near an open flame.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.



IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- Do not carry the appliance by the power cord.
- Do not leave the appliance unattended during use. Always unplug the unit when not in use or before cleaning.
- Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
- Ensure that the unit is switched off after use.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
- In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentions precautions and instructions, could affect the safe operation of this product.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system
- Do not touch the moving parts and do not insert any kind of object (knives, forks, spoons etc.) while the product is operating.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas, in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- NEVER IMMERSE THE UNIT IN WATER



TECHNICAL DATA

Description: Hand Mixer

Model: SP20130N

Input Voltage: AC 230V

Frequency: 50Hz

Power consumption: 300 Watts





PARTS

Speed selector (also press down to eject beaters etc)

Motor unit



Beaters (dough hooks are also included)

Parts ordering:

Beaters

SP20130N-1: Beaters

SP20130N-2: Dough hooks





HOW TO USE

Before first use, remove all packaging and/or promotional stickers etc. Clean the beaters and dough hooks in warm soapy water. Rinse and dry completely.

1. Before assembling the mixer, be sure the power cord is unplugged from the power outlet and ensure the speed selector is on the "0" position.
2. Insert beaters into mixer until the "click" into place. Beaters are only used for beating eggs or similar food. **Note: Beaters can be inserted in either socket, as the beaters are identical.**
3. Ensure that the unit is at the 0 setting, then plug in the power source.
4. Turn the speed selector to your desired setting, there are 5 settings. The appliance will start working and the speed will increase 40% if the turbo button depressed at any time.
5. **Warning: Do not stick knives, metal spoons, forks etc into bowl when operating.**
6. The max operation time per time shall not exceed 5 minutes. Minimum 20 minutes rest time must be maintained between continuous two cycles.
7. When mixing is completed, turn the speed selector to 0 setting, unplug the cord from power outlet.
8. If necessary you can scrape the excess food particles from the beaters by rubber or wooden spatula.
9. Hold the beaters with one hand and press the ejector button firmly down with the other hand, remove the beater.

Note: When removing beaters the power MUST be switched off

Using dough hooks method is exactly the same as above except they are used for mixing heavier dough.

CLEANING

The dough hooks and beaters can be removed and washed in soapy water or dishwasher. **DO NOT IMMERSE THE MOTOR UNIT IN WATER**



DOCUMENTATION

We Swan Products Ltd declare that this product conforms to the following product legislation in accordance with the following directive[s]:

2004/108/EC The EMC Directive (the Electromagnetic Compatibility Directive).

2006/95/EC. The LVD Directive (Low Voltage Directive).

2011-65-EU. The RoHS directive (Restriction of Hazardous Substances Directive)

EC 1935/2004 Food Contact



WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials of workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.



BS PLUG

The wires in the mains lead are coloured in accordance with the following code:

BLUE	NEUTRAL
BROWN	LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.

WARNING: THIS APPLIANCE IS DOUBLE INSULATED. DO NOT CONNECT ANY WIRE TO EARTH TERMINAL



DISPOSAL OF UNIT



Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items. Please visit www.weeireland.ie for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



SWAN BRAND HERITAGE



Did you know...

In 1933 Swan were the first to develop an electric heating element that could be immersed in water. This led to the Swan kettle range that could boil up to six pints of water in just over nine minutes - pretty hot for the time! These days it takes about two minutes for a Swan kettle to boil.





www.swan-brand.co.uk



Scan this QR code
to hear about
our story



We love
what we do



we're proud
of our quality



Find us on Facebook

* on selected products

Copyright © Swan Products Ltd.
PO Box 3117, Stoke-on-Trent ST4 9GD

