

ASSEMBLY INSTRUCTIONS

ITEM CODE : IN 4164

ITEM DESCRIPTION : CONSOLE

1

Reverse the bench top & place the leg as shown & align the leg to match the apron.



2

Place the bolt & washer in the cut out & tighten it with allen key provided as in Fig1.



3

Fix the other leg set in the similar way



4

Reverse the Console straight. Now your console is ready for use.

