



USER'S MANUAL

Juicer Extractor

TIPS:

Your suggestions and comments for really important to us!

We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2018

Great product so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, will be more consistent to offer you EASY

SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

Ihre Vorschläge und Kommentare für sind wirklich wichtig für uns!

Wir bitten Sie aufrichtig, in unseren Shop zurückzukehren und durch nur einen Klick eine gute Bewertung zu hinterlassen. Es wäre sehr ermutigend, wenn Sie das so tun könnten:

★★★★★ Tolle Produkte bis jetzt

24. Februar 2018

Gutes Produkt. Schnelle Lieferung, einfaches Aufbauen, funktionieren ohne Probleme.

Mit Ihrer inspirierenden Bewertung wird konsistenter sein, um Ihnen EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE UND EFFIZIENTEN SERVICE zu bieten!

INTRODUCTION

To get the best out of your new appliance, please read this user guide carefully before using it for the first time. We also recommend that you keep the instructions for future reference, so that you can remind yourself of the functions of your appliance.

SAFETY MEASURES

Normal use of the apparatus


- Incorrect use of this appliance may cause personal injury and damage.
- Use for its intended purpose only. The manufacturer is not responsible for any injury or damage resulting from incorrect use or handling (see also Guarantee Terms).
- For connection to 220-240V, 50/60Hz.
- For domestic use only. Not for outdoor or commercial use.
- The motor section or cord of the appliance must not be submerged in water or any other liquid.
- Do not operate with wet or damp hands. Make sure that no liquid gets into the motor section.
- Never leave unattended when in use, and keep an eye on children.
- Remove the plug from the socket before removing the lid from the appliance before cleaning, or when not in use.
- NEVER use your fingers, kitchen utensils or similar to push ingredients down the feed tube! Use the accompanying tamper.
- NEVER stick fingers or other objects in the spout.
- NEVER touch the moving parts of the appliance until it has come to a complete stop.
- The centrifuge bowl must be handled with care, as it contains extremely sharp parts.
- Never use if the centrifuge bowl is damaged.
- Do not leave the appliance running nonstop for more than 3 minutes at a time. If the appliance has been running for 3 minutes, allow it to cool down for 7 minutes before you use it again.
- Never put the hot ingredients (above 65 °C) into the machine.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. Children should be supervised to ensure that do not play with the appliance.

3. If the appliance cord is damaged, it must be replaced by the vender.

PARTS DESCRIPTION

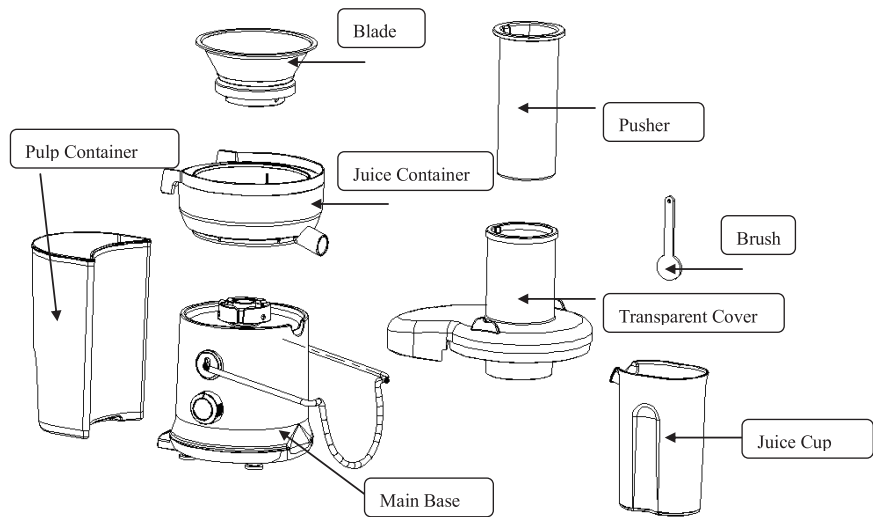

Voltage	Frequency	Power	Protection Class
220V~240V	50Hz	600W	Class II

Operation

1、 Before use

The power switch type of this product is rotary knob switch.

Switch set to:

OFF ① LOW SPEED ② HIGH SPEED

1. Clean the part which can touch the food, such as juice cup, pulp container, blade, pusher, transparent cover.

2. Let the power switch on the "OFF" position, then assemble the machine, and plug in.

3. After use, please clean and maintain the machine.

4. If you need mixed juice for more than two kinds of fruits and vegetables, please juicing that fruits first, which with more fiber, then juicing the one with less fiber fruits.

5.The product can use for cucumber, grape, watermelon, etc. Such kinds with less fiber; Also can use for apple, celery, carrot, tomato etc, such kinds with more fiber.

6. Kindly Reminder:After finished one cup of juice, we suggest to clean the fruit pulp to keep the good Juice yield.

Preparation before juice

Cutting the fruits and vegetables fit the size of the feed inlet, we suggest that:

Apples: Cleaning and cutting the apple into four pieces.

Tomatoes, Cleaning and cutting into four pieces.

Carrot: Cleaning and cutting into two pieces.



Celery: Cleaning and cutting.

Watermelon Cleaning and remove the peel, cutting it fit the feed inlet's size.

Kindly Reminder

1. Hard and larger grains should be taken out. Otherwise, will cause the filter blade damaged and product shocked.
2. The smaller fruits & vegetables cutting, the better juice yield.

Juice

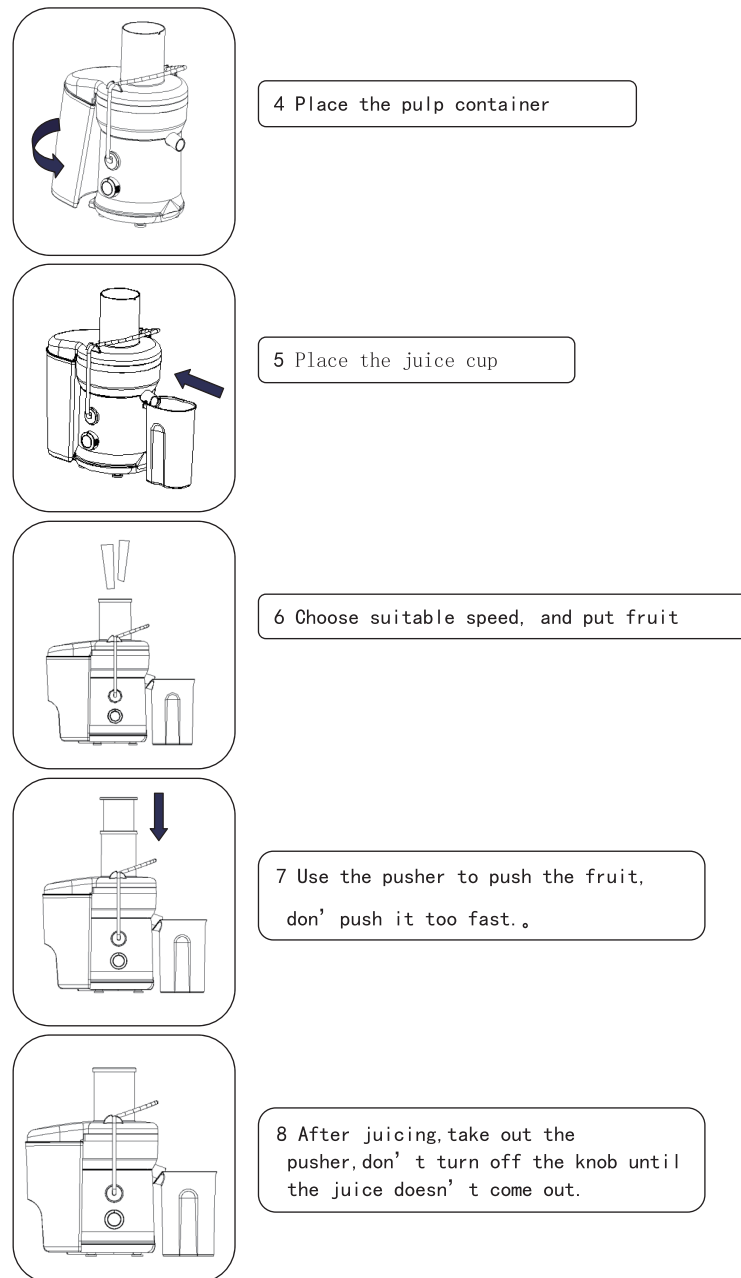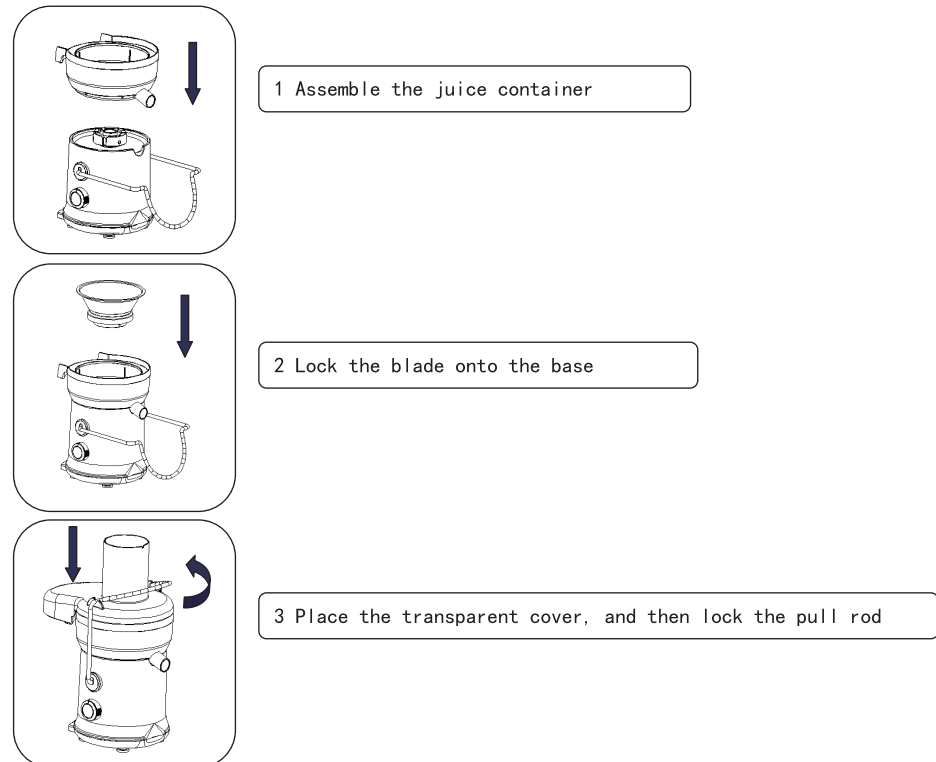

CLEANING

- Remove the plug from the wall socket and allow the apparatus to cool down before cleaning.
- The best way to clean the motor section is with a slightly dampened cloth and, if necessary, a little detergent. Do NOT immerse the motor section in any form of liquid!
- The centrifuge bowl, fruit pulp holder, base and all other detachable parts can be washed up by hand or in a dishwasher.
- Be careful not to touch the sharp parts in the bottom of the centrifuge bowl.
- Do not use any kind of strong or abrasive cleaning agent on the appliance or its accessories. Never use a scouring sponge or similar to clean it, as the surface may be damaged.
- Allow all parts of the appliance to dry completely before reassembling it after cleaning.

Storage

- Ensure the appliance is clean and dry before storing.
- The appliance contains sharp parts - keep out of the reach of children.