

3 lights Pendant Lighting with Cord braided lamp shade

NOTE:ALWAYS TURN POWER OFF BEFORE INSTALLING LIGHTING FIXTURES!

■Specification

Voltage: 110-130V
 Material: Metal
 Color: Black
 Lamp holder: E26
 Bulb info: MAX 60W TYPE-A19
 Fixtures Dimensions: 20in/510mm(D)*20in/510mm(H)
 Installation Dimensions: 23.62~71.62in/600~18200mm(H)
 Wire Length: 59in/1500mm
 Usage: Indoor use only


■Easy Installation

1. Pass **Supply Wires** and **Ground Wire** through the **Fixture Loop** onto the **Fixture Nipple**. Hand tighten until snug. Tighten until snug.
2. Secure the **Crossbar** onto the **Outlet Box** with **Outlet Box Screws** (Non inclus).
3. Thread one **Hex Nut** onto top end of the **Nipple**.
4. Place one **Lock Washer** over the top end of the **Nipple** and then thread the **Nipple** into the center lock hole of the **Crossbar**.
5. Using pliers, thread the **Hex Nut** against the **crossbar** and hand tighten until snug. the Fixture according to your
6. Thread another **Hex Nut** onto the bottom end of the **Nipple**. hanging height. Nut. Hand tighten until snug.
7. Adjust the **Fixture Chain** to your desired length by removing the links if needed.
- * **Please note that depends on chain material thickness, you might be required to use chain pliers to spread links open.**
8. Pull the supply wires through the Fixture Chain alternating links. **And then pull the wires through the following components in turn: Canopy Lock Ring, Ceiling Canopy, Canopy Chain Loop, Lock Washer, and Nipple.**
9. Place Lock Washer over the end of the **Nipple** and thread it the **Canopy Chain Loop** onto the end of the **Nipple**.
10. Using plier, thread the **Hex Nut** against the **Canopy Chain Loop** and tighten until snug.
11. Attach one end of the **Fixture Chain** onto the **Fixture Loop** and attach the another end of the **chain** onto the **Canopy Chain Loop** with the **Climbing Chain Loop**.
12. Using wire connectors not supplied connect the **House Ground Wire** to the **Fixture Ground Wire** connect the now Restore electricity Retain this sheet for future reference. **House White Wire** to the **Fixture Supply Wire White Ribbed Side** connect the **House Black or Red Wire** to the **Fixture Supply Wire Black or Smooth Side** Wrap each connection with approved electrical tape.
13. Push the **Ceiling Canopy** upward over the **Outlet Box**.
14. Thread the **Canopy Lock Ring** onto the **Canopy Chain Loop** and tighten until snug to secure the **Ceiling Canopy**.
15. Install Bulb (Non inclus) .


* **Install correct bulbs referring to fixture markings and or labels for maximum wattage. Your installation is completed now Restore electricity Retain this sheet for future reference.**

■Package Include

1x 48" Fixture Chain	1x Socket Assembly
1x Fixture Loop	1x Crossbar with Screws
1x Ceiling Canopy	1x Canopy Chain Loop
1x User Manual	

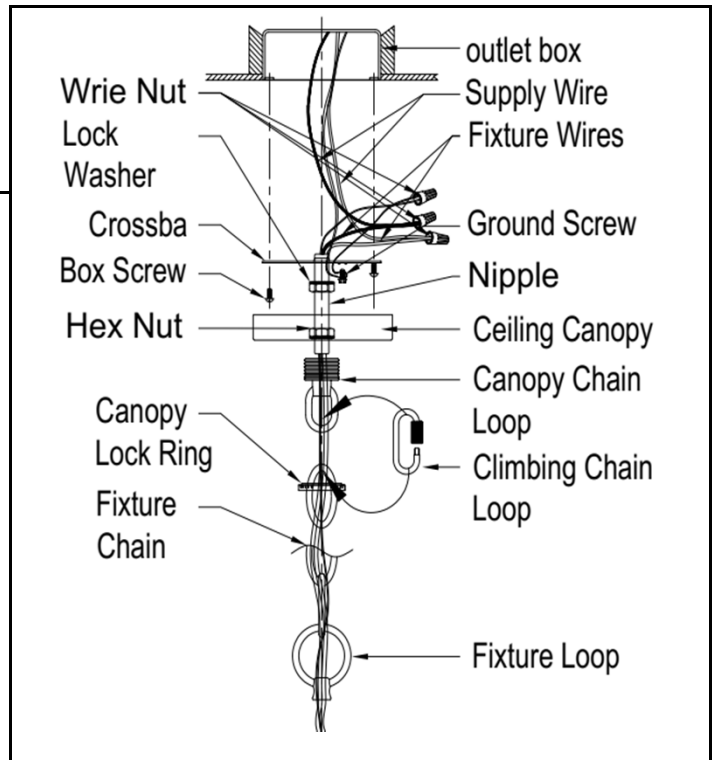

Wiring Instructions

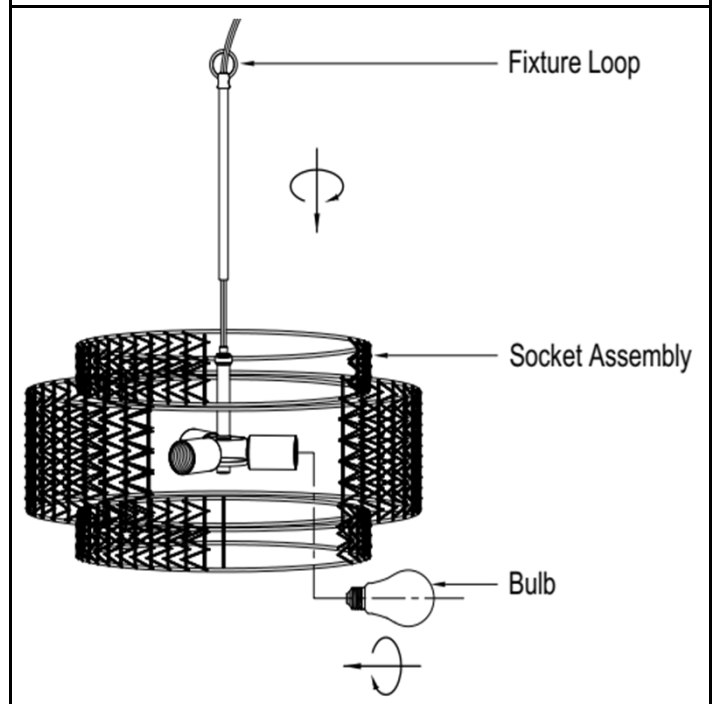

Fixture Installation