


# 23" Insert Fireplace Heater

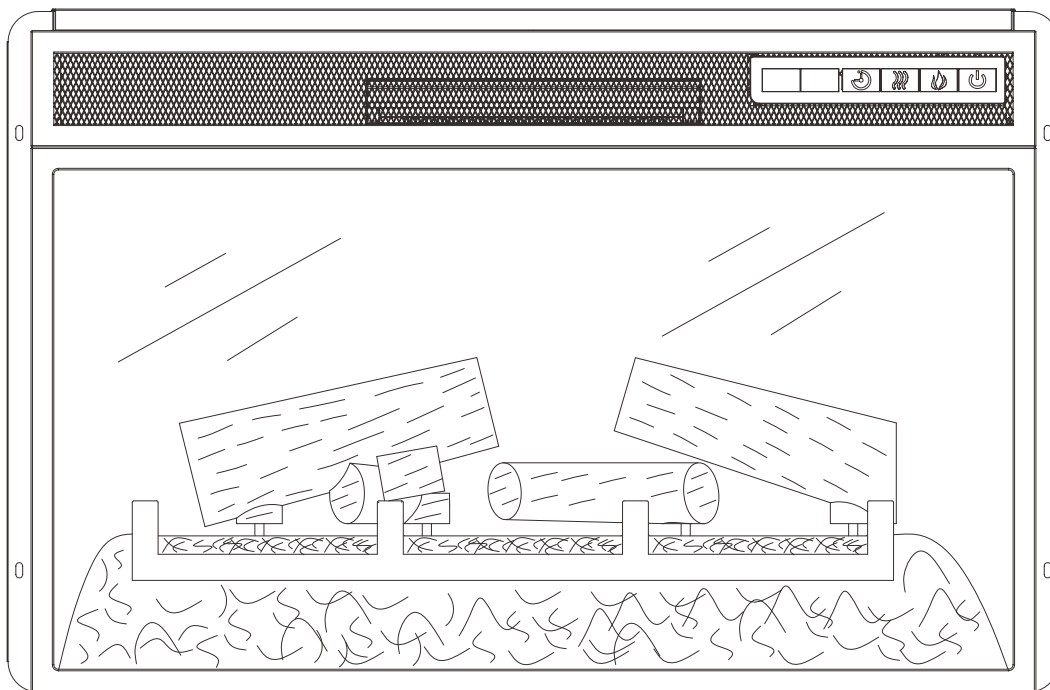

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.  
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

---

---

## Table of Contents

|                               |    |
|-------------------------------|----|
| Safety Information .....      | 03 |
| Pre-installation .....        | 06 |
| Assembly.....                 | 07 |
| Operation.....                | 08 |
| Using the Remote Control..... | 10 |
| Care and Maintenance .....    | 11 |
| Troubleshooting.....          | 12 |

---

## **Safety Information**

### **IMPORTANT SAFETY INFORMATION**

**PLEASE READ ALL OF THE INFORMATION IN THIS OPERATING MANUAL, INCLUDING ALL SAFETY, OPERATING, AND MAINTENANCE INFORMATION. TO AVOID THE POTENTIAL RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, USERS SHOULD FOLLOW THE DIRECTIONS AND WARNINGS IN THIS MANUAL**

1. Read all instructions before using this heater.
2. Do not use this heater outdoors.
3. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water container.
4. Do not run the power cord under carpeting. Do not cover the power cord with throw rugs, runners, or the like. Arrange the power cord away from traffic areas and where it will not be tripped over.
5. To disconnect the heater, turn controls to off, then remove the plug from the outlet.
6. Connect to properly grounded outlets only. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
7. To prevent a possible fire, do not block firebox air intakes or the exhaust in any manner. Do not operate the firebox on soft surfaces, like a bed, where openings may become blocked.
8. There is a thermostat limiter inside the heater. When the inner temperature over heats or abnormal heating occurs, the thermostat protective device cuts off the power supply to avoid fireplace damaged or risk of fire.
9. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons.

---

## SAVE THESE INSTRUCTIONS



### WARNING

There are no user serviceable parts inside the fireplace/heater, If the unit appears to malfunction, turn the unit off and unplug the unit from the wall immediately, and contact Customer service.



### WARNING

This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible material, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 f.t.(0.9 meters) from the front of the heater and keep them away from the sides and rear.



### WARNING

Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.



### WARNING

Always unplug the heater when not in use.



### WARNING

Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return the heater to an authorized service facility for examination, electrical or mechanical adjustment, or repair.



### WARNING

Do not insert or allow foreign objects to enter any ventilation or exhaust openings as this may cause an electric shock or fire, or damage the heater.



### WARNING

A heater has hot and arching or sparking parts inside. Do not use in areas where gasoline, paint, or flammable liquids are used or stored.



### CAUTION

While the heater is in use, the top center of the fireplace can get hot to the touch, and may cause serious injury or burns. Always supervise small children around the fireplace/heater. Do not place any cloth or decorations over the heater outlet of the fireplace, or otherwise obstruct the heater outlet of the fireplace, as this may cause a fire and serious injury may result,

---

## Safety Information (continued)



### GROUNDING INSTRUCTIONS



Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product. If the plug does not fit the outlet, have a proper outlet installed by a qualified electrician.

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

This heater is for use on 120-volt circuits and has a grounded plug. An adapter is available from your local electronics store or online supplier for connecting three-blade grounding-type plugs to two-slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

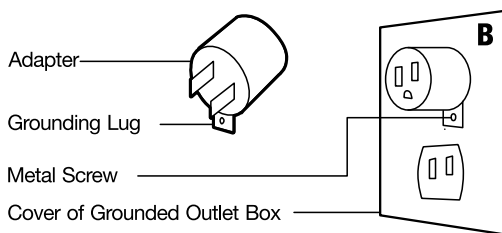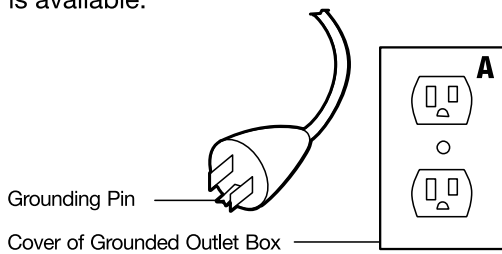


---

# Pre-installation


## TECHNICAL SPECIFICATION

| Model Number      | Description               |
|-------------------|---------------------------|
| Dimensions(WxDxH) | 27.95W"* 11.22"D*21.65 "H |
| Net Weight        | 16.53LBS/7.5KG            |
| Gross Weight      | 20.94LBS/9.5KG            |
| Power Rating      | 1400W                     |
| Voltage           | 120V                      |
| Frequency         | 60Hz                      |


## PACKAGE CONTENT

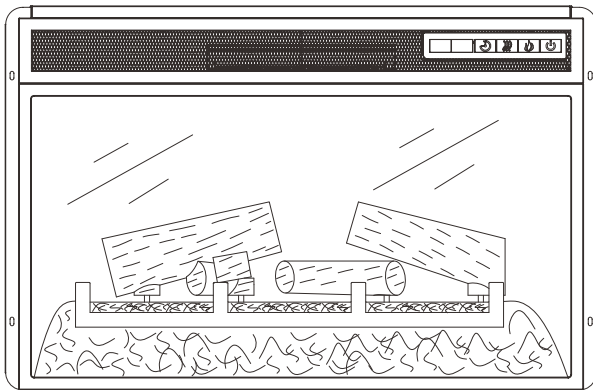

Fireplace Unit

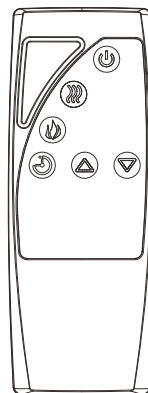

Remote Control

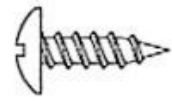

Screw x5

---



# Assembly

## ● STEP 1

Take out the unit from the box and layout all the spare parts for easy assembly. Make sure all small items are not left in packaging materials.

## ● STEP 2

Carefully set the unit from the back of the mantel and center it in the opening.

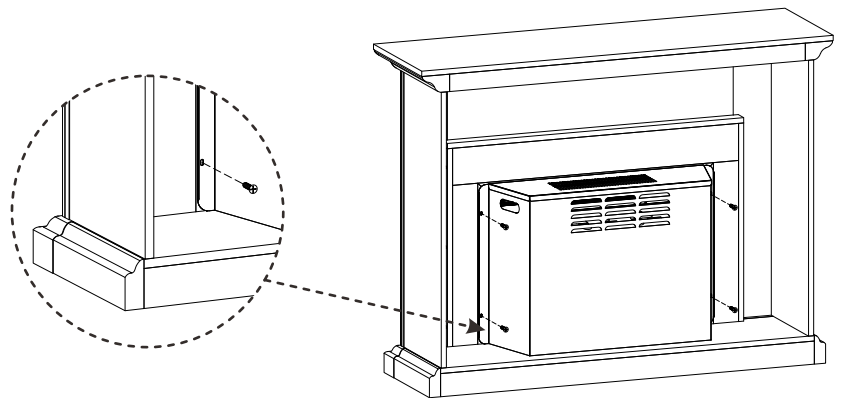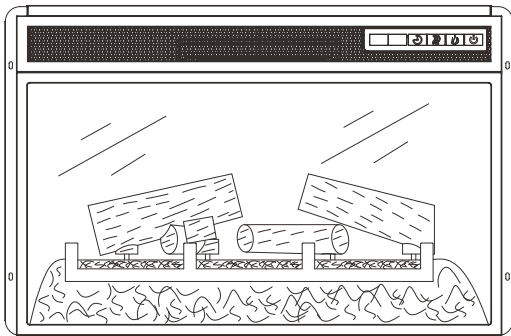

## ● STEP 3


Check the alignment and attach the unit of the mantel by inserting screws through the drilled holes on the trim of the mantel.

---

**NOTE:**

Do not attempt to install the unit from the front of the mantel. It will not fit.

# USER INSTRUCTION (CONTROL PANEL)

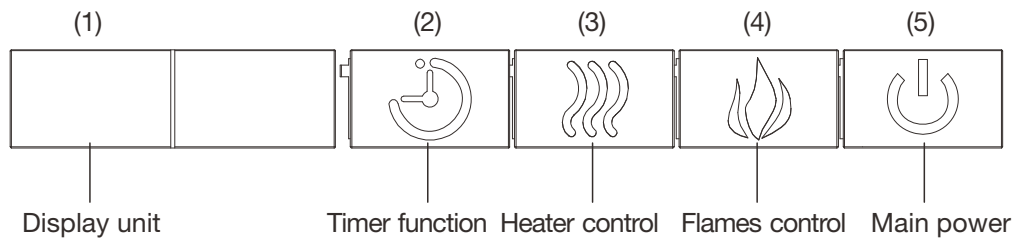

## Control Panel

The control panel is located on the top right corner of the unit.

The display unit (1) displays information about the flame level, timer, and current temperature.

## Power ON /OFF

Press the power button (5) to turn on the unit. Press again to turn off the unit.

NOTE: There is a thermostat limiter inside the unit. When the inner temperature is too hot, the unit will automatically turned off to avoid damage to the product or risk of fire.

# Operation

## ● Using the flame control

• Press the flame button (4) to set the flames for different levels of flame height. These flame levels are shown in the display (1). The flame settings are as follows:

| Button Press | Flame Level | Display value | Fireplace Appearance              |
|--------------|-------------|---------------|-----------------------------------|
| 1st press    | High        | L3            | Flames Highest, Logs Glow Highest |
| 2nd press    | Medium      | L2            | Flames Medium, Logs Glow Medium   |
| 3rd press    | Low         | L1            | Flames Low, Logs Glow Low         |
| 4th press    | All Off     | None          | Flames Off, Logs off              |

• Regardless of the previous flame setting, when powered off by the main power button(5), the flames will come on in L3 mode(High)when you turn the heater on.

• When the heater function turns on, the flame level will cycle through the 3 different level settings continuously.

| Button Press | Flame Level | Display value | Fireplace Appearance              |
|--------------|-------------|---------------|-----------------------------------|
| 1st press    | High        | L3            | Flames Highest, Logs Glow Highest |
| 2nd press    | Medium      | L2            | Flames Medium, Logs Glow Medium   |
| 3rd press    | Low         | L1            | Flames Low, Logs Glow Low         |

## Heater Control

Press the heater control (3) to turn on the heater.

Press and hold the heater control button for 5 seconds to enter temperature adjustment mode. Continue to press the heater control button to cycle through the different heat setting (17°C-27°C /62°F-82°F+ON).


Press and hold the power button for 5 seconds while the heater is on to switch between degree Fahrenheit and degree Celsius.

## Timer Control

Press the Timer button (3) to set the timer. The timer setting are as follows

| Button Press | Time Interval | Display Value |
|--------------|---------------|---------------|
| 1st press    | 30 minutes    | 30            |
| 2nd press    | 1 hour        | 1H            |
| 3rd press    | 2 hour        | 2H            |
| 4th press    | 3 hour        | 3H            |
| 5th press    | 4 hour        | 4H            |
| 6th press    | 5 hour        | 5H            |
| 7th press    | 6 hour        | 6H            |
| 8th press    | OFF           | None          |

## Using the Remote Control

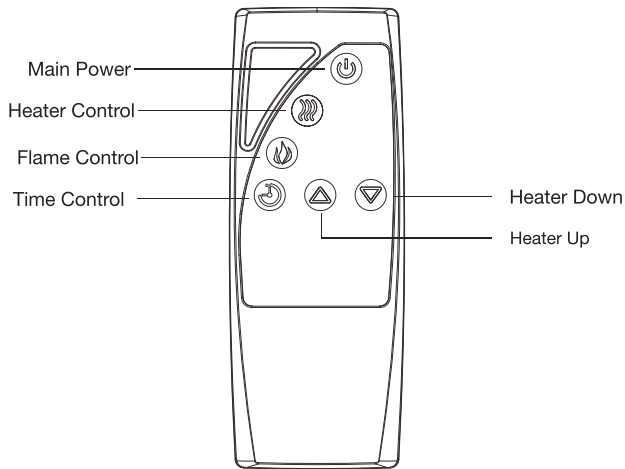

### ● Using the Remote control

The operation of the remote control buttons work the same as button on the control panel.

### ● Install the battery

For replacement batteries, use AAA batteries.

Press down and slide back cover off the battery compartment.

Insert two provided AAA batteries into the battery compartment making sure that the ends of the batteries with the negative(-) symbols are against the springs in the battery compartment.

Replace the battery compartment cover, making sure it snaps into position.



### WARNING

Do not ingest batteries.

1. Non-rechargeable batteries are not to be recharged.
2. Batteries are to be inserted with the correct polarity.
3. Exhausted batteries are to be removed from the product.
4. Always purchase the correct size and grade of battery most suitable for the intended use.
5. Replace all batteries of a set at the same time. .
6. Clean the battery contacts and also those of the device prior to battery installation.
7. Remove batteries from equipment when not used for an extended period of time.



### NOTE:

Battery disposal  
Please always dispose  
of batteries at a suitable  
recycling point.



---

## Care and Maintenance

### WARNING

Always disconnect from the power supply before cleaning the heater.  
First turn off the main power.  
Then remove the electrical plug from the wall outlet.

### WARNING

Do not use this fireplace insert if any part of it has been under water.  
Immediately call a qualified service technician to inspect the firebox and  
replace any part of the electrical system which has been underwater.

The blower motor and flame motor are pre-lubricated for a durable using time and need no further lubrication or maintenance. To remove any accumulation of dust or debris, the soft brush attachment of a vacuum cleaner should occasionally be used to clean the outlet grille of the fan heater.

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use a clean soft cloth dampened with warm water to clean the fireplace surface.  
DO NOT use household or abrasive cleaners, as these products may damage the surface.
- When cleaning the glass viewing screen use a non-abrasive damp cloth with liquid cleaner or soft soap if necessary; Don NOT use cleaning powders or any other substance with abrasives since these substances will scratch glass.
- Under no circumstances should this product be operated with a broken or chipped glass panel.
- Do not strike or slam the glass.
- In the event that your appliance is stained or otherwise damaged during use, we recommend that you call a professional to it.
- When not in use please unplug the cord from the outlet to prevent any damage or accidents.

---

## Troubleshooting

| Problem  | Problem  |
|--|--|
| The unit does not turn on                        | Make sure the unit is plugged into a standard 120V grounded power source. Press the power button on the control panel. |
| Flame effect is on, but there is no flame effect | Open the top and back panel to check if the flame spindle has fallen off from the spindle motor.                       |
| The heater does not blow warm air                | Make sure the set temperature is higher than the room temperature.   |
| The heater does not work                         | Turn all switches to OFF and unplug the unit for 5 minutes. Plug the unit back to power and operate as normal.         |
| Error Code E3 shown on the indicator             | Reset the unit by unplug the unit from power source for 5 minutes and then plug it back.                               |
| Remote control does not work                     | Use it closer to the unit / change battery.  |