

FRASER HILL FARM®

Thank you for your purchase!

With proper use and care, this product will provide you with years of enjoyment. If you have any questions, please contact us directly.

✉ **Holiday@FraserHillFarm.com** (Anytime)
☎ **855-591-7451**

(9AM to 9PM Eastern Time, Monday - Friday)
(9AM to 5PM Saturday - Sunday)

In the unlikely event that you experience a problem, please provide pictures and a description of the problem, a receipt (if available), name and address of the purchaser and the name of retailer where you purchased the product.

Please do not return this item to the retailer.

 
Please call our toll-free number 1 (855) 591-7451 or email us at Holiday@FraserHillFarm.com and a customer service representative will assist you.

ENJOY YOUR HOLIDAY!


Assembly Instructions

READ AND FOLLOW ALL SAFETY INSTRUCTIONS:

1. Before you start to assemble your tree, choose a location near a wall outlet. Assemble the tree stand and place on a level surface.
2. Pull apart the legs of the stand so that they are "X" shape. Lock the stand in position with the single eye bolt on the outside metal tab.
3. Screw one eye bolt through the hole on the inside metal tab.
4. Carefully insert the bottom section of the tree into assembled stand. Make sure the pole is firmly inserted into stand and turn screw so they touch tree trunk. Stand tree up and straighten by adjusting screws in or out then tighten screw.
5. Insert the middle section into the bottom section and the tree top into the middle section.
*If your tree is 9 ft. or taller, it will include more than one middle section.
The tree bottom section which inserts into tree stand) will be number 1.
The next section as you build up, will be number 2. Section 3 will follow until assembly is completed by inserting tree top section.

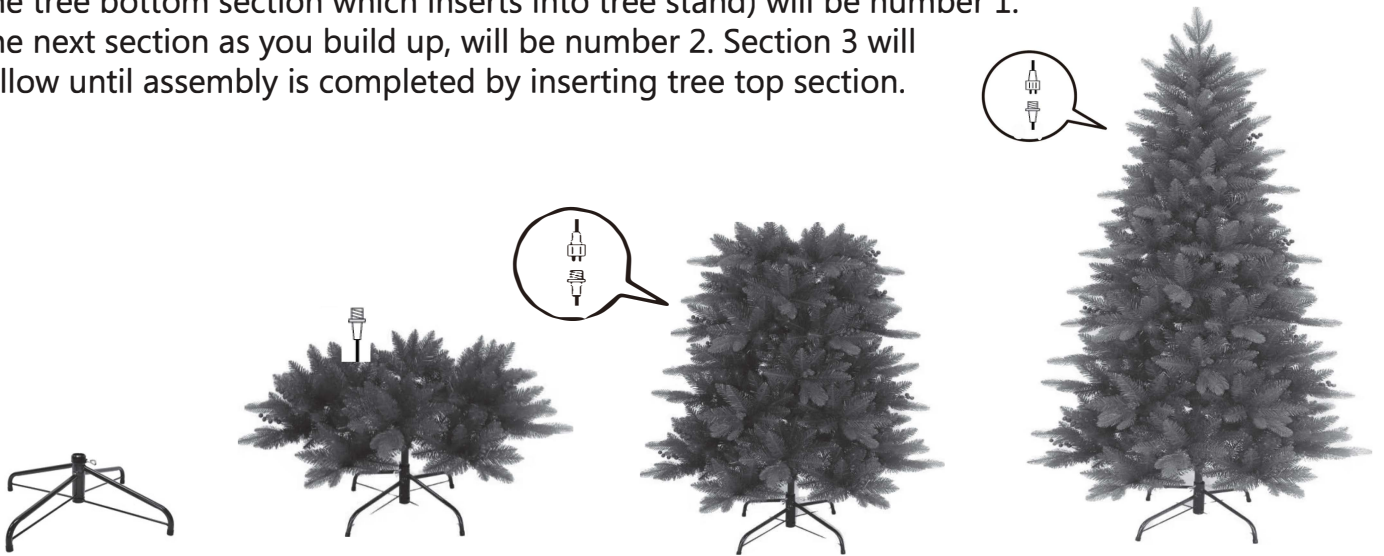

 
6. Allow branches to fall into place or gently pull up and out. When adjusting branches be sure that all wires are free from branch hinges.
7. Begin to shape the branches from the bottom to the top. Start with tips farthest from the pole, one to the right, one to the left and one at the center of the main stem.

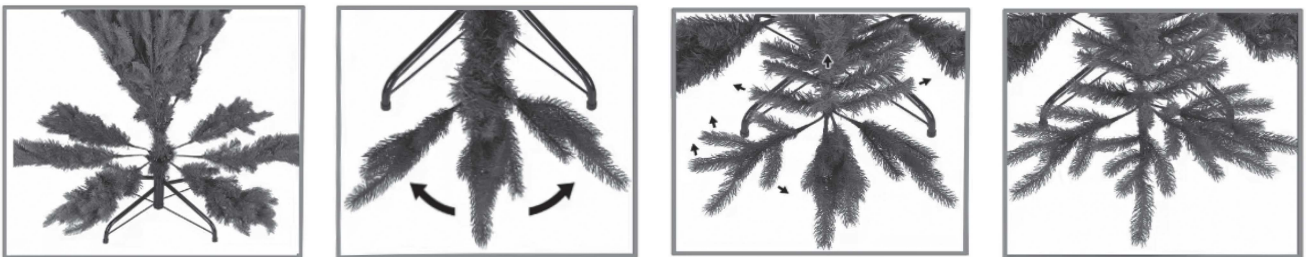

8. After shaping the whole tree, step back and take an overall look. Shift branches to fill any gaps. Slightly upsweep all branch tips for a uniform look.
9. This is a Low Voltage LEDs tree, the transformer plug, foot pedal cord, and remote control will be contained in a plastic bag and attached to a bottom branch of the lower tree section 3.
10. Plug the cord into the wall outlet. Your entire tree should now be lit.
Keep tree plugged in while shaping your tree.

Your tree is now ready to decorate and enjoy.

 11. Each tree section has a light string cord that connects to a cord in the section below. Each connection is color-coded. Connect only male to female matching colors. Note that the male and female connectors are keyed and will only connect in one direction. After connection, twist closed each connector nut securely.

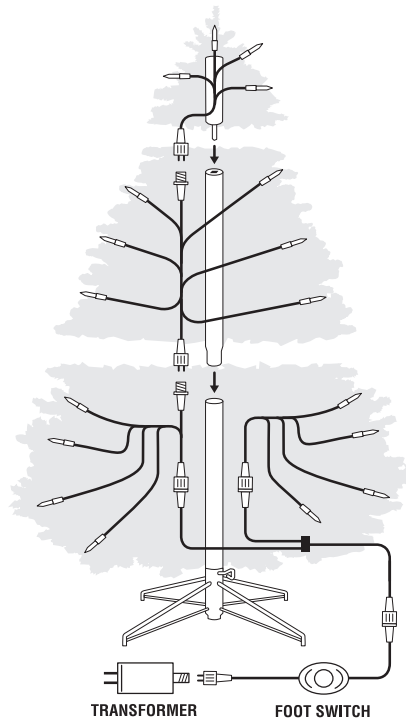

WARNING – Risk of Fire and Electric Shock:

1. Read all instructions and warning tags included with this tree.
2. For Indoor Use Only, unless specified for Outdoor Use.
3. Do not place near gas or electric heaters, radiator, fireplaces, candles, or other sources of heat.
4. Place on a level, hard, flat surface; do not place where tree is likely to wobble.
5. Do not use candles on tree.
6. After assembling the tree and adding decorations, make sure the tree is stable.
7. Do not overload extension cords or power strips.
8. Do not install near fountains, bathtubs, sinks, or other wet areas.

STORAGE:

1. Unplug cord from the wall outlet and remove all ornaments and decorations.
2. Unplug each section, keep each stack of lights connected together.
3. Gently lift off the top and middle sections, and remove the bottom section from the tree stand. Carefully place the tree in its box and tape it shut. DO NOT STORE TREE IN A DAMP AREA OR IN AN AREA WHERE THE TEMPERATURE EXCEEDS 100 °F

FRASER HILL FARM®

Register your product today!

Congratulations on your new Fraser Hill Farm product! Register your item using the link below to activate your warranty and stay updated with product news, helpful tips, troubleshooting support, maintenance advice, and any important recall or safety notices.

<https://fraserhillfarm.com/register-your-product>



Warranty Information

Fraser Hill Farm provides a one-year Limited Warranty from the purchase date, covering repair or replacement of defective components. This warranty applies only to the original purchaser and requires the original sales receipt with the purchase date and location. Warranty coverage for replacements defaults to the original purchase date.

Contact Warranty Services at: 1-855-591-7451

Email us at: *Holiday@FraserHillFarm.com*

www.FraserHillFarm.com

1-YEAR LIMITED WARRANTY

"Limited" Warranty Program

For a period of one (1) year after purchase, Fraser Hill Farm ("Manufacturer") will either repair or replace defective components in accordance with this Limited Warranty.

Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.

This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only, where an issue with the product is due to a defect in material or workmanship. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty return is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, including: water damage, chemical damage, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used with standard ornaments only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part or component.

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Items sold "as is" or floor models.

To make a claim, send a copy of the original sales receipt along with a brief description of the problem to the email address below. Please include your email address and daytime telephone or cell phone #. All items maybe charged actual freight and handling costs. Repairs or replacement will be made at the Manufacturer's option.

THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER FRASER HILL FARM, THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.

Holiday@FraserHillFarm.com