
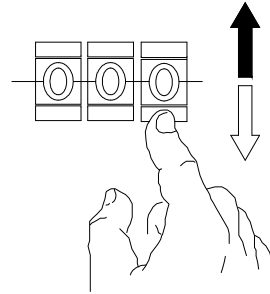



9534 MECHANICAL LOCK INSTRUCTION MANUAL

1. Default code 0 0 0

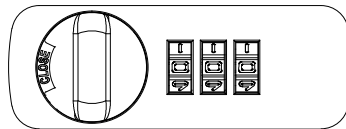


※NO matter what code it is on the lock,the default code is 0 0 0


2. Code setting

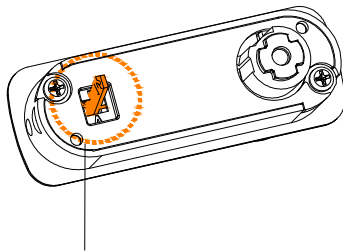

1.Control button to position as above

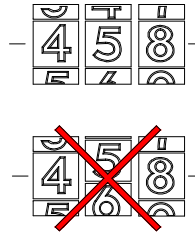


2.Set code

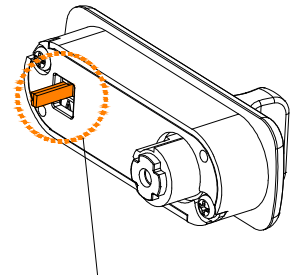


3.Control button to position as above


3. Code finding

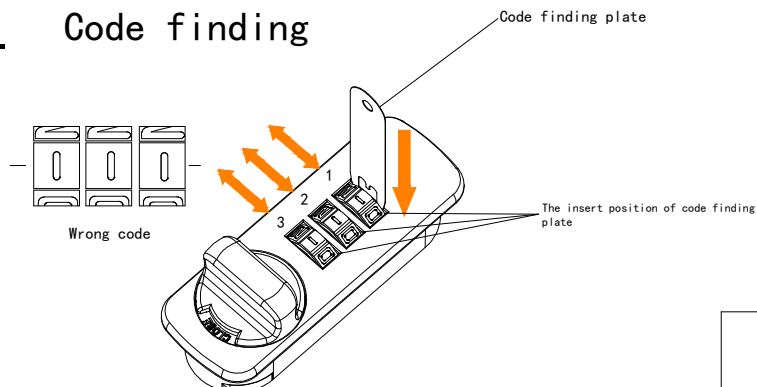

※Insert the code finding plate into the position as shown and hold on,then turn the digits one by one untill stop.

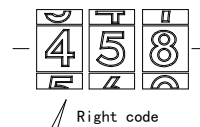

Right code

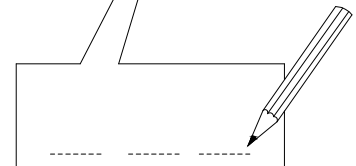

Record the code