

ASSEMBLY INSTRUCTIONS

 
4 DRAWER CHEST

ASSEMBLY
REQUIREMENTS

2 – Person
Assembly

2.5Hours
Assembly Time
(Approximate)

Tool Required
(Not Provided)

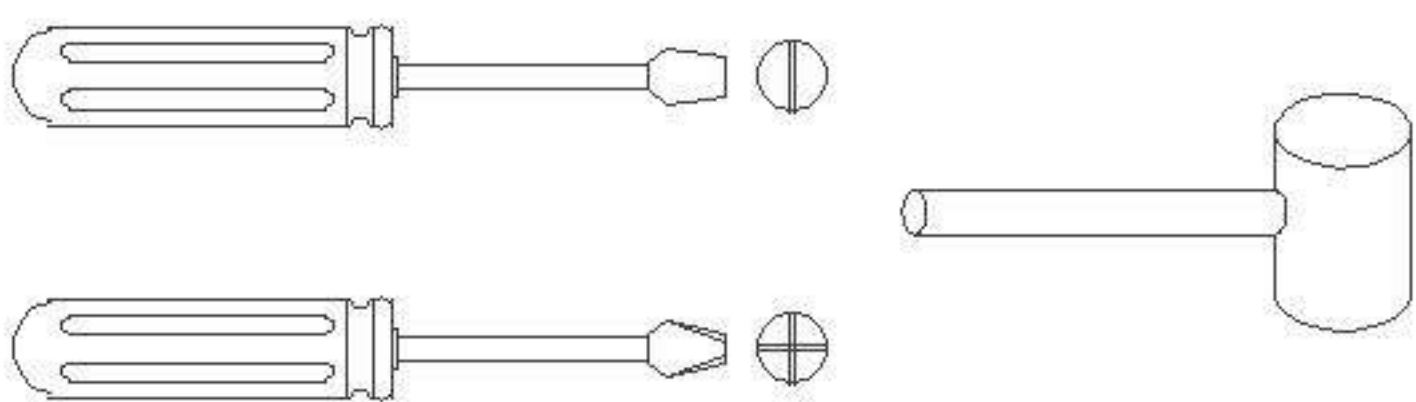

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.
Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3days.

PRODUCTS PURCHASED THROUGH OUR AUTHORIZED VENDORS ONLY ARE ELIGIBLE FOR REPLACEMENT PARTS

We appreciate your business!

THIS PRODUCT IS FOR INDOOR AND HOUSEHOLD USE ONLY – NOT FOR COMMERCIAL USE.



ASSEMBLY PREPARATION:

- 1 .Remove all packaging materials, staples and packing straps from the carton.
- 2 .Refer to Part List and Hardware List and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
- 3 .Place all wooden parts on clean ,flat and soft surface (e.g. carpet or rug)to prevent scratch and damage to parts.

SAFETY PRECAUTION:

- 1 .Keep ALL HARDWARE PART OUT OF REACH OF CHILDREN.
- 2 .DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS

TIPS FOR ASSEMBLY:

- 1 .Allow ample room for assembly and assemble the product near where the product will be placed.
- 2 .Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
- 3 .Identify all the parts ,hardware and quantities required for each step.
- 4 .During assembly ,do not over-tighten any fittings as this may cause damage.
- 5 .DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
- 6 .Always place the product on a flat ,level surface.
- 7 .Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE:

- Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- **Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.**
- Solid wood is impacted by heat and humidity fluctuations which may cause small joint separations or hairline cracks; place the furniture away from direct sunlight and air conditioning vents, heating vents or units to protect the furniture.

ASSEMBLY INSTRUCTIONS


4 DRAWER CHEST

PARTS LIST

NO	PART NAME	QTY
1	TOP PANEL	1
2	LEFT PANEL	1
3	RIGHT PANEL	1
4	BOTTOM FRAME	1
5	CENTER RAIL	3
6	LEFT BACK PANEL	1
7	LEG	4

NO	PART NAME	QTY
8	RIGHT BACK PANEL	1
101	DRAWER FRONT PANEL	4
102	DRAWER LEFT PANEL	4
103	DRAWER BACK PANEL	4
104	DRAWER BASE PANEL	4
105	DRAWER RIGHT PANEL	4









 
PARTS ASSEMBLY OVERVIEW

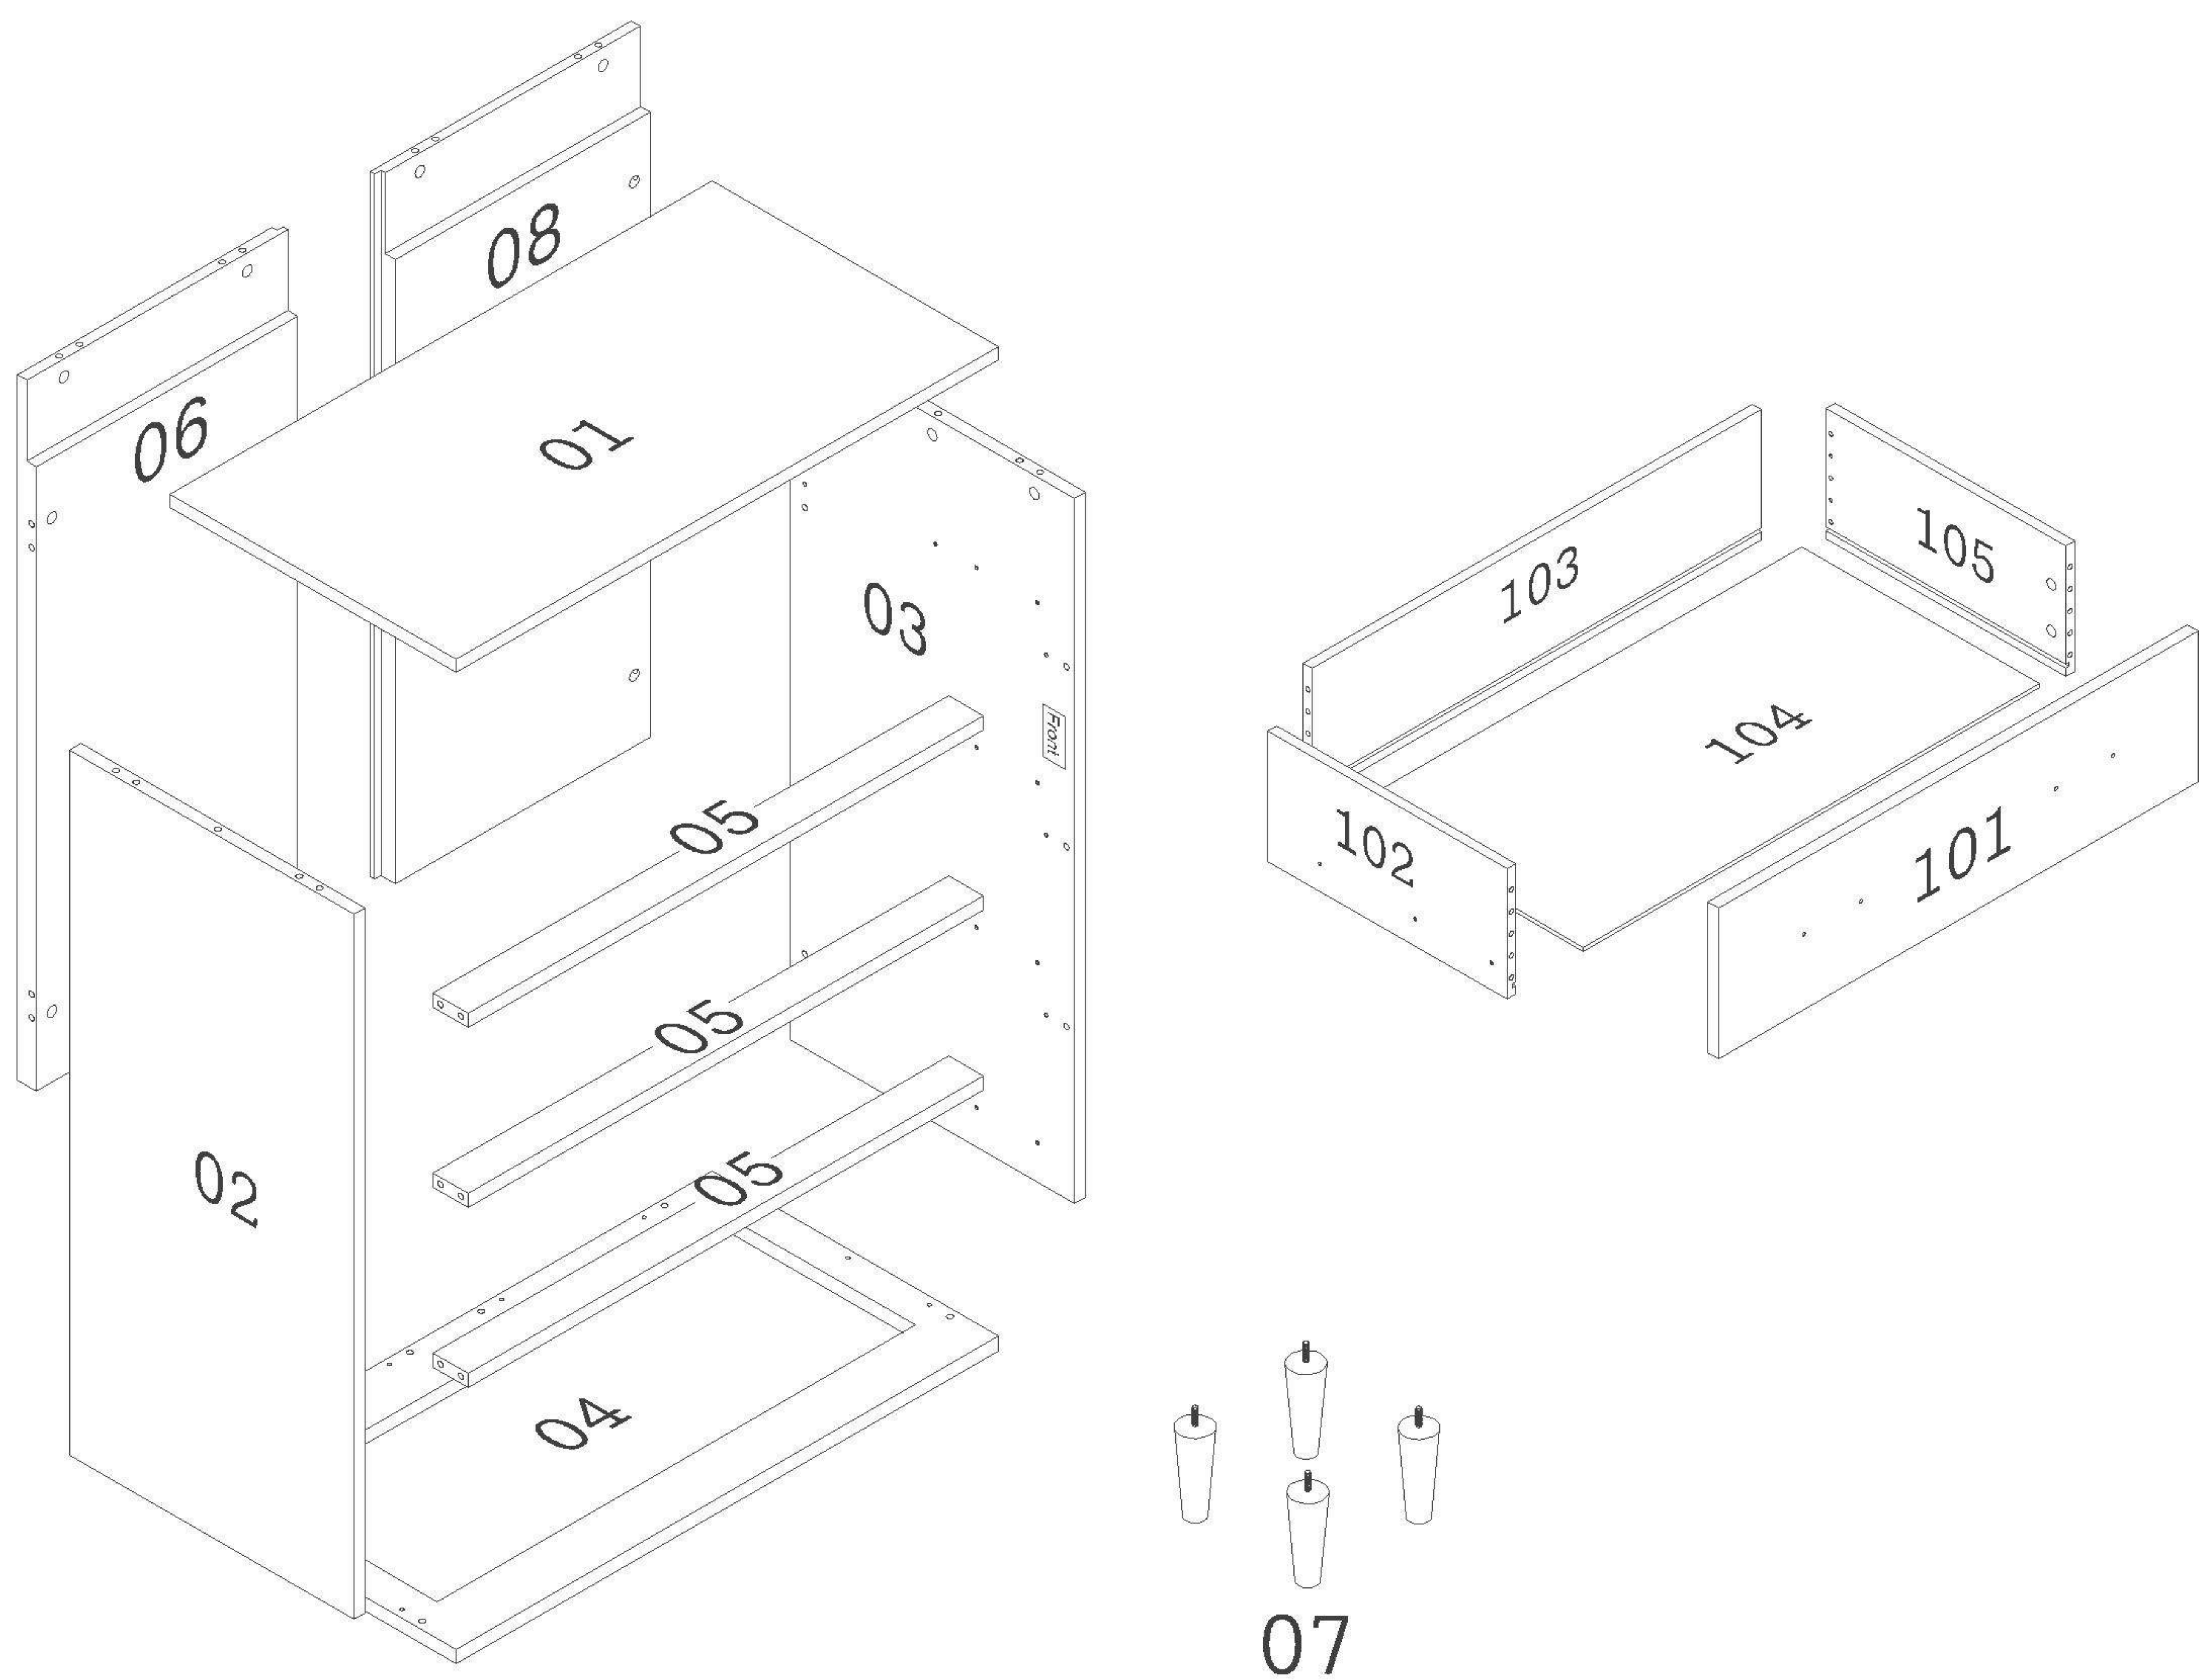

ASSEMBLY INSTRUCTIONS

4 DRAWER CHEST


HARDWARE LIST

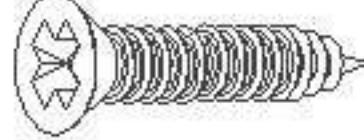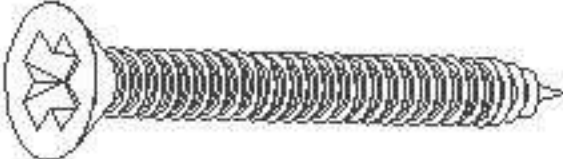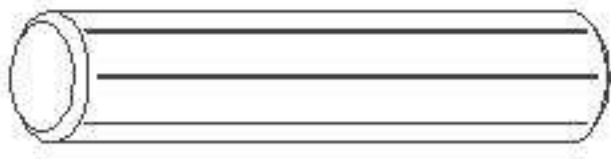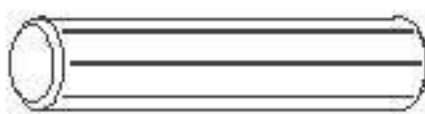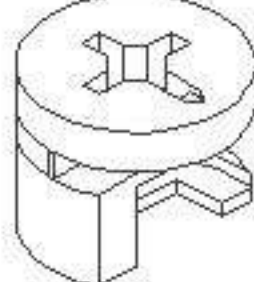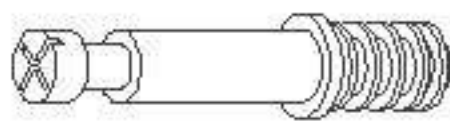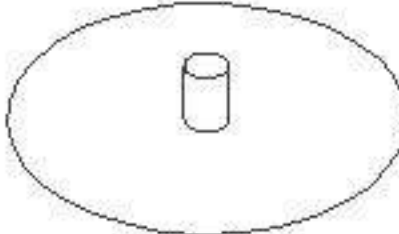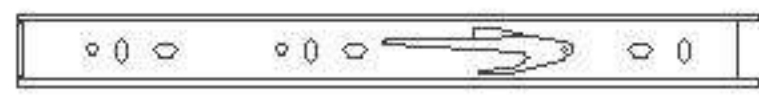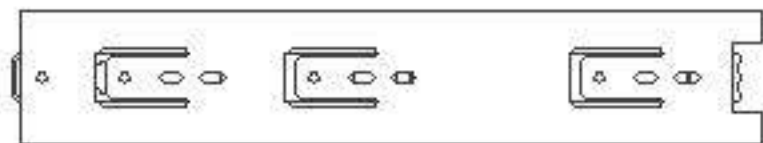NO	DESCRIPTION		QTY	EXTRA
A		CHIPBOARD SCREW M4 x 16MM	48	1
B		CHIPBOARD SCREW M4 x 38MM	10	1
C		WOOD DOWEL M8 x 35MM	26	1
D		WOOD DOWEL M6 x 30MM	48	1
E		CAM-LOCK 15x 12	52	1
F		CAM-BOLT 5x 25	52	1
G		CAM-LOCK COVER 17x 5	52	1
H1		DRAWER SLIDE 250MM	4 SET	
H2				


**EXTRA HARDWARE FOR SPARE USE

NO	DESCRIPTION		QTY	EXTRA
I		HANDLE	8	
J		PANHEAD SCREW M4 x 22MM	16	
Z		Anti-Tipping Kit	2	

 DRAWER SLIDE DISASSEMBLE STEPS:

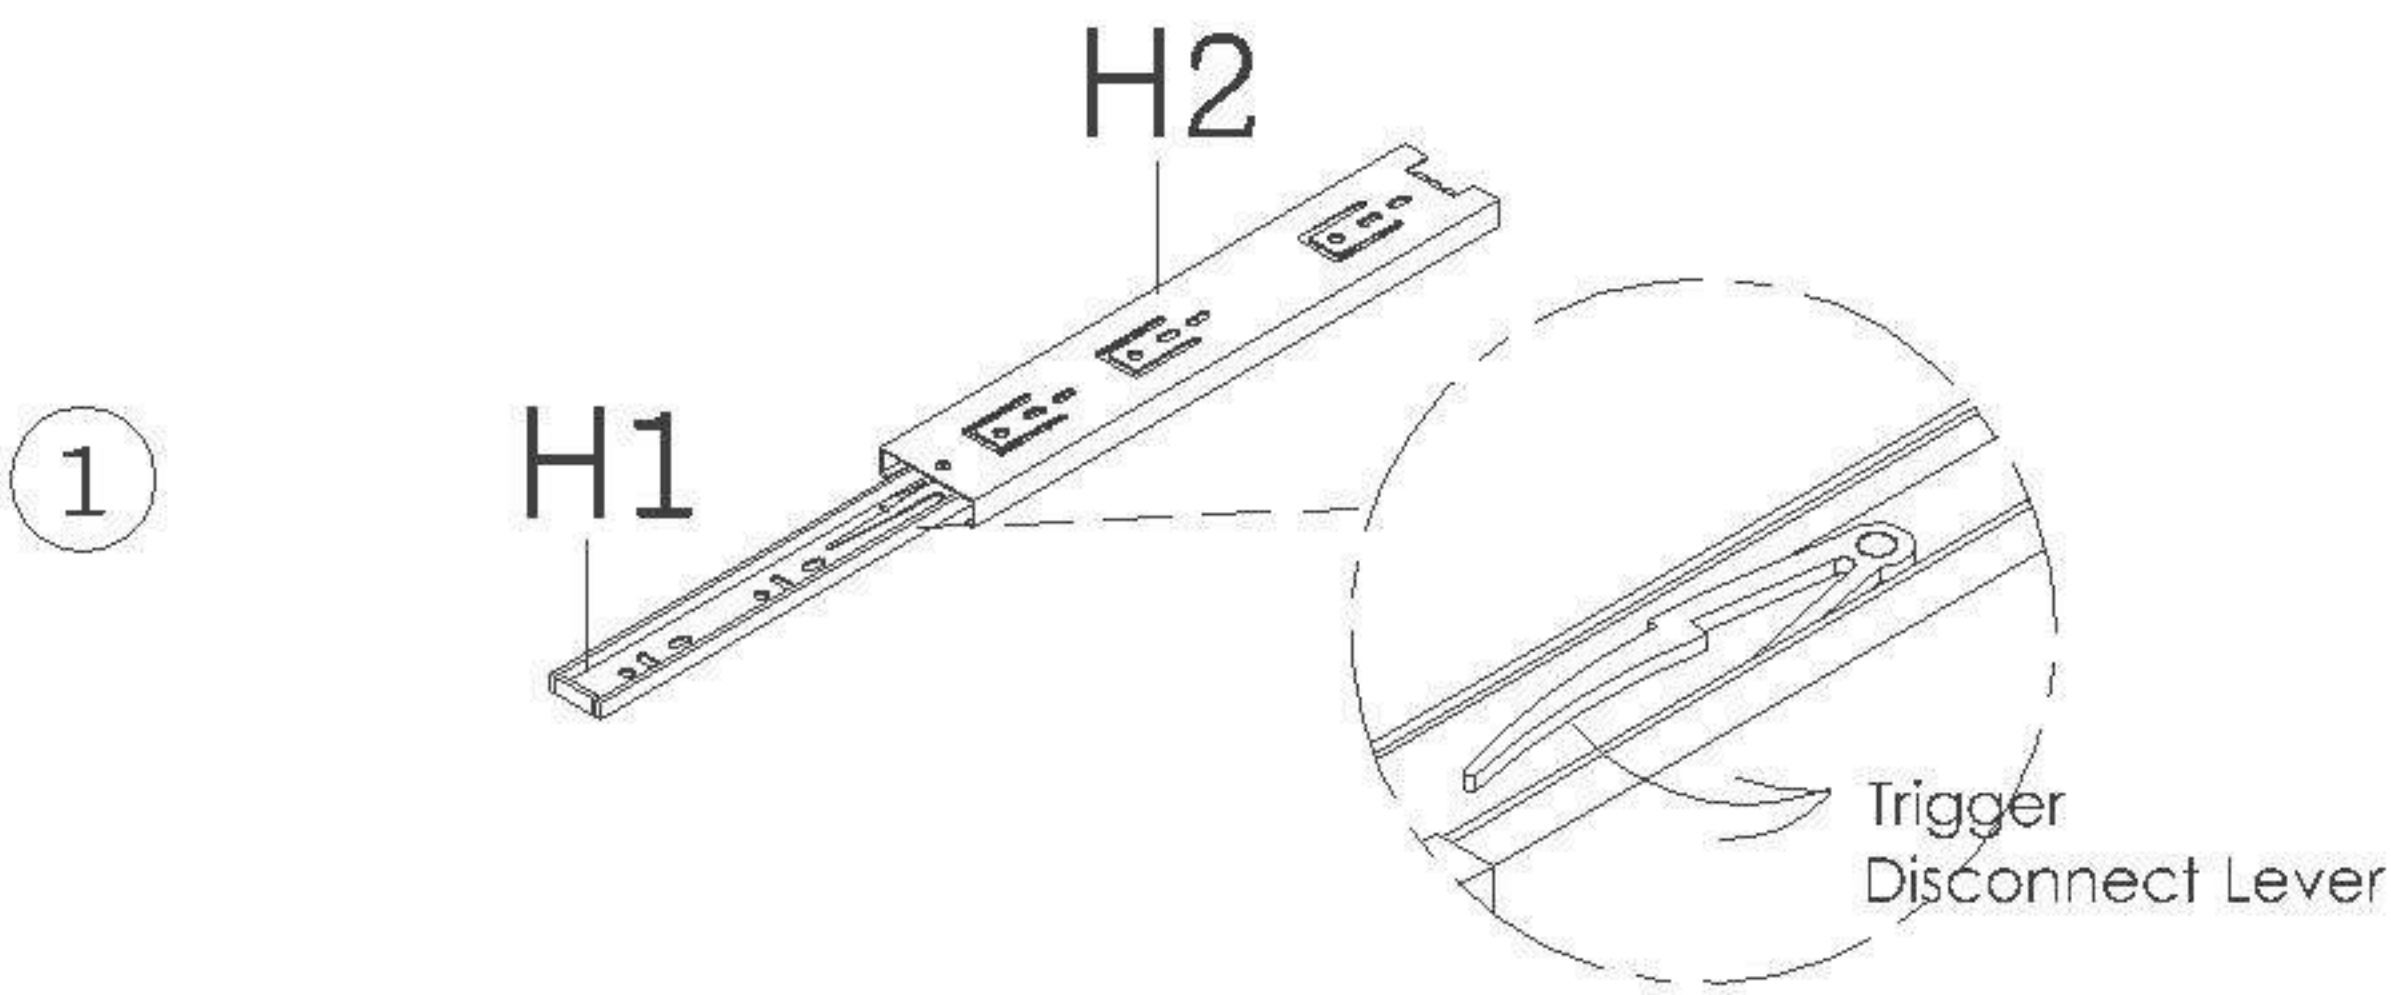

 - A) Distinguish between Slide Track (H2) and Slide Runner (H1) of Drawer Slide.
B) Slide out H1 from H2 until Trigger Disconnect Lever is visible.
C) Depress the Trigger Disconnect Lever in the groove of H1 and at the same time slide out H2 completely from H1.

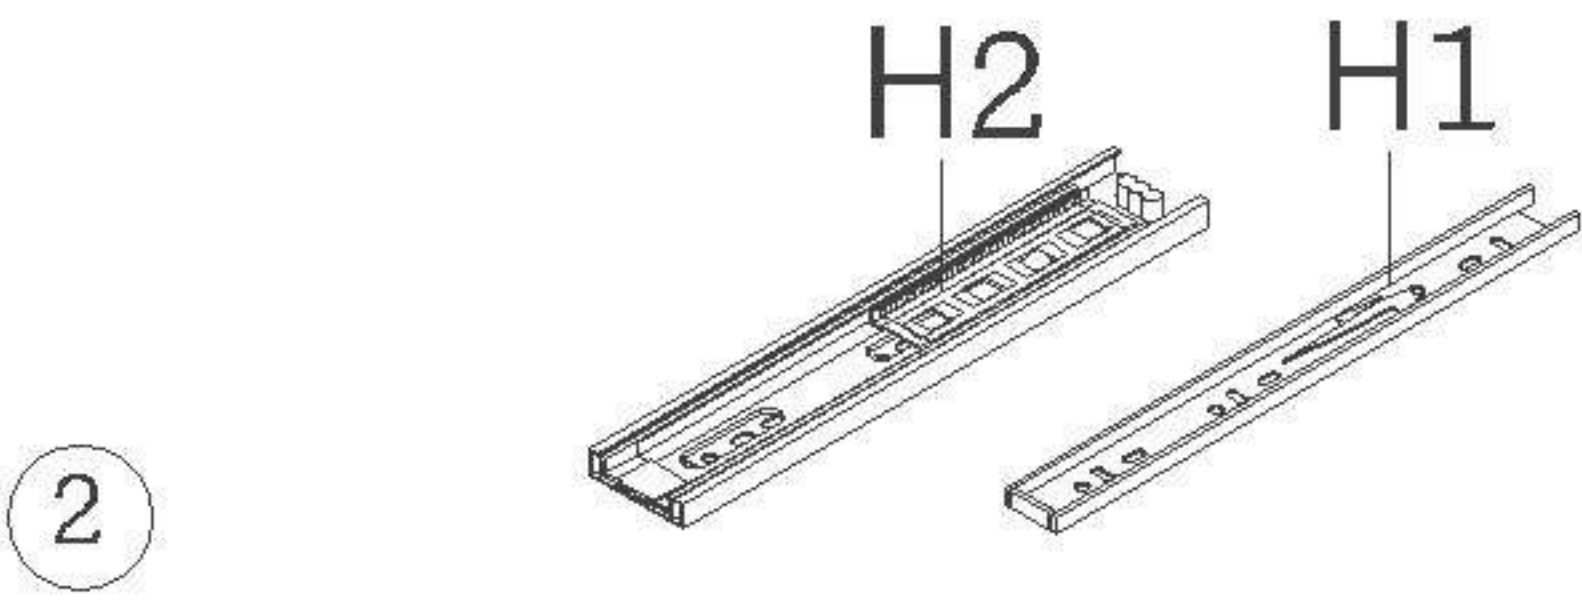


PARTS IN BOX 1

NAME: CENTER RAIL	QTY: 3Pcs	CODE: 5
NAME: LEG	QTY: 4Pcs	CODE: 7
NAME: DRAWER FRONT PANEL	QTY: 4Pcs	CODE: 101
NAME: DRAWER LEFT PANEL	QTY: 4Pcs	CODE: 102
NAME: DRAWER BACK PANEL	QTY: 4Pcs	CODE: 103
NAME: DRAWER BASE PANEL	QTY: 4Pcs	CODE: 104
NAME: DRAWER RIGHT PANEL	QTY: 4Pcs	CODE: 105
NAME: HARDWARE + AI	QTY: 1Pack	
NAME: DRAWER SLIDE	QTY: 1Pack	


PARTS IN BOX 2

NAME: TOP PANEL	QTY: 1Pc	CODE: 1
NAME: BOTTOM FRAME	QTY: 1Pc	CODE: 4
NAME: LEFT SIDE PANEL	QTY: 1Pc	CODE: 2
NAME: RIGHT SIDE PANEL	QTY: 1Pc	CODE: 3
NAME: LEFT BACK PANEL	QTY: 1Pc	CODE: 6
NAME: RIGHT BACK PANEL	QTY: 1Pc	CODE: 8

 INSTRUCTION FOR CAM-BOLT & CAM-LOCK


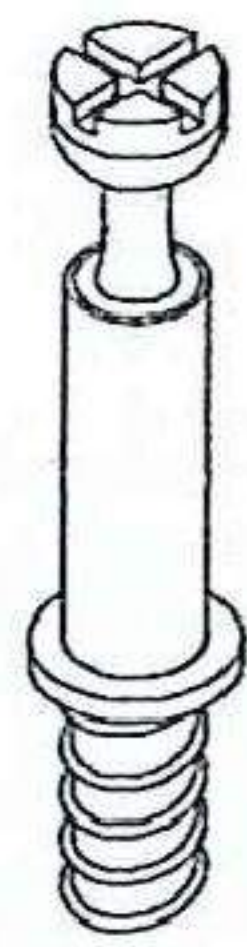


CAM-BOLT

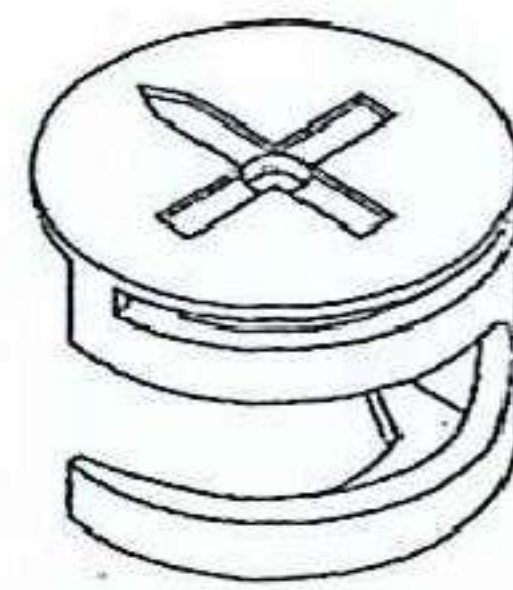 


CAM-LOCK

  
Tools Required

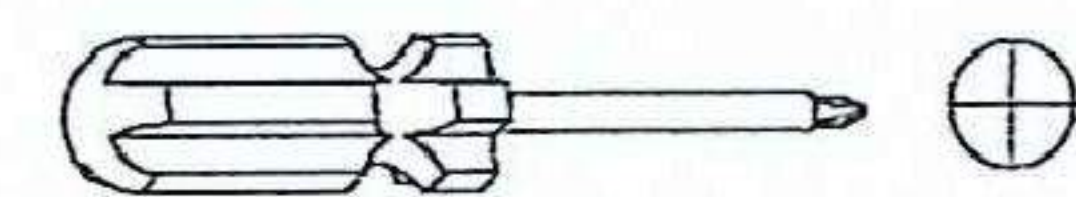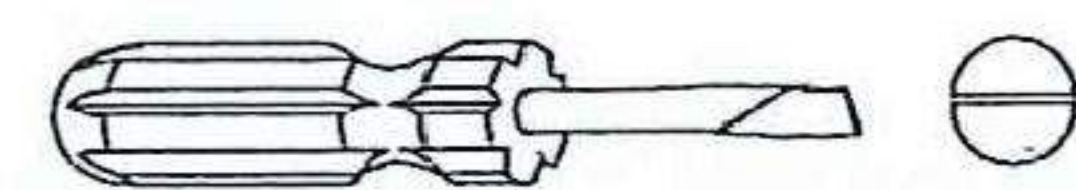


INSERTING AND TIGHTENING CAM-BOLT

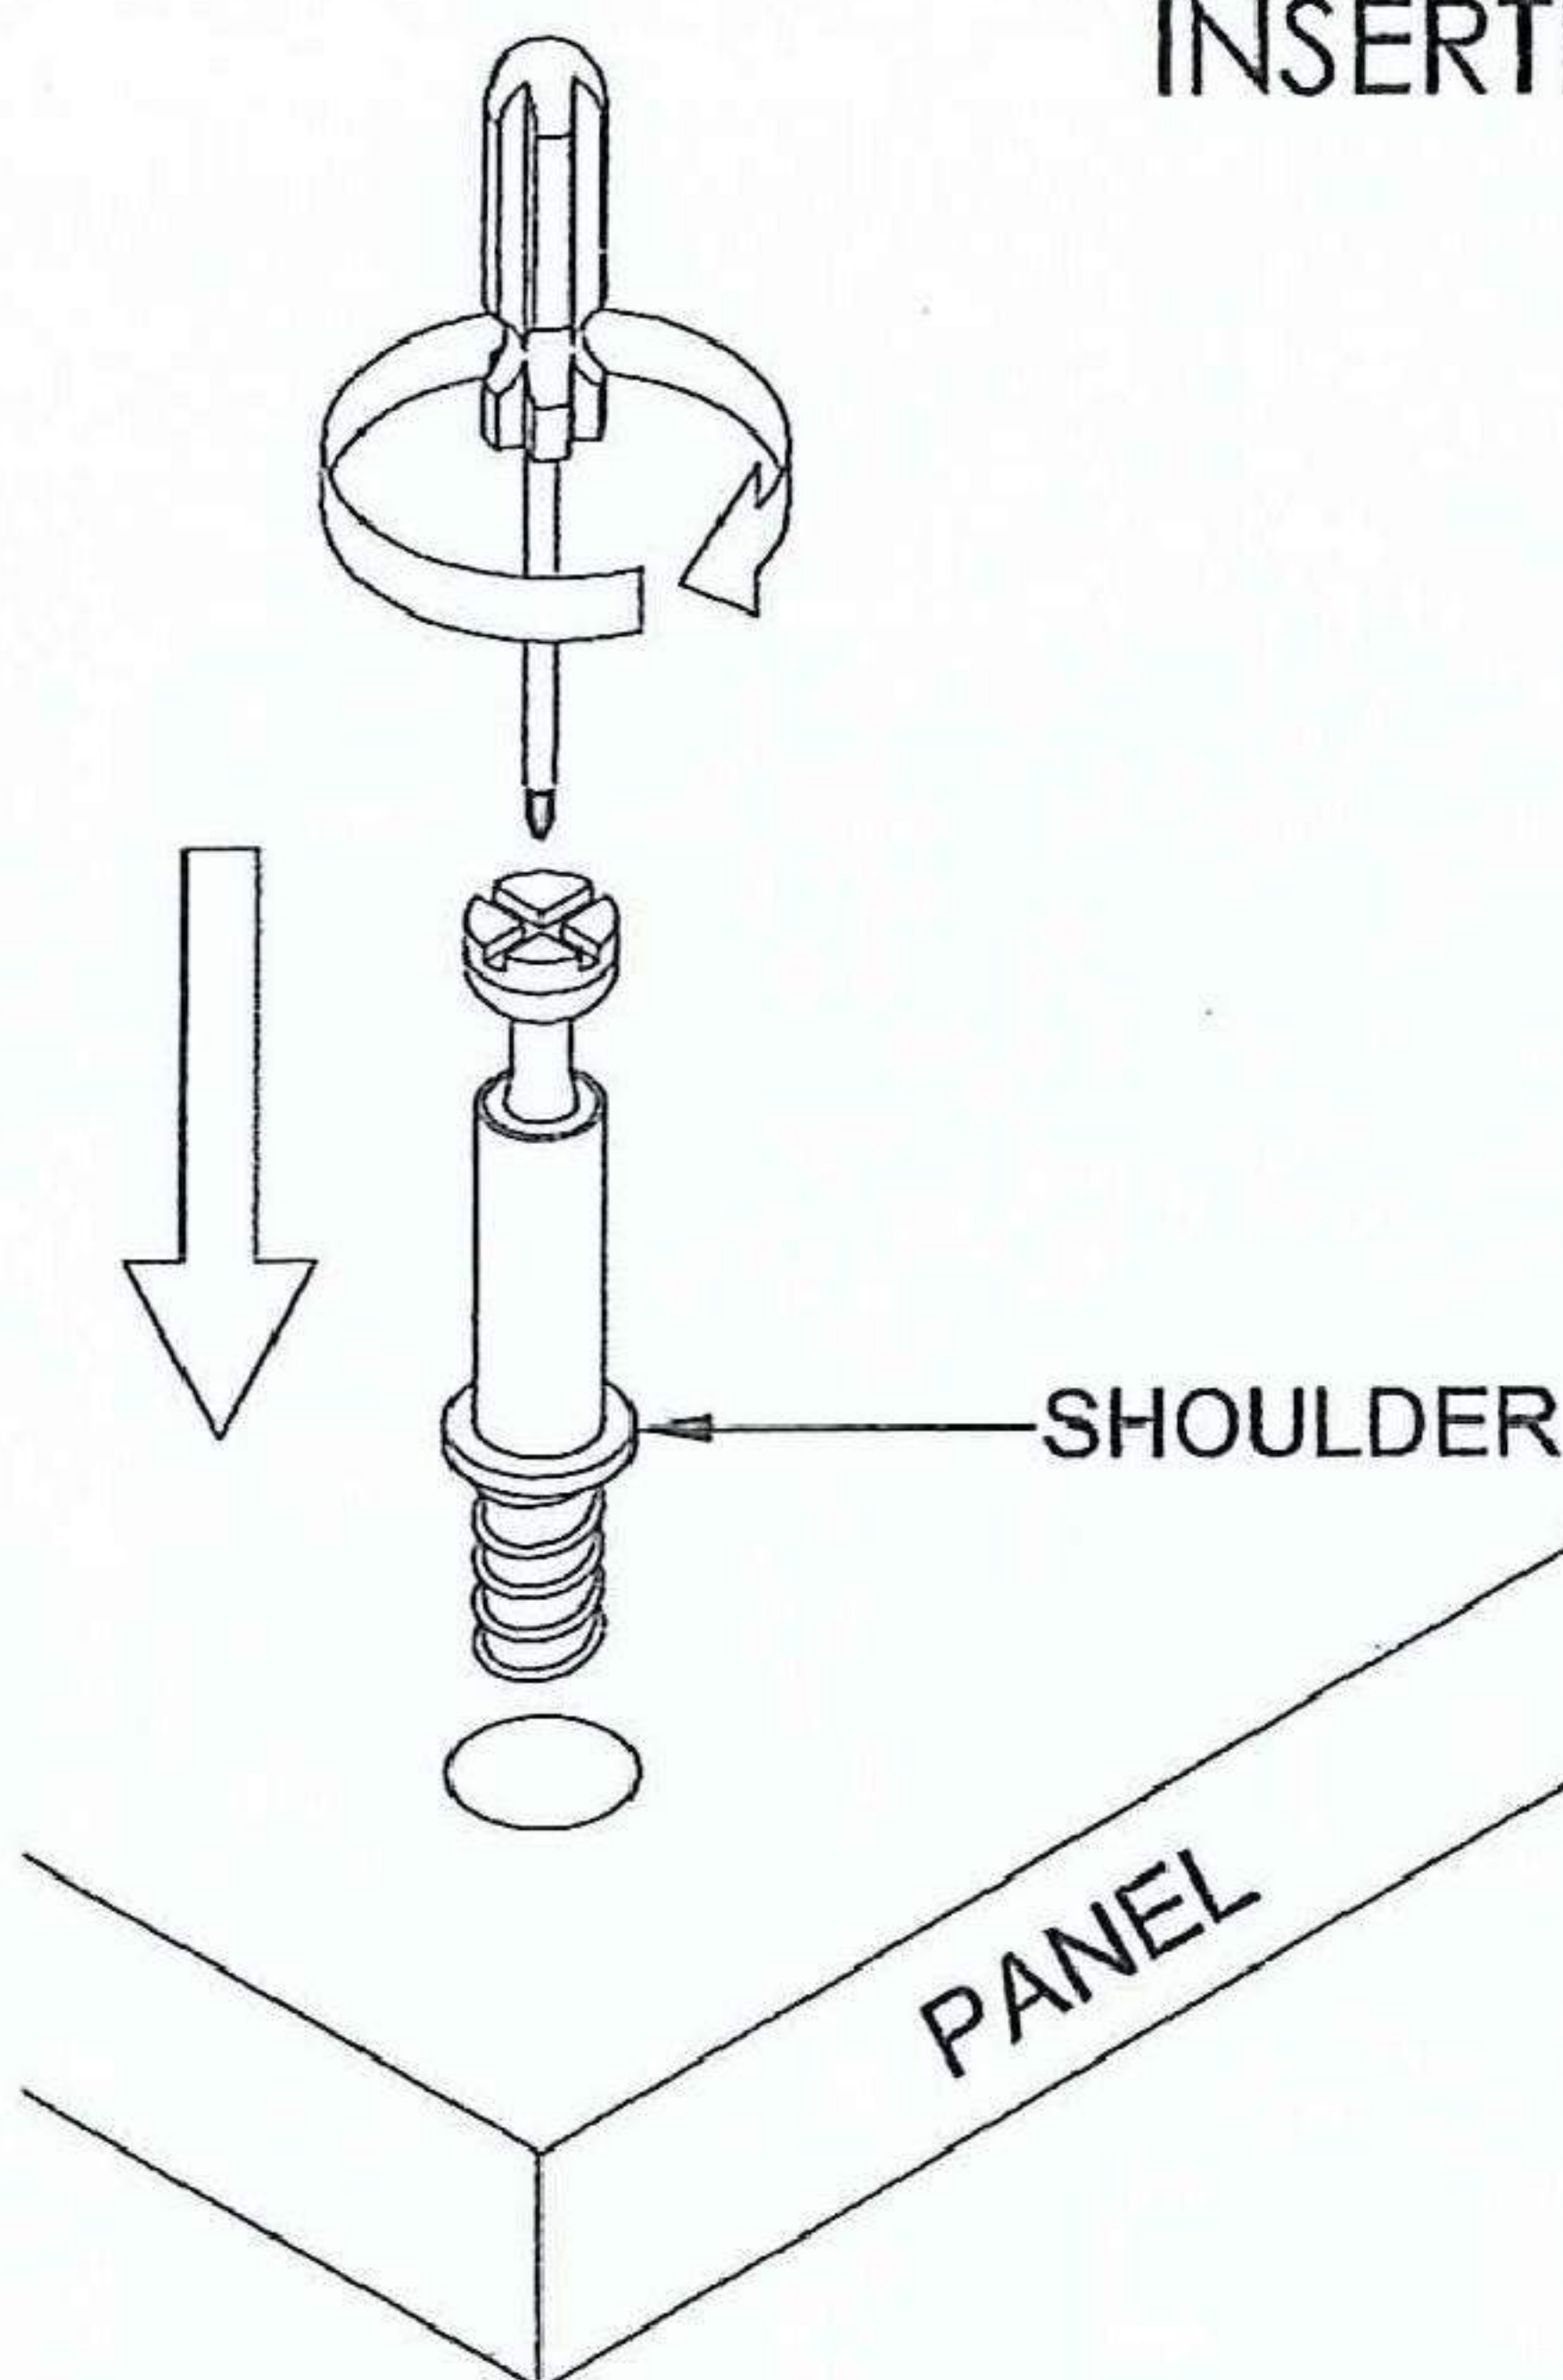 

 Place Cam-bolt on pre-drilled hole and screw in vertically

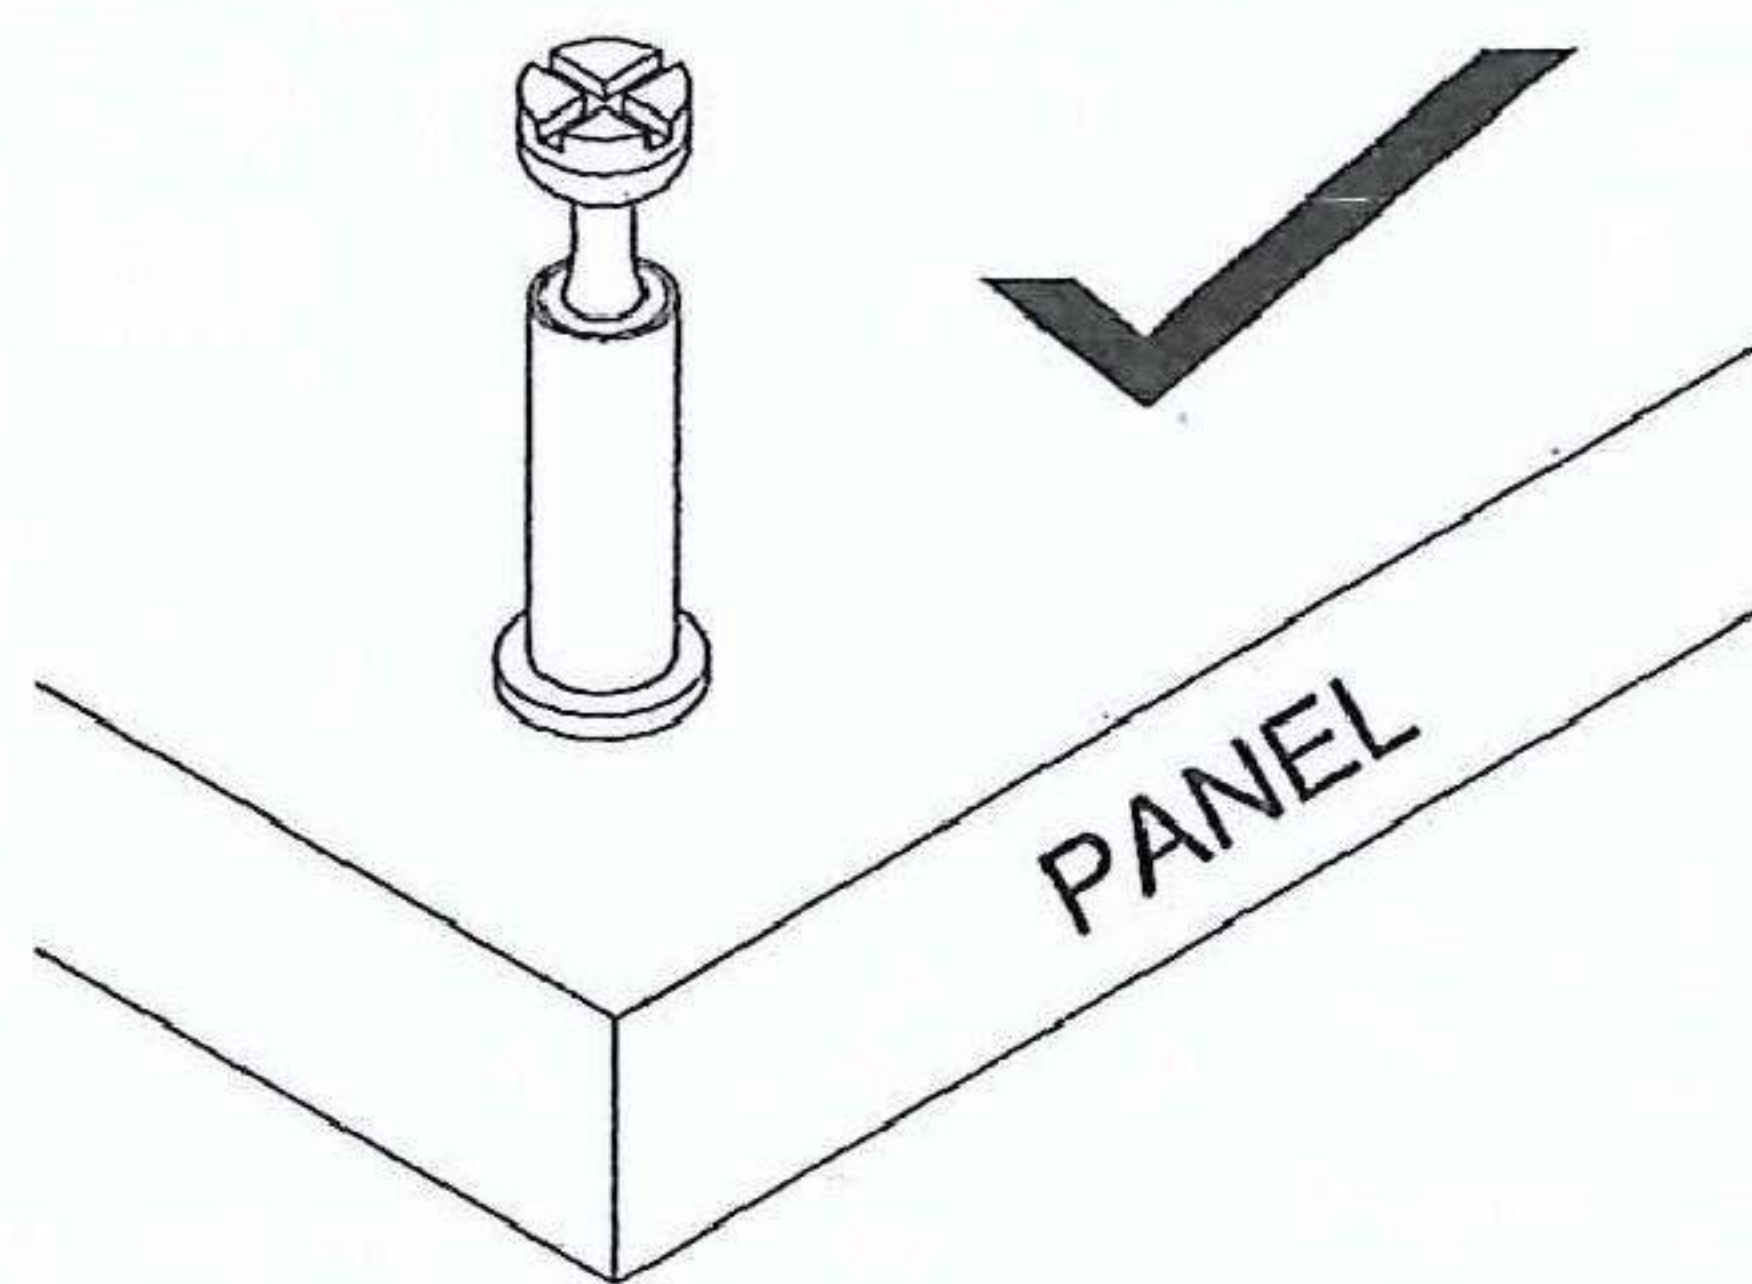

 
Shoulder is flushed (on the same level) with the panel.

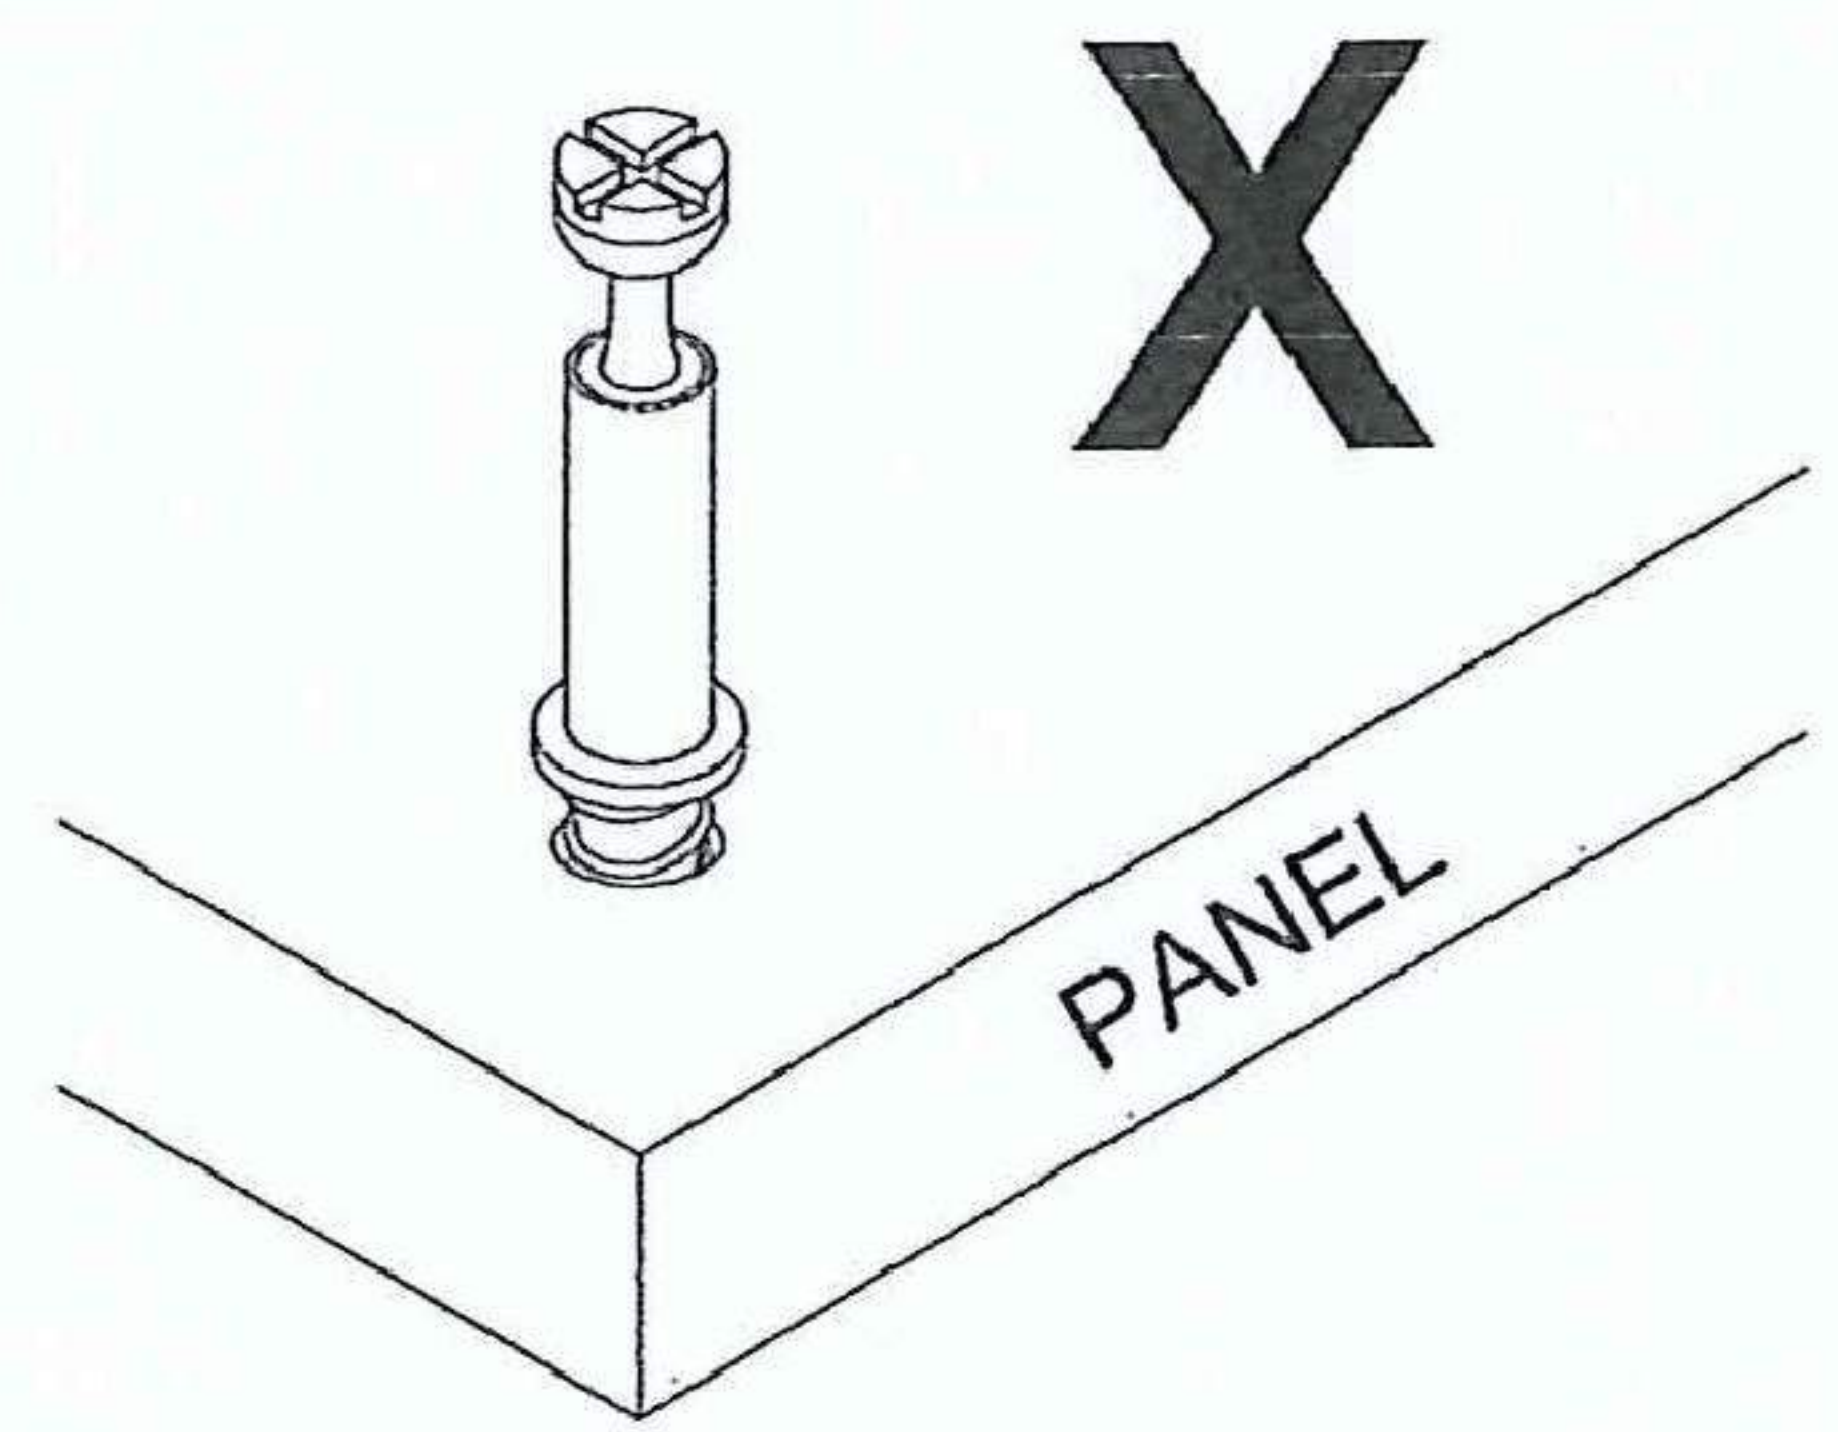

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

 INSERTING CAM-LOCK

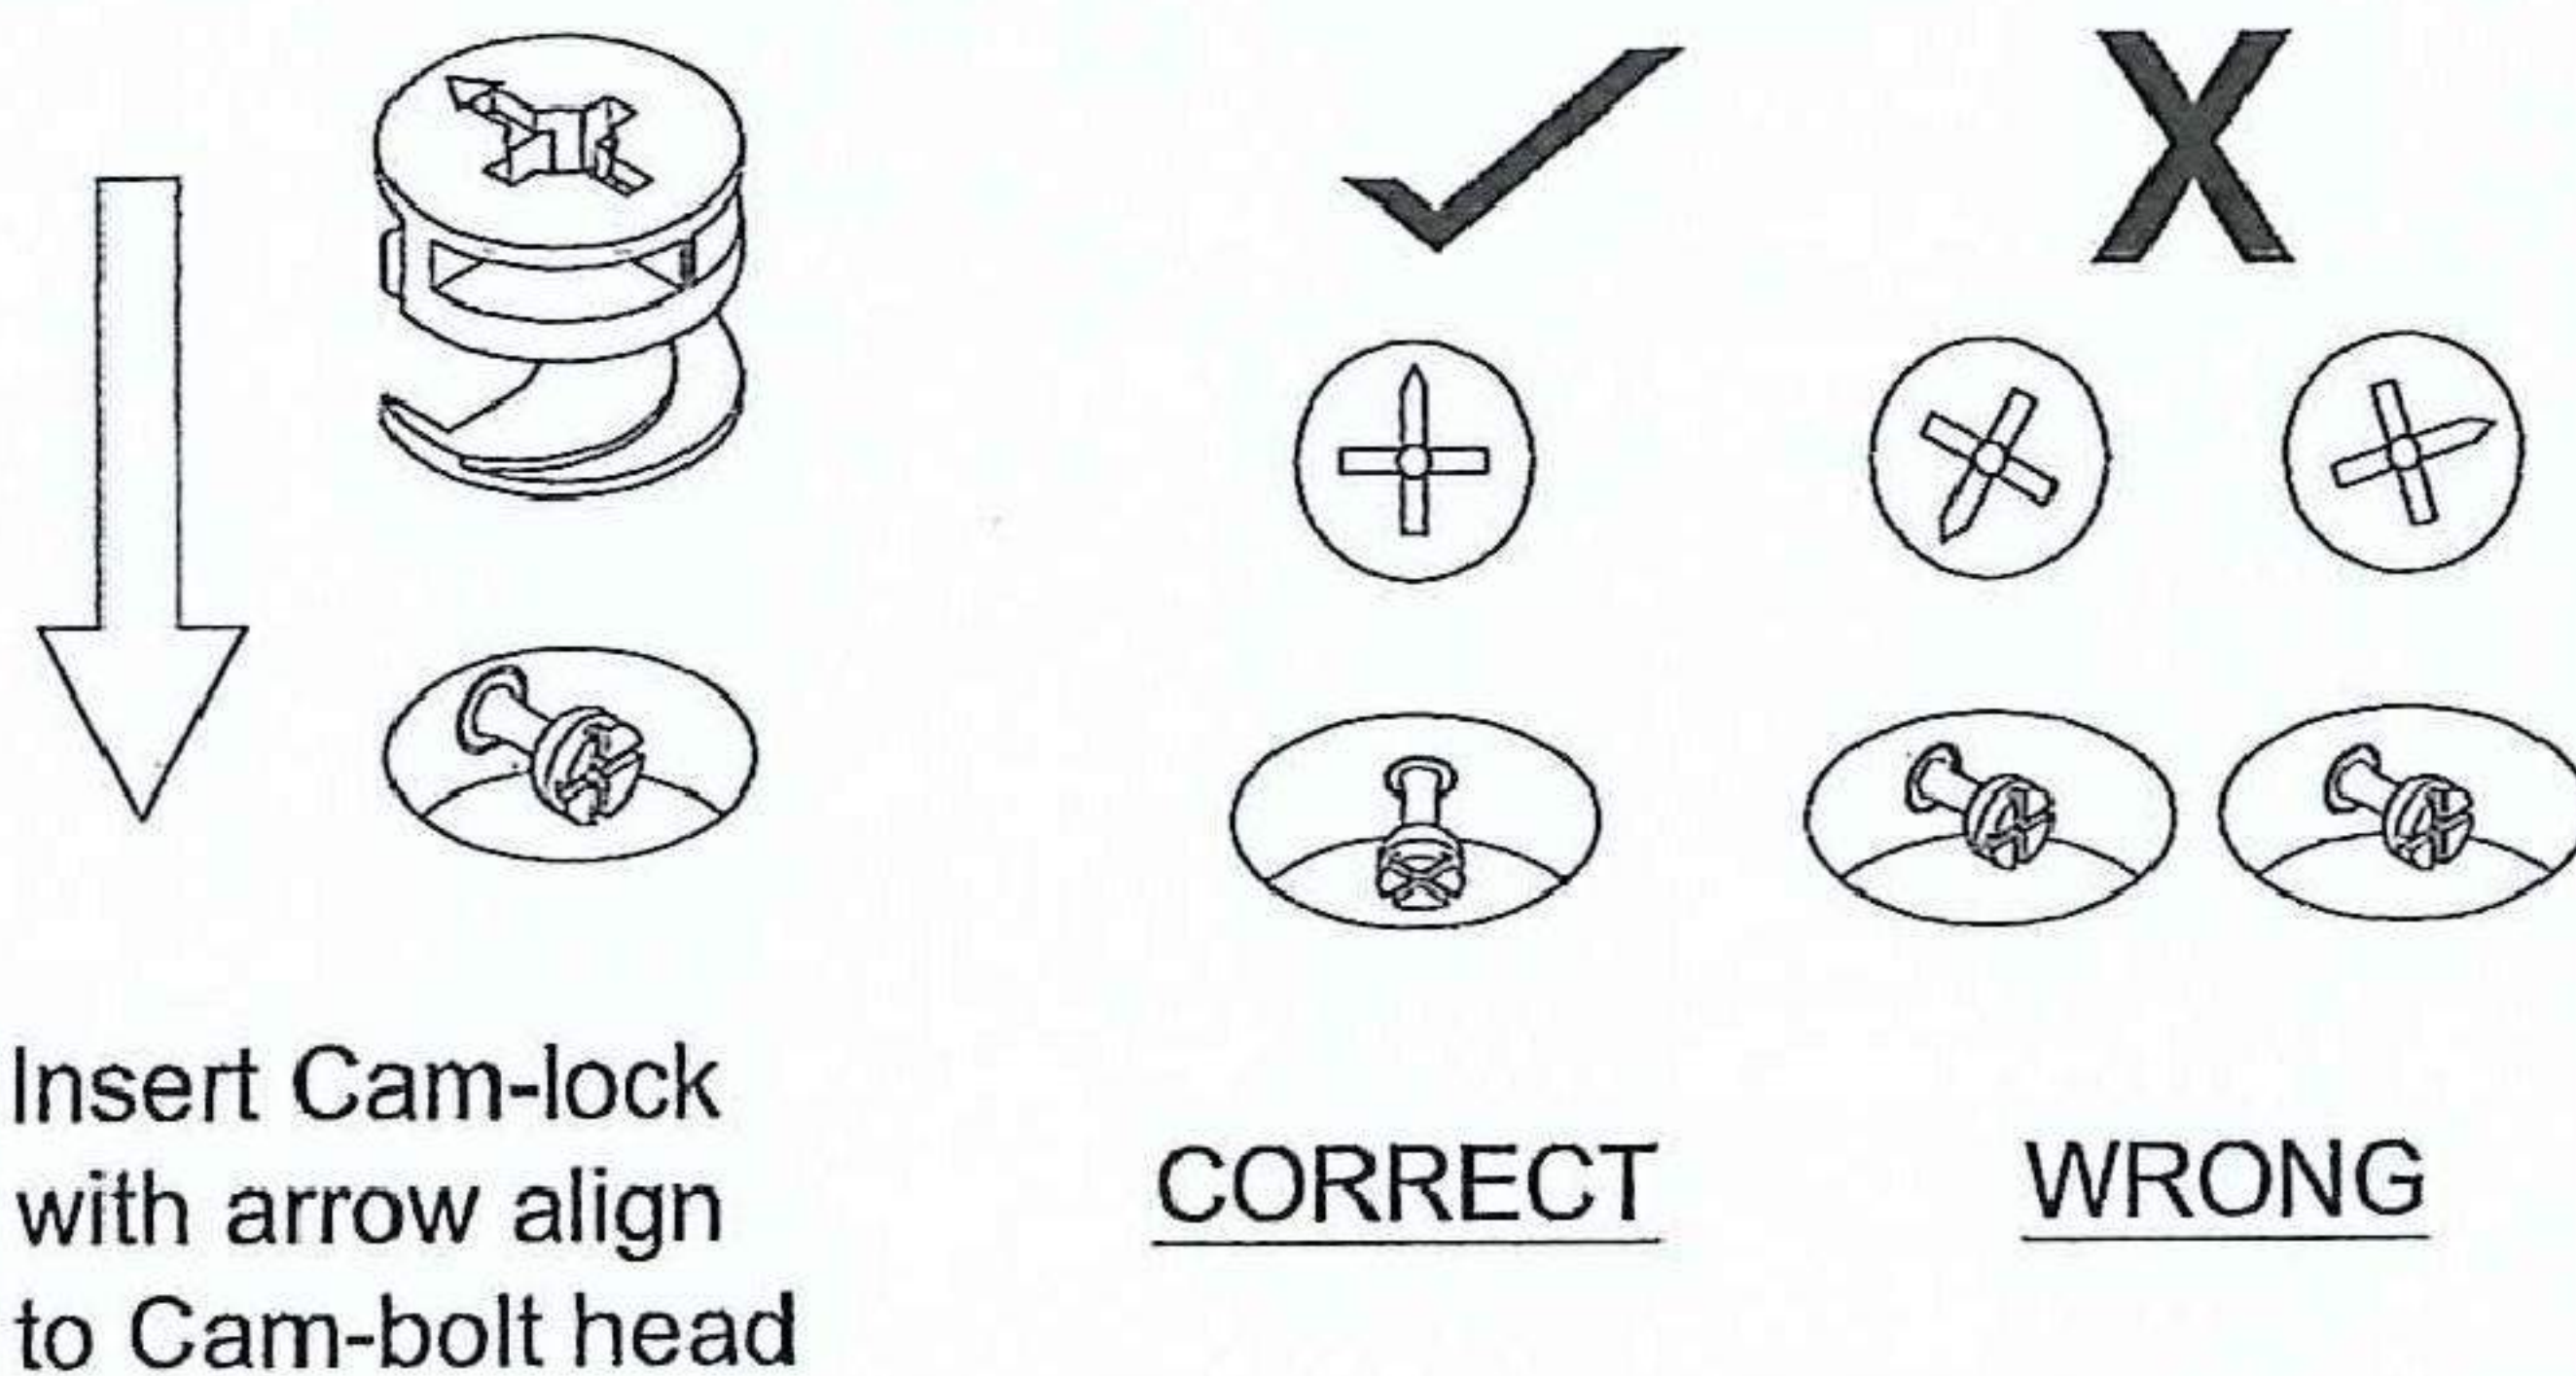

Insert Cam-lock with arrow align to Cam-bolt head

 
CORRECT

WRONG

CAM-LOCK


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK

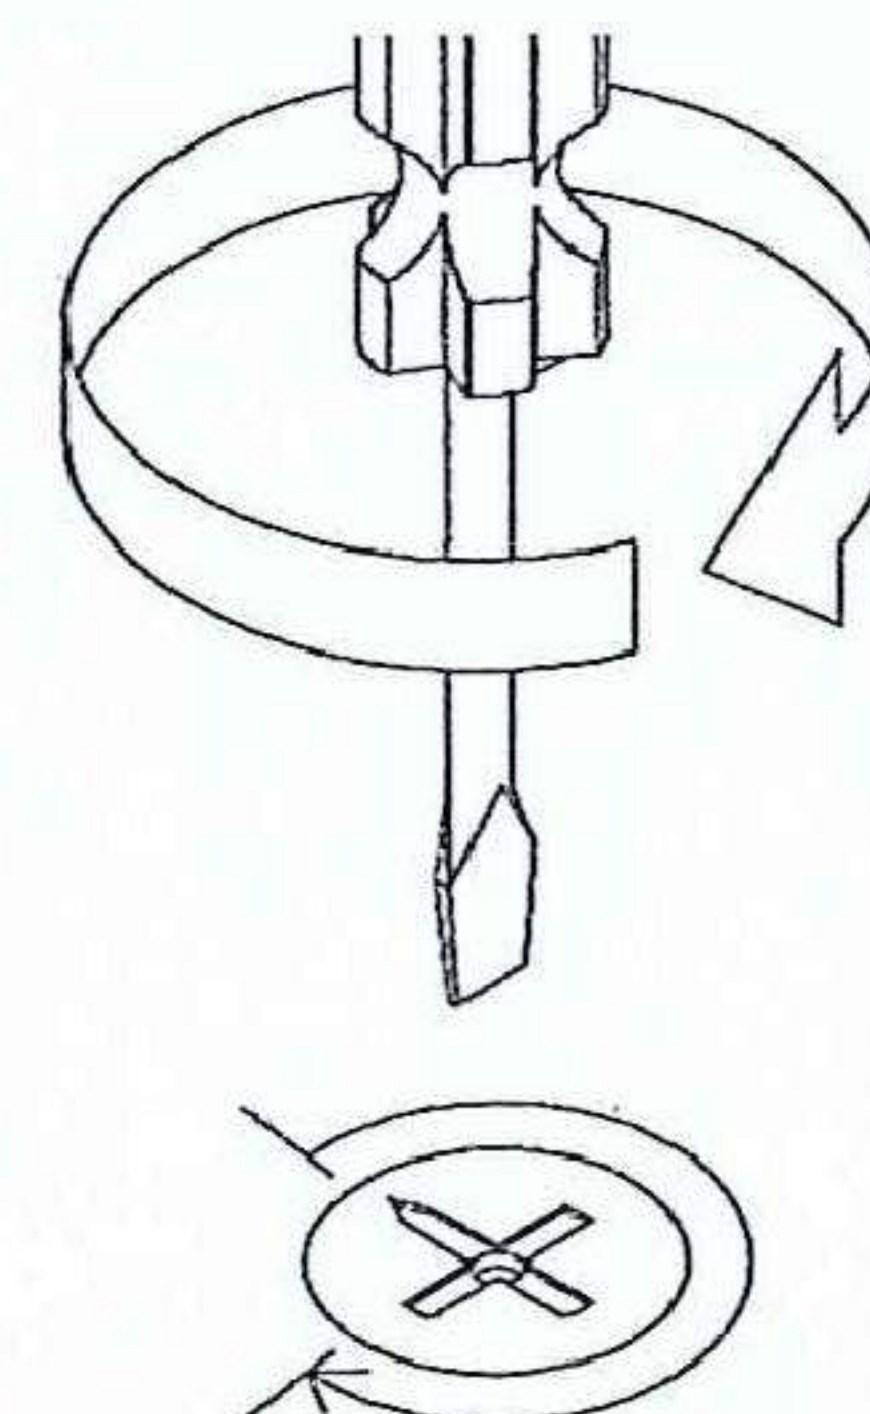


Use a Flat-head Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

 STEP 1

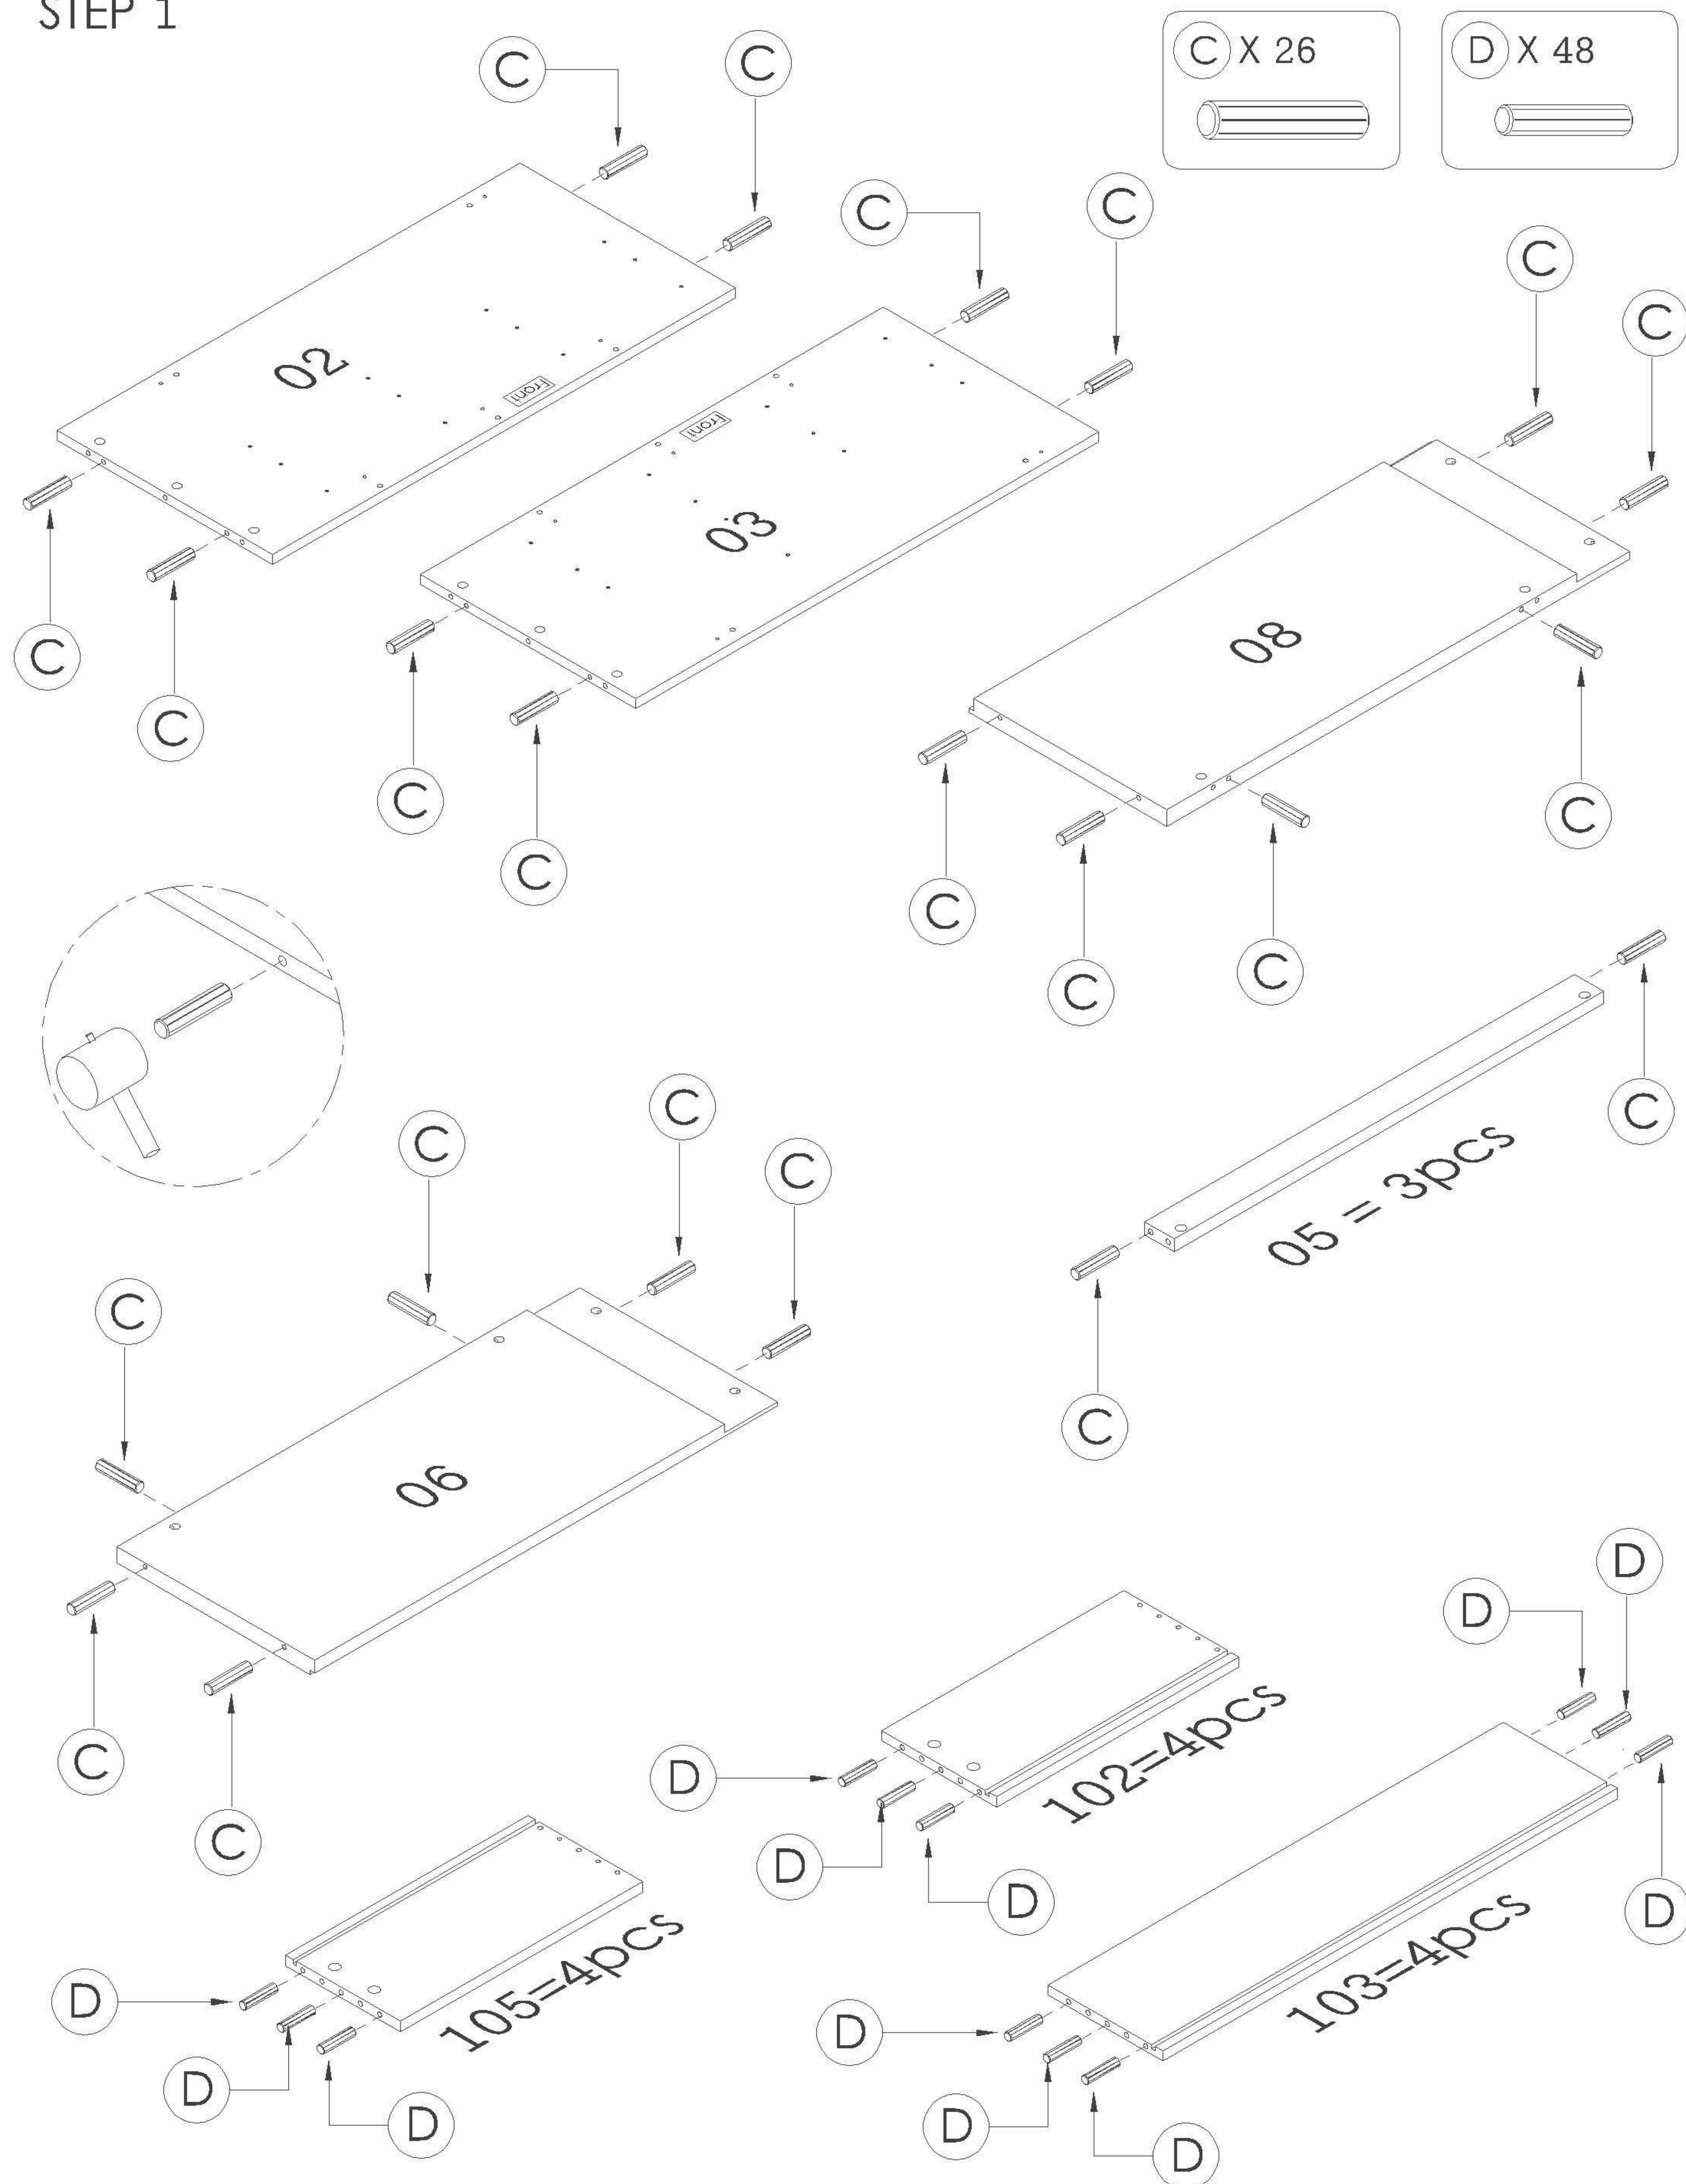

- Lay Left & Right Panel (2 & 3), Back Left & Right Panel (6 & 8) Center Rail (5), Drawer Back Panel (103) and Drawer Left & Right Panel (102 & 105) as shown on a material that does not scratch or damage the parts.
- Identify the designated holes for Wood Dowel (C or D) on each part.
- Insert Wood Dowel (C or D) into the designated holes of the respective parts. Use a mallet to lightly tap in Wood Dowel (C or D) if necessary.

 STEP 2

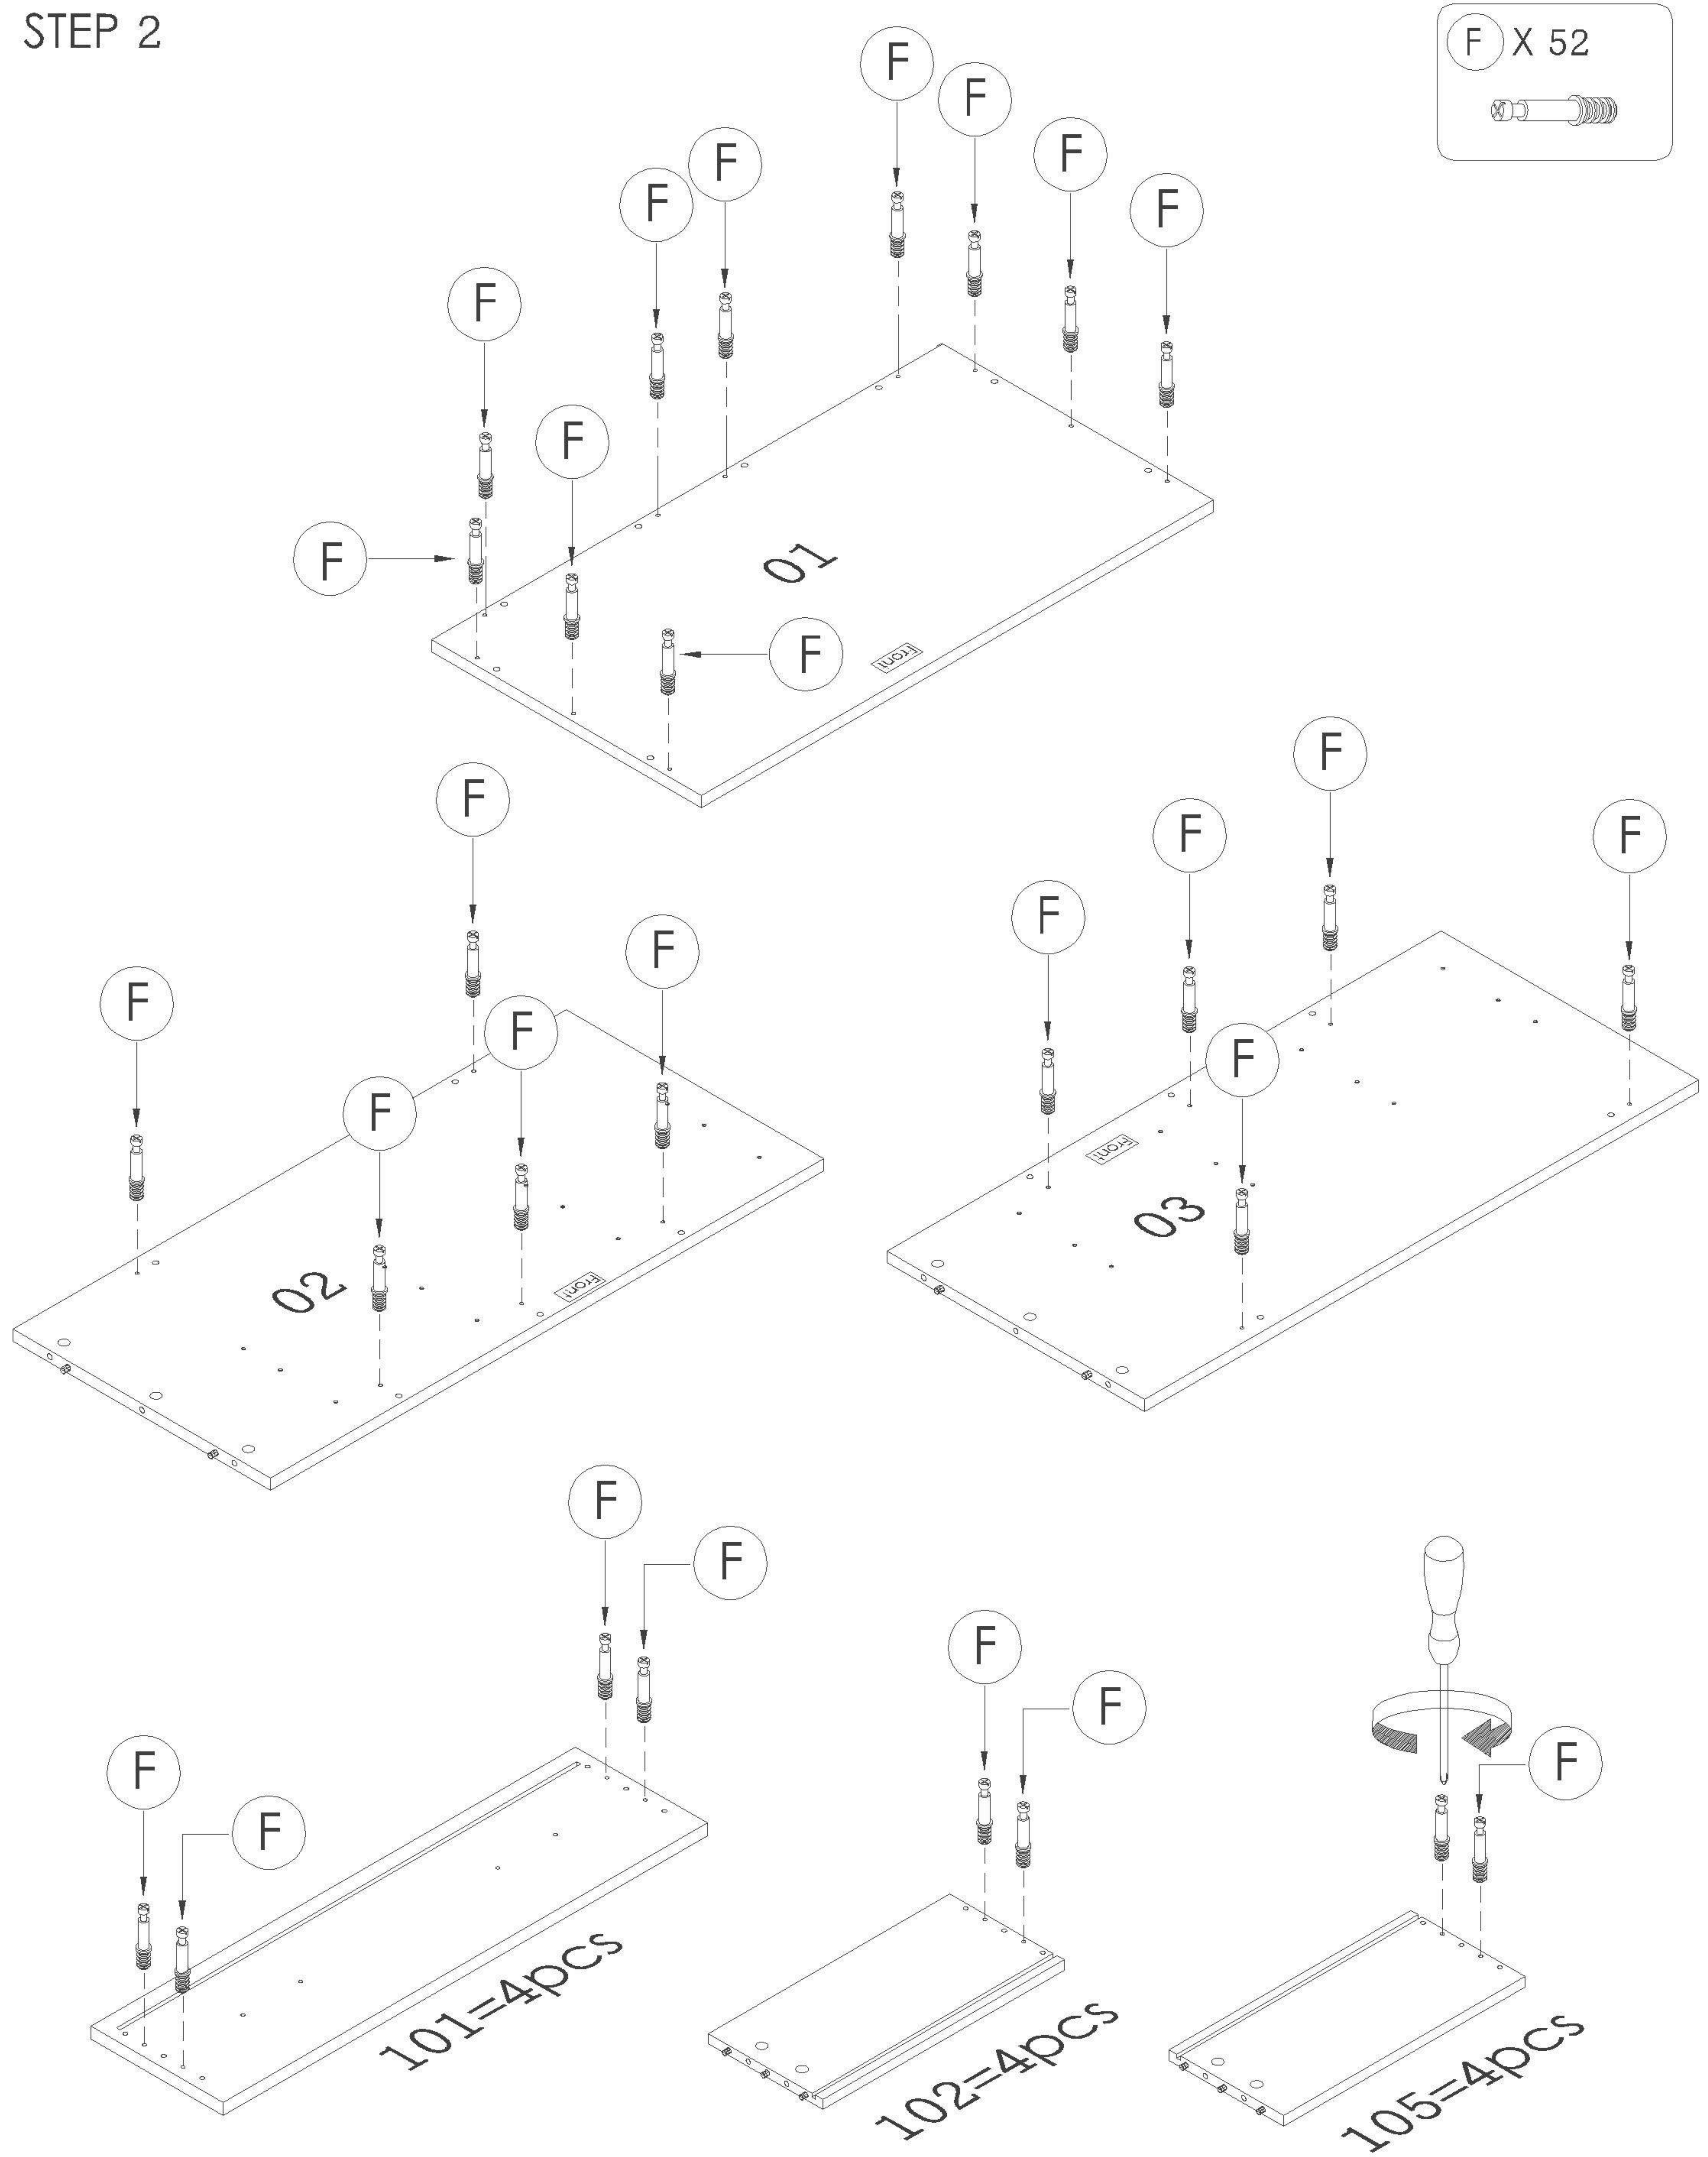

- Lay the parts as shown on a material that does not scratch or damage the parts.
- Screw in Cam-Bolt (F) into designated holes on Top Panel (1), Left & Right Panel (2 & 3), Drawer Front Panel (101) and Drawer Left & Right Panel (102 & 105).

Refer to page 5 for instructions on inserting and tightening Cam-Bolt (F).

STEP 3A

BACK

H1

④

FRONT

①

H2

H:

Trigger Disconnect
Lever

C) Depress the Trigger Disconnect Lever in the groove of H1 and at the same time slide out H2 completely from H1.

H2

H1

②

- a) Identify the pilot holes on Drawer Left & Right Panel (102 & 105) and install Slide Runner (H1) using Chipboard Screw (A). **Ensure that (A) is screwed in vertically.** Do not tighten the screw completely until all three screws are in place. **Note: The sequence of fastening Screw (A) is from the front to the back.**

STEP 3B


 
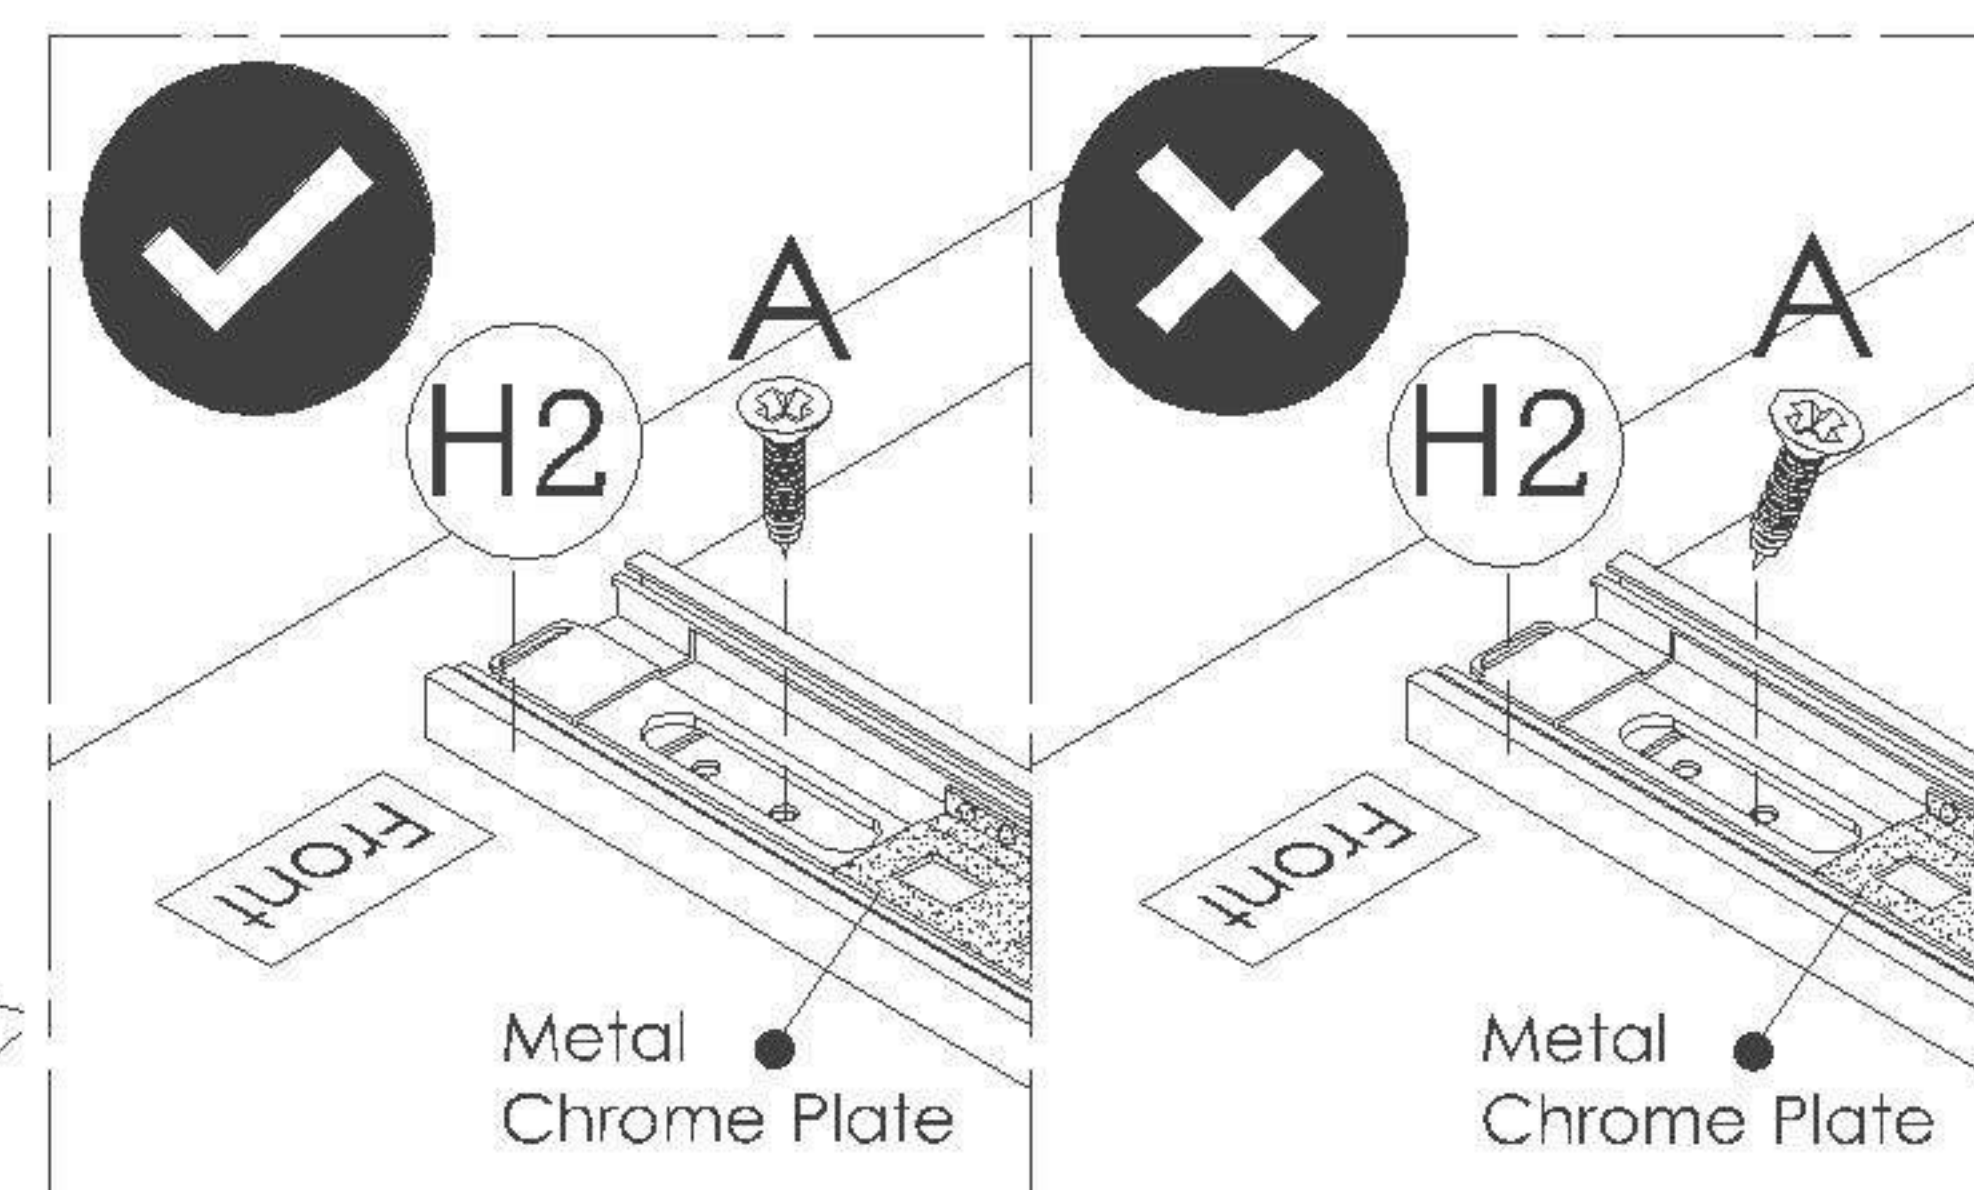 


Diagram illustrating the front and back views of the device. The front view shows a horizontal bar with three circular components labeled A1, H2, and A3. The back view shows the same bar with a different internal structure.

- a) Identify the pilot holes on Left & Right Panel (2 & 3) for Slide Track (H2). Use Screw (A) to fasten (H2). **Ensure that (A) is screwed in vertically.** Do not tighten the screw completely until all three screws are in each track.


STEP 4

 STEP 4A

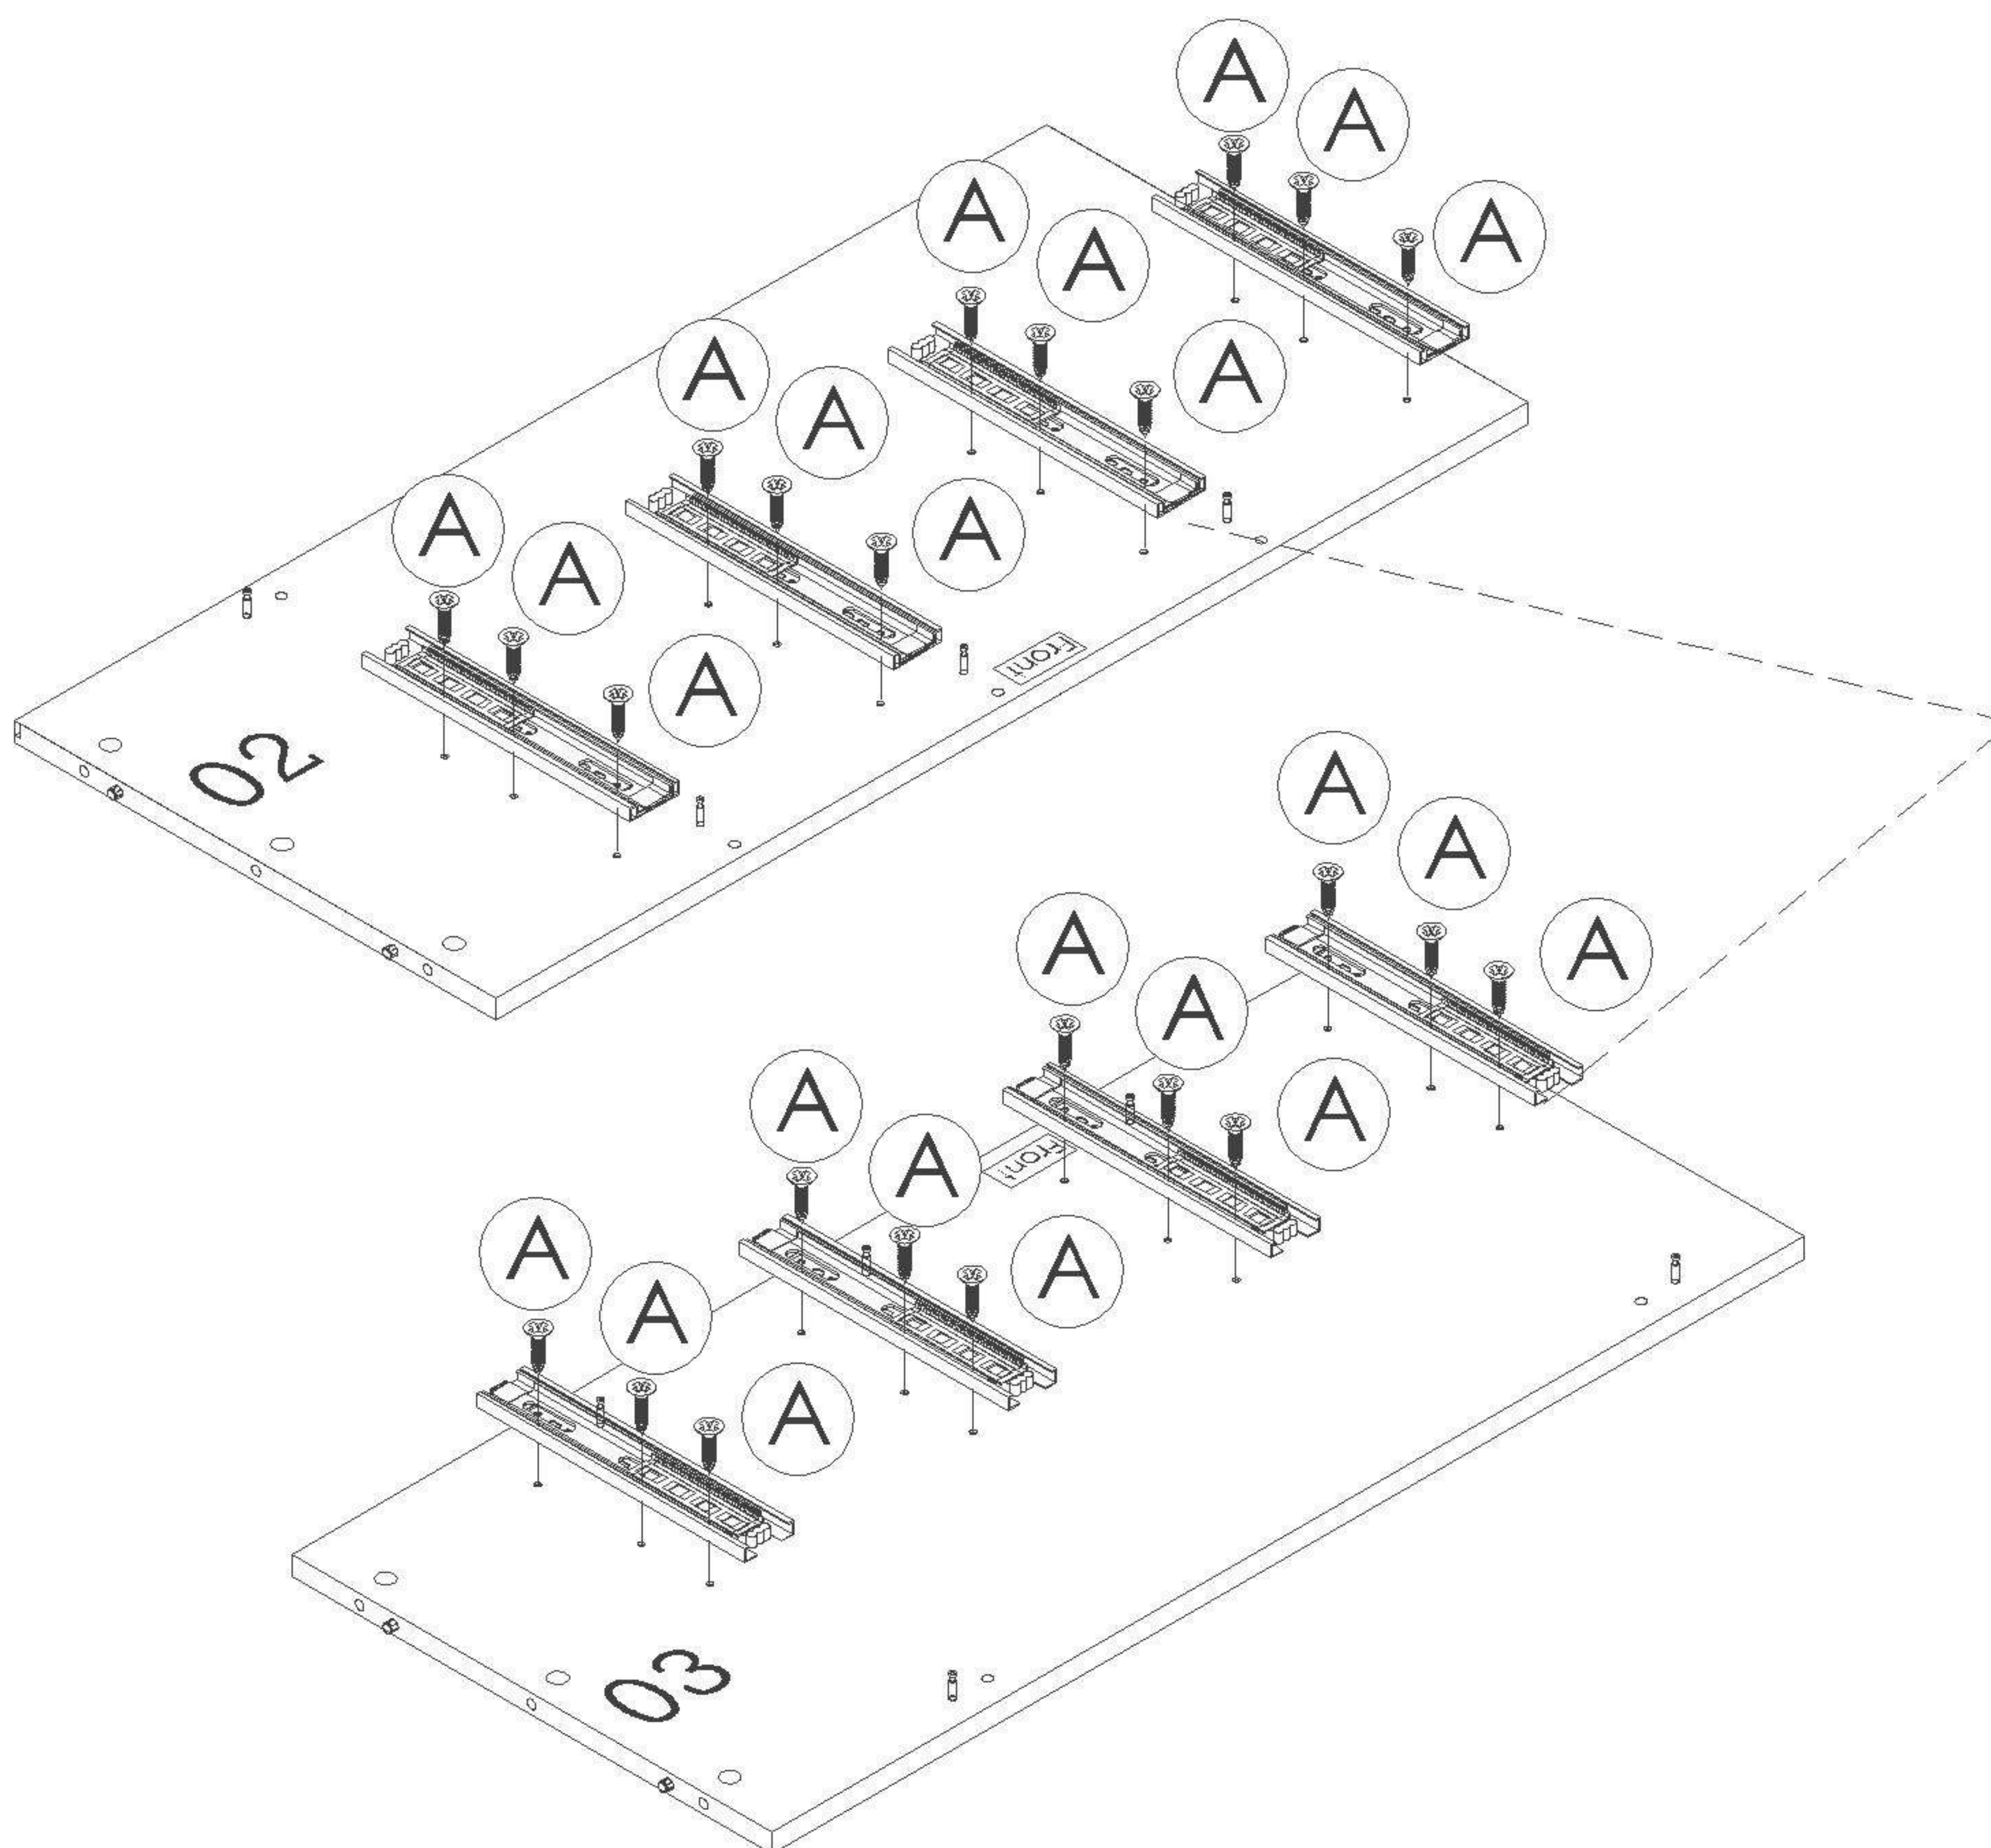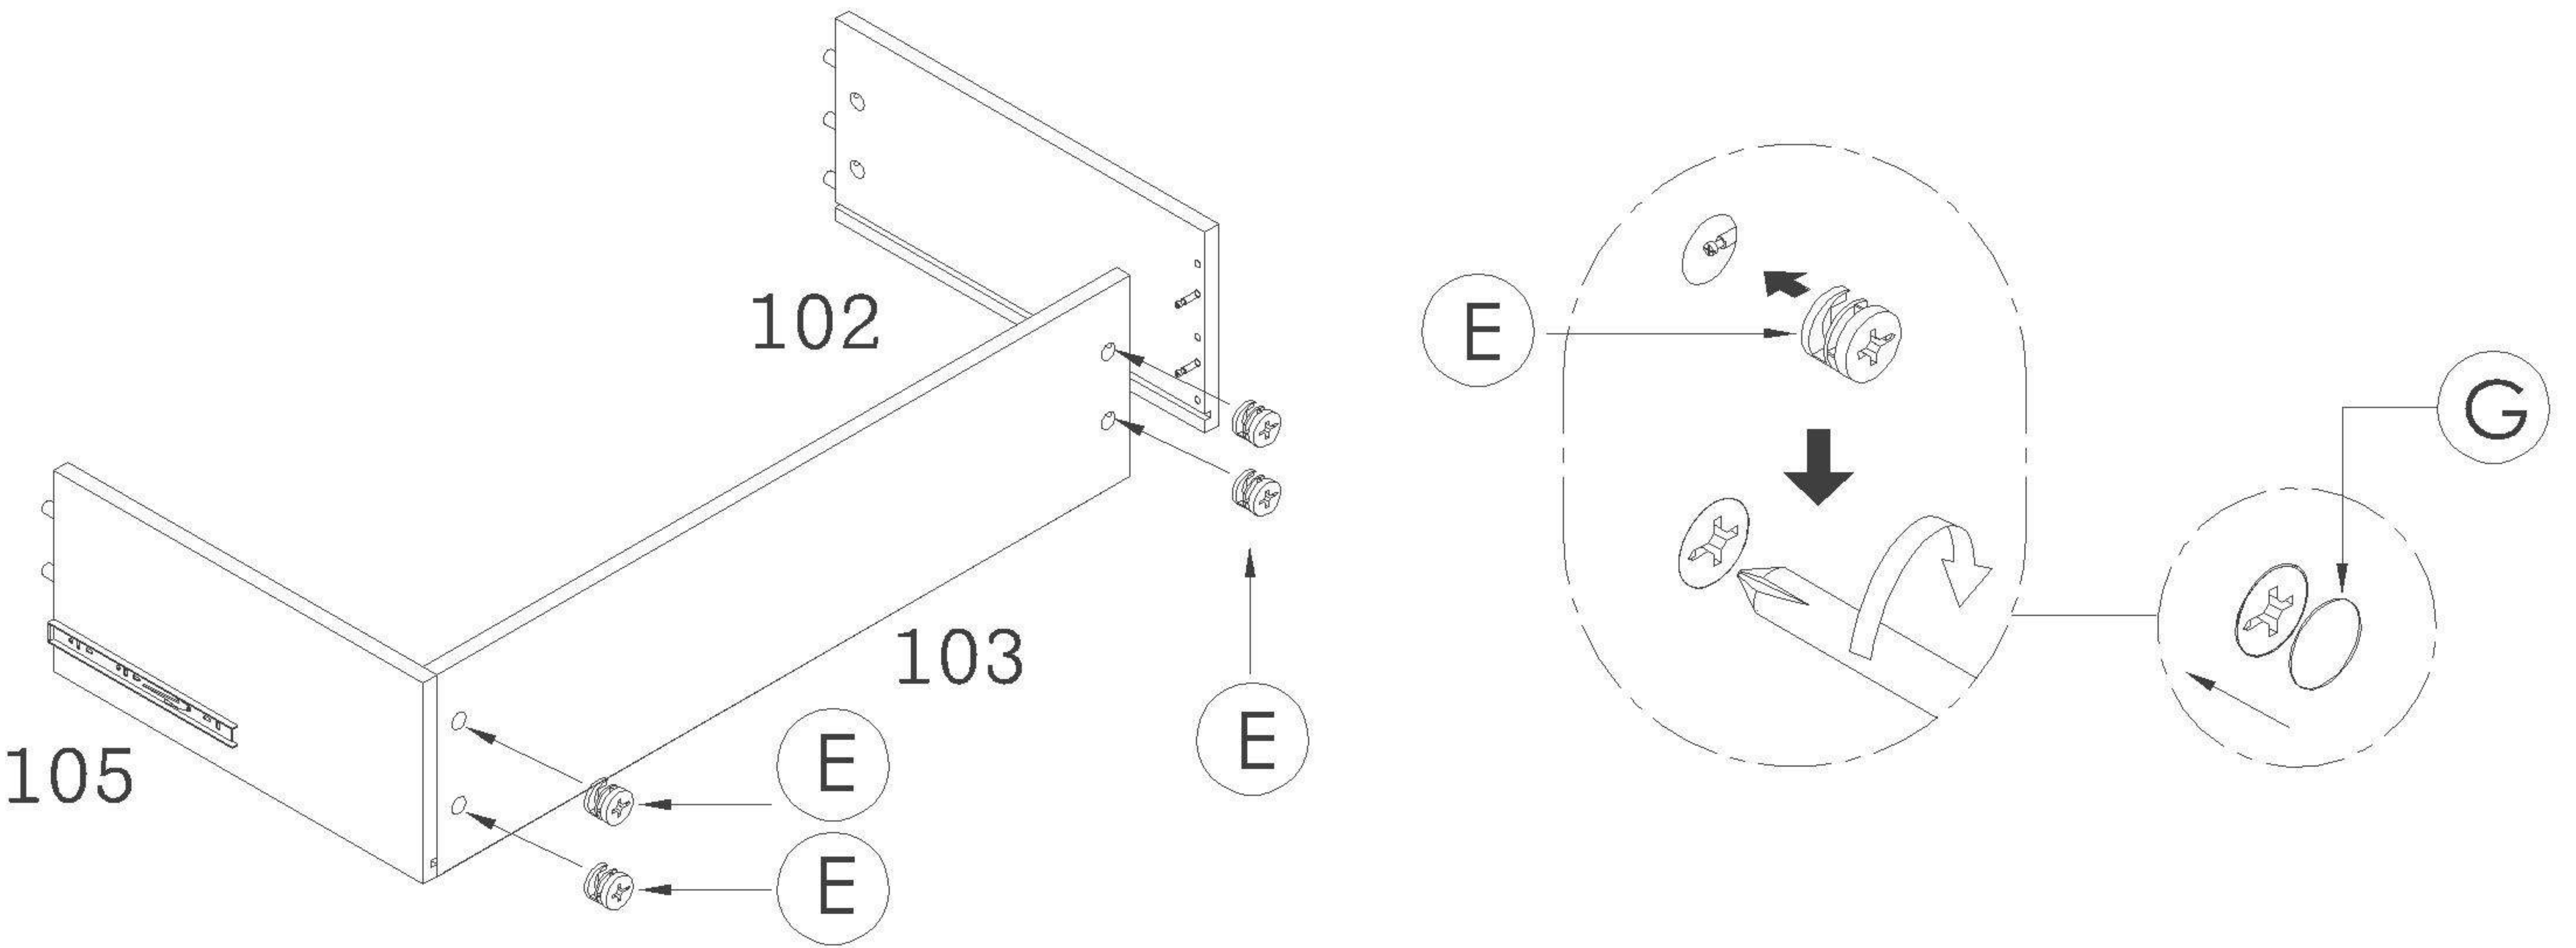


- a) Attach Drawer Left & Right Panel (102 & 105) to Drawer Back Panel (103) via Cam-Bolt and Wood Dowel on the respective parts.
- b) Insert Cam-Lock (E) into the designated hole on Drawer Back Panel (103) then turn clockwise to lock onto Cam-Bolt.
- c) Insert Cam-Lock Cover (G) to conceal Cam-Lock (E).

 STEP 4B

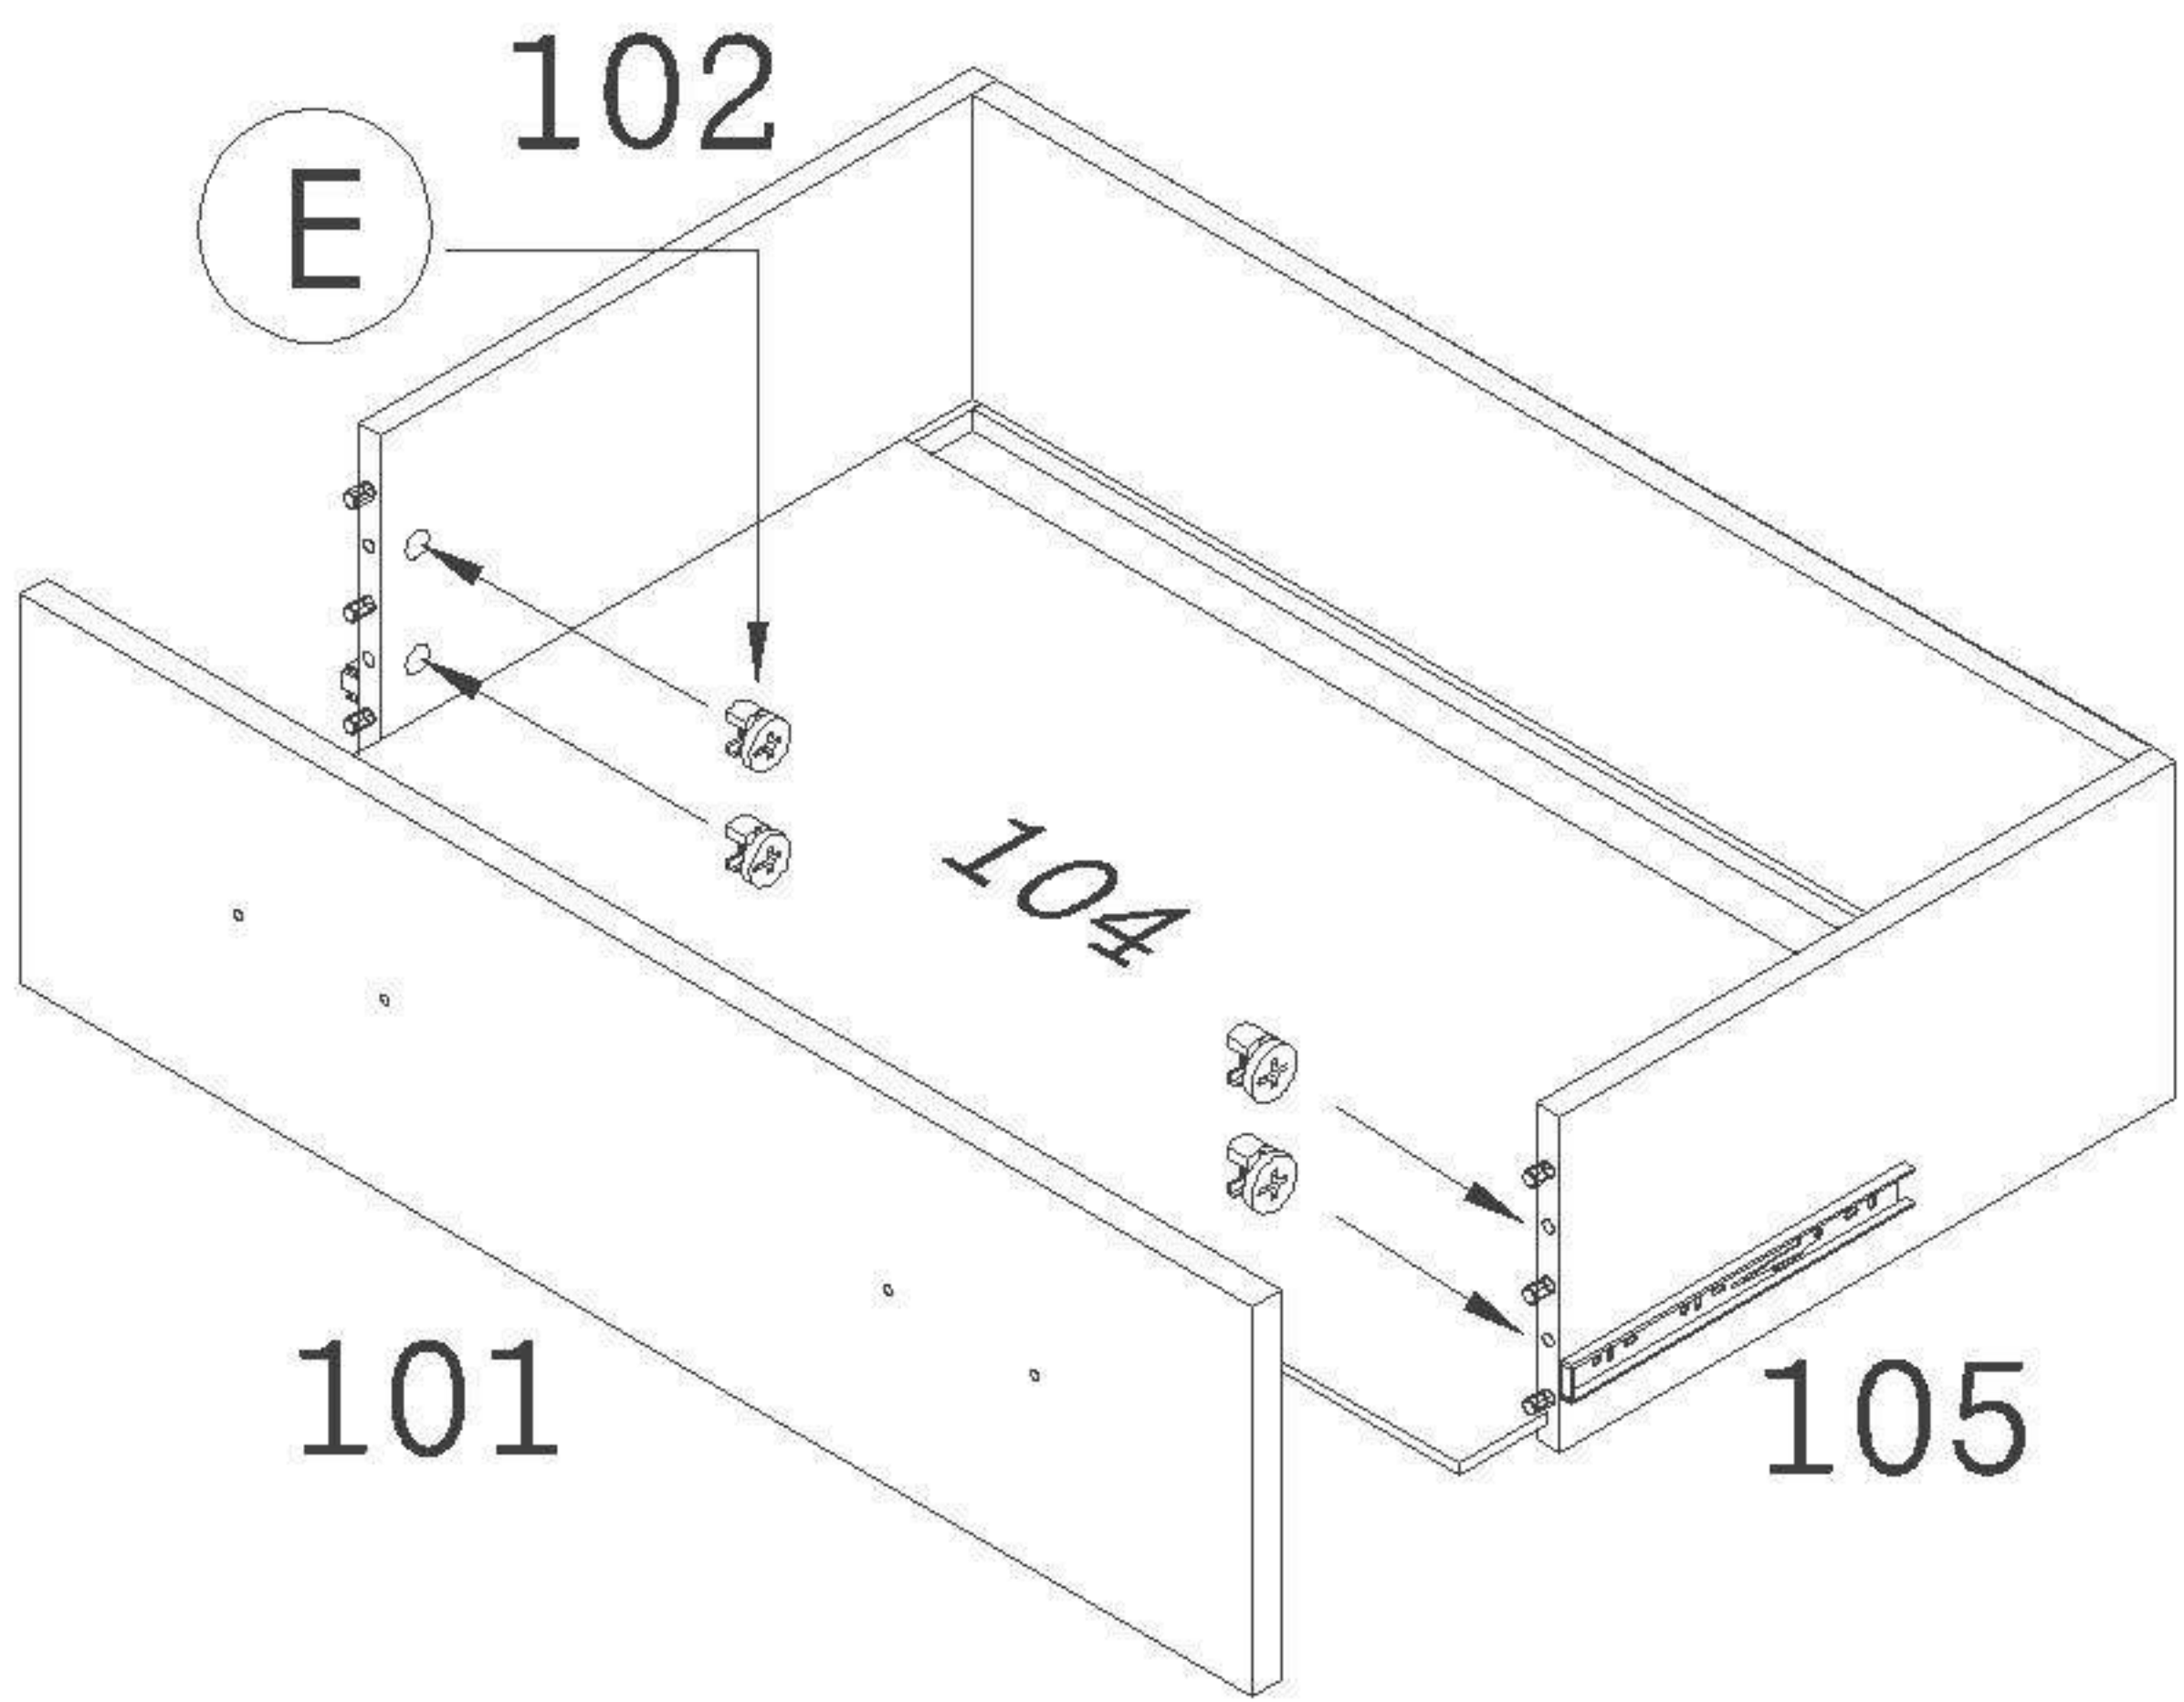


- a) Fit Drawer Base Panel (104) via groove on Drawer Side and Back Panel.
- b) Attach Drawer Front Panel (101) to Drawer Left & Right Panel (102 & 105) via Cam-Bolt and Wood Dowel on the respective parts. Check that Drawer Base Panel (104) fits into the groove on the inside face of Drawer Front Panels (101).
- c) Insert Cam-lock (E) into designated holes on Drawer Left & Right Panel (102 & 105) and tum clockwise to lock onto Cam-bolt.
- d) Insert Cam-lock Cover (G) to conceal cam-lock (E).

 STEP 4C

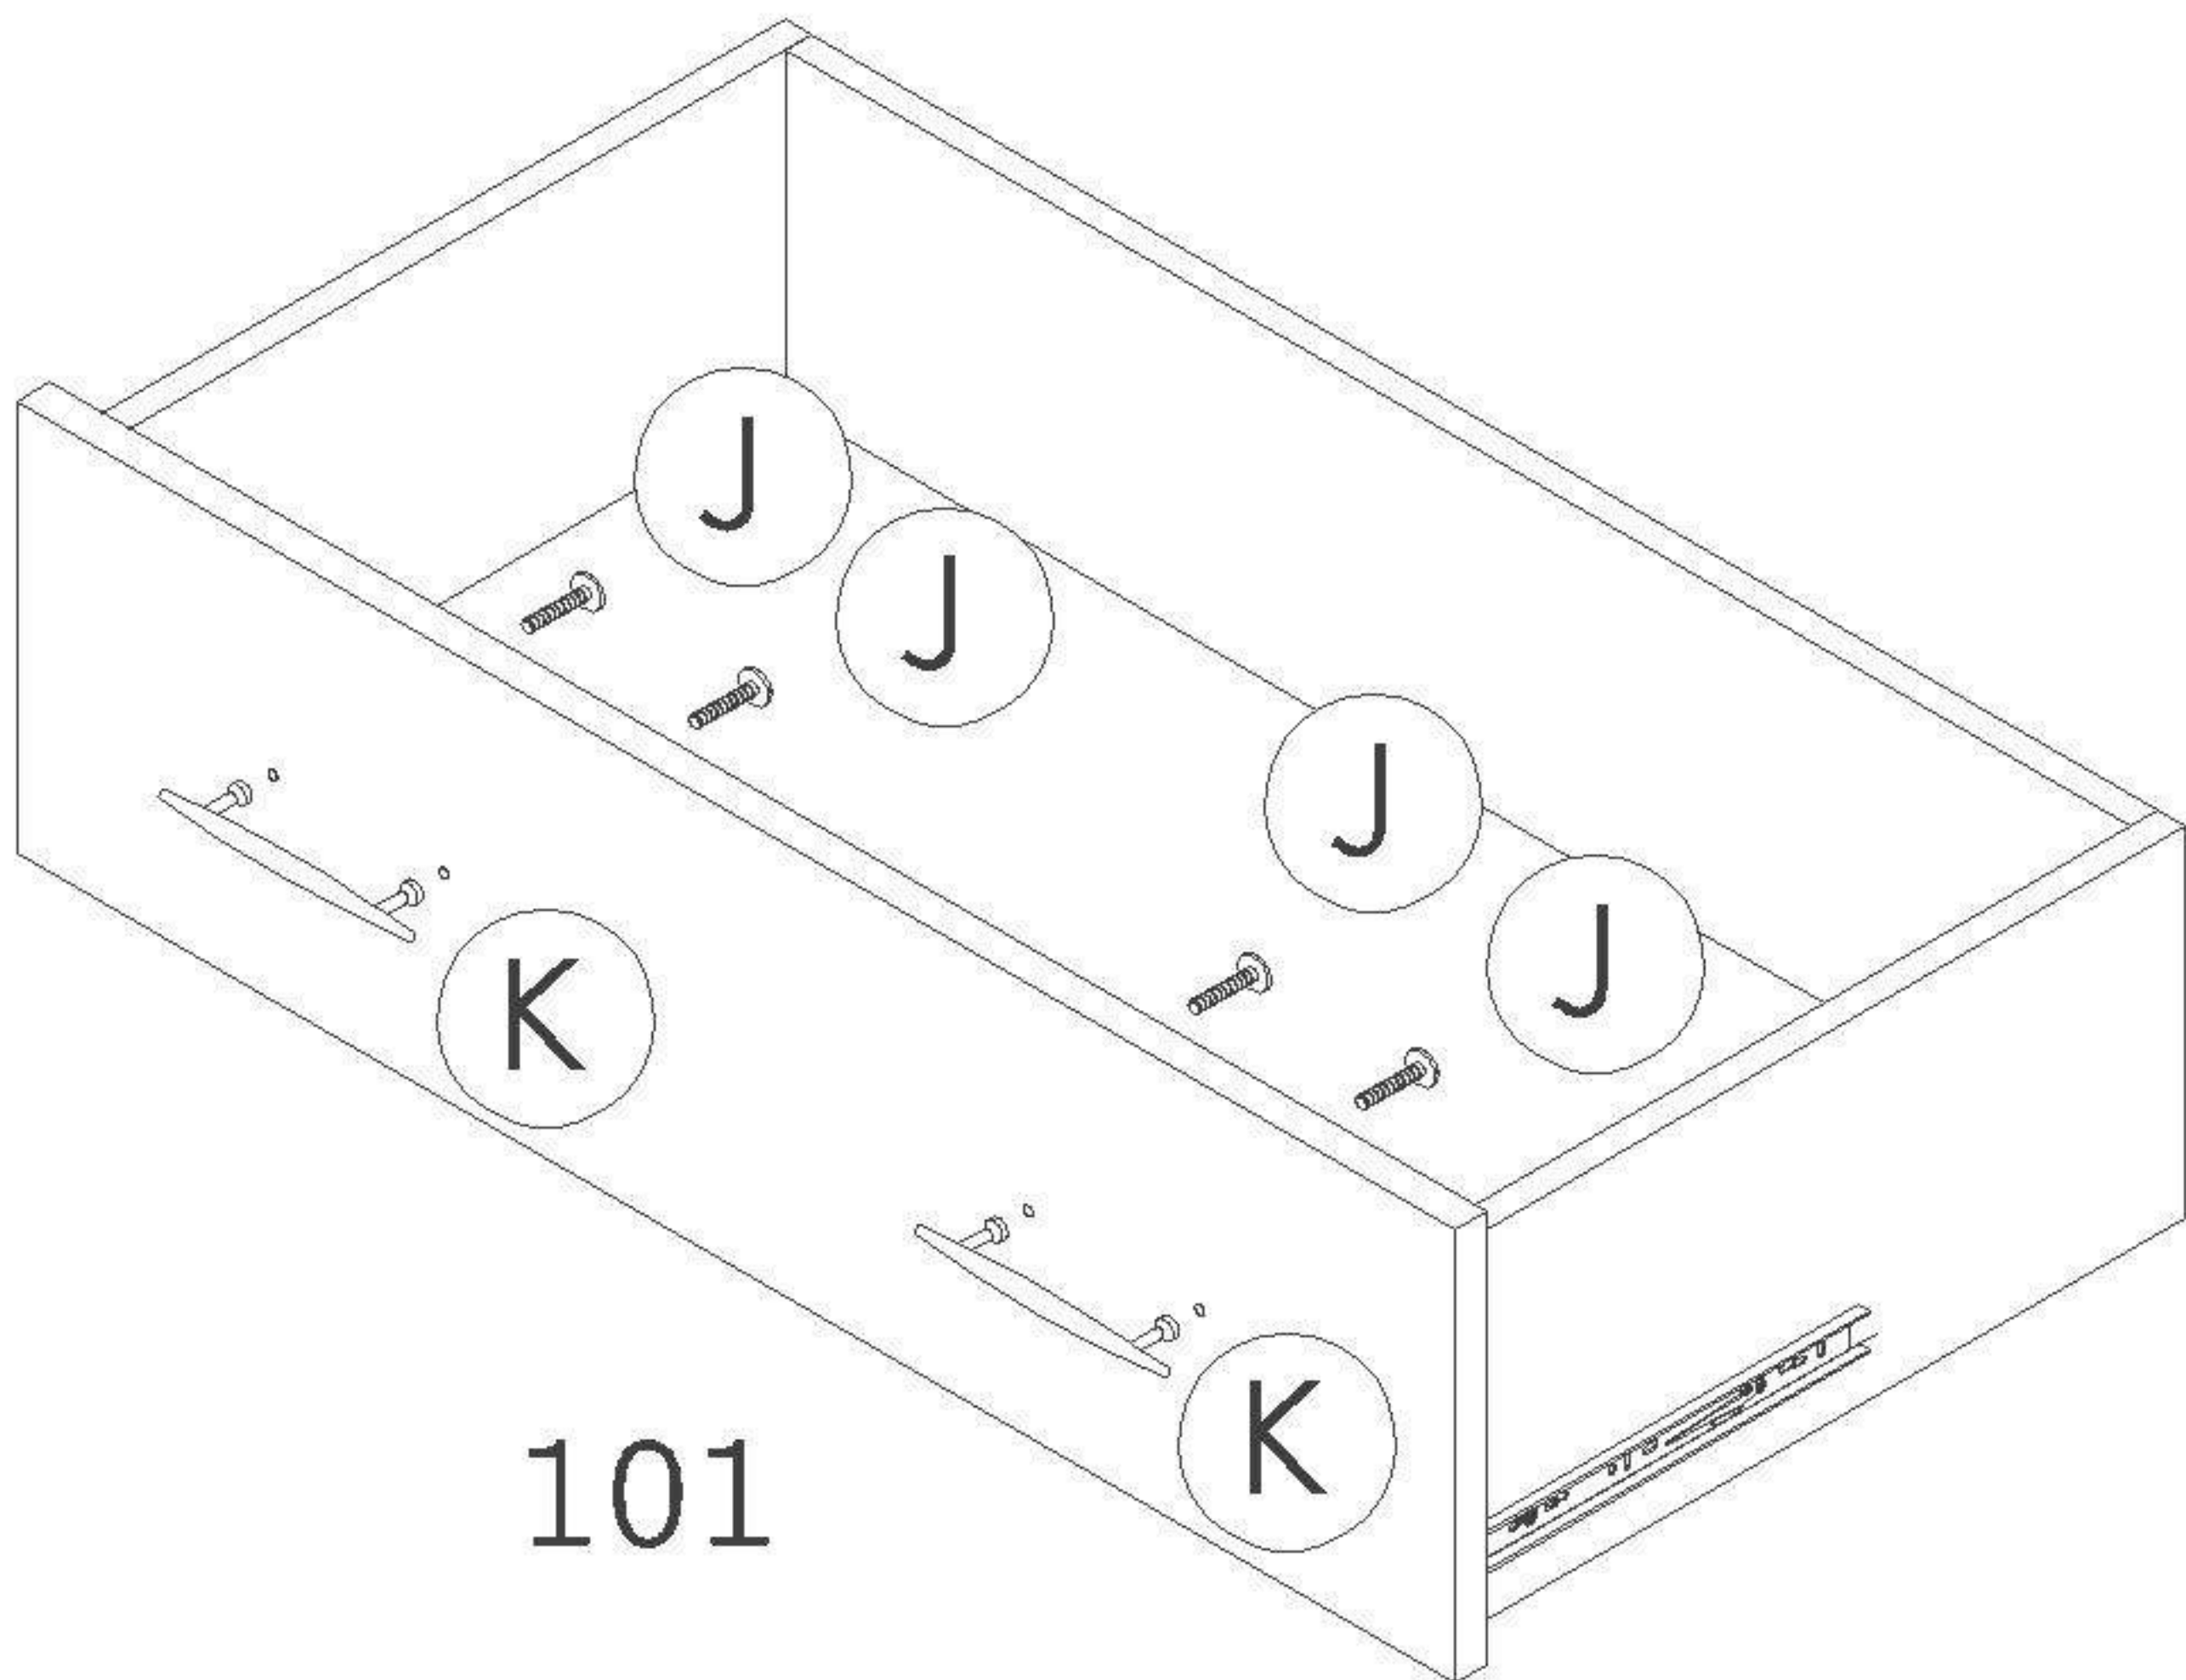


- a) Affix Handle (K) to Drawer Front Panel (101) with Panhead Screw (J).

 STEP 5

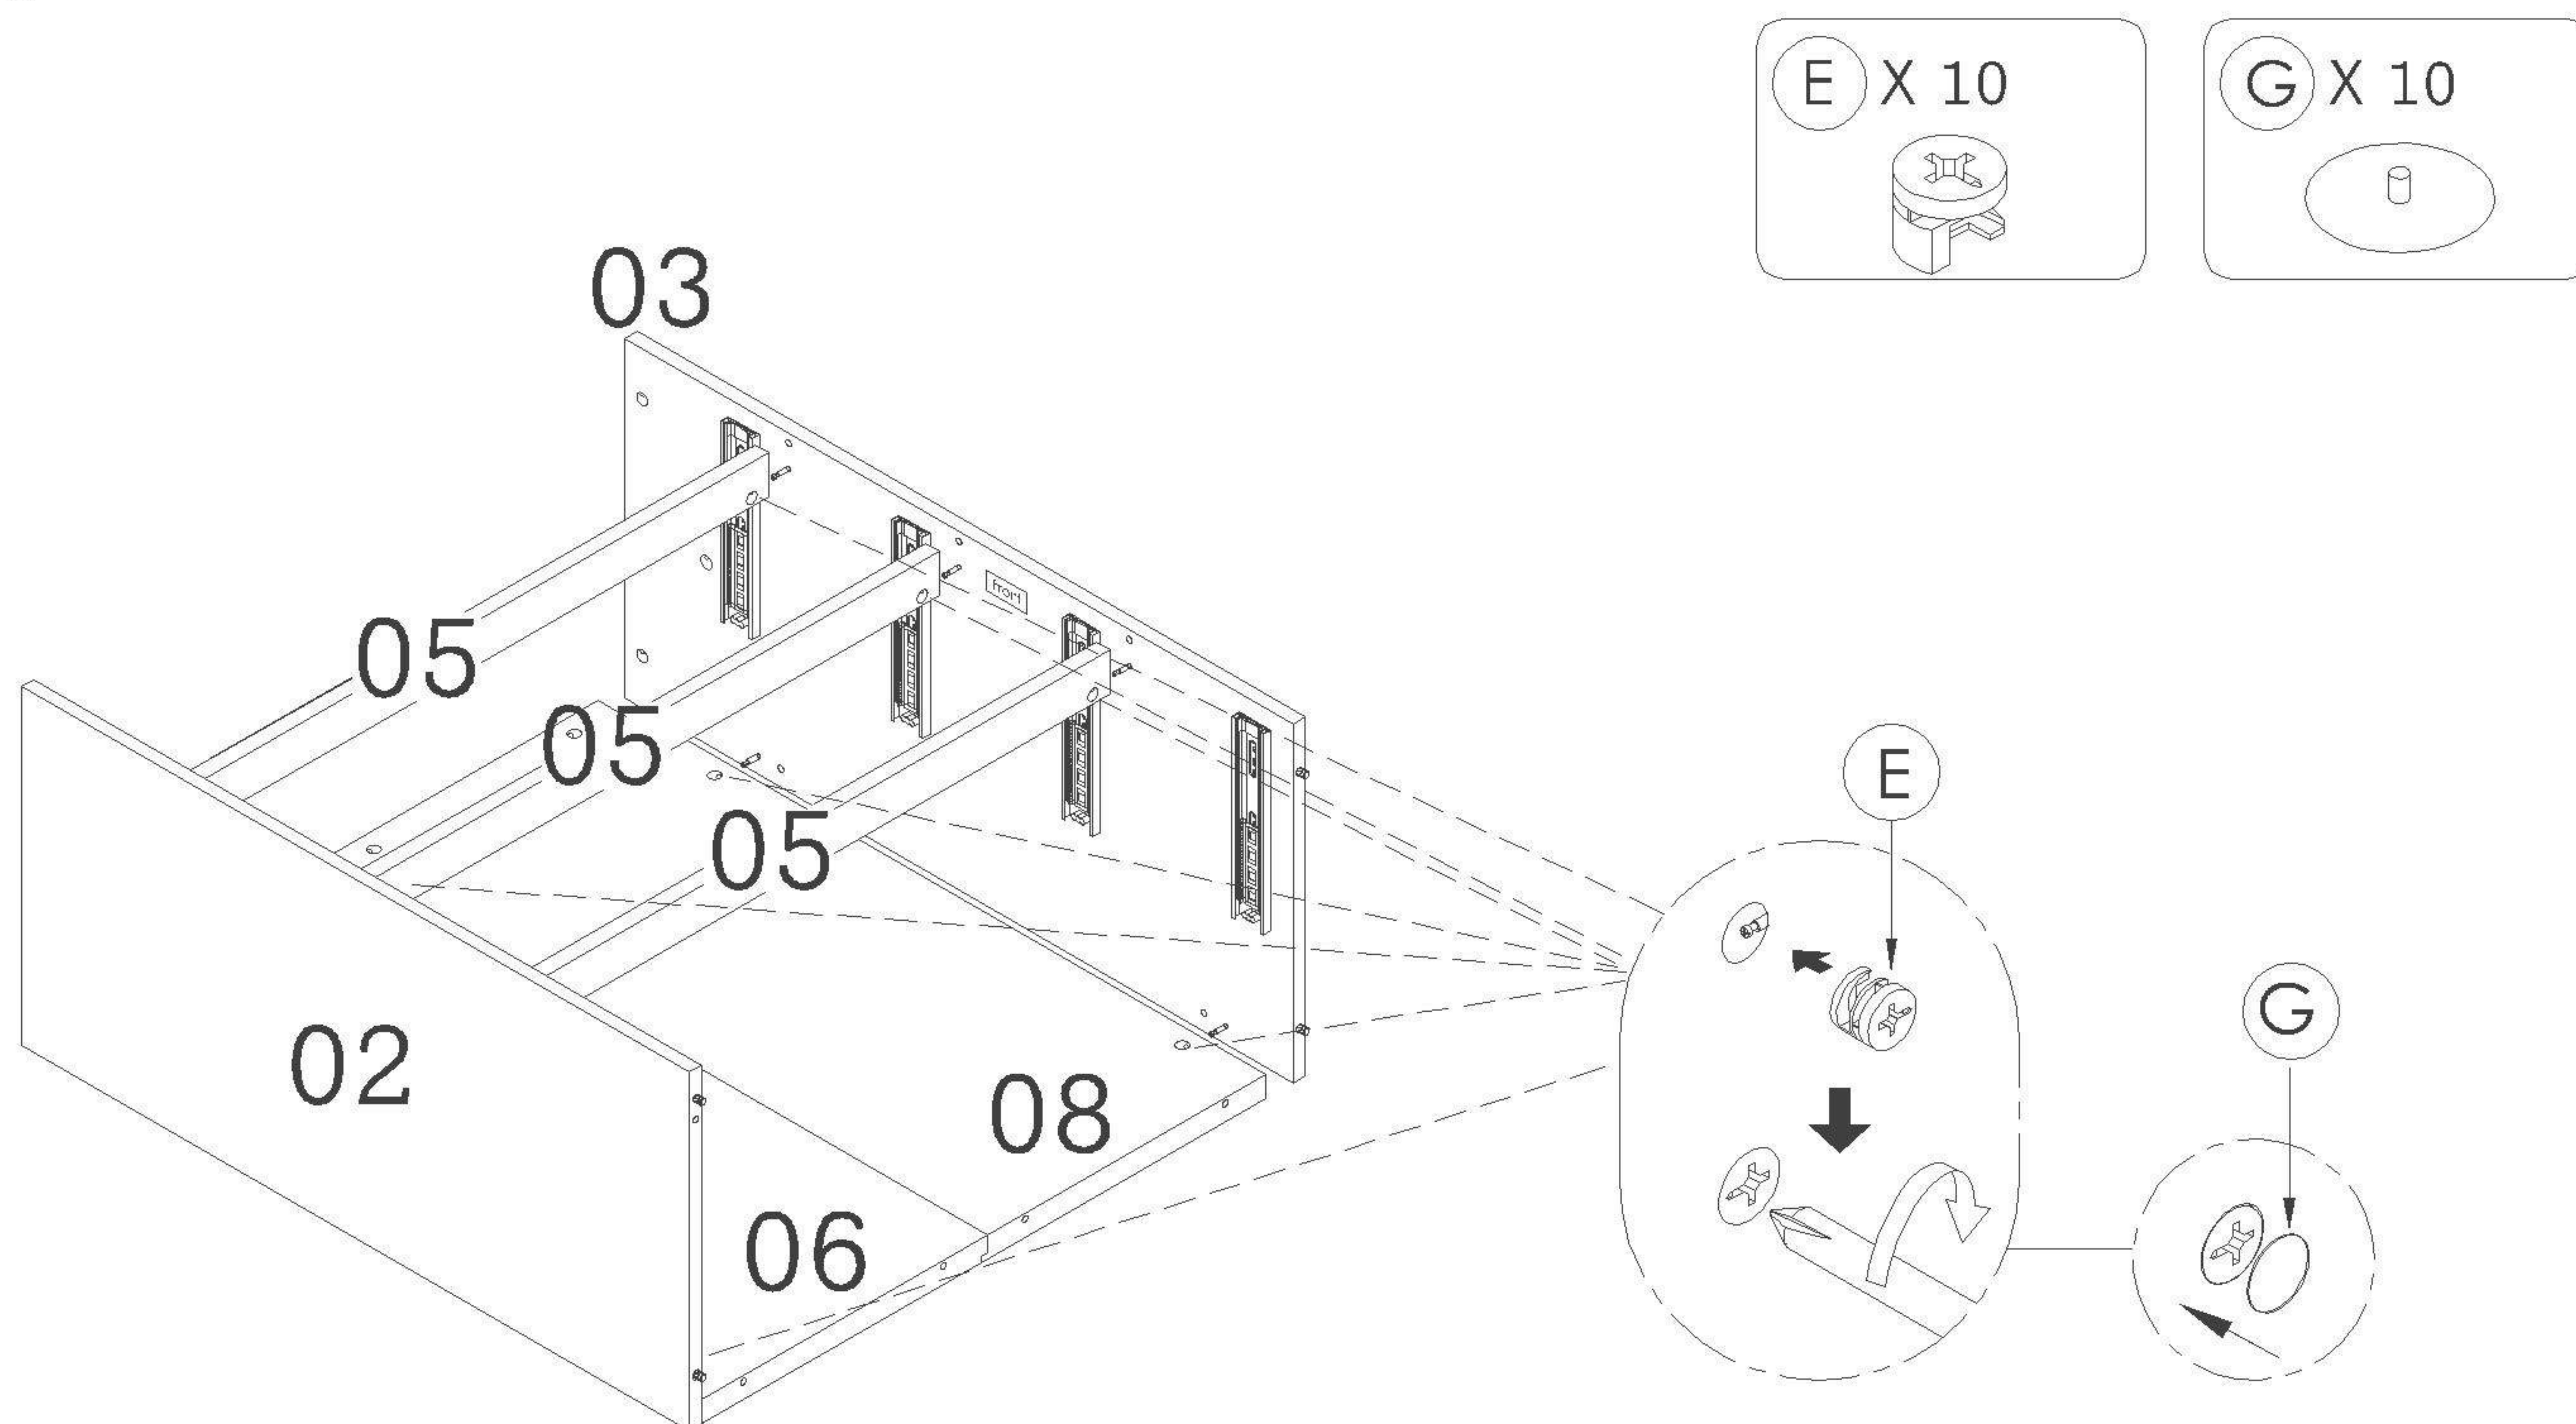


- With assistance, position the parts as shown and attach Center Rail (5) to Left & Right Panel (2 & 3) and Back Left & Right Panel (6 & 8) via Cam-bolt and Wood Dowel on the respective parts.
- Insert Cam-lock (E) into designated hole on (5), then turn clockwise to lock onto Cam-bolt. Refer to page 5 for instructions on inserting and tightening Cam-lock (E)
- Insert Cam-lock Cover (G) to conceal cam-lock (E).

 STEP 6

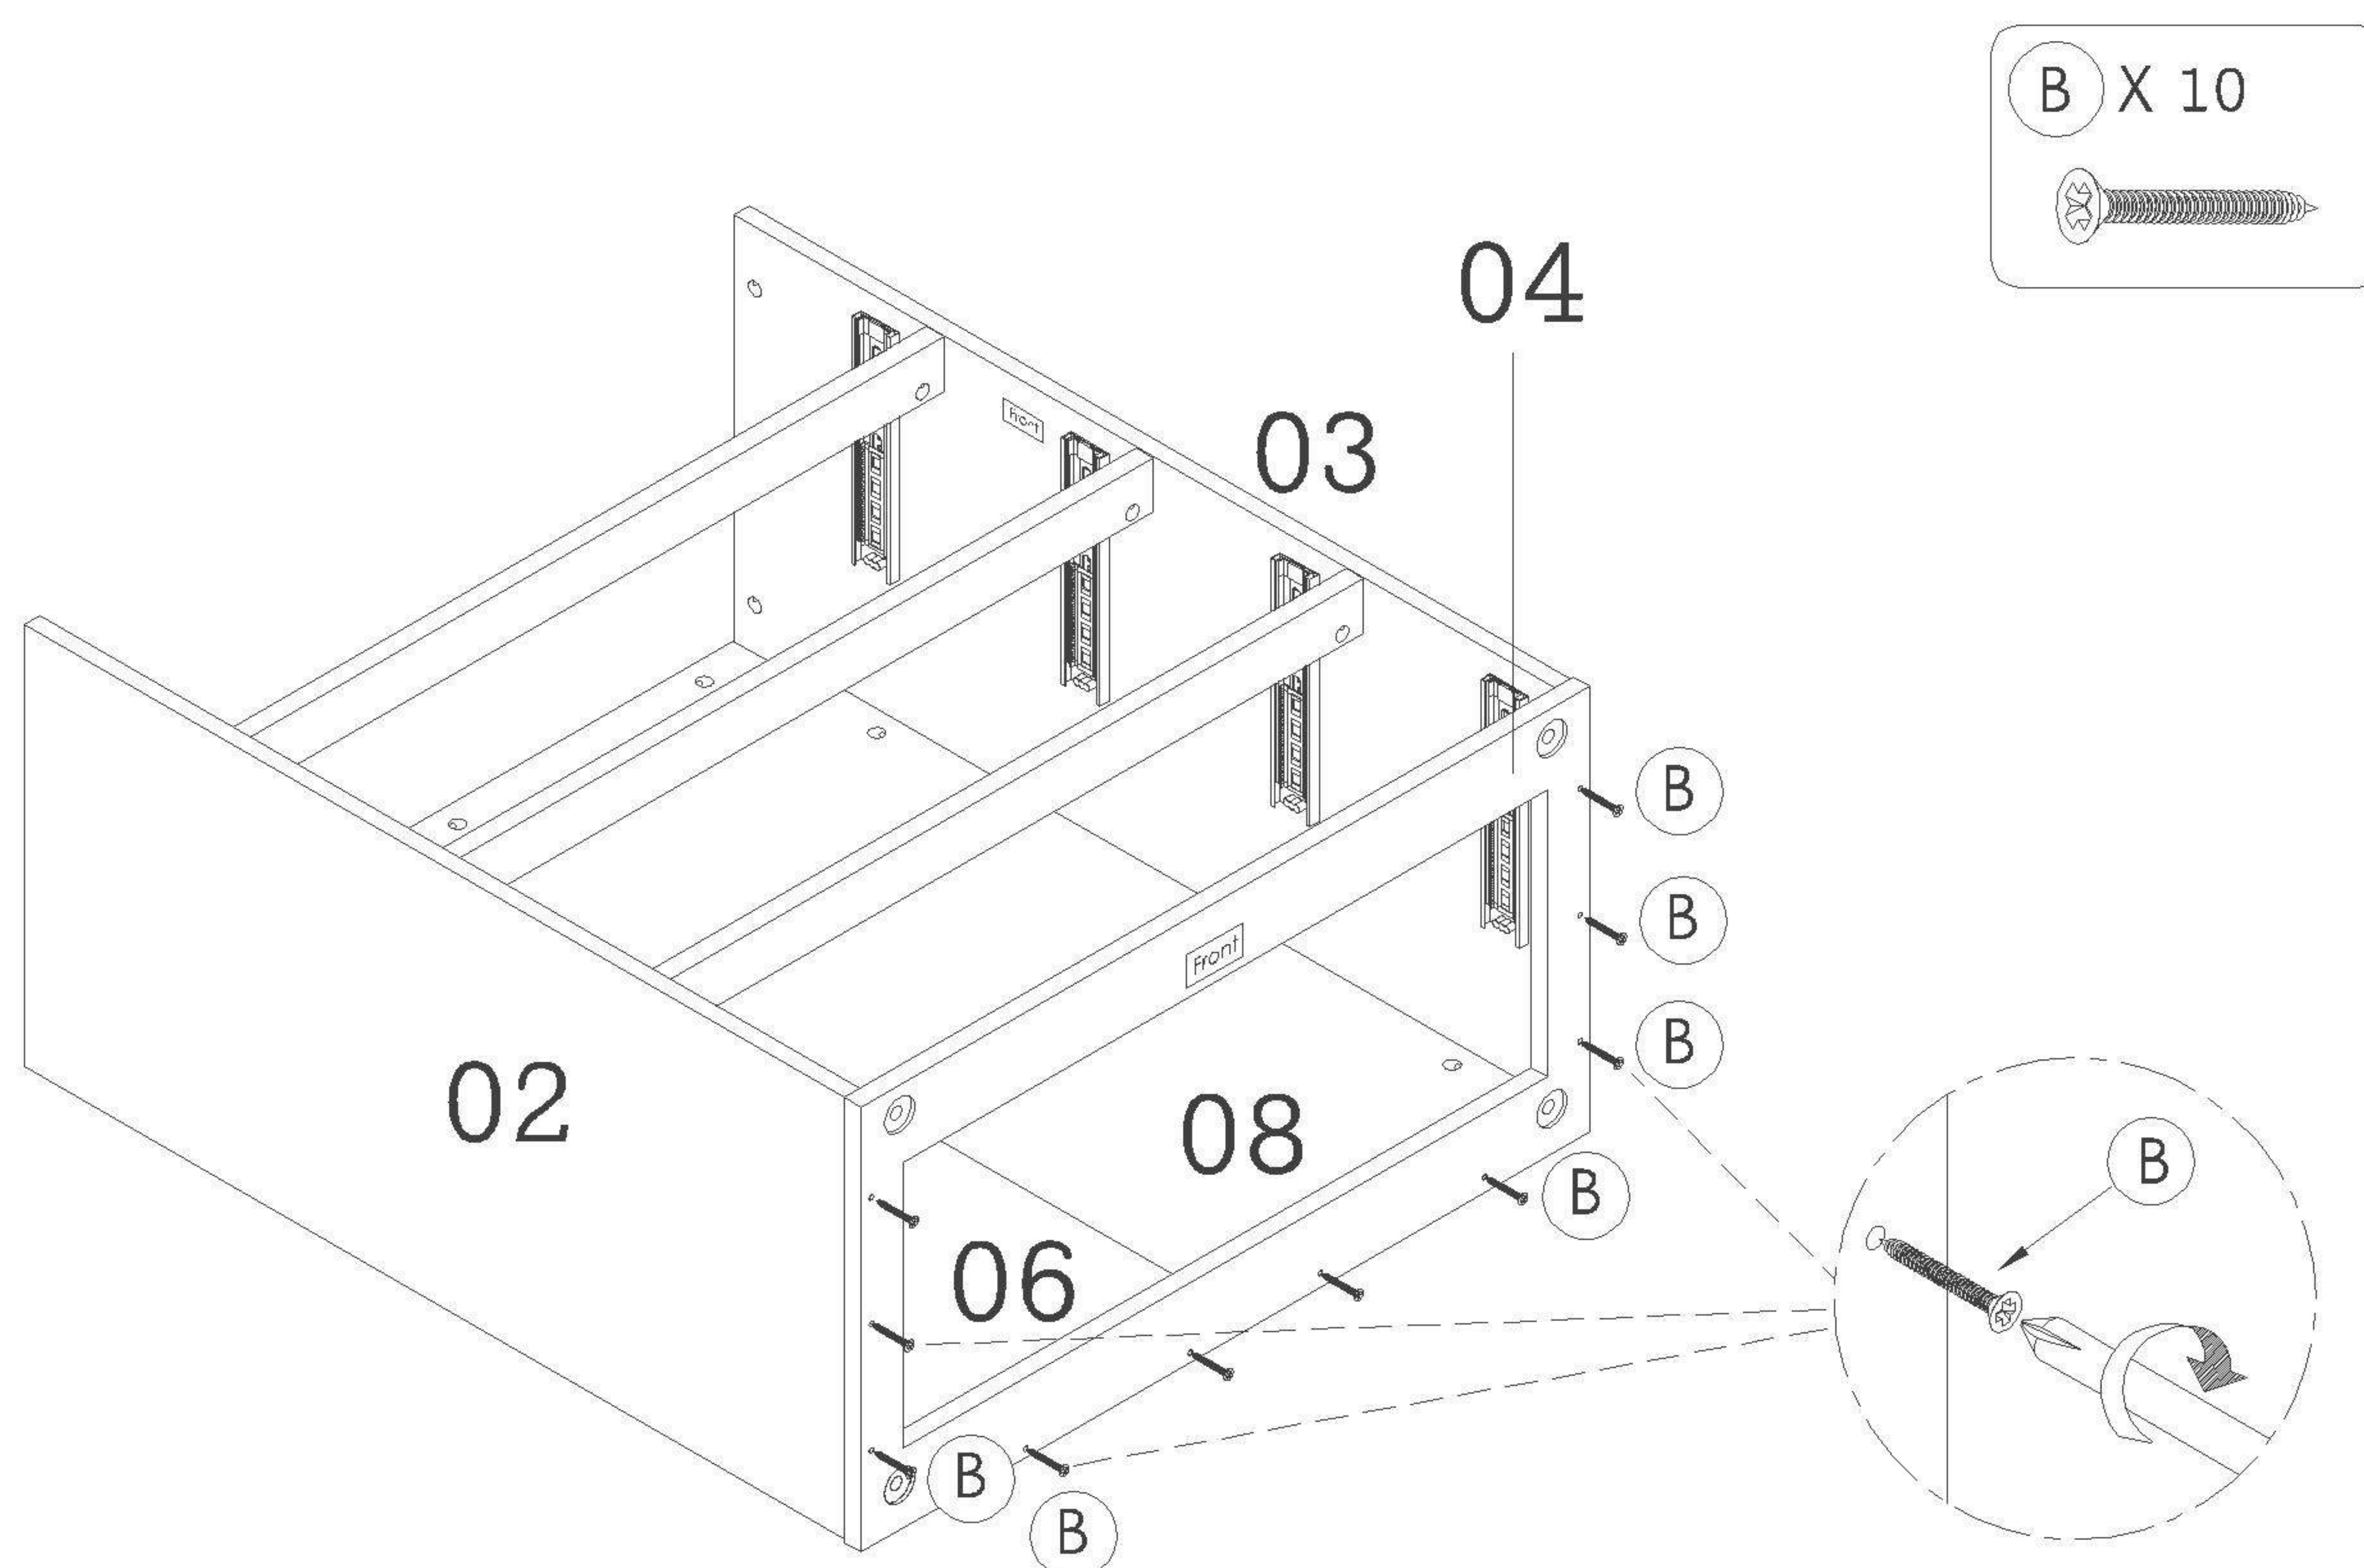


- Use Chipboard Screw (B) to fasten Bottom Frame (4) to Left & Right Panel (2 & 3) and Back Left & Right Panel (6 & 8). Do not tighten Screw (B) completely until all the screws are in place.

 STEP 7

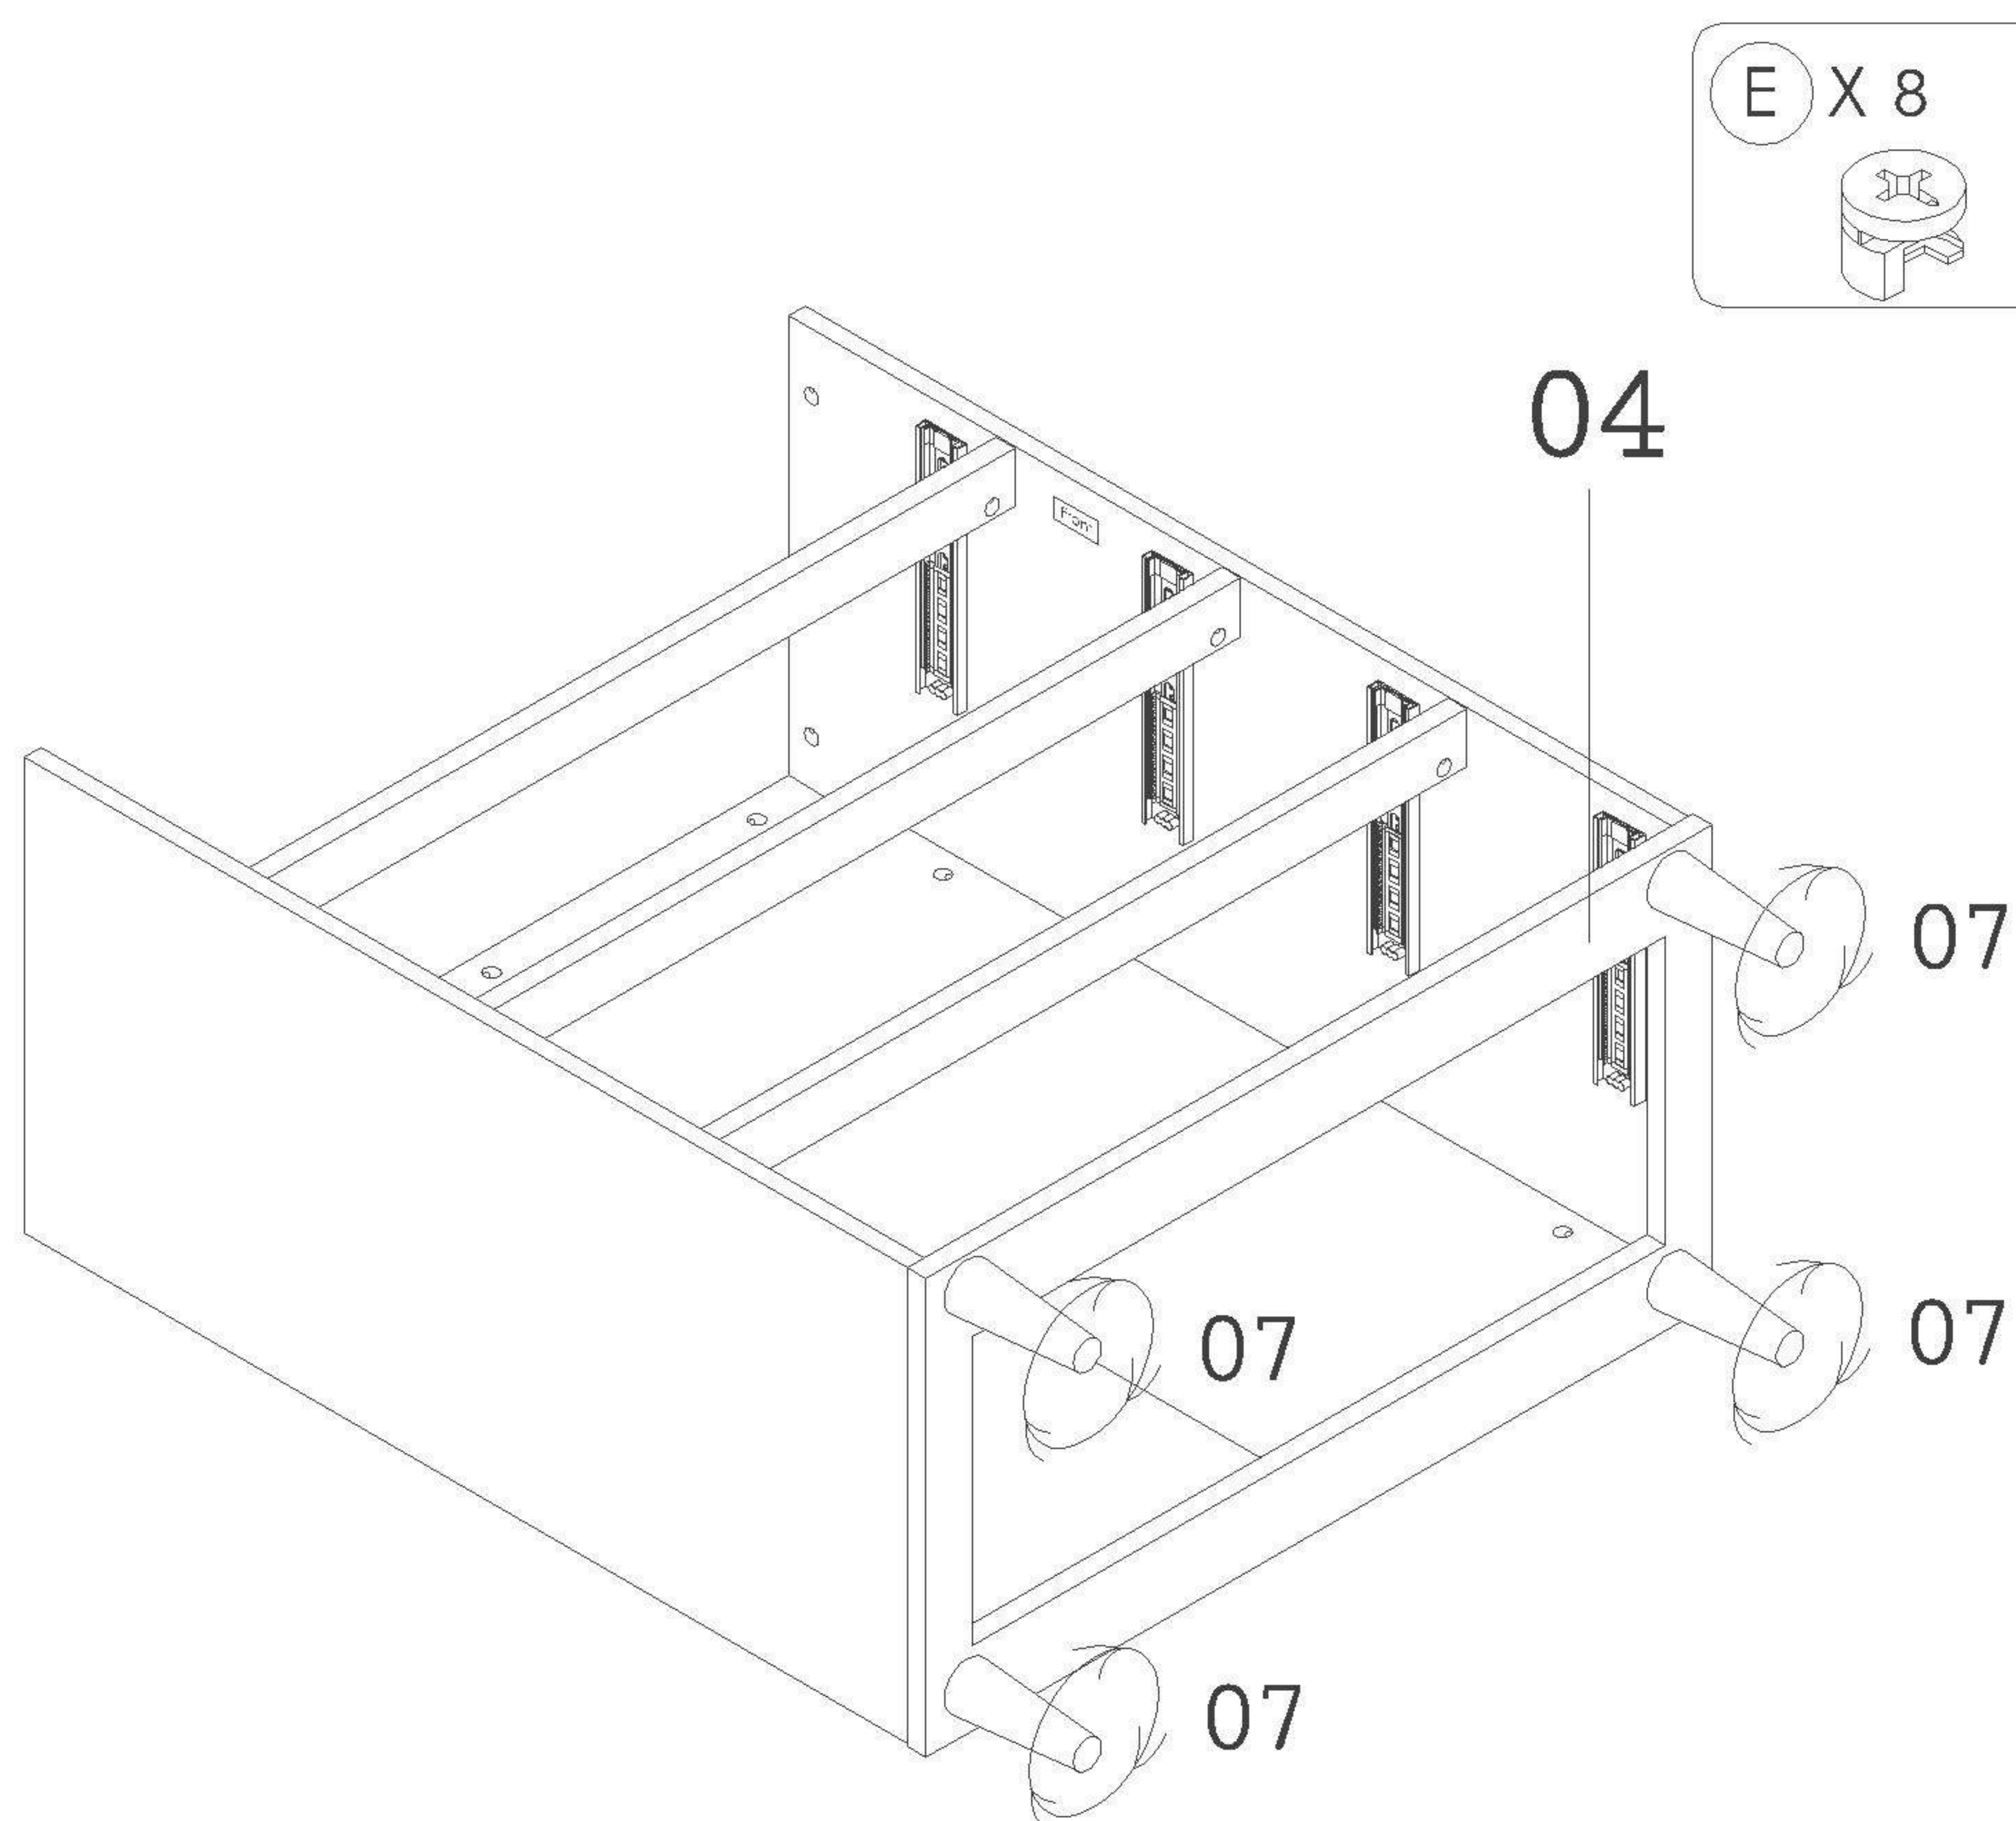

Screw-in Leg (7) to Bottom Frame (4) and tighten completely.

 
STEP 8

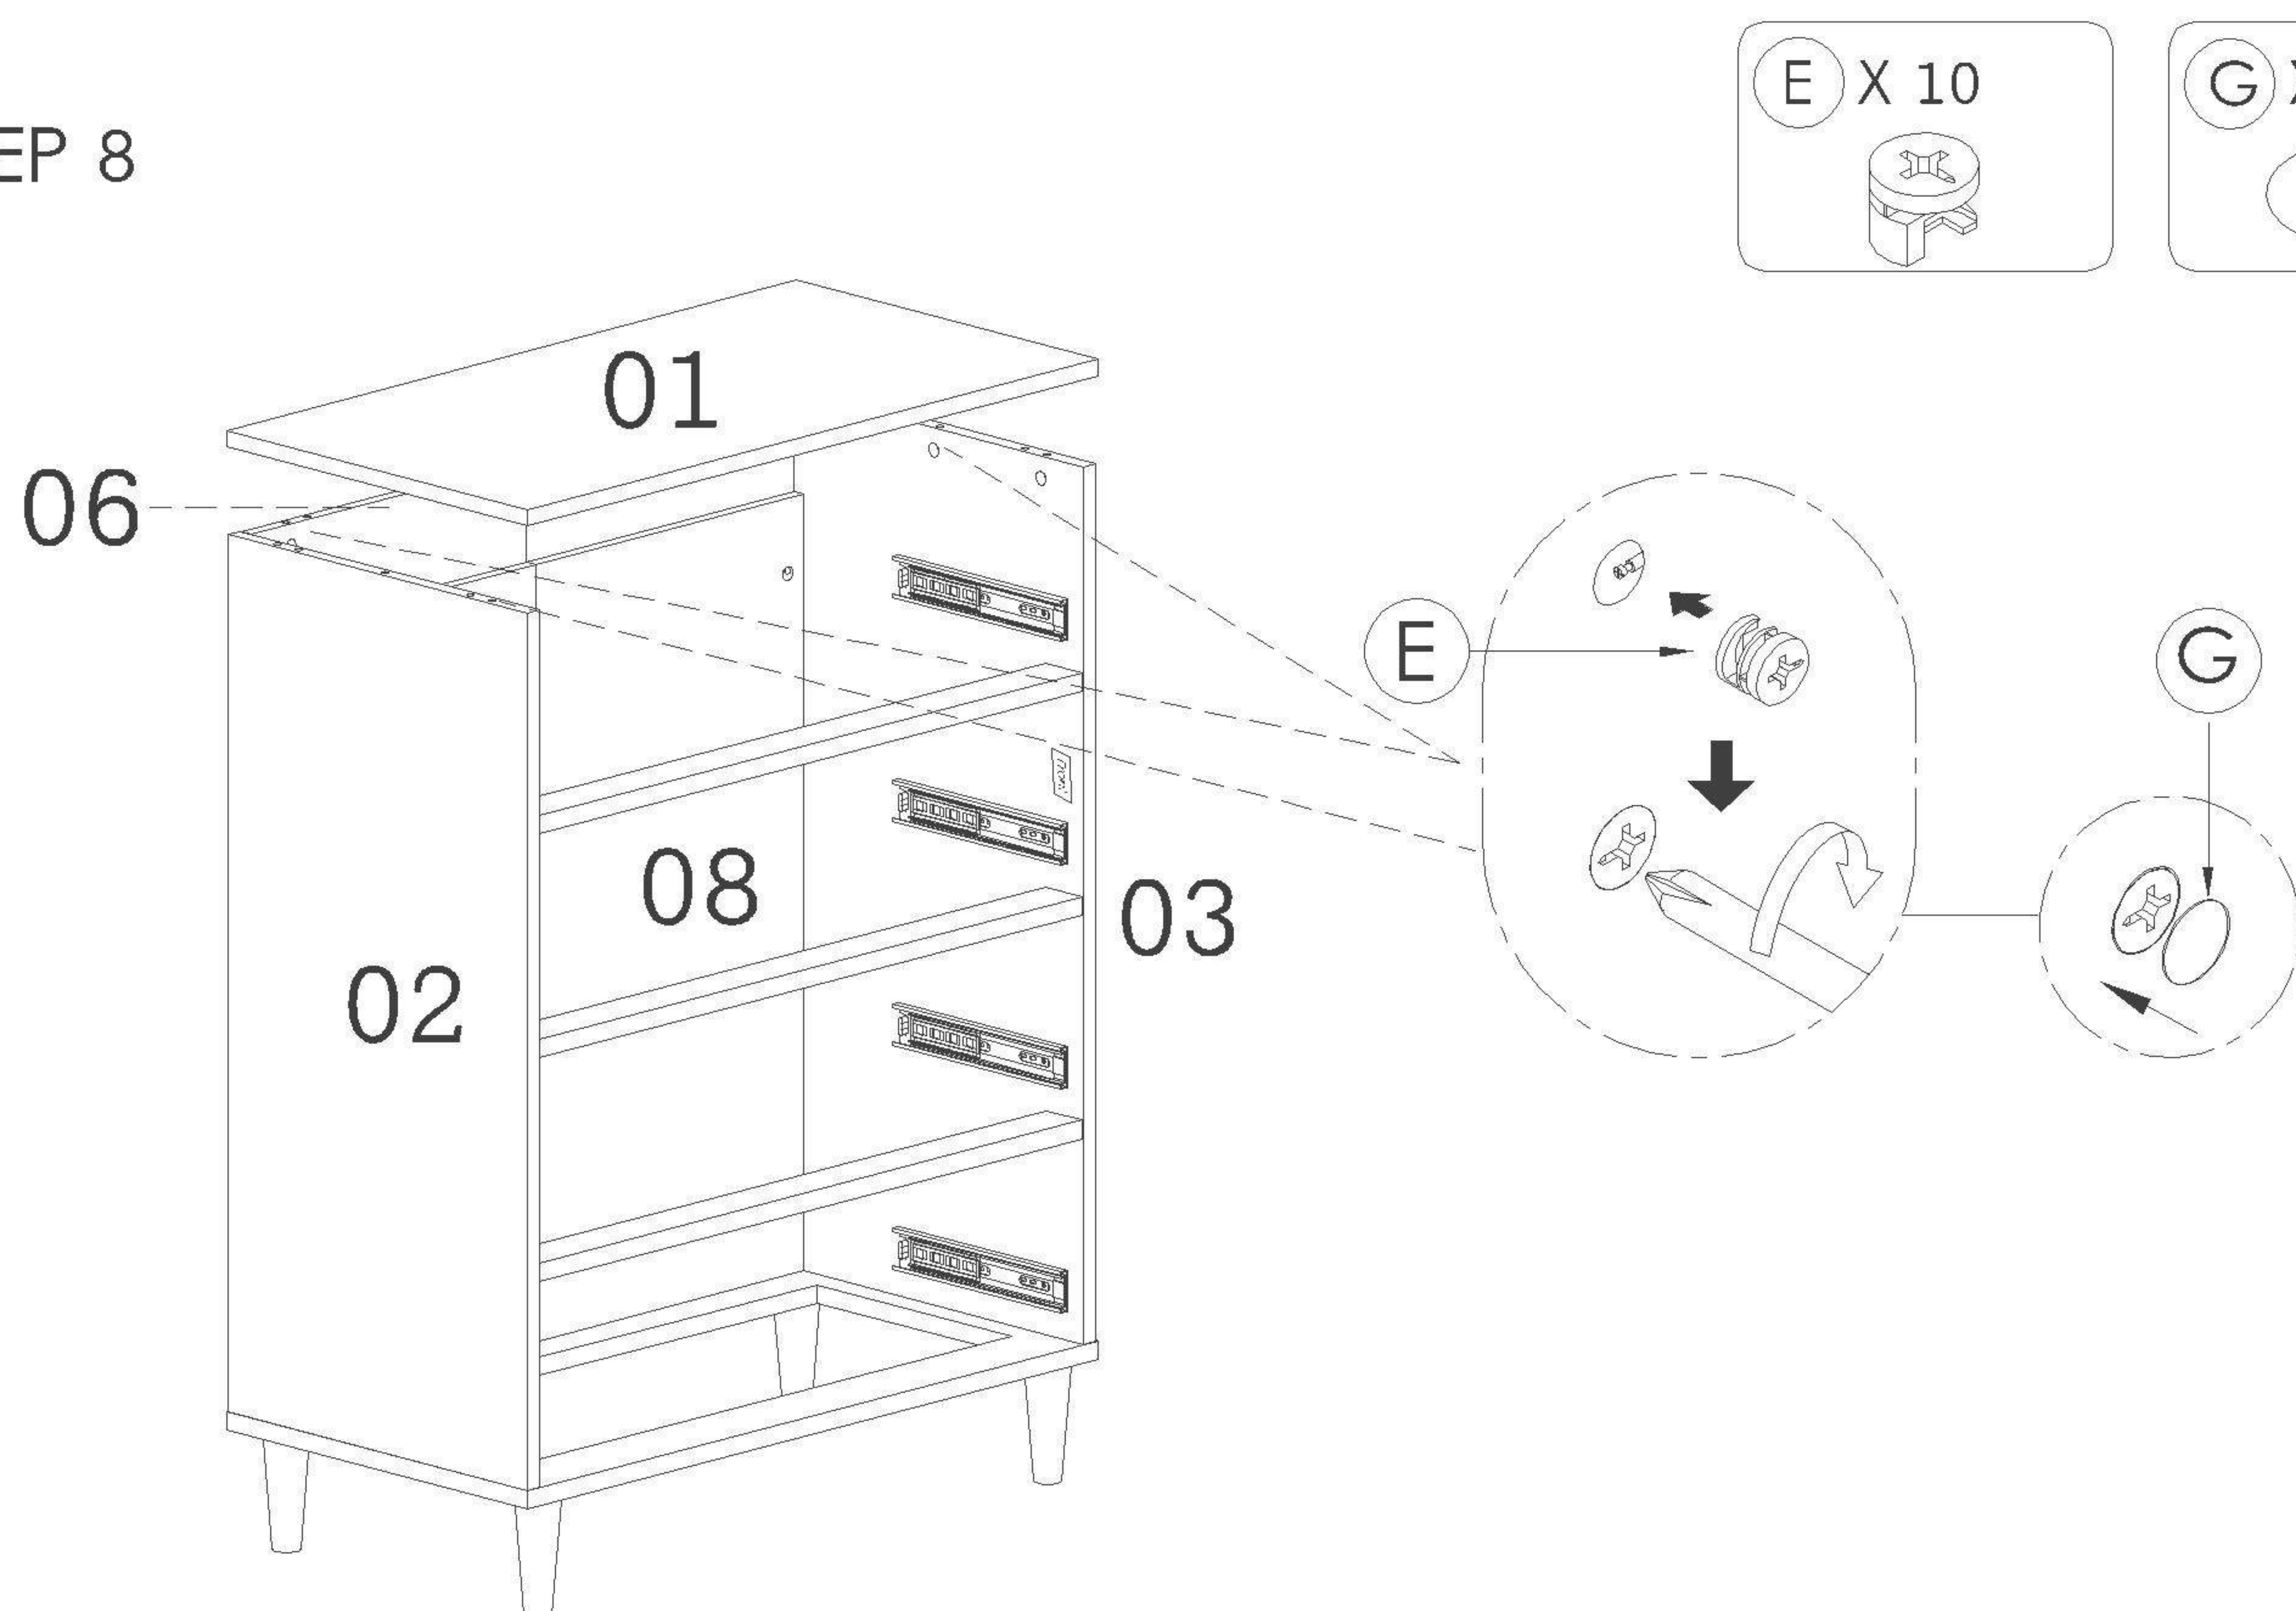

- Attach Top Panel (1) to Left & Right Panel (2 & 3) and Left & Right Back Panel (7 & 8), via Cam-Bolt and Wood Dowel on respective parts.
- Insert Cam-lock (E) into designated hole on Left & Right Panel (2 & 3) and Back Left & Right Panel (6 & 8), then turn clockwise to lock onto Cam-Bolt.
- Insert Cam-Lock Cover (G) to cover Cam-Lock (E).


STEP 9

 STEP 9A

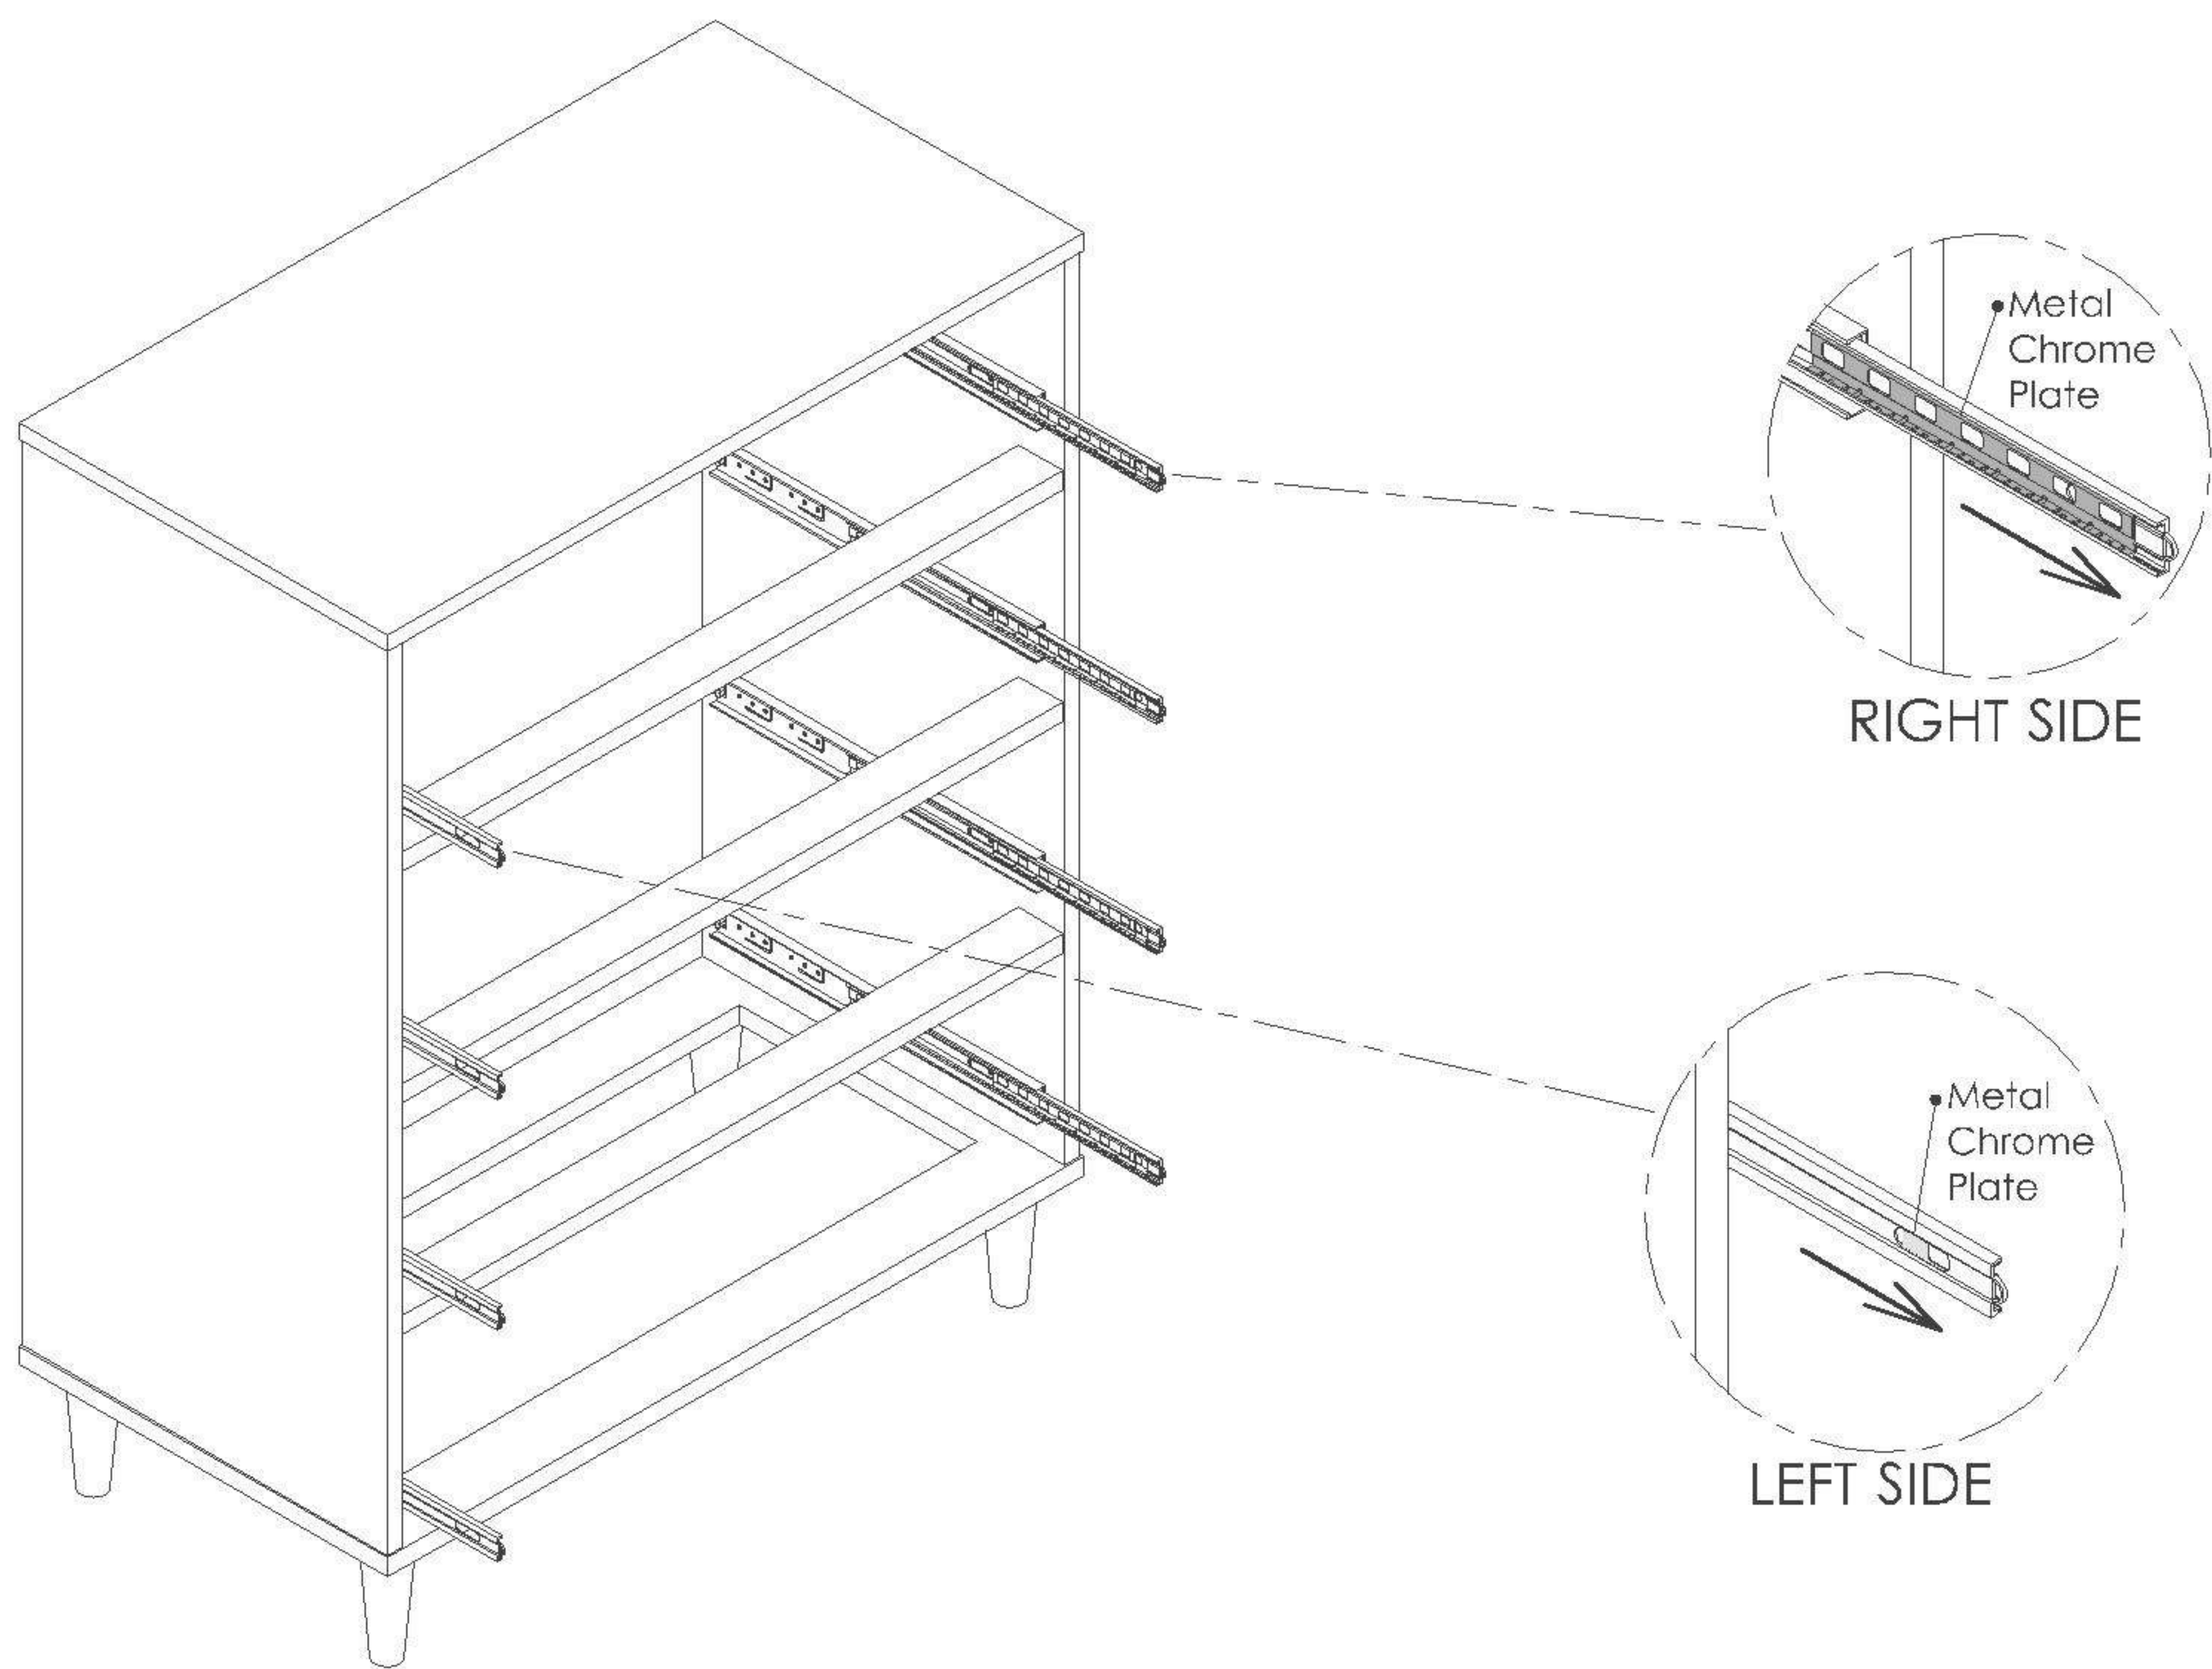

Slide out Metal Chrome Plate (ball bearing slider) on both sides of Slide Track (H2).

 
STEP 9B

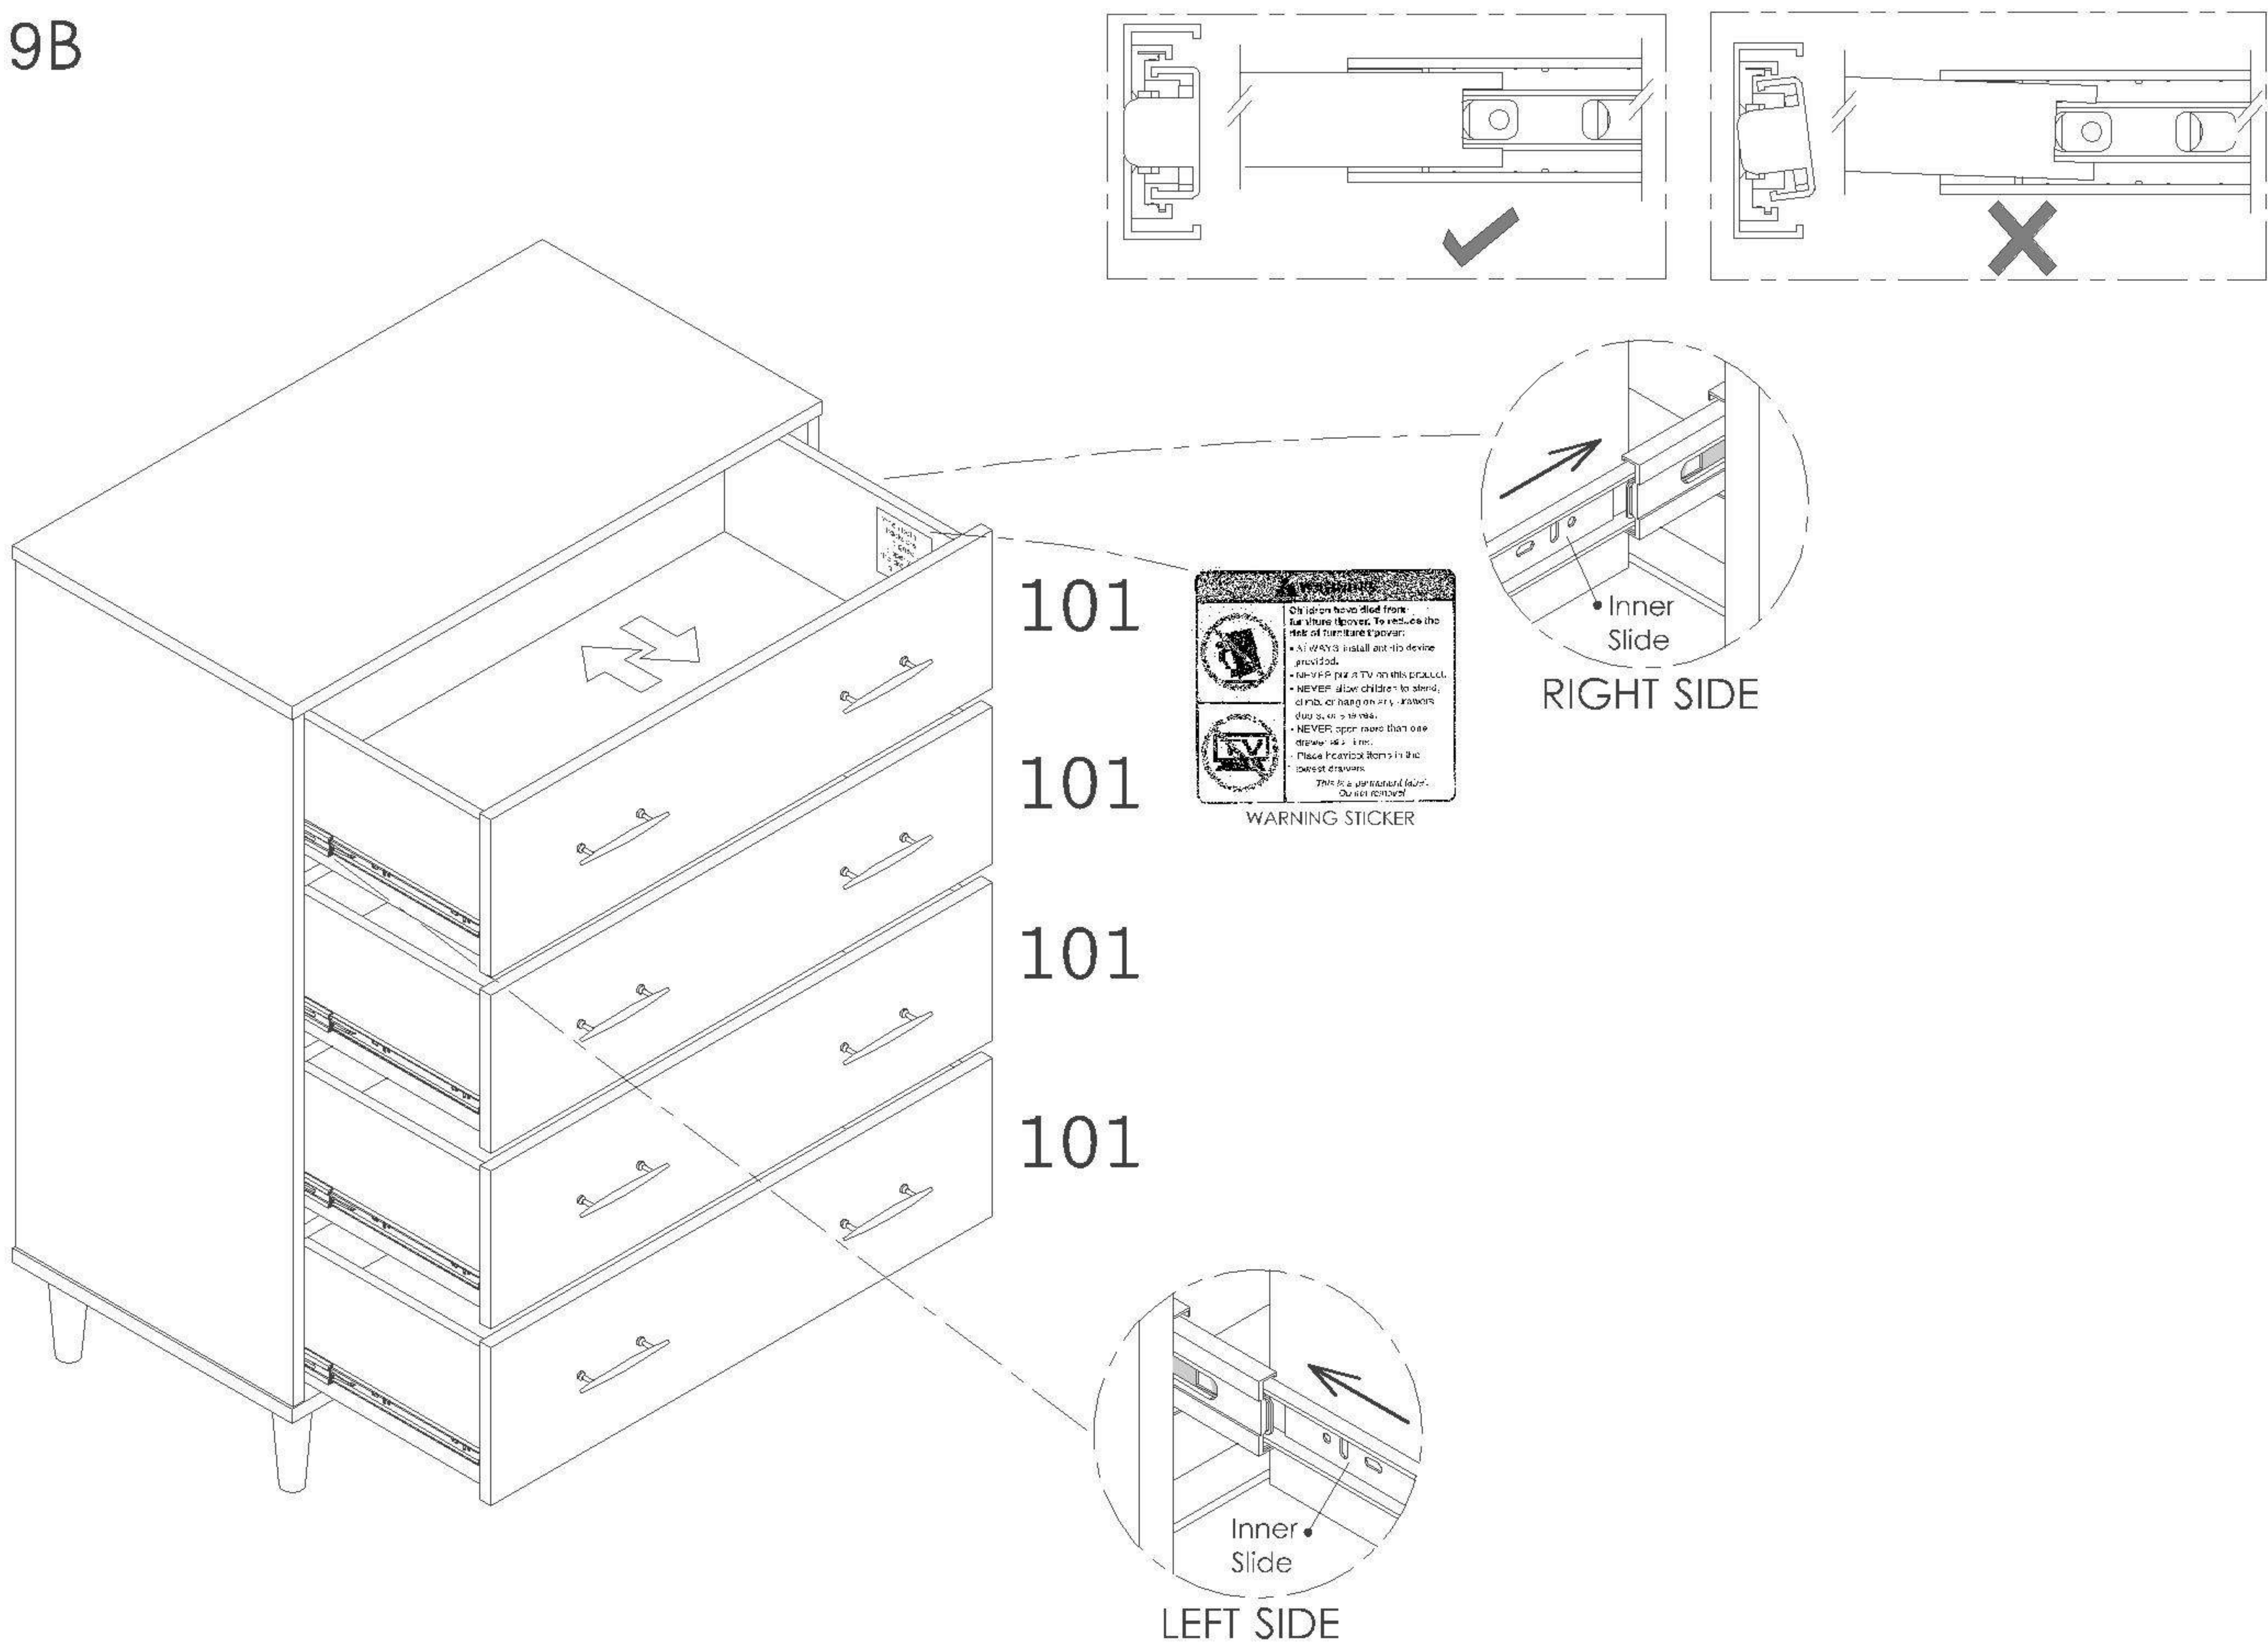

Align the back open-end of the Slide Runner (H1) on each side of the drawer to fit squarely into the groove on the open front-end of the chrome plate on Slide Track (H2) on the Side Panels.


Be sure the drawer/(H1) is not tilted or angled and push in the drawer slightly and squarely.

 STEP 9C

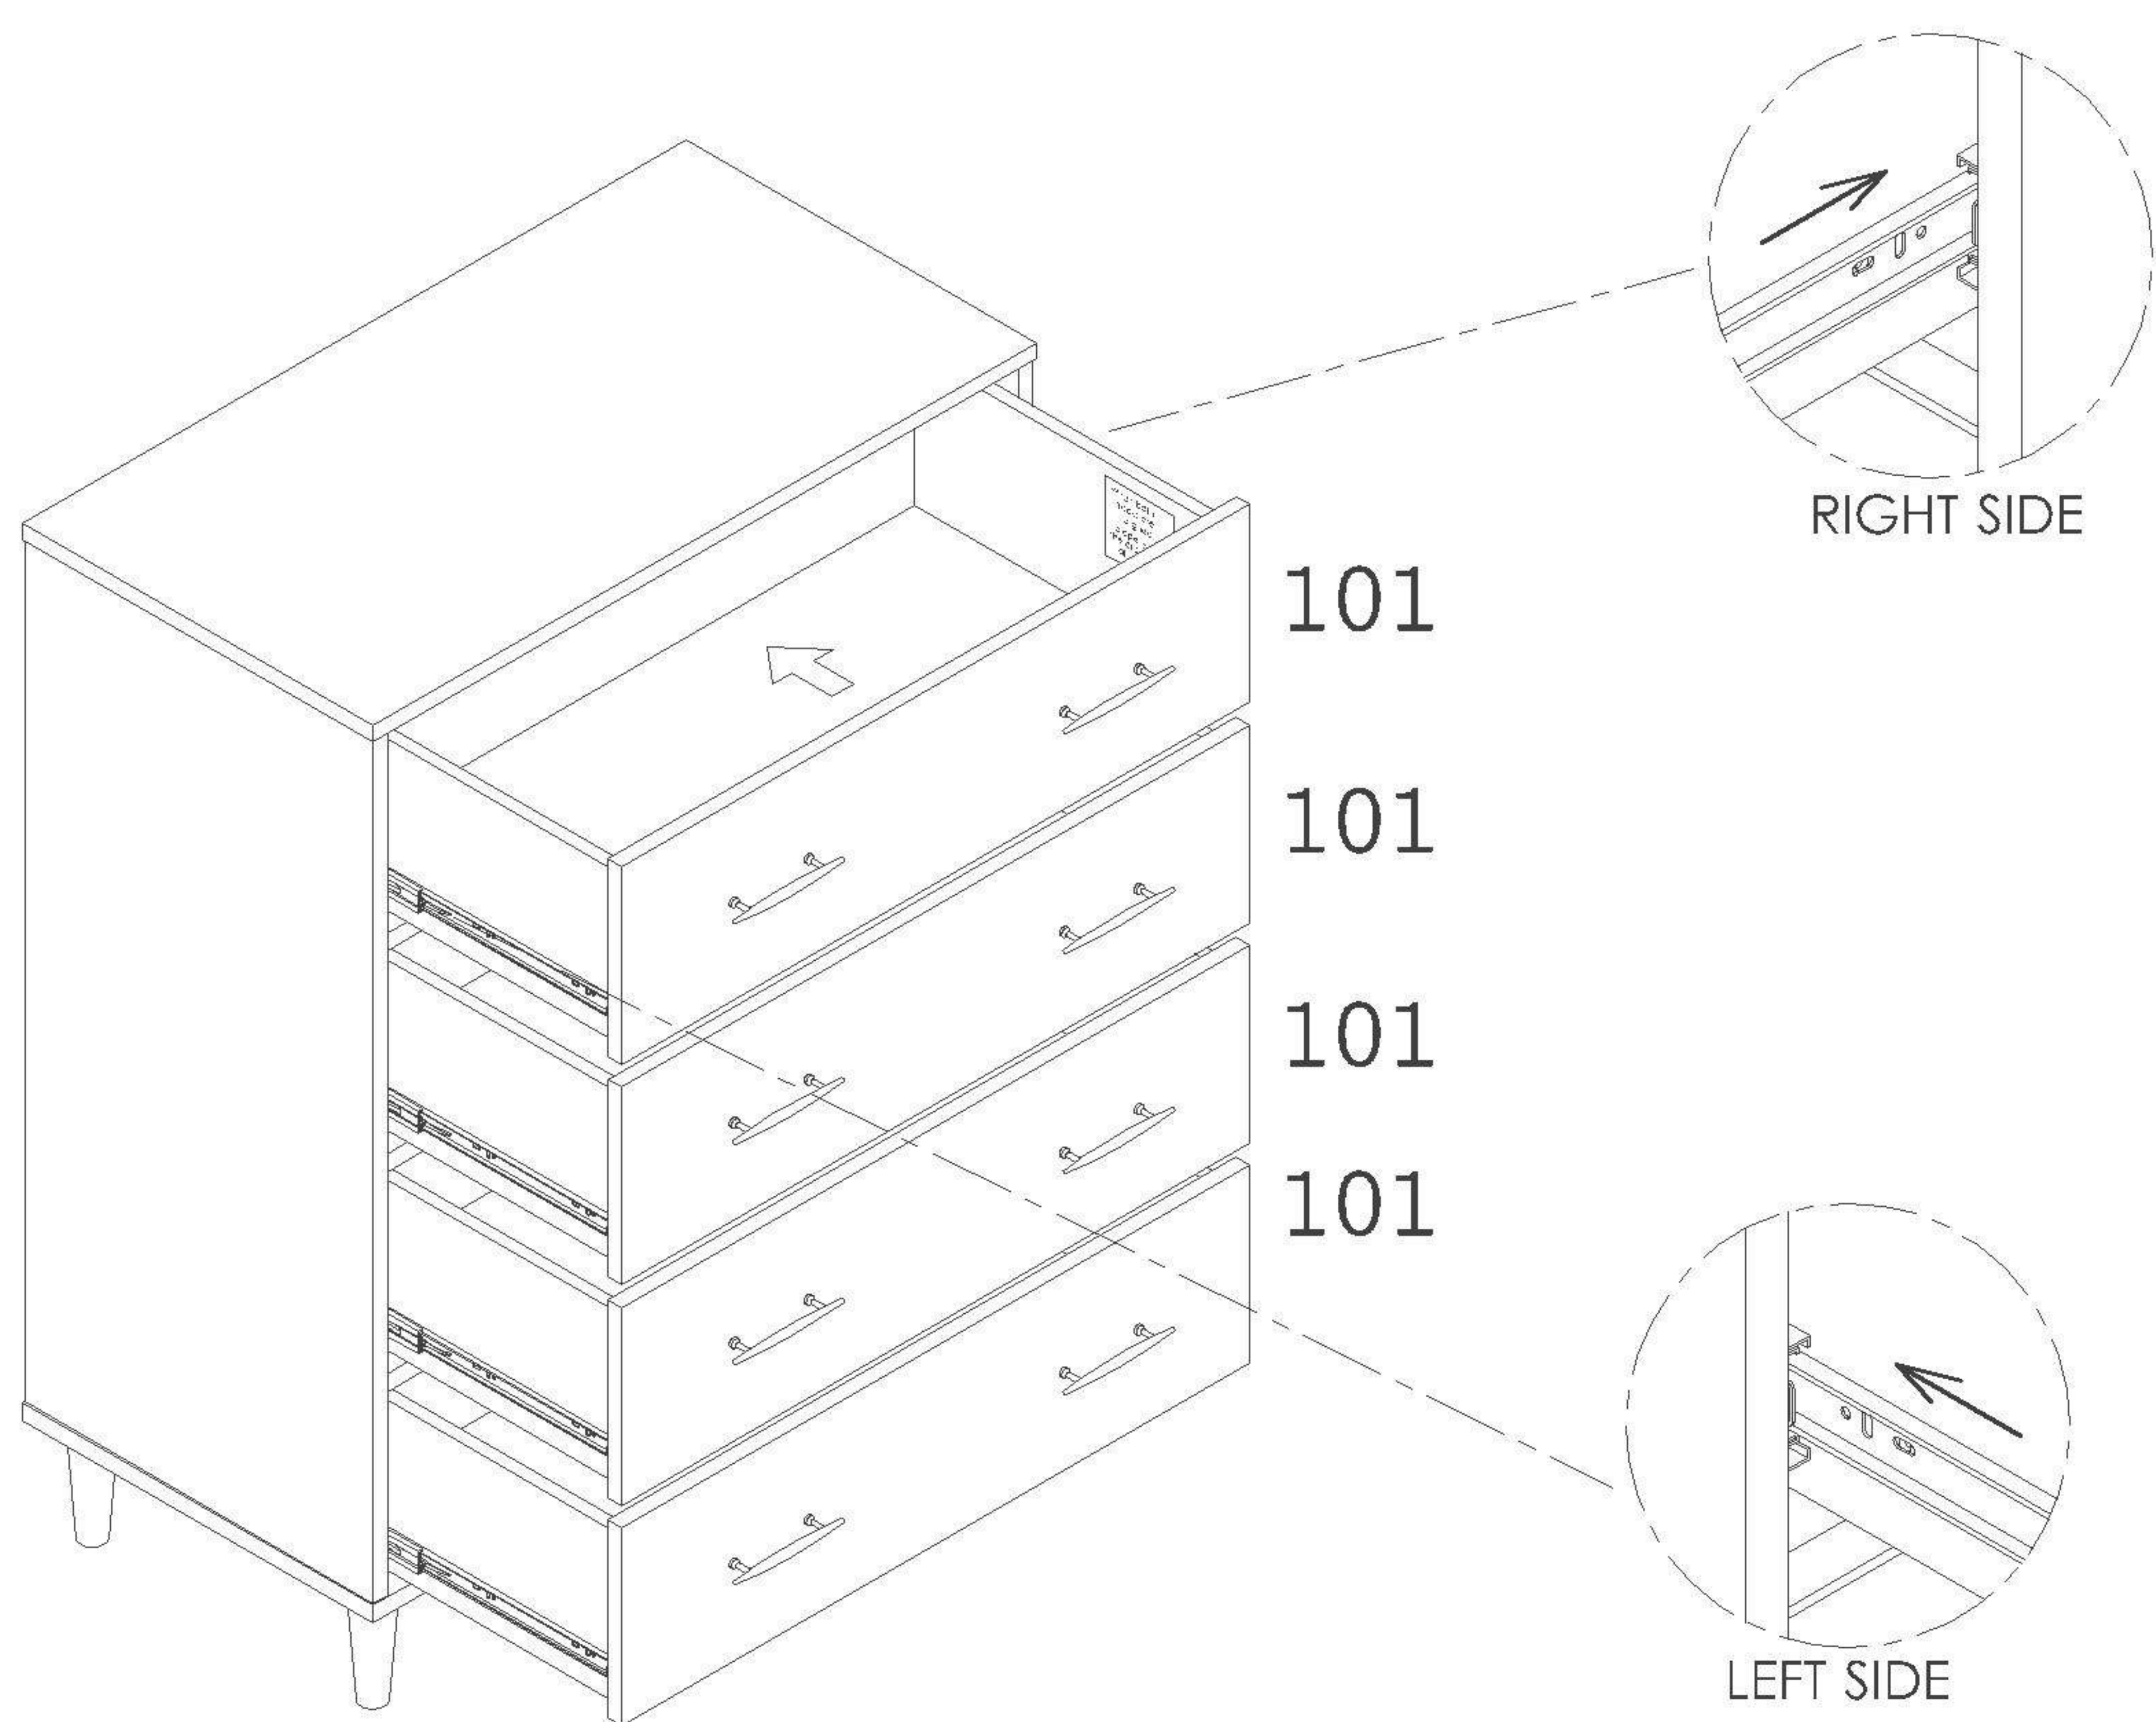

Push in the drawer further in gently - when the Trigger Disconnect Lever on (H1) is engaged onto (H2) there will be a slight resistance - this is normal. Pull out the drawer a little bit and gently push in the drawer again to engage the Trigger Disconnect Lever to the slide mechanism on (H2). The drawer should now slide smoothly. If the drawer cannot be pushed in or stuck, do not force it in. Remove the drawer and repeat the steps above.

 STEP 9D

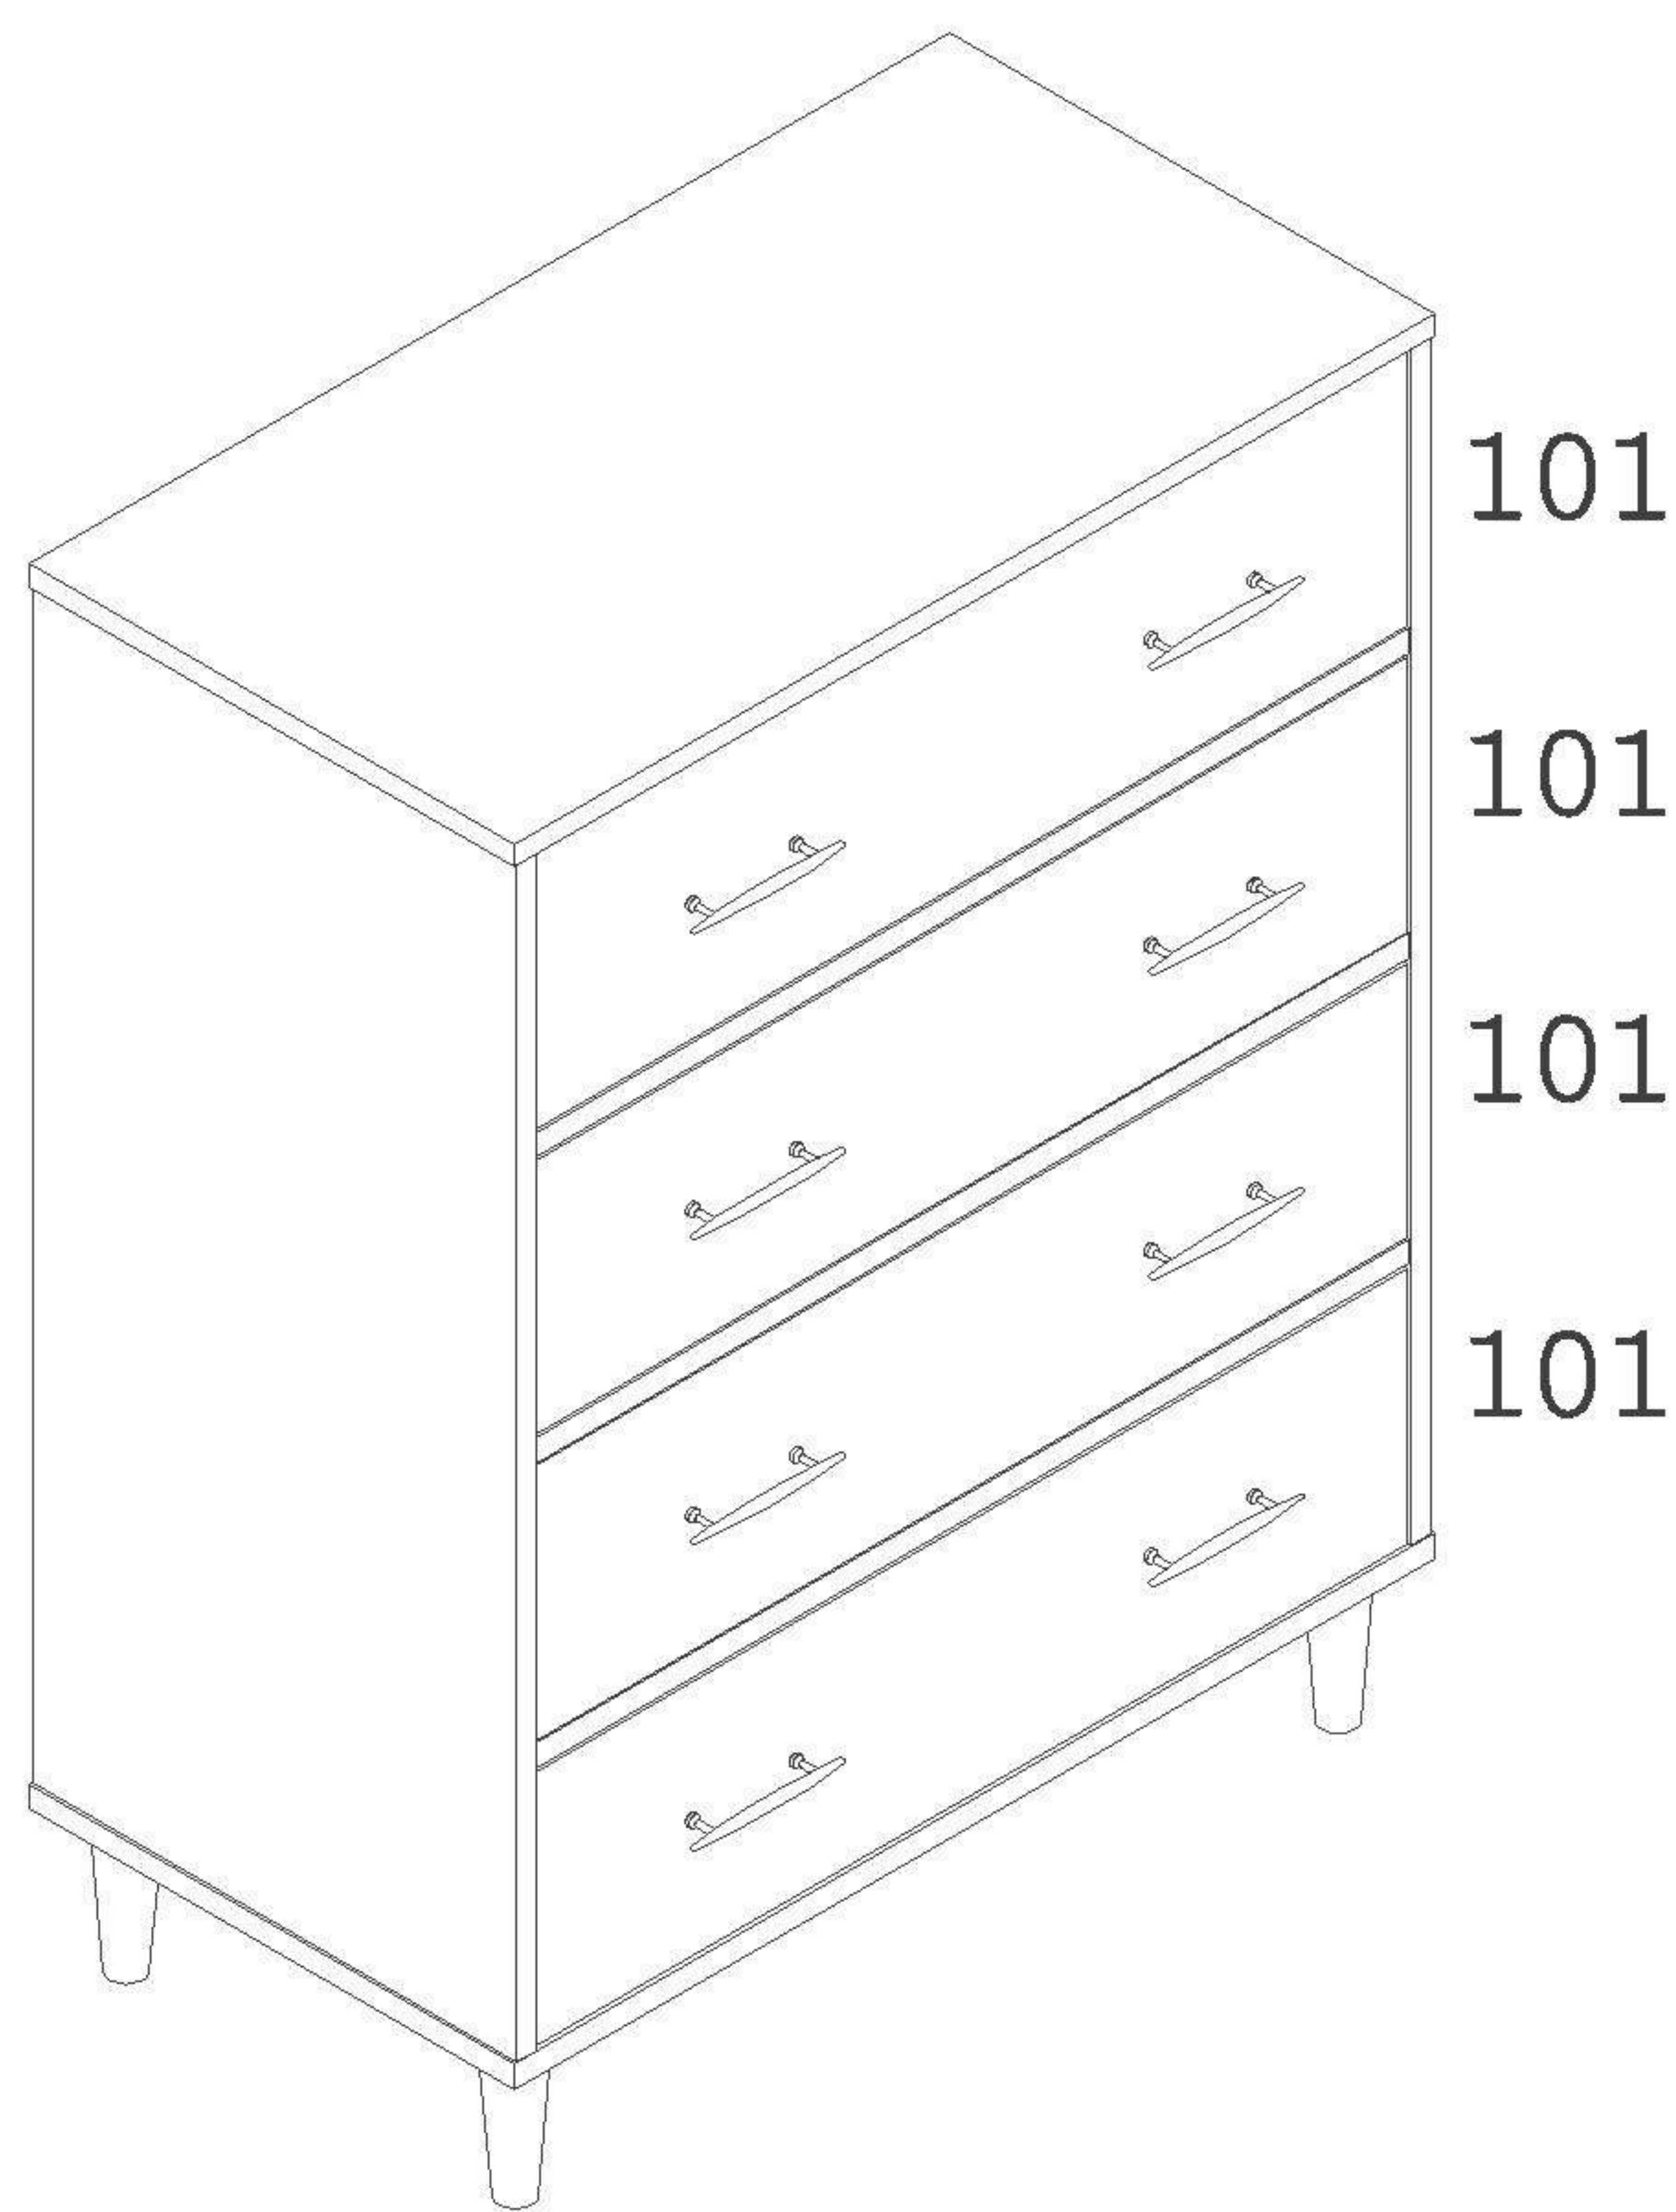

The assembly of the Drawer Chest is complete.

STEP 10


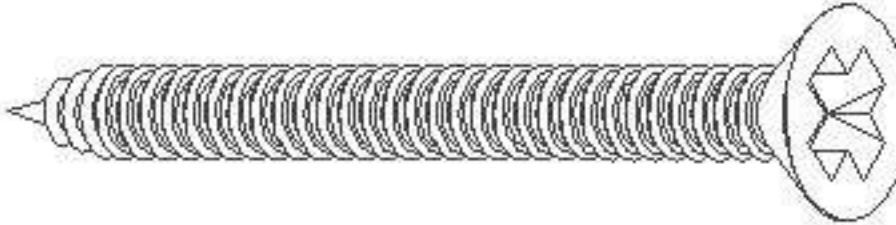
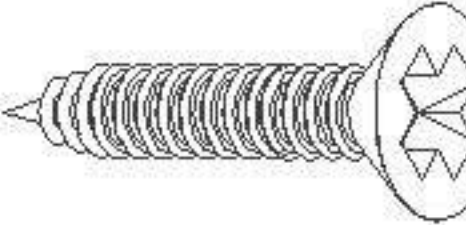
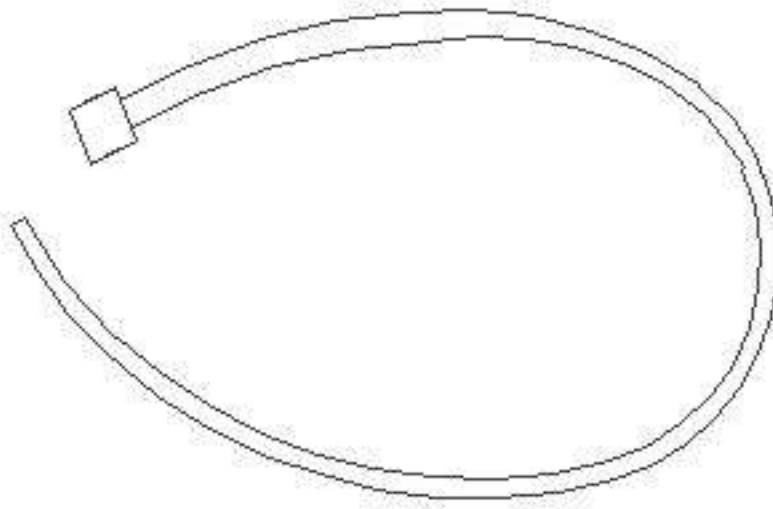
ANTI-TIP KIT AND INSTALLATION




⚠ WARNING

- Serious or fatal injuries can occur when furniture is not secured and tipover. To prevent tipover :
- 1) Install anti-tip kit provided.
 - 2) Place heavier items in lower drawers or shelves.
 - 3) Unless specifically designed to accommodate, do not place TVs or heavy objects on top of this product.
 - 4) Never allow children to climb or hang on this product or any part of the product including, drawers, shelves or doors.
 - 5) Never open more than one drawer at a time.
 - 6) Do not deactivate or remove any drawer interlock system.

Use of tip-over restraints only reduces and does not eliminate the risk of tipover.

Parts and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Bracket		2Pcs
B	SCREW M4 X 50mm		1Pc
C	SCREW M4 X 16mm		1Pc
D	Nylon Strap		1Pc

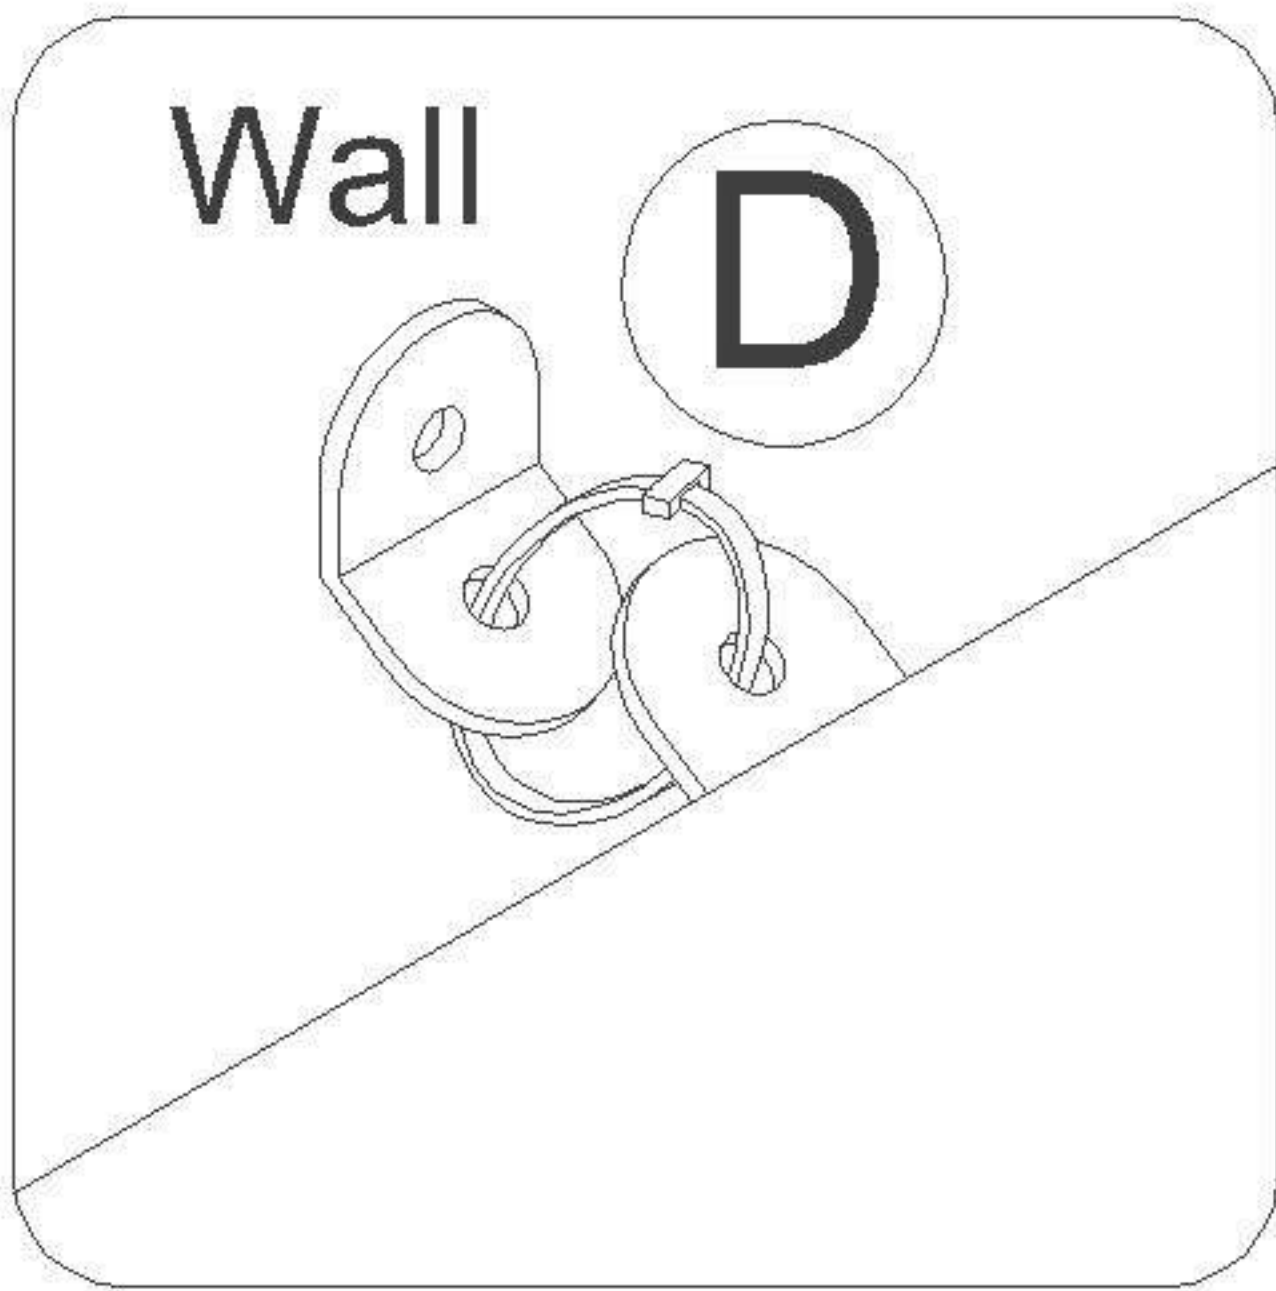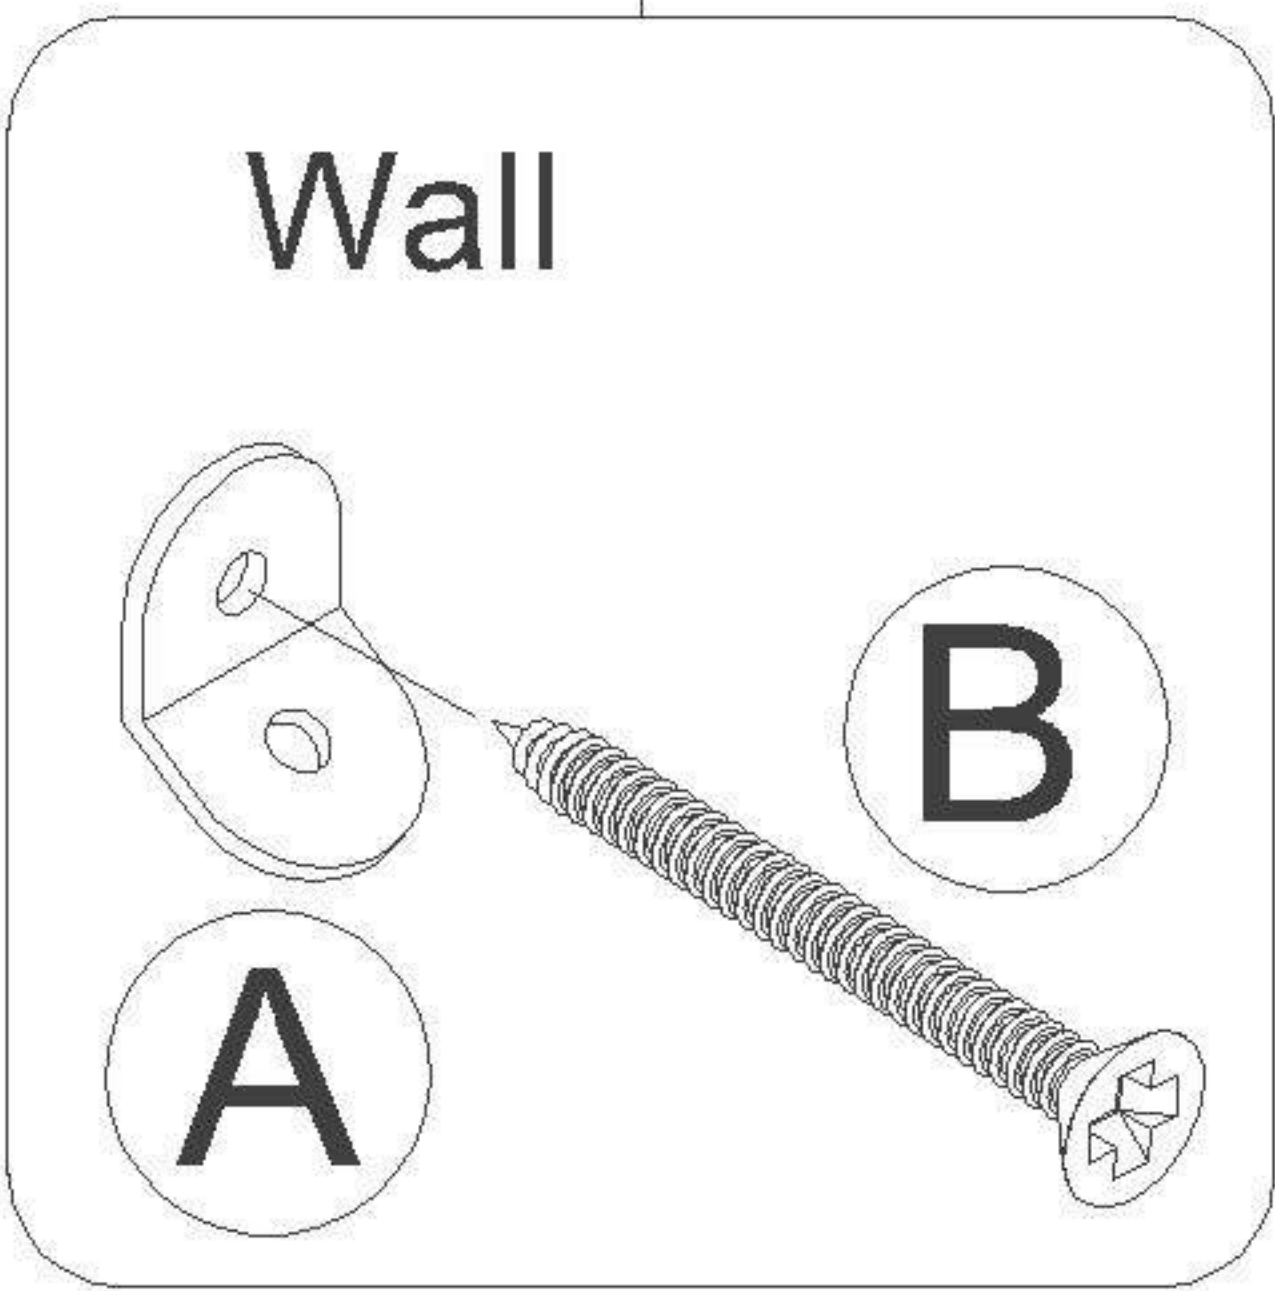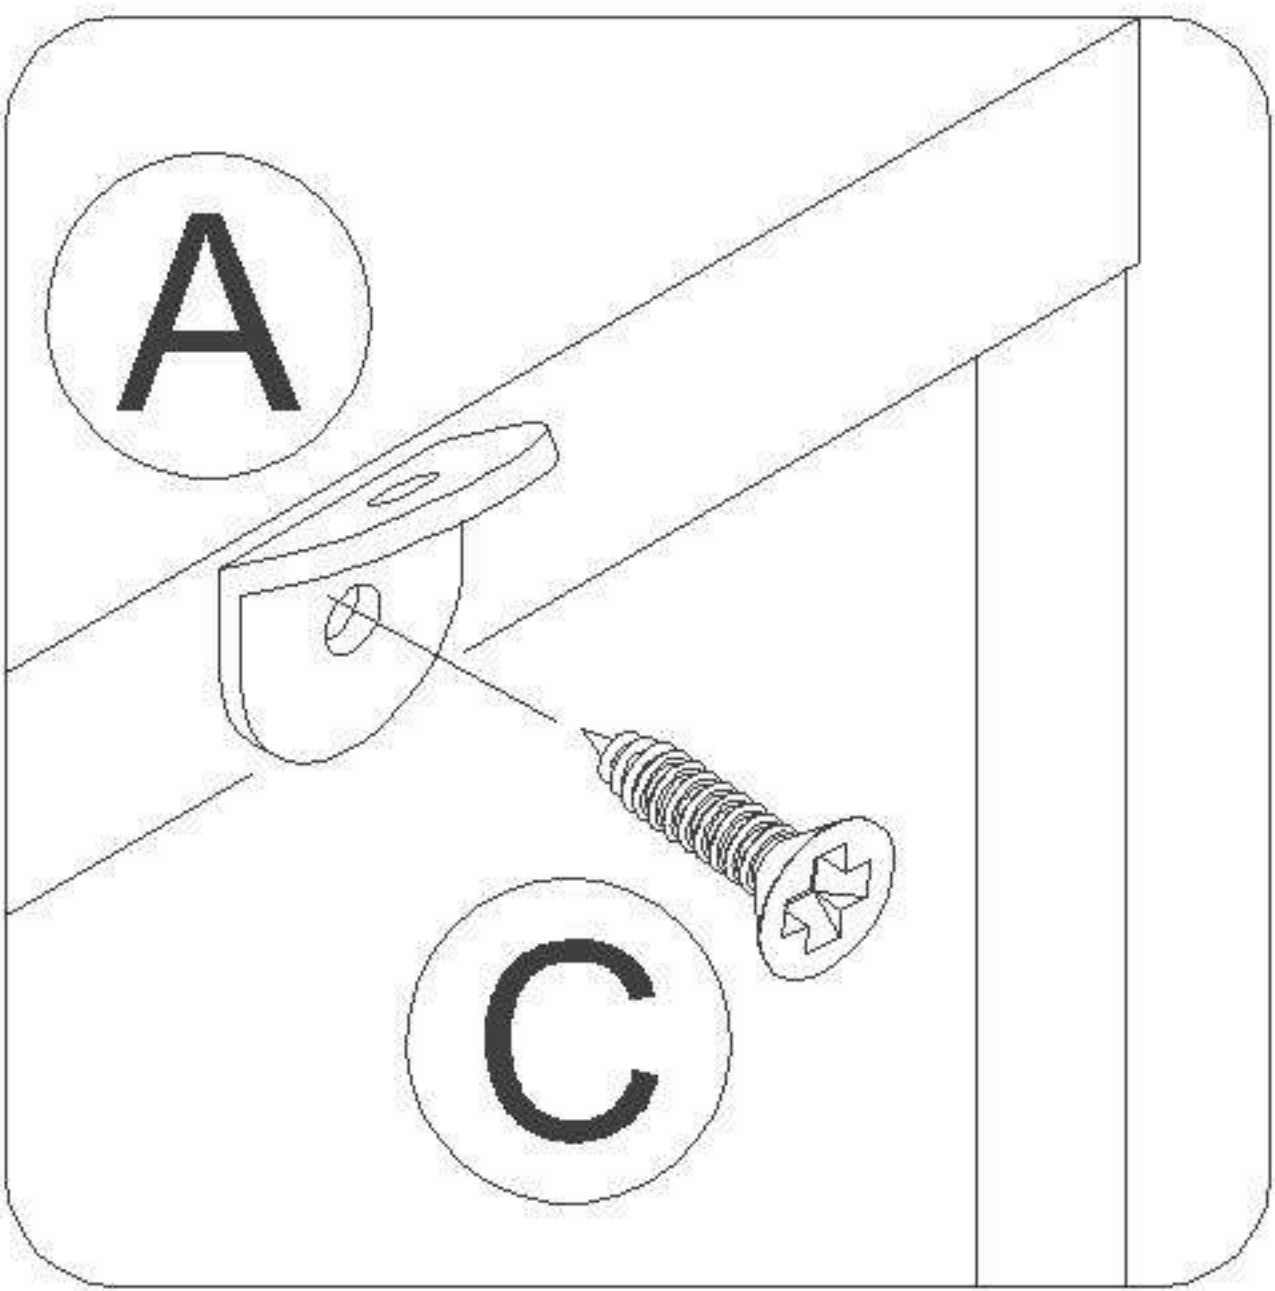   

NOTE:
WALL PLUG IS NOT SUPPLIED WITH THIS PRODUCT AS DIFFERENT WALL MATERIALS REQUIRE DIFFERENT TYPES OF FIXING HARDWARE & YOU MUST USE SUITABLE FIXING HARDWARE FOR TYPE OF WALL YOU INTEND TO MOUNT THIS PRODUCT TO WALL.

- Installation Steps:
- 1. Use Screw (C) to fasten Bracket (A) to the center of back top edge of the Top Panel.
 - 2. Mark the location on the wall for mounting the second set of bracket (A) which need to be at the same level as Bracket (A) on the back edge of Top Panel and drill hole in the wall as per the length and diameter of WALL PLUG.
 - 3. Insert WALL PLUG into the drilled hole and fasten (A) to the wall with Screw (B).
 - 4. Place the furniture so the brackets on the back edge of Top panel is aligned with the bracket on the wall.
 - 5. Lace the end of the Nylon Strap (D) through each of the bracket. Bring both ends together and slide the beaded end of the strap through the keyhole-shaped slot on the other end. Pull down on the beaded end until it snap-locked into the keyhole-shaped slot.
 - 6. Check to make sure the strap is securely laced and locked to the brackets.

The anti-tipping installation is complete.