

**Camping light Wireless Speaker instrucciones**

## Packing list



Audio × 1



Instruction manual



Type-C charging cable X1

## Product Specifications

Bluetooth version : V5.0

Communication distance : 10M

Music time: 12H(50% volume)

Speaker : 52mm 4Ω 10W\*2


Charging time : 5.5H

Battery capacity : 10000mAh/3.7V

Charging voltage: DC4.7~5.5V

Rated power : 20W

## Function key description

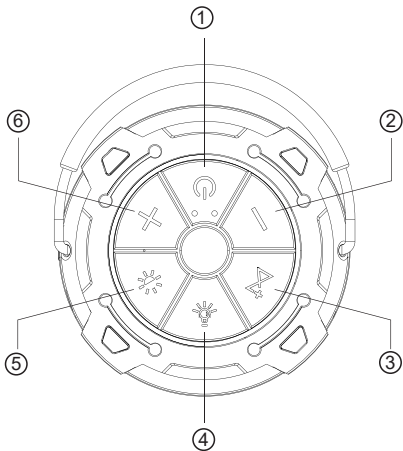

### ① Switching key

Long press 3 seconds to turn on/off

Power on (after power on, first time use or no device connection automatically enters pairing mode)

Short press: answer/end call, play/pause music

### ② Volume keys-

Long press the volume key - : turn down the volume

Short press the volume key - : switch the previous song

### ③ Mode button


Bluetooth/TF card/AUX switching/TWS pairing

Short press mode switch

Long press 2 devices at the same time TWS pairing (before connecting any devices)

- ④ **Illuminated light button**  
Short press: open  
Short press to switch between three modes/levels  
Short press the fourth time to turn off  
Long press for 8 seconds to reset and shut down
- ⑤ **Color light button**  
Short press: turn on the breathing light  
Long press: close the breathing light  
In any state short press to open the cycle of color light breathing light, in short press to change to monochrome breathing light mode, continue to short press to restore the cycle mode, long press to close the breathing light
- ⑥ **Volume button +**  
Long press the volume key +: turn up the volume  
Short press the volume keys +: switch the next song

## Product diagram

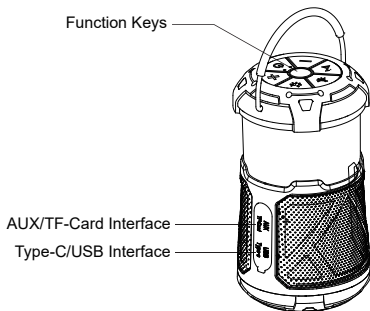

## Audio LED indicator status

Charging	Red light flashing
Bluetooth connection / TF card / AUX input	Blue light is always on
Volume plus / previous song	White light long light 15 seconds off
Power on / mode / light button	
Volume down / next song	
Fully charged	Charging full charge red light is always on
Start up	Blue light blinking
Shutdown	Blue light out
Matching search status	Blue light blinking

## Voice Prompt

Incoming call	Follow the phone
Connection with cell phone	Connected
Low battery (less than 15% battery)	Ticking sound
Answering	No beep
Maximum volume	Beep
Turn on the phone	Power on

## Voice Prompt

Pairing	Ding Dong
End the call	No beep
Turn off the phone	Power off
Volume up / down	No beep
AUX / TF / Bluetooth mode	Linein/music/Bluetooth mode

## Tips

- 1、 Do not attempt to disassemble or replace any parts inside the product except for the operation method specifically indicated in the manual.
- 2、 Do not put the product into water or any other liquid, this product is not designed to be waterproof.
- 3、 If any liquid accidentally enters the product, please immediately disconnect and remove the product.
- 4、 To avoid electric shock, please make sure there is no water on your hands when installing or uninstalling the product.
- 5、 Do not place this product near a heat source or expose it directly to a fire source.
- 6、 Do not place this product in an environment where there is a strong electromagnetic force, as this may cause the product to malfunction.
- 7、 It is recommended not to operate the device while it is charging.