 


ASSEMBLY INSTRUCTIONS

Corner Cabinet

ITEM# GSI22X2

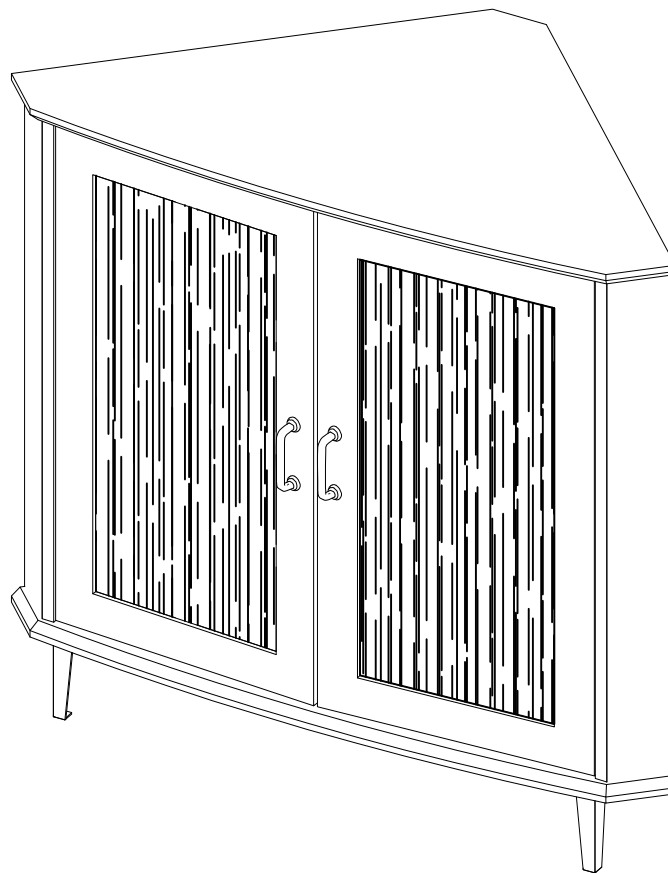 


If you find any damage after opening, please be sure to take pictures of the damage and contact us. We will help you solve the problem as soon as possible.


THANK YOU

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. A Phillips head screwdriver is required for the assembly of this product .

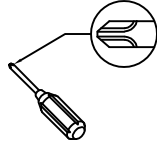

 
- VI. Power tools should not be used to assemble this product .

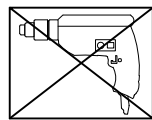

 
- VII. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.



 
In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.



 
- VIII. Concealed hinges are three-way adjustable.

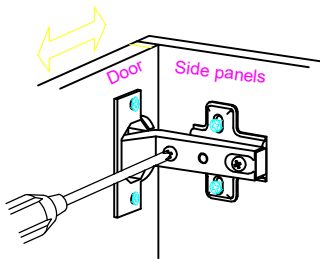

Horizontal
by screw adjustment

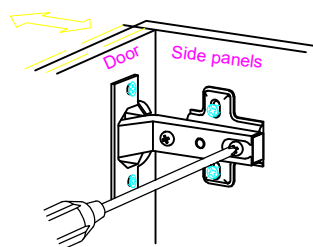 


 In-and-Out
by loosening the hinge-arm
mounting screw or via cam
adjustment

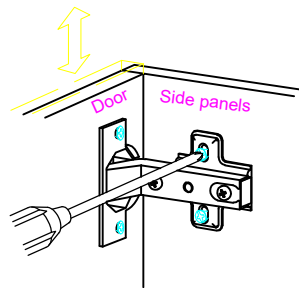








Vertical
Via slots in the mounting
plate or via cam adjustment

 - VIII. Assemble the furniture on empty carton, carpet, or rug to prevent scratches or damage.







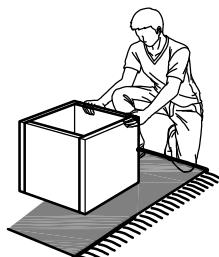


PARTS LIST

       A Carton part list

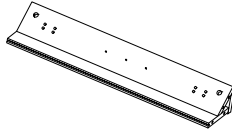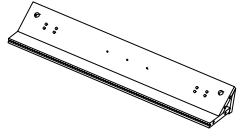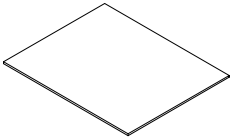A:Top panel 1 pc 	B:Bottom panel 1 pc 	C: left post 1 pc 	D: Right post 1 pc 
E:Back post 1 pc 	F: Back panel 2 pc 	G: Shelf 1 pc 	H: Door 2 pc 
I: Leg 3 pc 			

       
Hardware List

1:Cam lock 16 pcs  Ø15*10.5	2:Cam bolt 16 pcs  Ø6*32	3:Wood plug 4 pcs  Ø8*30	4:Handle 2 pcs 
5:Bolt 4 pcs  M4x18	6:Hinge 4pcs  Ø26	7:Bolt 24 pcs  Ø4.0x12	8:Bolt and washer 12 pcs  M6 X 15MM
9:Shelf support pin 3 pc  Ø8x5x16	10:Sticker 16 pcs 	11: Glue tube 1 pc 	12: Hex key 1 pc  M4
13: Plastic wedge 12pcs 	14: Screw 12pcs  Ø3x17	15: Door stopper 1pc 	16: Anti knit set 

Step 1

2:  8 pcs

 
15:  1 pc

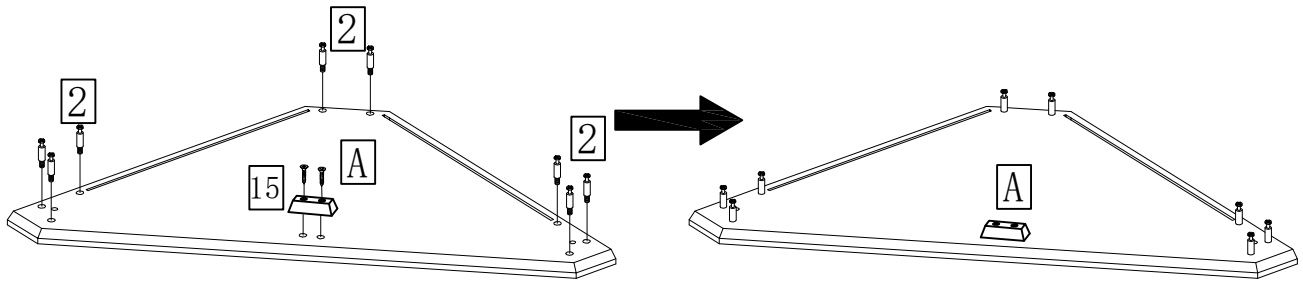

Secure cam bolt (2) into part (A), then use screw attach door stopper (15) to part (A) with Philips head screwdriver as per diagram.

Step 2

 
2:  8 pcs

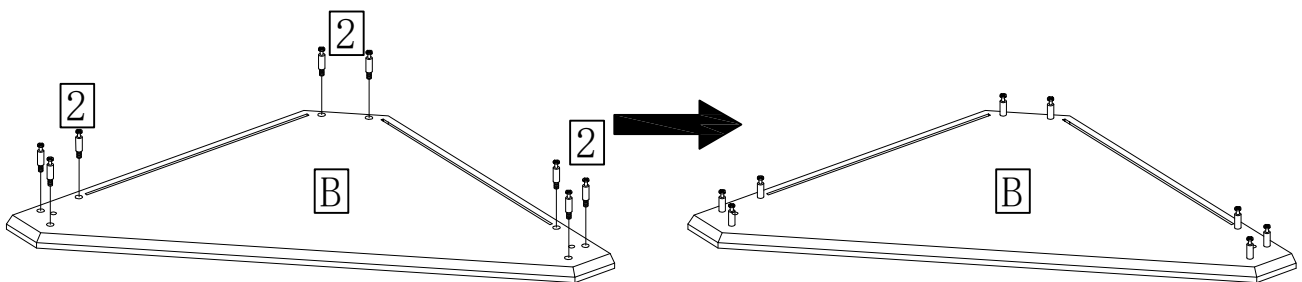

Secure cam bolt (2) into part (B) with Philips head screwdriver as per diagram.

Step 3

 
3:  4pcs

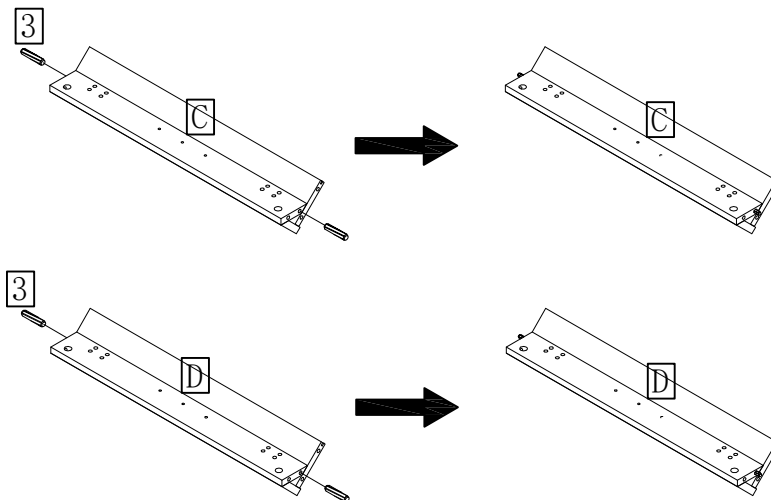

Insert wood plug(3) to part (C,D) as per diagram.

Step 4

 
8:  12 pcs

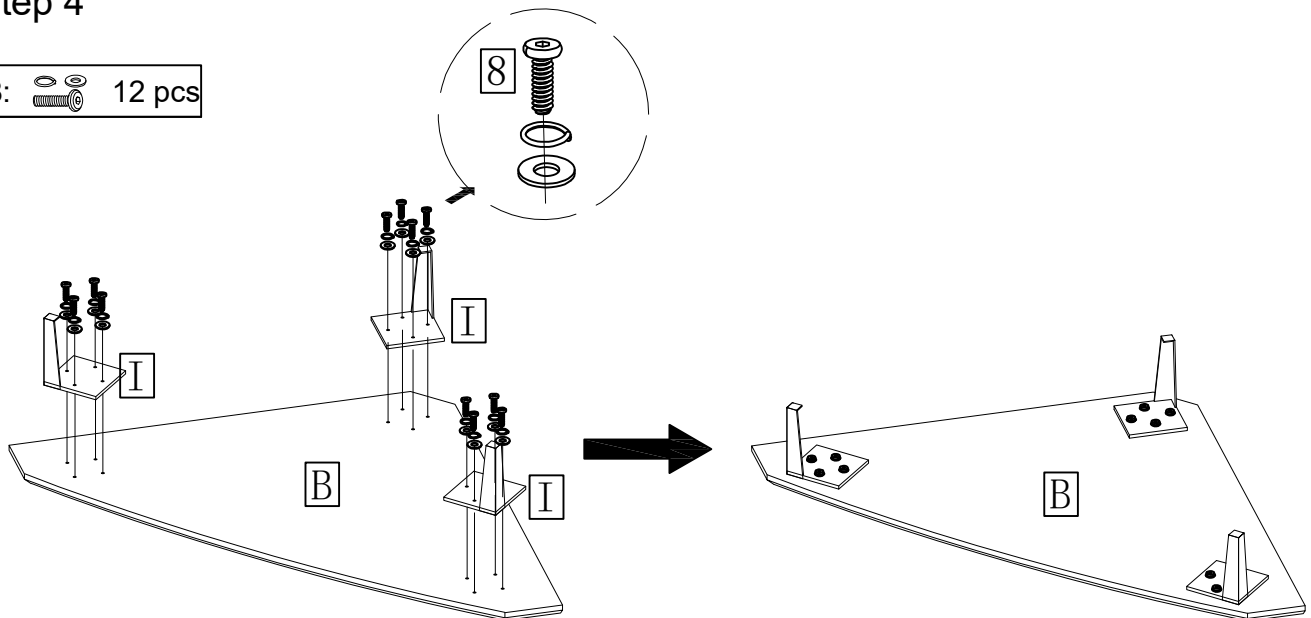



Use bolt (8) with lock washer and flat washer secure part (I) to part (B) by using Hex key (12) as per diagram.

Step 5

 1:  8 pcs


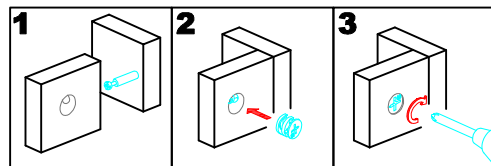


  Note: Please don't over-tighten the cam lock, otherwise, it will be broken.

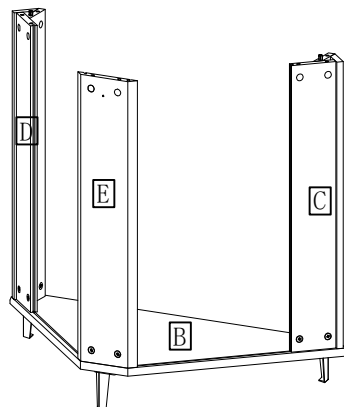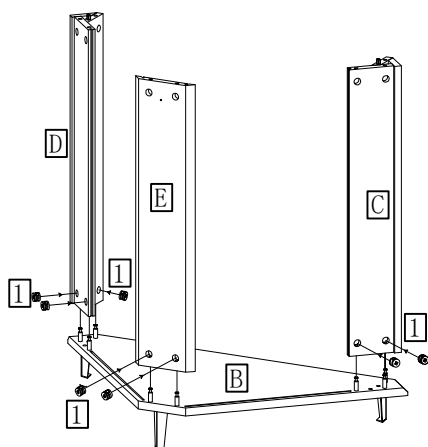

Use cam lock (1) secure parts (C,D,E) to part (B) with Philips head screwdriver as per diagram.

  Step 6

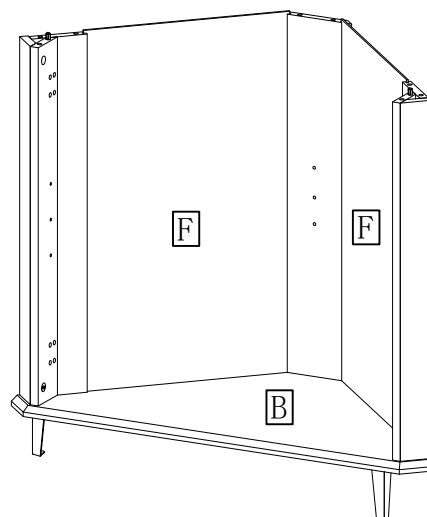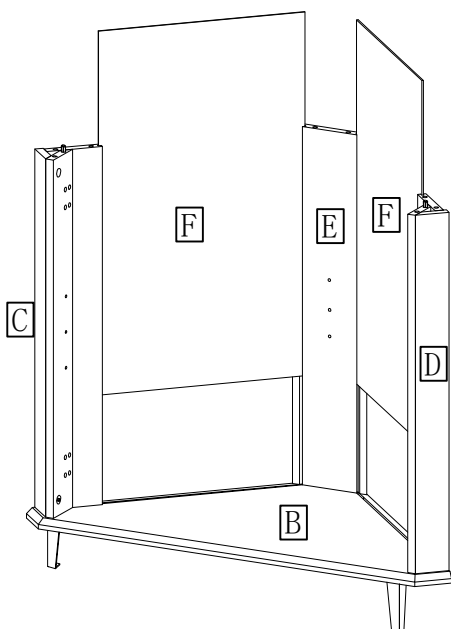

Insert the back panel (F) into parts(B,C,D,E) as per diagram.

 
Note: please keep the back panel (F) in the groove.

Step7



1:  8 pcs

13:  12 pcs

14:  12 pcs

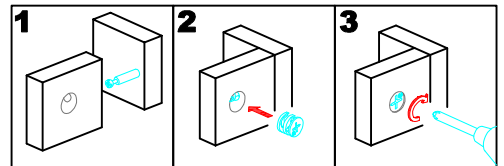

  
Note: Please don't over-tighten the cam lock, otherwise, it will be broken.

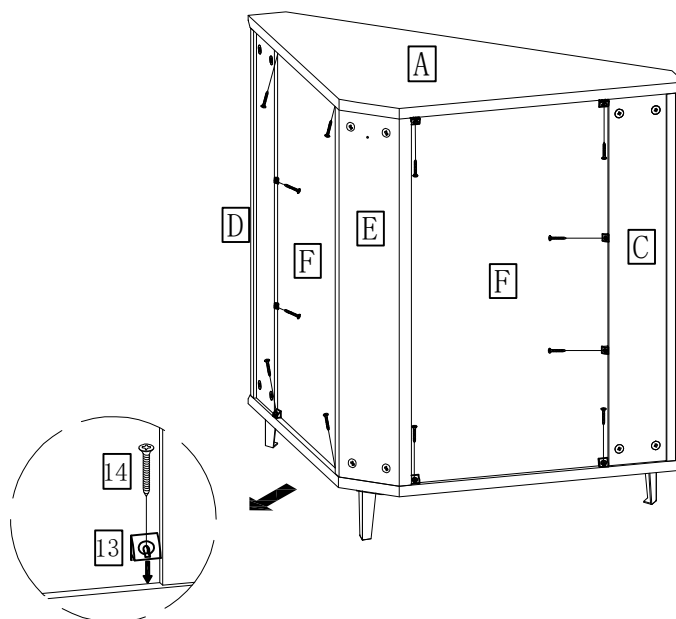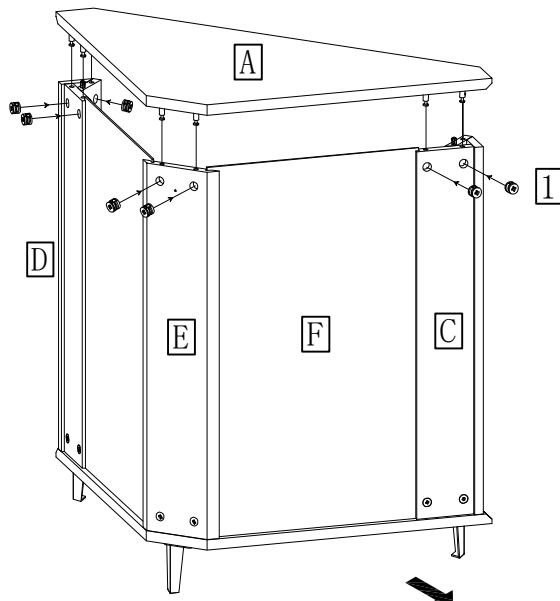

Use cam lock (1) secure the top panel (A) to parts(C,D,E) and keep the groove fit with back panel (F) and then use screw (14) secure the plastic wedge (13) by using a Philips screwdriver as per diagram.

Step 8

9:		3 pcs
10:		16 pcs

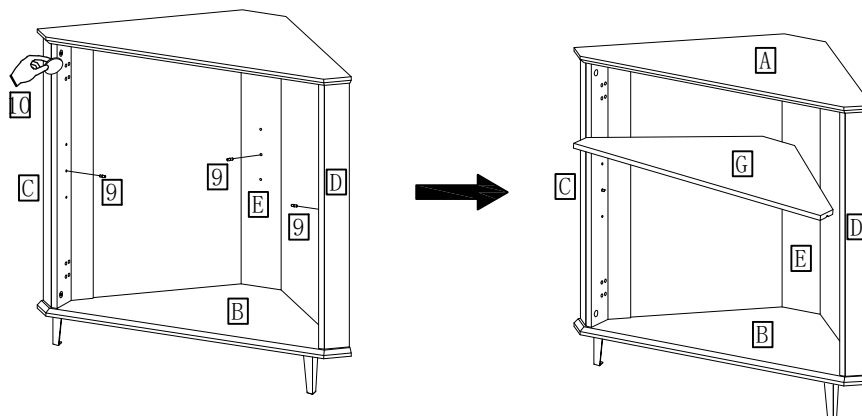 


Use sticker(10) cover the cam lock hole. Insert shelf support pin (9) into parts (C,D,E) as per diagram. Make sure you place three shelves support pins (9) in the same level.

Put part (G) into unit as per diagram. Tilt and rest the adjustable shelf (G) onto the shelf support pins.

Step 9


4:		2 pcs
5:		4 pcs
6:		4 pcs
7:		8 pcs

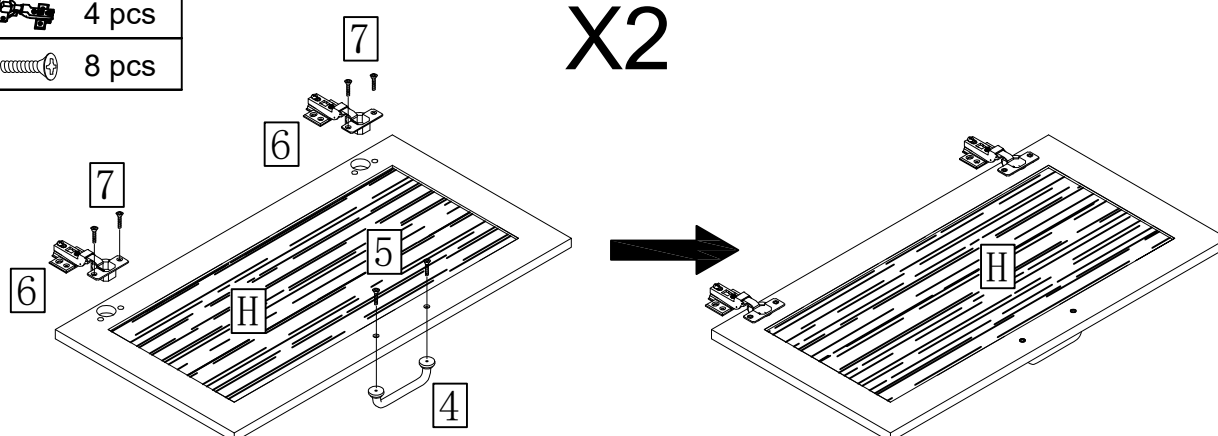 

Use bolt (5) secure handle (4) to part (H), then using bolt (7) attach hinge (6) into part (H) with Philipshead screwdriver as per diagram.

Step 10

 7:  16 pcs

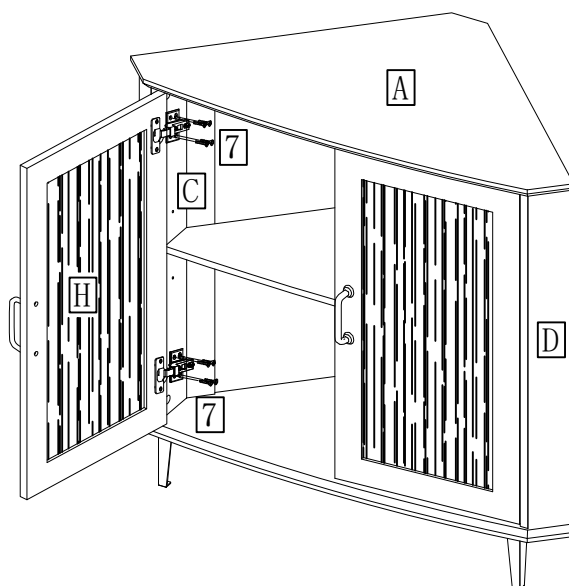




Use bolt (7) secured hinge to parts (C,D) by using a Philips screwdriver as per diagram.

Step 11


16:  1 pc

WARNING

   Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

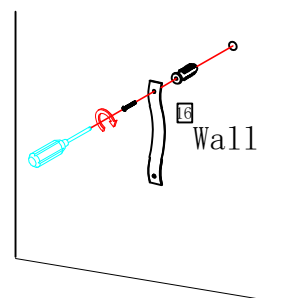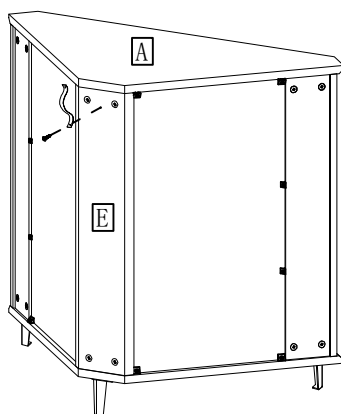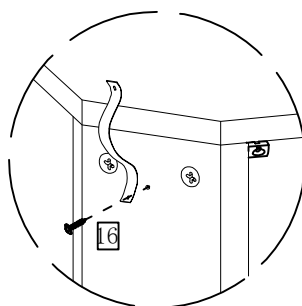

 Use screw secure the strap to the top back of the unit. Place the unit at the desired location. Insert the nut into the wall and use screw secure the strap to the nut by using a Philips screwdriver as per diagram.

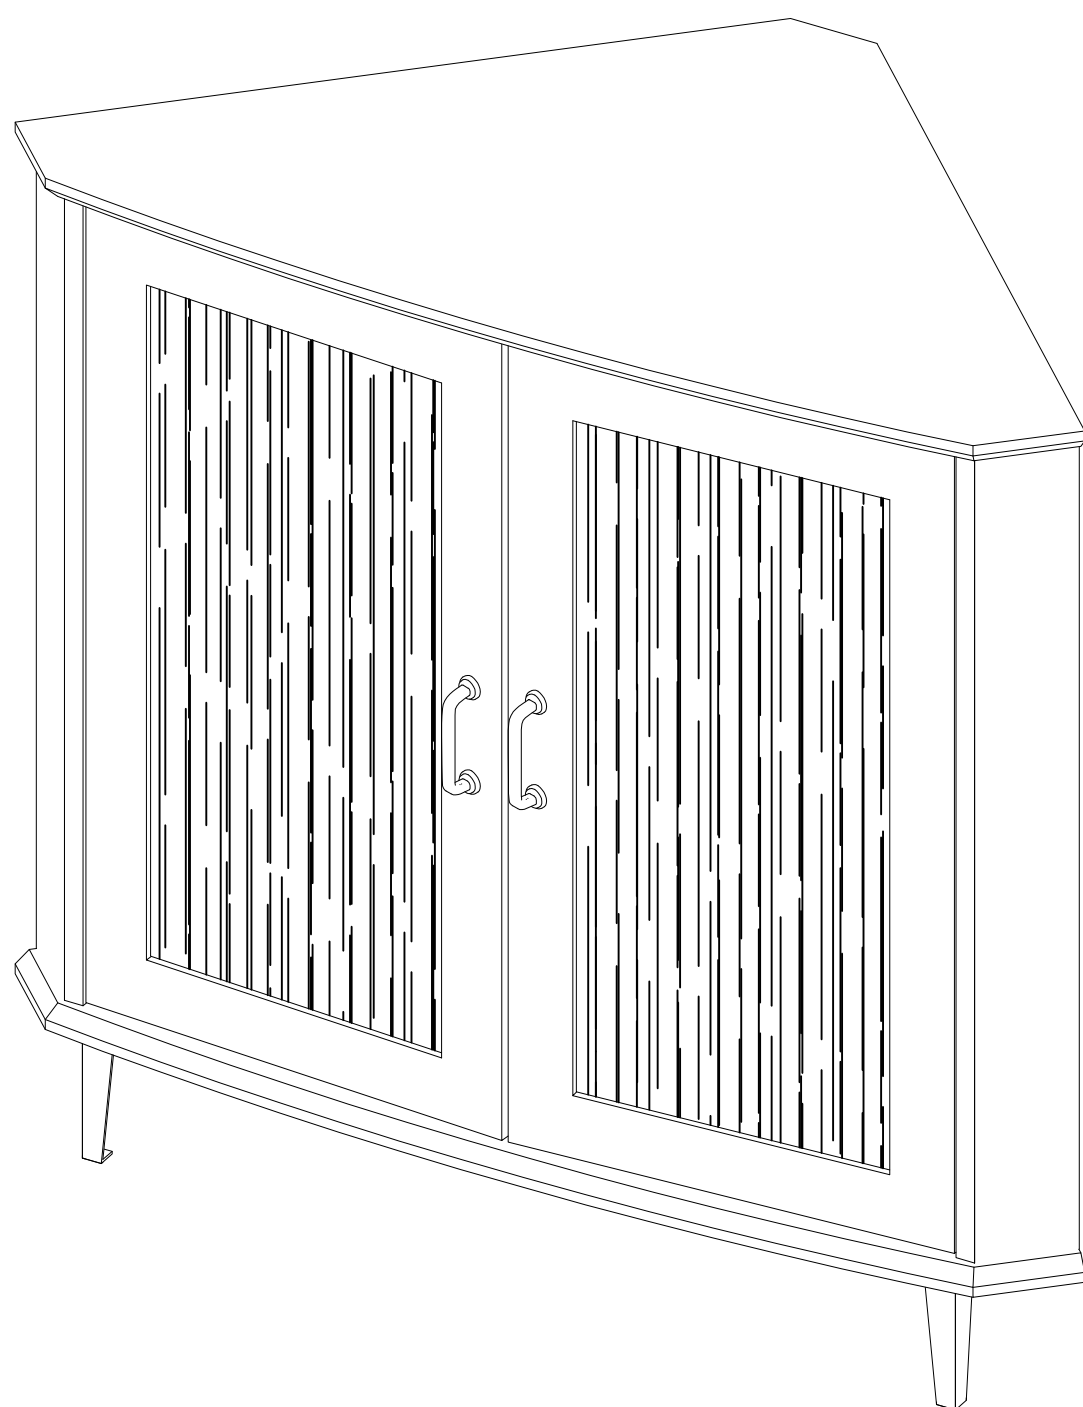

Final Assembly