 


Installation & User Instructions

Electric Fireplace

XINS2417-1DLOG

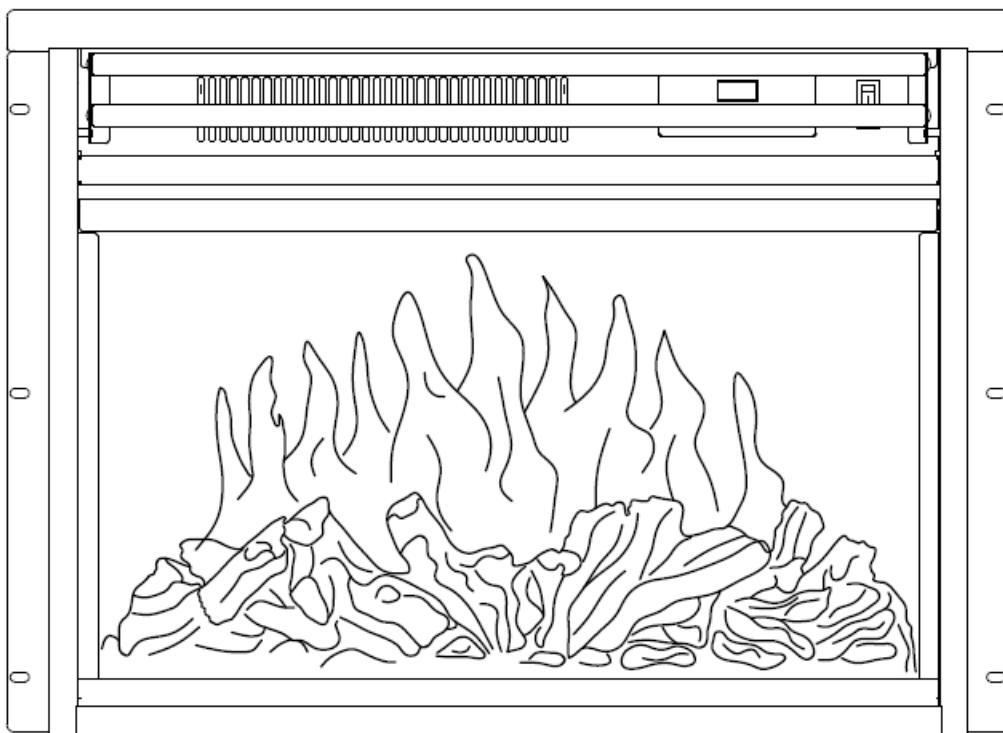

IMPORTANT: THESE INSTRUCTIONS SHOULD BE READ CAREFULLY
AND RETAINED FOR FUTURE REFERENCE.



CAUTION

RISK OF ELECTRIC SHOCK

DO NOT OPEN THE UNIT

NO USER-SERVICEABLE PARTS INSIDE

HIGH TEMPERATURE

KEEP ELECTRICAL CORDS, DRAPERY AND OTHER FURNISHINGS AT LEAST 1 METRE FROM FRONT OF THE HEATER AND KEEP THEM AWAY FROM THE SIDES OF HEATER

WARNING

RISK OF FIRE- KEEP COMBUSTIBLE MATERIAL AWAY FROM TOP OF HEATER.

SERVICING SHOULD BE DONE ONLY WHILE THE HEATER IS UNPLUGGED FROM POWER SUPPLY.

The flame effect on the fireplace is created by LED surface mounted components that are designed to last the life of the product. Do not remove back cover of heater, no user serviceable parts are contained within.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, to reduce the risk of fire, electric shock and injury to persons, basic precautions should always be followed, including the following:

1. Read all instructions before use.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided use handle when moving this heater.
3. Keep combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 4" / 7cm away from the front of heater and keep them away from the sides of heater .
4. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is in operation it must be left unattended.
5. Always unplug the heater when not in use.
6. Do not operate any heater with damaged cord or plug or after the heater has malfunctioned or has been dropped or damaged in any manner. Return heater to an authorized service facility for repair.
7. Do not use outdoors.
8. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heaters where it may fall into a bath tub or other water container.
9. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.
10. To disconnect heater, turn control to off, then remove plug from outlet.
11. Connect to properly grounded outlet only.
12. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
13. To prevent a possible fire, do not block air intake or exhaust in any manner.
14. Do not use on soft surfaces, like a bed, where openings may become blocked.
15. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
16. Use this heater only as described in manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
17. Avoid the use of an extension cord because the extension cord may overheat and there is a risk of fire.
18. Do not strike the heater glass.
19. Always use properly grounded, it may break fused and polarized outlets.
20. Always disconnect power before performing any cleaning or maintenance, or relocation of the heater.
21. When transporting or storing the heater keep in a dry place, free from excessive vibration and store so as to avoid damage.
22. The flame effect is powered by a motor and it is normal for the motor to make some noise as it slowly rotates and helps to create the beautiful 3D flame effect. Some rooms have more or less furnishings than others resulting in varying noise amplification.
23. Whilst every effort is made to ensure packing materials are kept outside of the plastic bag which covers your heater in the box, there is a remote chance that some packing may lodge itself in the heater part of the unit. If you notice this on close inspection, please remove it. When turning your heater on for the first time it is normal for the heater to emit a little 'new heater' smell which quickly passes.
24. You may notice some light coming from under or from the sides of the unit. This is normal and the holes allow the unit to 'breathe'. Do not attempt to block these holes.
25. This heater is to be used on a 110 / 120 V, 11.2AMP, grounded circuit. Do not use in an outlet Controlled by a switch or dimmer switch. The cord supplied with the heater, has a 2 blade plug, the round pin on the plug is for grounding purposes. If a 2 slot receptacle is not available, an adapter must be used, and the adapter must be properly grounded to the outlet box. Avoid plugging other appliances into the same circuit as heater.

INSTALLATION

To avoid scratching the finish, assemble the product on a soft, non-abrasive surface, such as carpet or cardboard assembly of this product may require more than one person.

TOOLS REQUIRED



 
Safety Goggles




Phillips
screwdriver

HARWARE INCLUDED

Note: Hardware not shown to actual size.




AA

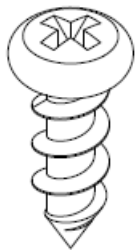 

CC



 BB

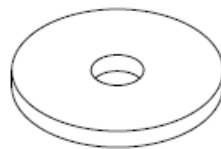

DD

| PART | DESCRIPTION | QUANTITY |
|------|--------------|----------|
| AA | Trim Piece | 1 |
| BB | Small Screws | 3 |
| CC | Small Screws | 6 |
| DD | Gasket | 6 |

PACKAGE CONTENTS



| PART | DESCRIPTION | QUANTITY |
|------|------------------|----------|
| A | Fireplace Insert | 1 |
| B | Remote Control | 1 |

ASSEMBLY

1. Attach the metal brackets (AA) to top sides of the firebox to ensure that your firebox does not move around as you use it. Insert and tighten the screws (BB) on the fireplace
2. Insert the firebox insert(A) into the mantel from the rear. Be careful not to scratch the base.
3. Viewing from the front check that the insert is centered.
4. Lock the fireplace on the mantel by the screws (CC) and Gasket (DD)


INSTRUCTIONS FOR USE

  The appliance can be operated either by the switches located on the right-hand side of the fire or by the supplied remote control.

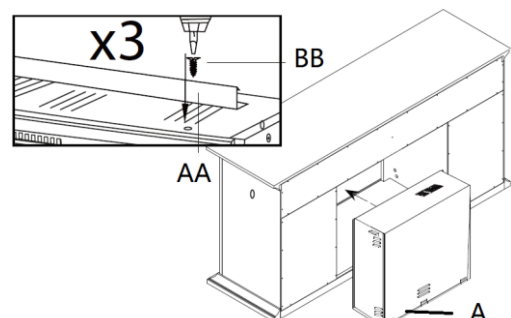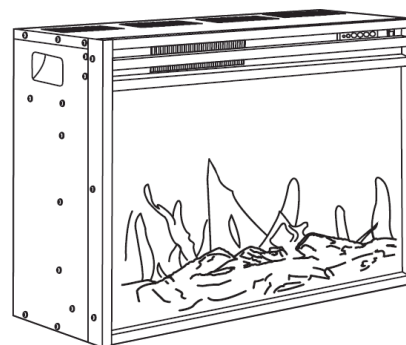

MANUAL OPERATION

 The master power switch is located on the right side of the appliance.

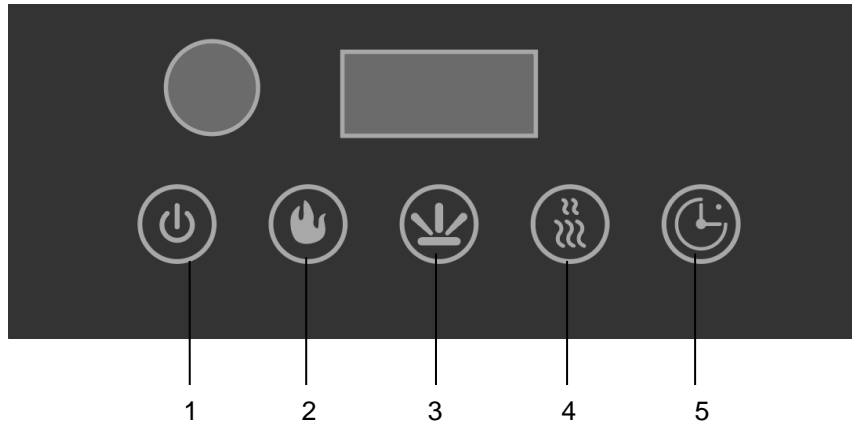

1. POWER ON/OFF

Touch the button once (flame will light up) to turn power on for all functions, keep the last flame color **memory** once appliance off, touch the button once more to turn all functions off and flame off

2. FLAME ADJUSTMENT

Touch the button to turn flame on. There are 12 colors in total. Press this button to change color. When press this button, the display will show 01(the orange color), 02(the orange and green color), 03(green color), 04 (green and blue color) ,05(blue color), 06(blue and orange color), 07(blue and orange and green color). 08(blue and red color), 09(red color), 10(orange and green and blue and red color), 11(orange and red color),12(green and red color), 00 (all colors loop) to change the different flame color.

Hold this button for 3 seconds for dimmer function, the display will show 1, 2, 3, 4, 5 level.

3. CHARCOAL FIRE COLOR

Touch the button to turn charcoal fire on. There are 12 colors in total. Press this button to change color. When press this button, the display will show 01, ...,12, 00 (all colors loop) to change the different charcoal fire to same as flame color.

Hold this button for 3 seconds for dimmer function, the display will show 1, 2, 3, 4, 5 level.

4. HEAT SETTINGS

This fireplace consists of a fan forced electric heater with two heat settings: 750W ("LO" shown in display) and 1500 W ("HI" shown in display). Touch the button once (the icon will light up) to activate the heater at its low level (750W). Touch the button once more to active the heater at its high level(1500W). When set in high level, touch the button once again to deactivate the heater.

Note: The fan will continue to run **and the display "OFF" will flash** for a short time and turns off automatically after **the high power of the heater** is turned off.

5. TIMER

Set the timer using the button (1 to 9 hours), press button once for one hour increments

REMOTE CONTROL

The standby rocker switch located at the right-hand side of the fire must first be switched on; the fire will beep to indicate that it is powered up. It takes a little time for the receiver to respond to the transmitter. Do not press the buttons more than once within two seconds for the fire to operate normally.

1. Install the CR2025 3V battery in the remote control
2. Turn the master switch on the e-fireplace to 'I' so that it can receive the signal from the remote control.
3. Lock the colour for the flame using button 1.
Lock the colour for the Log using button 2.
Press the button to see and choose the colour.

 
4. The temperature display mode is Fahrenheit (F),

The F temperature range display shows from 62°F, 63°F, 64°F, 65°F.....to 86°F

5. CAUTION: Never leave the e-fireplace unattended while heating.

5. Refer to last page manual control buttons/functions for the other buttons on the remote control.

Note: The Setting temperature must be higher than the room temperature for the heating function.

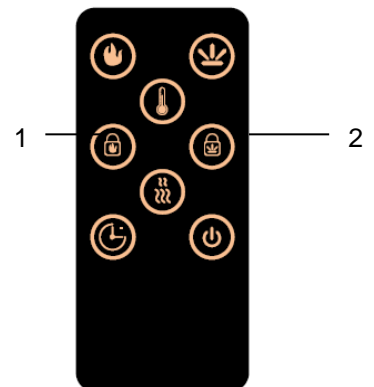

SAFETY CUT-OFF

This appliance is fitted with a safety cut-off which will operate if the fire overheats (e.g. Due to blocked air vents). For safety reasons, the fire will NOT automatically reset. To reset the appliance, disconnect the appliance from the mains supply for at least 15 minutes. Reconnect the supply to the mains and switch on the appliance.

BULB REPLACEMENT

This product does not use a standard bulb for its flame effect. The appliance uses an electronically controlled LED system to create the effect, therefore no parts need to be replaced. There are no user-serviceable parts on this appliance. Under no circumstances should the appliance be serviced by anyone other than a qualified electrician.

CLEANING AND CARE

- Before cleaning, always remove the plug from the electrical socket. Ensure that the unit is cool enough to work on.
- Do not use harsh chemicals or solvents to clean this product and avoid using abrasive cleaning agents.
- The heater and glass parts need only to be wiped clean with a dry, soft cloth; do not use polishes or abrasive materials.
- Do not immerse in water or any liquid when you clean it.
- Use a slightly damp, lint-free cloth to clean this appliance.

TROUBLE SHOOTING

No heat or light: Check the wall socket by plugging in a working appliance. If socket is functional, and the cord or plug of the heater is suspected to be faulty, have it checked by an electrician.

Light but no heat: Check that the Thermostat on the stove is set above the current room temperature. Alternatively, the thermal cut-off may have engaged - see thermal cut-off section.

SPECIFICATIONS

Supply: 120V~60Hz

Rated power: 1500W

Lighting: LED light (no replaceable parts)

DISPOSAL INFORMATION



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.