



# 1300WATT- AIR FRYER

**Model: AF9223**



## User Manual

**-READ ALL INSTRUCTIONS BEFORE USE-**

# IMPORTANT SAFEGUARDS

## READ ALL INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken:



1. Do not touch hot surfaces. Use handles or knobs.
2. To protect against electrical shock, do not immerse cord, plugs, or the unit in water or other liquid.
3. Do not let cord hang over edge of table or counter or touch hot surface.
4. Do not operate any appliance with a damaged cord or plug.
5. Close supervision is necessary when any unit is used by or near children.
6. Unplug from outlet when not in use and before clearing. Allow to cool before putting on or taking off parts.
7. If the appliance malfunctions or has been damaged in any manner, return appliance to the nearest authorized service facility for examination, repair, or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries
9. Not intended for outdoor use.
10. Do not place on or near hot gas, electric burner and or in a heated area.
11. Never put the appliance against the wall or other appliances. There should be at least 3 inches of free space for the back side, left/right sides and the upper side of the appliance. Do not place anything on top of appliance.
12. Extreme caution must be used when moving unit containing hot oil or other hot liquids.
13. To disconnect, press Start/Stop Button and once the appliance turns off, remove plug from the wall outlet.
14. During air frying, hot steam is released from the air outlet opening. Keep your hands and face distanced from the steam and from the air outlet opening. Be careful of hot steam and air when removing the Fry Pan Basket from the appliance. Never use a towel to block the vent.
15. It is normal for some smoke to escape the unit when heating for the first time.
16. Make sure the ingredients prepared in this appliance come out golden yellow instead of dark or brown. Remove burnt remnants.
17. Do not put other cooking pans in the Fry Pan basket. Do not replace any parts with other containers.
18. Do not move the unit while in operation. After the Air Fryer has completely cooled down should you handle the appliance.
19. Do not use metal utensils with the coated Fry Pan Basket as this can damage the surface.
20. Make sure the Air Fryer is always clean prior to cooking.

## **POLARIZATION**

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.





A short supply cord (or detachable power-supply cord) is provided to reduce the risk of becoming entangled or tripped over. Please use care when using a longer, detachable power-supply cord or extension cord. If a longer, detachable power-supply cord is used:

1. The marked electrical rating of the cord should be at least as great as the electrical rating of the appliance.
2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over unintentionally or played with by children

	<b>WARNING</b> 
	Please immediately cut off circuit and send unit to our Customer Service Department in case of other problems.

**SAVE THESE INSTRUCTIONS!**

# PARTS AND ACCESSORIES

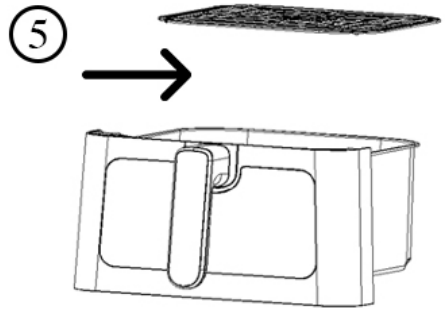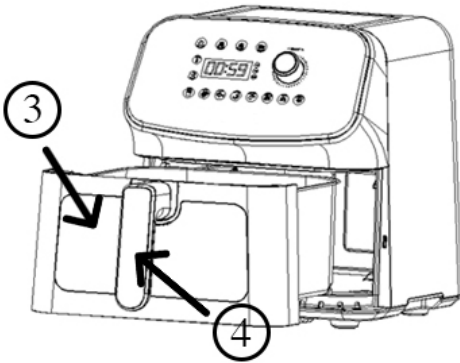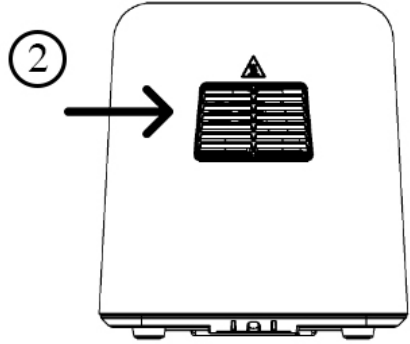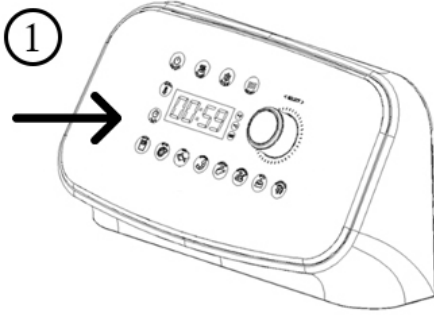



1. Control Panel
2. Hot Air Outlet Vents
3. Frying Basket
4. Handle
5. Fry Pan Assembly

## ACCESSORIES

The fry pan and fry pan basket become extremely HOT during the cooking process. Do not touch the accessories during and immediately after cooking. Only hold the fry pan by the handle and use caution when removing these items from the unit. Always wear oven mitts or use potholders when handling potentially hot accessories. Allow everything to cool completely before cleaning.

### DO NOT USE UNIT FOR OTHER THAN INTENDED USE

**NOTE:** Put the appliance on a surface that is horizontal, even and stable. This appliance is intended for normal household use. It is not intended to be used in environments such as staff kitchen of shops, offices, farms or other work environments. Nor is it intended to be used by clients in motels, bed and breakfast and other residential environments.

	<b>CAUTION</b> 
	<ul style="list-style-type: none"><li>* Always put the ingredients to be fried in the Fry Pan Basket to prevent direct contact with the heating components.</li><li>* Do not cover the air inlet and outlet opening while the appliance is operating.</li><li>* Do not pour oil into the Fry pan, this may create a fire hazard.</li><li>* Never touch the inside of the appliance while it is operating.</li></ul>

# OPERATION

## BEFORE USE:

1. Remove all the packaging materials.
2. Remove the glue and labels on the appliance.
3. Clean the Fry Pan Basket and Fry pan thoroughly with hot water, a nonabrasive sponge and a mild dish detergent or in the dishwasher.
4. Wipe the inside and outside of the appliance with a wet cloth. Do not immerse the appliance in water.

**NOTE:** This appliance cooks using hot air. Do not fill the basket with oil.

## PREPARATION

1. Place the appliance on a level, even, and stable heat-resistant surface.
2. Place the Fry Pan assembly (including the Fry Pan Basket) in the Air Fryer.
3. Plug the appliance into a standard wall socket. The power plug is included in the package.

**NOTE:** Do not cover or block the vent located on the top of the Air Fryer. Doing so can prevent proper ventilation and will adversely affect the cooking results.

## SHAKING FOOD

Some foods require shaking halfway through cooking. To properly shake the food, hold the handle, remove the Fry Pan assembly from the appliance, and shake. Once the food has been adequately shaken, slide the Fry Pan assembly back into the Air Fryer.

# CARE & MAINTENANCE

Clean the appliance after every use or in between a large number of batches.

The Fry Pan Basket and the Fry Pan have a non-stick coating. Do not use metal utensils or harsh abrasives when cleaning as this can damage the coating. Unplug the appliance and make sure it cools completely.

**NOTE:** To remove the Fry Pan assembly, place on a heat resistant surface to help cool the appliance quicker.

- Use a damp cloth to wipe the outside of the appliance.
- Clean the Fry Pan Basket and inside components with a nonabrasive sponge, hot water and mild detergent.

**NOTE:** If you place the Fry Pan assembly into the dishwasher, use the top rack only.

**TIP:** If there is residual food in the Fry Pan basket, add some hot water and let it soak separately for about 10 minutes for easier cleaning. Clean the inside of the appliance with a nonabrasive sponge and hot water. Once cooled completely, clean the heating components with a soft cleaning brush to remove any lingering food.

#### TO STORE

1. Unplug the appliance and let it cool down completely.
2. Make sure that all the parts are cleaned and dry.
3. Push the power cord into the storing capsule.
4. Fix the cord by inserting it into the cord fixing unit.

**IMPORTANT:** Do not immerse unit in water or attempt to cycle through dishwasher. The outer surface may be cleaned by wiping carefully with a damp dishcloth or sponge. Make sure unit has cooled completely prior to cleaning.

## COOK GUIDE

Menu selection mode: when the power is plugged in, the full screen icon lights up, and goes out after 1 second. The machine is in standby state, and the power LED light will flash at this time. Click the "Power" button, after the buzzer emits a BEEP, the color of the power LED will illuminate red, and once all lights are on, choose the corresponding menu function according to your own needs.

<b>FUNCTION</b>	<b>TEMPERATURE</b>	<b>TIME</b>	<b>SHAKE</b>
FRIES	400 °	22 MIN	SHAKE
MEAT	370 °	10 MIN	
FISH	400 °	15 MIN	SHAKE
SHRIMP	320°	15 MIN	
CHICKEN	370°	25 MIN	SHAKE
PIZZA	370 °	12 MIN	
BAKE	400 °	15 MIN	
DEHYDRATE	200 °	2 HR	
PREHEAT	360 °	5 MIN	
DEFROST	160 °	5 MIN	

# DIGITAL CONTROL PANEL



- **LED DIGITAL DISPLAY:** In the working state, the temperature and time are displayed with an interval of 5 seconds. Temperature display 3 digits; Press the time/temperature setting button again to display the time and the working time. The time is less than or equal to 1 hour, and only the next 2 bits are displayed. The MIN lamp is on; if the time is greater than 1 hour, press 00:00 to display, and the MIN lamp is off. In the menu selection state, the temperature of the default menu is displayed at the first time of each selection, and then the temperature and time are exchanged.
- **POWER ON/OFF BUTTON:** This button is a red button. To turn ON, press this button, the buzzer will emit a “BEEP” sound. Press the MENU option, and then rotate the knob left and right to choose the preprogrammed function. In the working state, press the power button, the heating tube will stop working, all the indicator lights will go out, the digital display will not show, and the motor will automatically stop working after 20 seconds.
- **TEMPERATURE SETTING MODE:** The unit is measured in Fahrenheit. When setting the temperature, press the TEMP key. The digital display will illuminate the default temperature. Set the temperature to increase or decrease by rotating the knob.
- **TIME SETTING MODE:** When setting the time, press the TIME key. Set the TIME by rotating the knob. Set the time to increase or decrease by 1 minute by rotating the knob.
- **PREHEAT FUNCTION:** The preheat function is mainly used with the menu function but can also be used alone. After the button is touched, the icon will flash. The PREHEAT time cannot be adjusted. The PREHEAT

temperature is set to 360°F by default for 5 minutes. Press down the center of the START/STOP knob to perform the PREHEAT function.

- DEFROST: After the button is touched, the icon will flash. The DEFROST time cannot be adjusted. The DEFROST temperature is set to 160°F by default for 5 minutes. Press down the center of the START/STOP knob to perform the DEFROST function.
- MENU: After the button is touched, the icon will flash. Use the rotary knob to choose the preprogrammed setting. Press down the center of the START/STOP knob to perform the selected function. After the function is finished, the buzzer will ring 5 times and the appliance will turn off.

**NOTE:** When the door is closed (to the air fryer), the electric heating tube and cover pole motor on the appliance will not work. When opening the door during the cooking process, the cooking process will pause. It will resume once the door is closed again. If the disconnect time is more than 10 minutes, standby mode will be activated.

# ICUCINA LIMITED WARRANTY

**LIMITED ONE-YEAR WARRANTY:** Thank you for choosing the iCucina Air Fryer. This product is warranted to be free from defects in material and workmanship under normal household use during the first one year from the date of original purchase with receipt. We will repair or replace it at our option. The limited warranty shall not apply to damages resulting from accidents, abuse, misuse, damage caused by shipping, or failure to follow safety instruction. The warranty is valid only for first quality goods purchased from an authorized resale and only valid in the United States.

## CUSTOMER SERVICE INFORMATION

If you have any questions regarding to the warranty, the operation of iCucina appliances, or need parts for your appliance, please contact us via email: [service@icucinakitchen.com](mailto:service@icucinakitchen.com). Inquires will be answered promptly. Thank you and we are happy to be cooking with you!



**Thimax Inc. Irvine, CA92618**

