


Item # : LCCN2AN / CLAYTON LOVESEAT
 LCCN3AN / CLAYTON SOFA
 LCCN2OR / CLAYTON LOVESEAT
 LCCN3OR / CLAYTON SOFA


 

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment . Please identify and count all parts and compare with the HARDWARE LIST below.


Caution : Please read instructions carefully before unpacking assembly parts. Sharp , exposed staples can cause injury , therefore , for your protection , please remove any exposed staples used in packing.

* Retain the Allen key for regular maintenance. We recommend tightening all screws every three months to ensure continued stability and performance. *

1. We recommend to assemble this product with the assistance of another person. This will provide a smooth assembly process , and can help eliminate self injuries or damage to the product during assembly.
2. Please do not over tighten screws or bolt until the assembly is completed.
3. Please put all parts on a smooth , flat surface before assembly , and carefully follow the assembly steps to assemble your newly purchased correctly and efficiently.

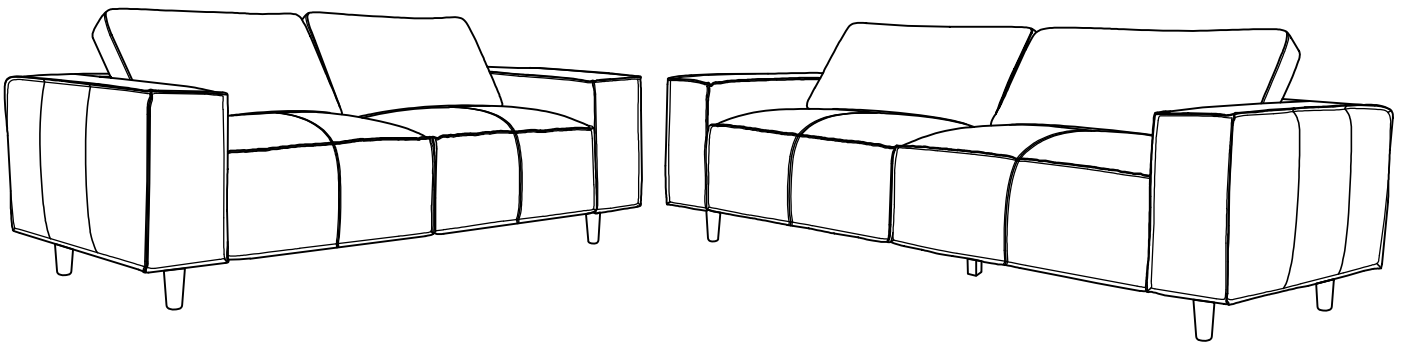

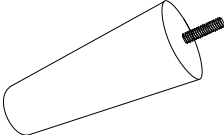HARDWARE LIST			
NO.	COMPONENT	LOVESEAT	SOFA
1	Legs 	4 pcs	4 pcs
2	Center Leg 	N/A	1 pc
3	Plastic Washer 	4 pcs	5 pcs

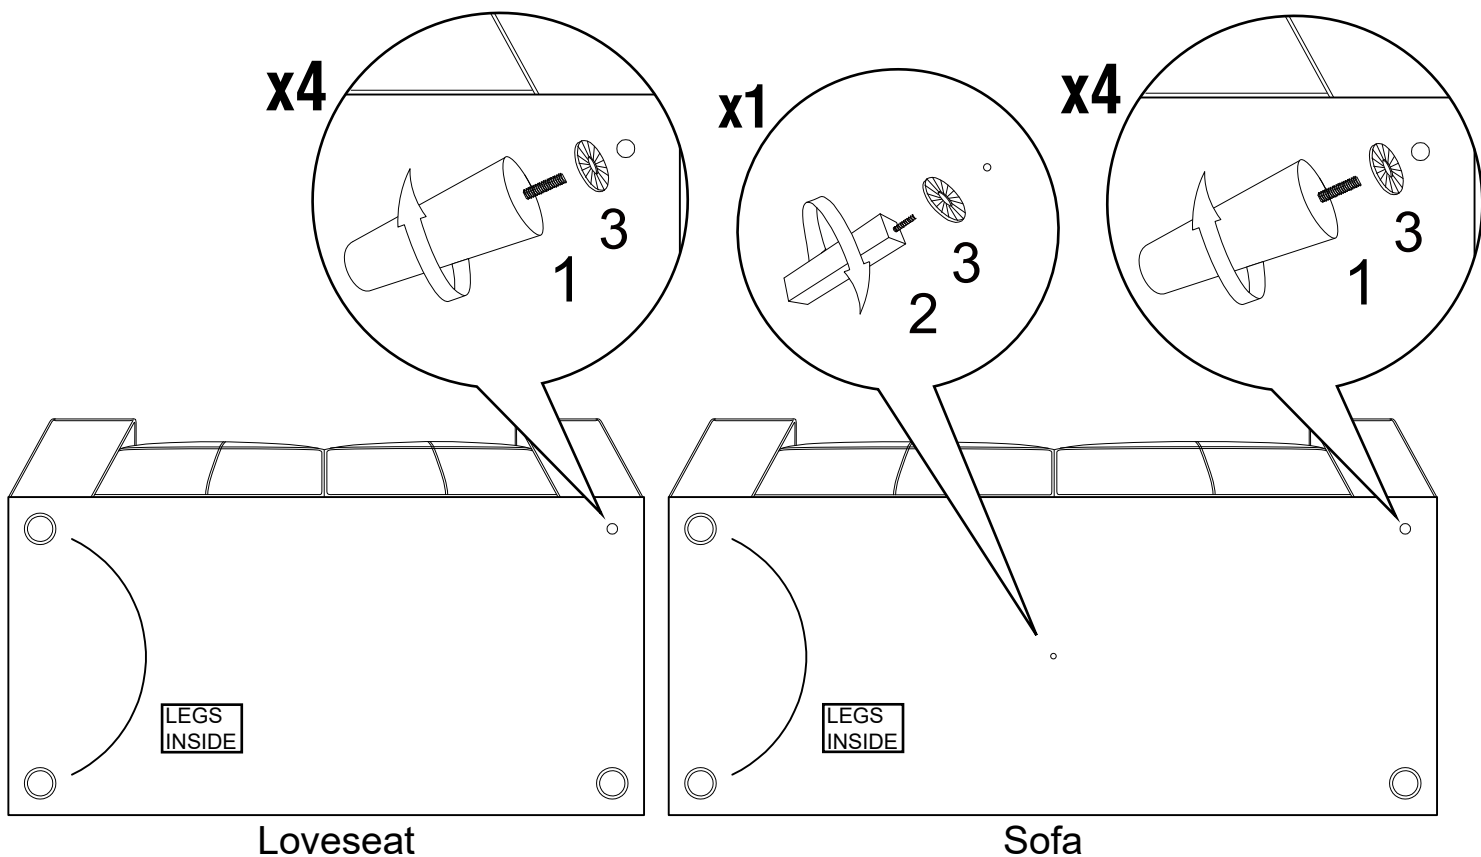

Step 1:

Place the sofa or loveseat on its back against a soft, clean surface to prevent scratches or damage.

Step 2:

The legs are packed inside the zipper. To remove them, just unzip it.

Step 3:

Attach the leg (1) with plastic washer (3) to the base as shown in the diagram. Turning them clockwise until securely tighten.

(SOFA ONLY)

Attach the center leg (2) with plastic washer (3) to the base as shown in the diagram. Turning them clockwise until securely tighten.