


# INSTALLATION INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

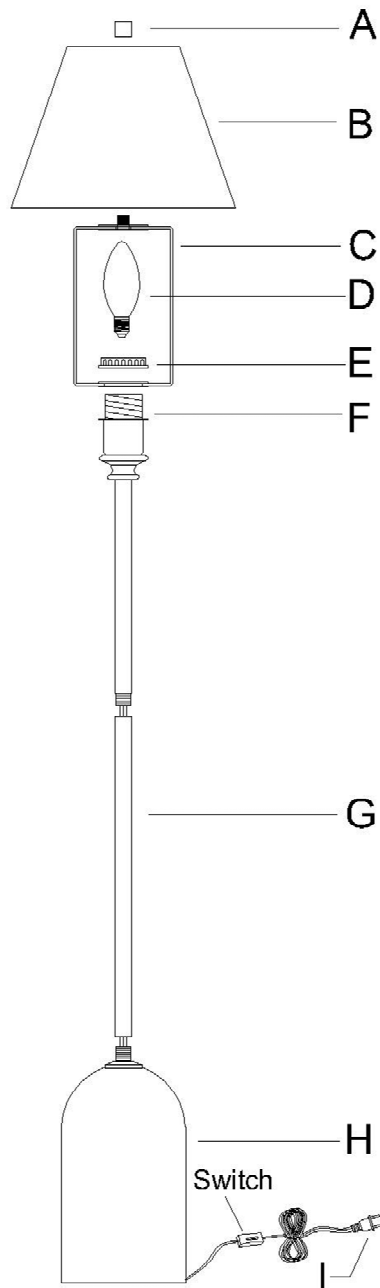

## WARNING

- Risk of shock, do not plug the unit before assembly.  
Avertissement! Couper le courant au niveau des fusibles ou du disjoncteur.
- Do not exceed the maximum wattage rating.  
Ne pas dépasser la puissance nominale maximale!
- Before turning on, please follow the instruction manual step by step.

## INSTALLATION

1. Secure the socket (F) onto the stem (G), then secure them onto the base (H), to be easy by pulling out the cord carefully.
2. Put the harp (C) onto the socket (F), secure it using ring (E).
3. Install one Candelabra. base (E12) bulb (D) up to 40W or CFL or LED equivalent (not included) in accordance with the fixture specification. **DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**
4. Align the top center hole of the shade (B) onto the threaded end of the harp (C). Use the finial (A) to secure it.
5. Plug the cord (I) into the outlet. Turn the switch on line. Test the lamp.

## IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Don't alter the plug.

## Care & Cleaning Instructions

ALWAYS turn off and/or unplug fixtures prior to cleaning.

**Finishes:** To avoid damage to the finish do not use polish, abrasive cleaners, or harsh chemicals.

**Shade:** Shades can be gently dusted with a dry, clean, soft-bristle brush. Remember to clean the inside of shade as well.

Using any advised against cleaning methods will void the product's warranty.

**Note:** Illustration on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.