


REMOTE OPERATING INSTRUCTIONS & TROUBLESHOOTING

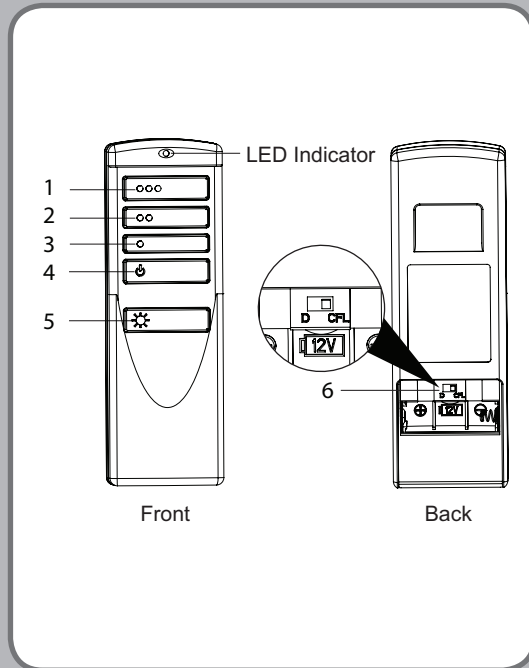

Operating Instructions

To operate the fan using the remote, press and release the following buttons:

- 1 - High fan speed
- 2 - Medium fan speed
- 3 - Low fan speed
- 4 - Fan Power: Turns the fan off.
Light Delay Off Mode - Press and hold the fan power button (4) for five seconds, which will turn off light after one minute. The LED indicator on the remote will flash four times to confirm mode setting.
- 5 - Light Control: Incandescent Bulbs - Press light control to turn lights off and on. Press and hold light control to dim or brighten the lights. CFL - Turns lights on and off. Note: The dimmer function does not work with standard CFL.
- 6 - D/CFL Switch: Switch should be set to "CFL" to correspond with standard CFL; set to "D" for incandescent and other dimmable bulbs.

Troubleshooting

LED indicator on the remote illuminates, but the remote won't control the fan. The remote may need to be re-synced.

The remote is synced to the receiver at the factory. Occasionally, power surges can cause the remote to become un-synced. Whenever necessary, follow the syncing instructions below.

SYNCING INSTRUCTIONS:

Turn off the main power, then turn it back on. Within 30 seconds, press and hold the high and low speed buttons on the remote at the same time for 5 seconds. The LED indicator will flash 3 times, signaling a successful synchronization. Once complete, the fan will start on the low speed with the light (if applicable) off.

The LED indicator on the remote does not illuminate.

The battery most likely needs to be replaced or it is not oriented correctly in the battery compartment. If battery is depleted rapidly, ensure one of buttons is not stuck in the down position.

The LED indicator stays on.

Ensure one of buttons is not stuck in the down position.


Remote controls more than one fan.

Turn off the power to the fans you don't want synced. Follow the syncing instructions listed above. Then, turn on the power to the other fans.

Dimming feature does not function.

Ensure the "D/CFL" button in the battery compartment is set to the "D" position and the bulbs are incandescent or other dimmable bulbs.


REMOTE CONTROL INSTALLATION INSTRUCTIONS

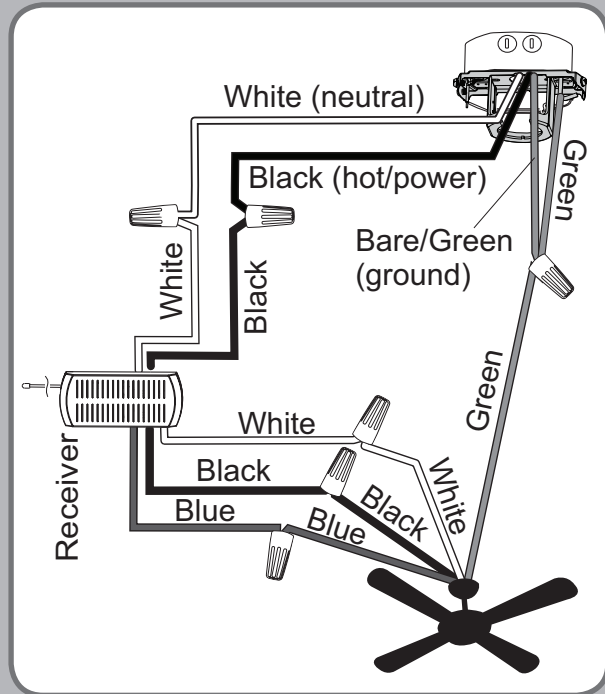

1. Wire the receiver and fan.

Make the following wire connections according to the diagram and the following steps:

- Connect the Green wires from the downrod and the mounting bracket to the Bare/Green (ground) supply wire.
- Connect the Blue from the receiver to the Blue fan wire.
- Connect the White wire (white label) from the receiver to the White fan wire.
- Connect the Black wire from the receiver to the Black fan wire.
- Connect the Black wire (red label) from the receiver to the Black (hot/power) supply wire.
- Connect White wire (red label) from the receiver to the White (neutral) supply wire.

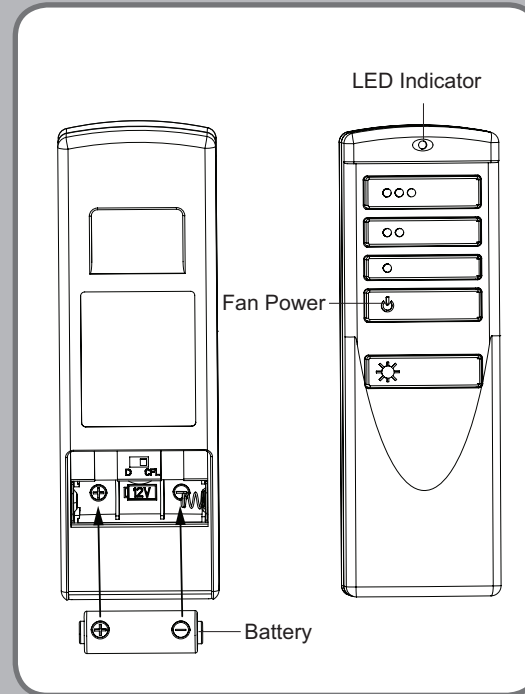

2. Install the battery.

Remove the battery cover from the back of the remote. Insert the battery into the remote; ensure polarity of battery matches the polarity indicated in the battery compartment -- positive (+) to positive (+) and negative (-) to negative (-). Replace the battery cover and press the fan power button on the remote to ensure the LED indicator illuminates and the remote turns on the fan.

Important: Once the remote is installed, it is best to avoid using the wall switch to turn the fan on. The wall switch can send a small power surge to the fan causing the fan to become unsynced.

WARNING: To reduce the risk of fire or electric shock, do NOT use a full-range dimmer to control fan speed.