

ASSEMBLY INSTRUCTIONS



PF035



WARNING !

PF035

  
MAXIMUM LOAD
220 lb/ 100kg

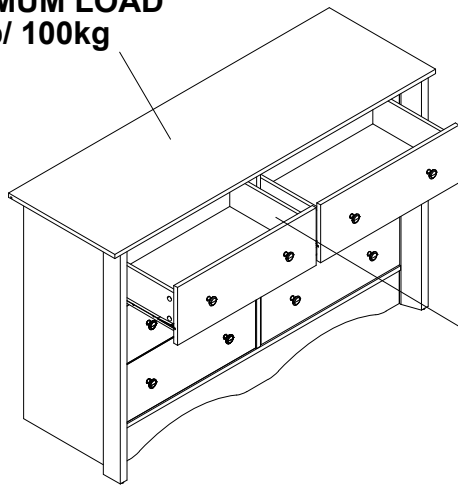


Estimated Time for Assembly

60 mins

 MAXIMUM LOAD
20 lb/ 9.1kg

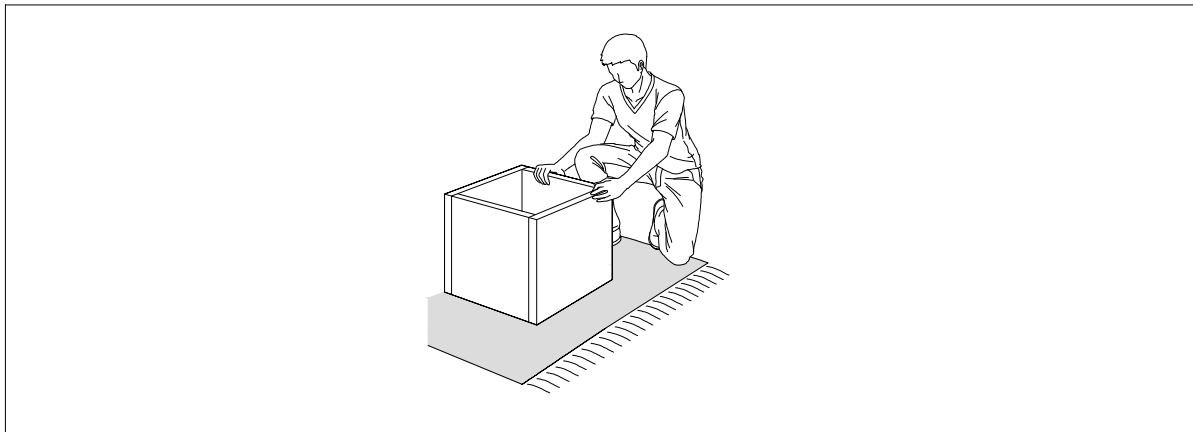

 Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

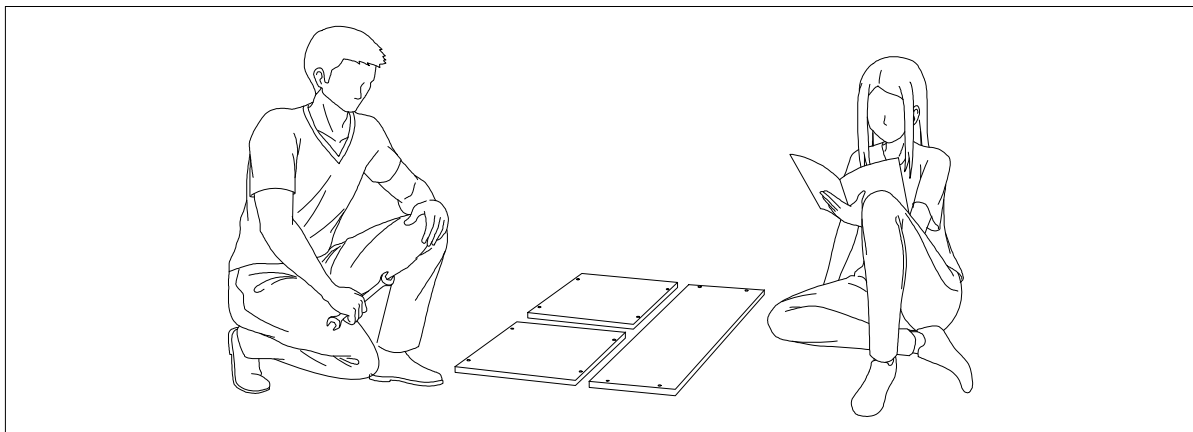


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.

Board Identification

PF035

 
Not actual size

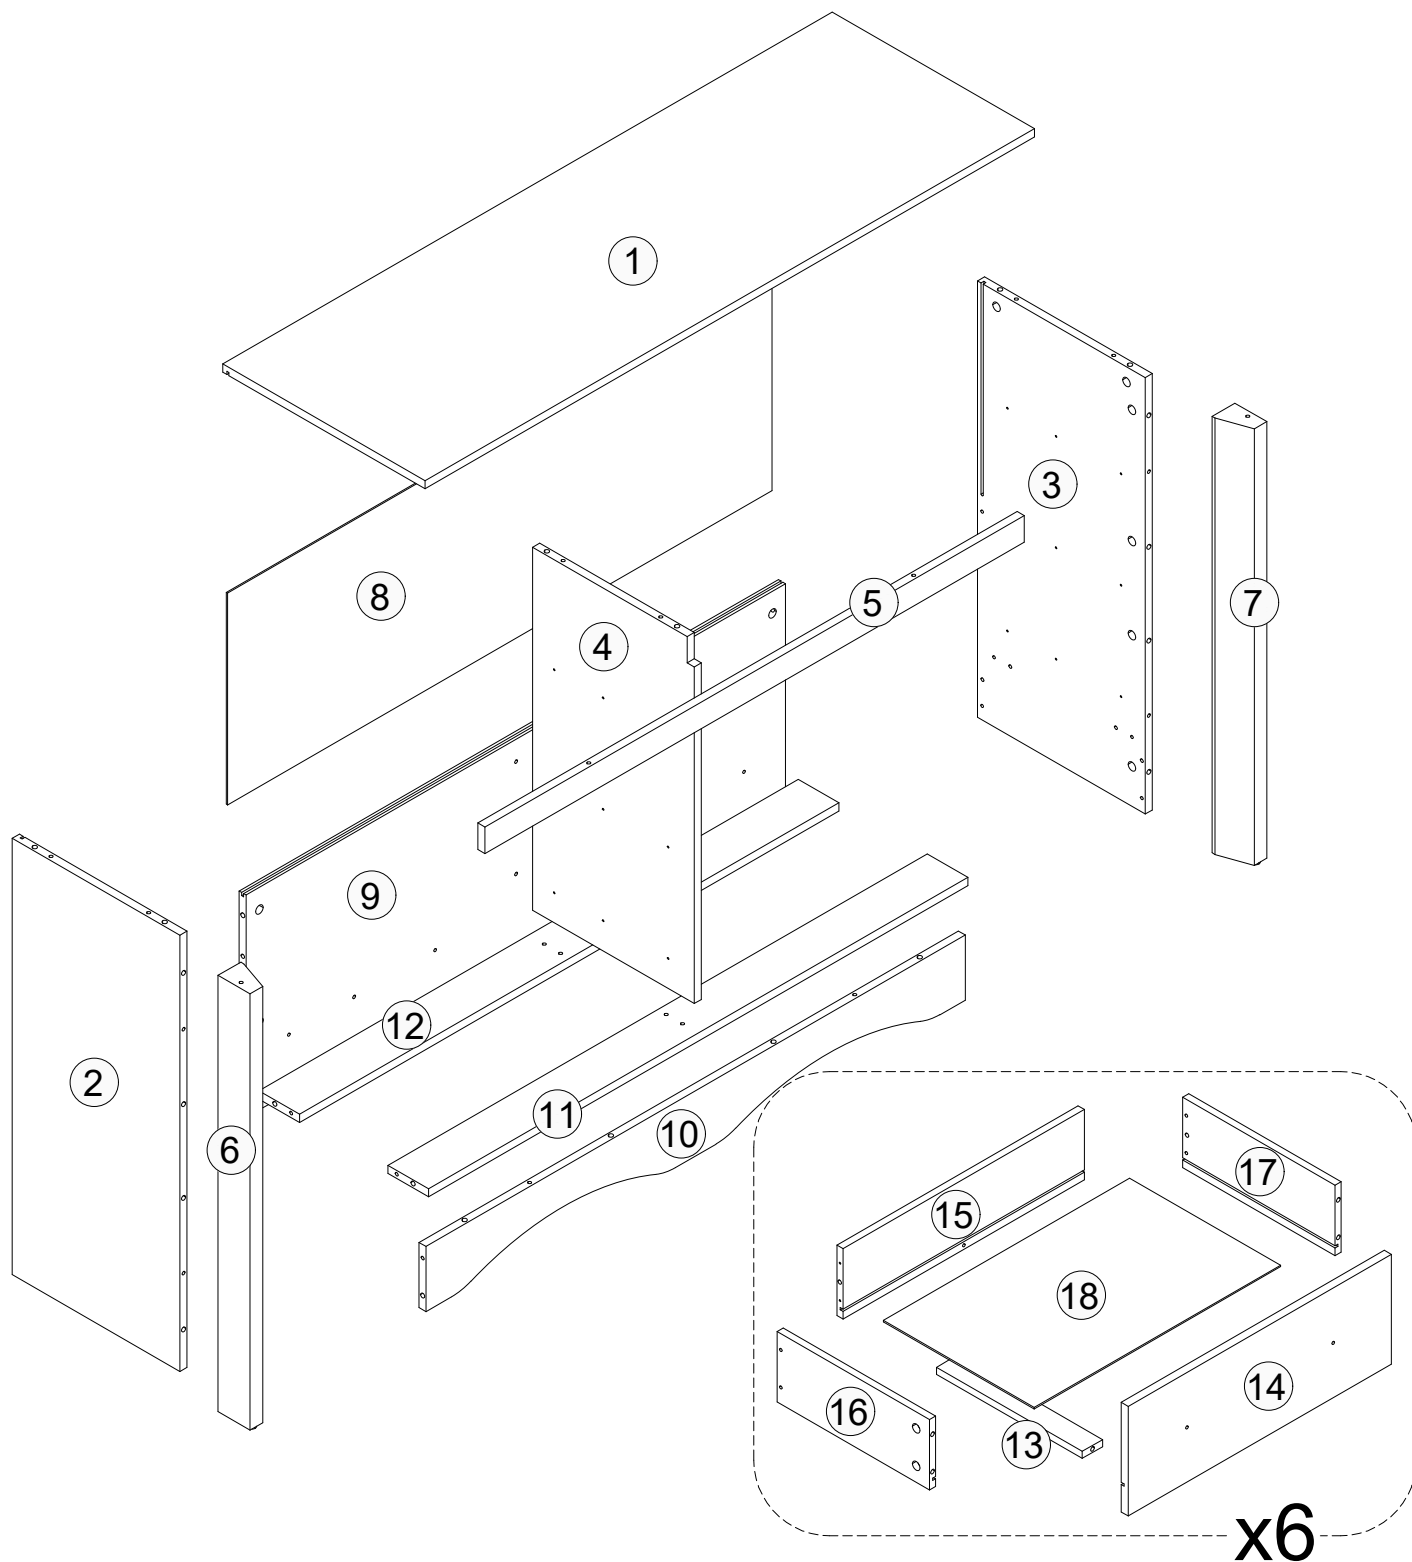


BOARD IDENTIFICATION

Not actual size

 
PF035

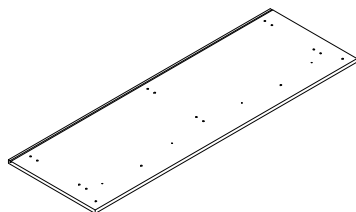


① x1

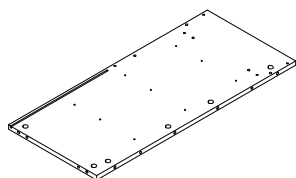 


② x1

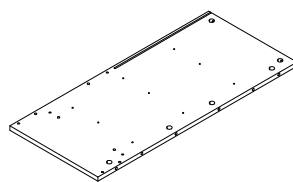 


③ x1

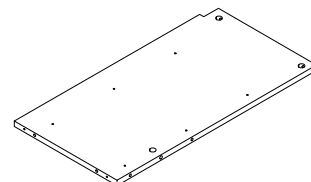 


④ x1

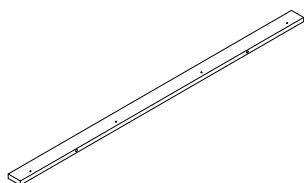 


⑤ x1

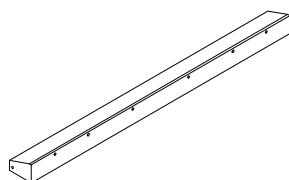 


⑥ x1

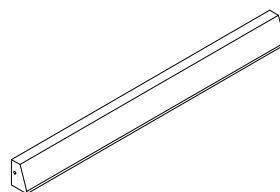 


⑦ x1

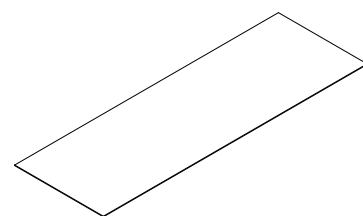 


⑧ x1

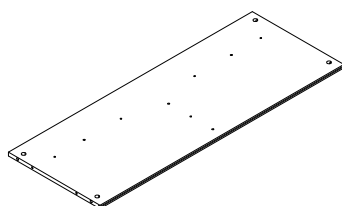 


⑨ x1

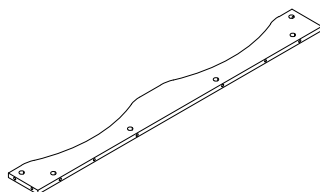 


⑩ x1

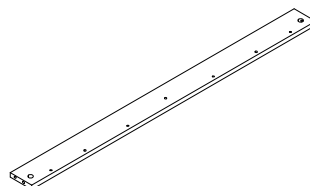 


⑪ x1

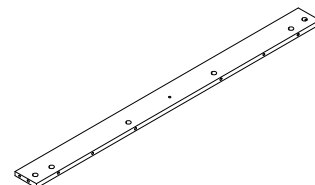 


⑫ x1

 


⑬ x6

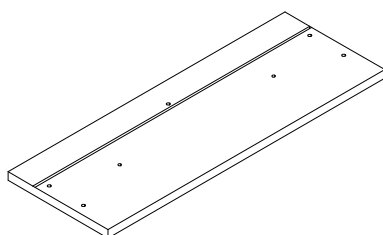 


⑭ x6

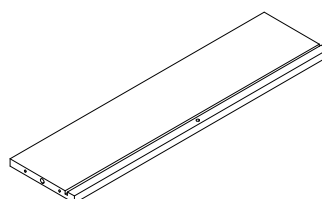 


⑮ x6

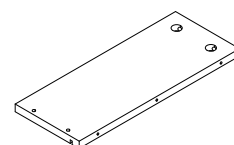 

⑯ x6

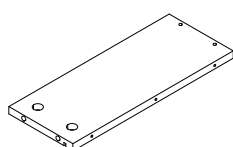 



















⑰ x6

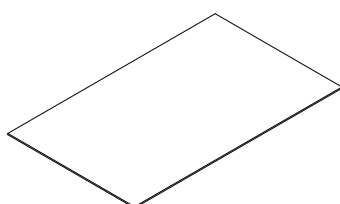 

⑱ x6





HARDWARE LIST

                  PF035

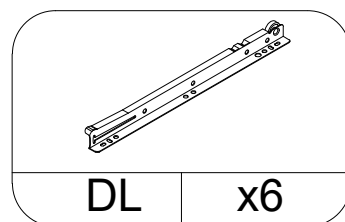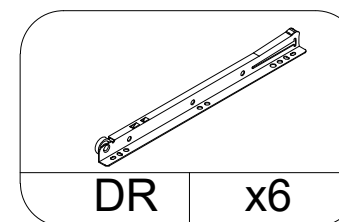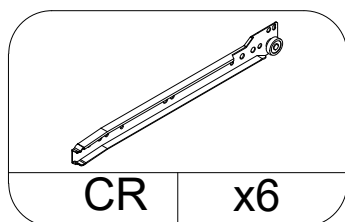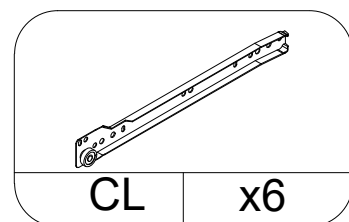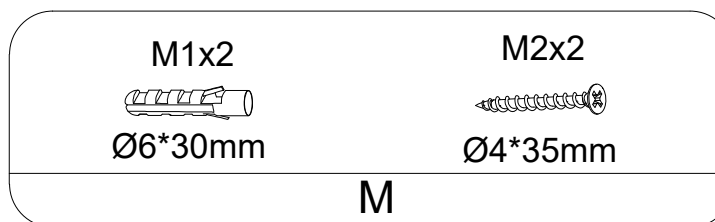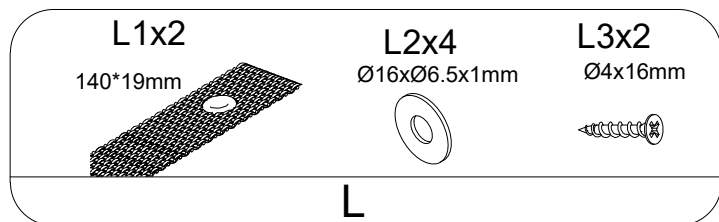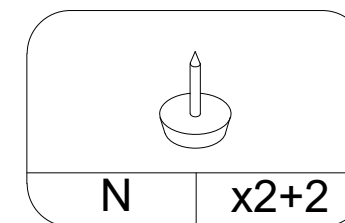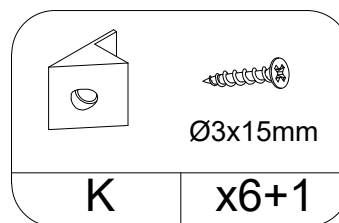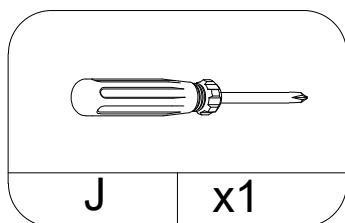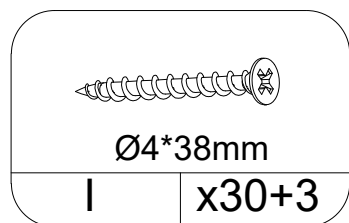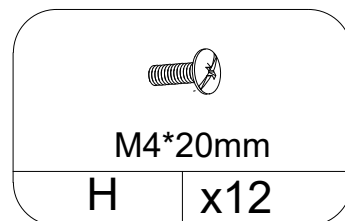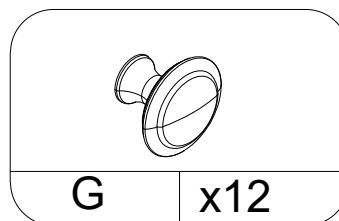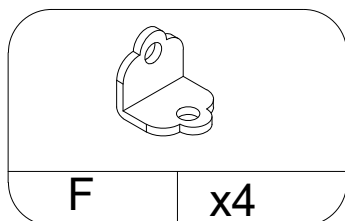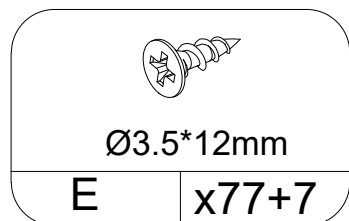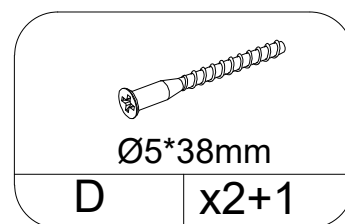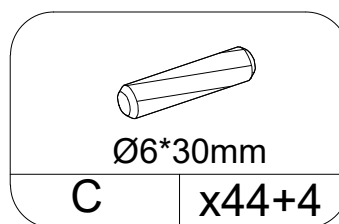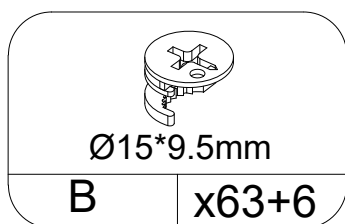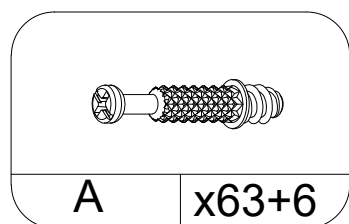


Cam Lock Fastening System

    
Insert the cam bolt into the hole first, then insert the cam lock and lock it.

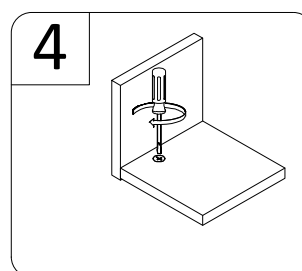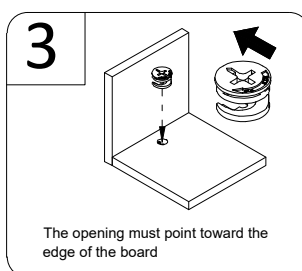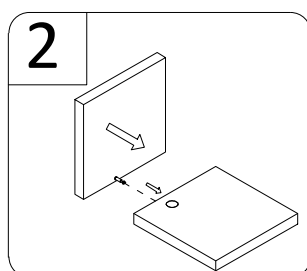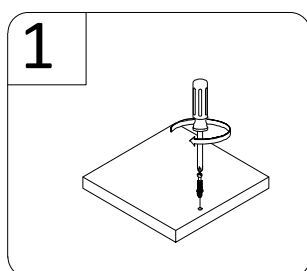

 
STEP 1

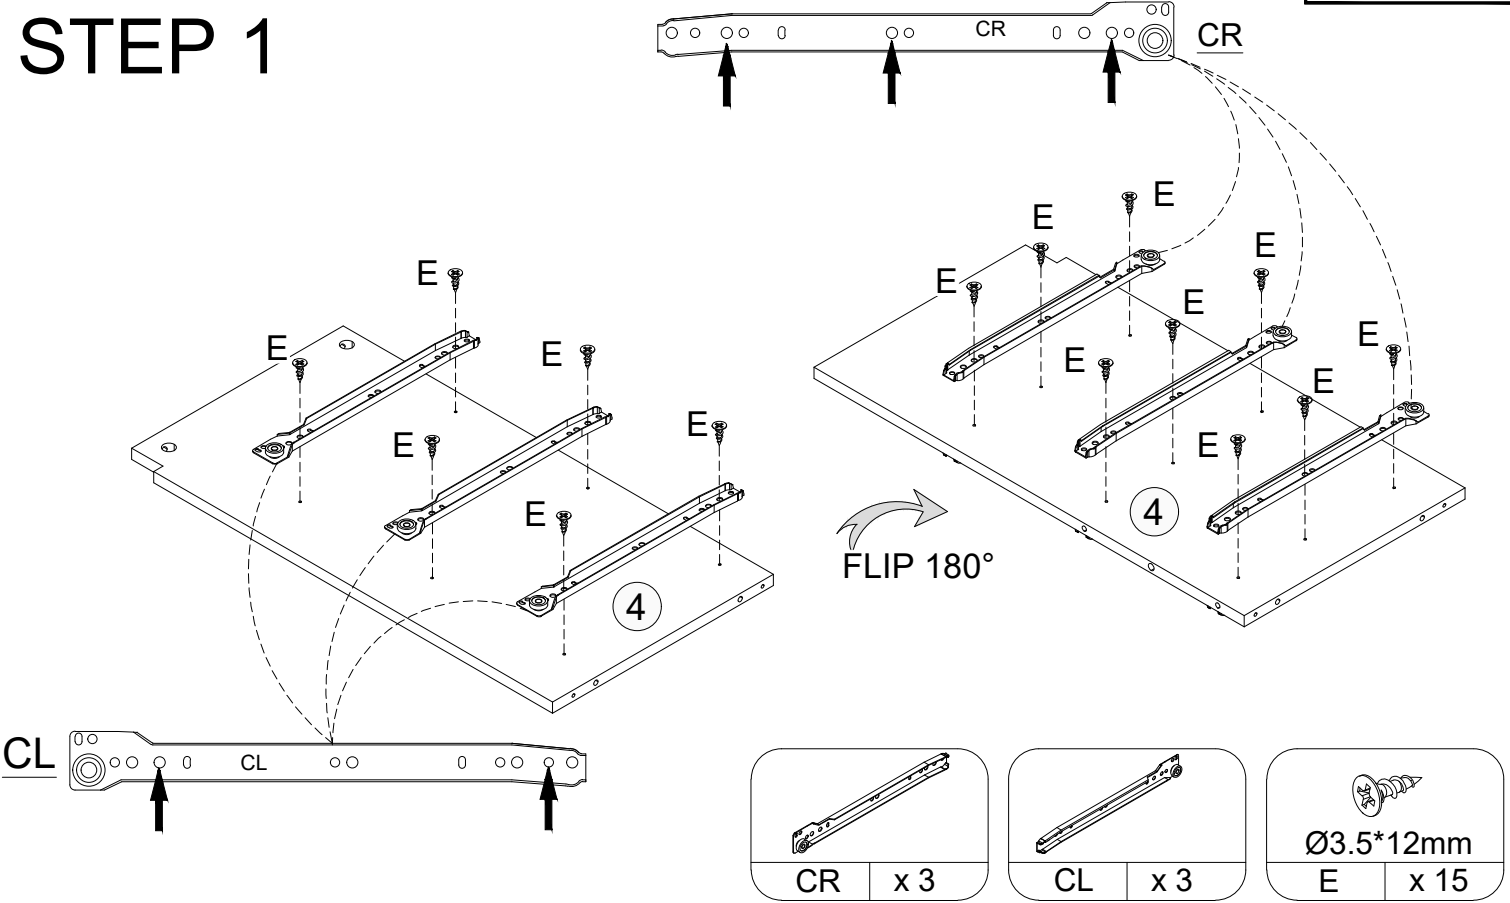

 
STEP 2

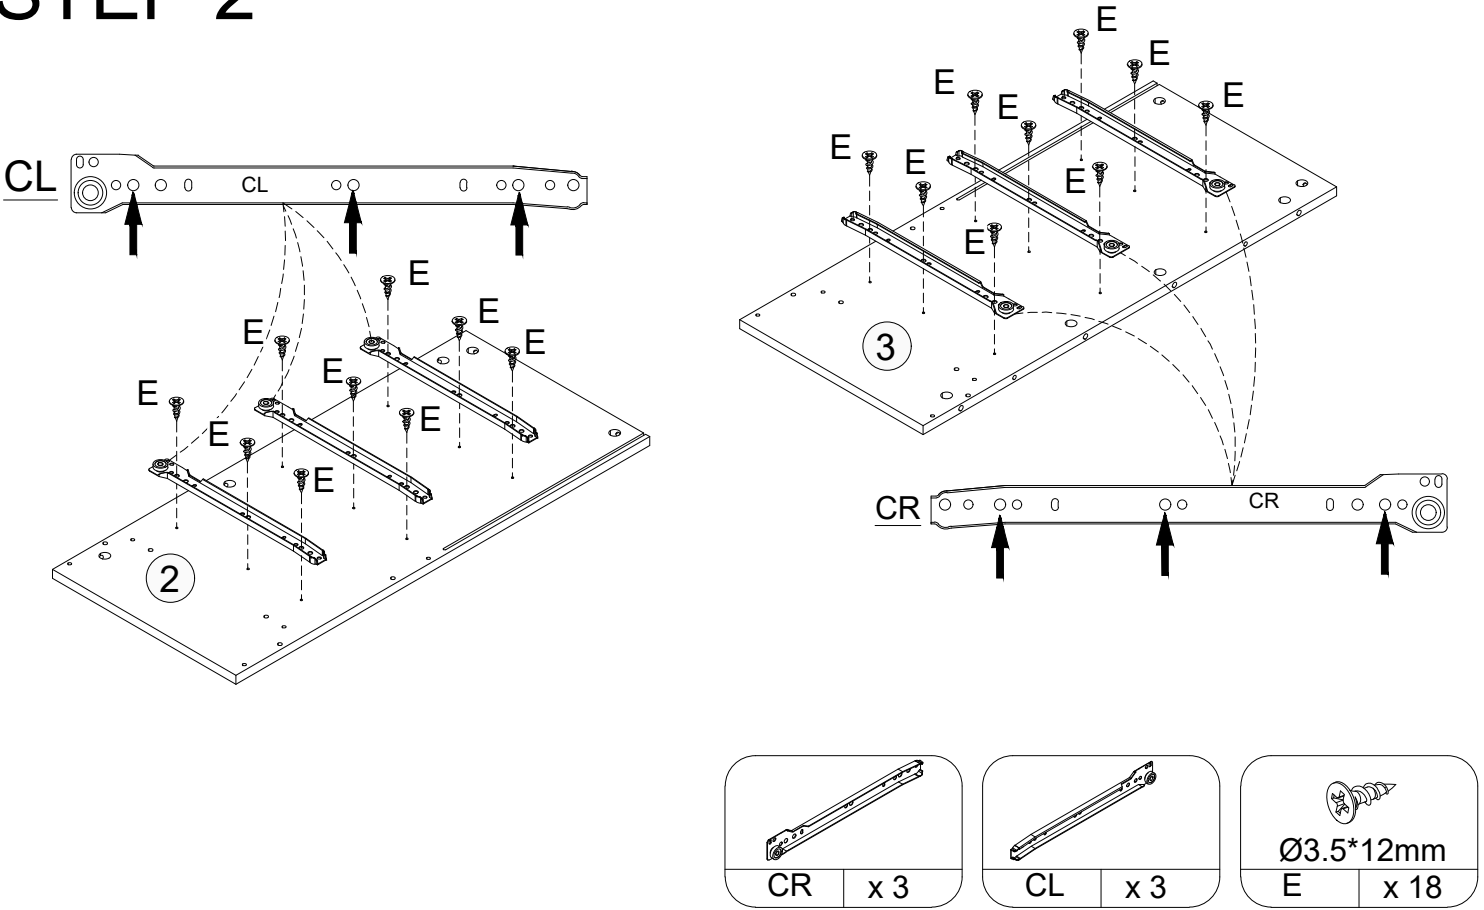

 
STEP 3

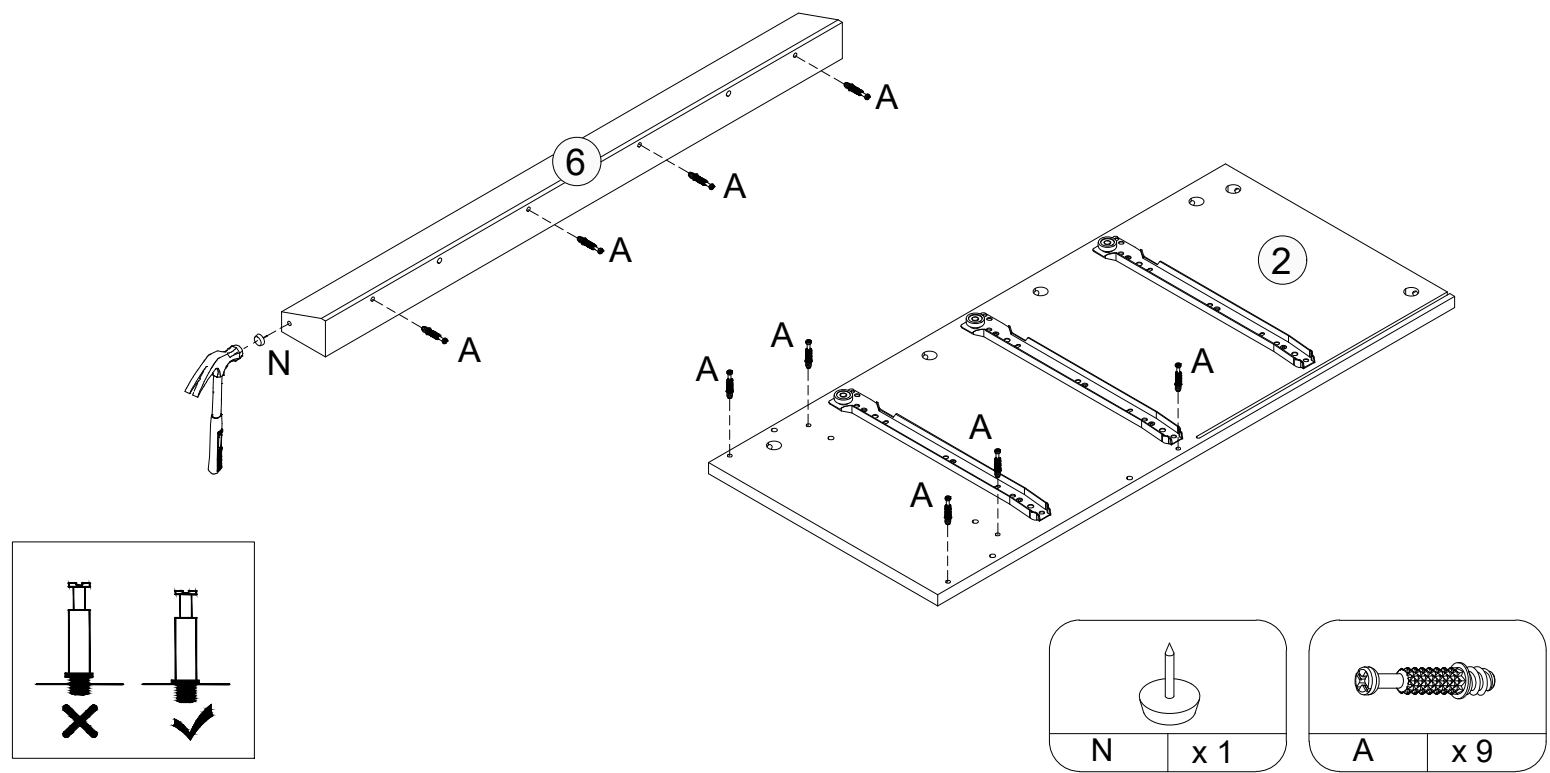

 
STEP 4

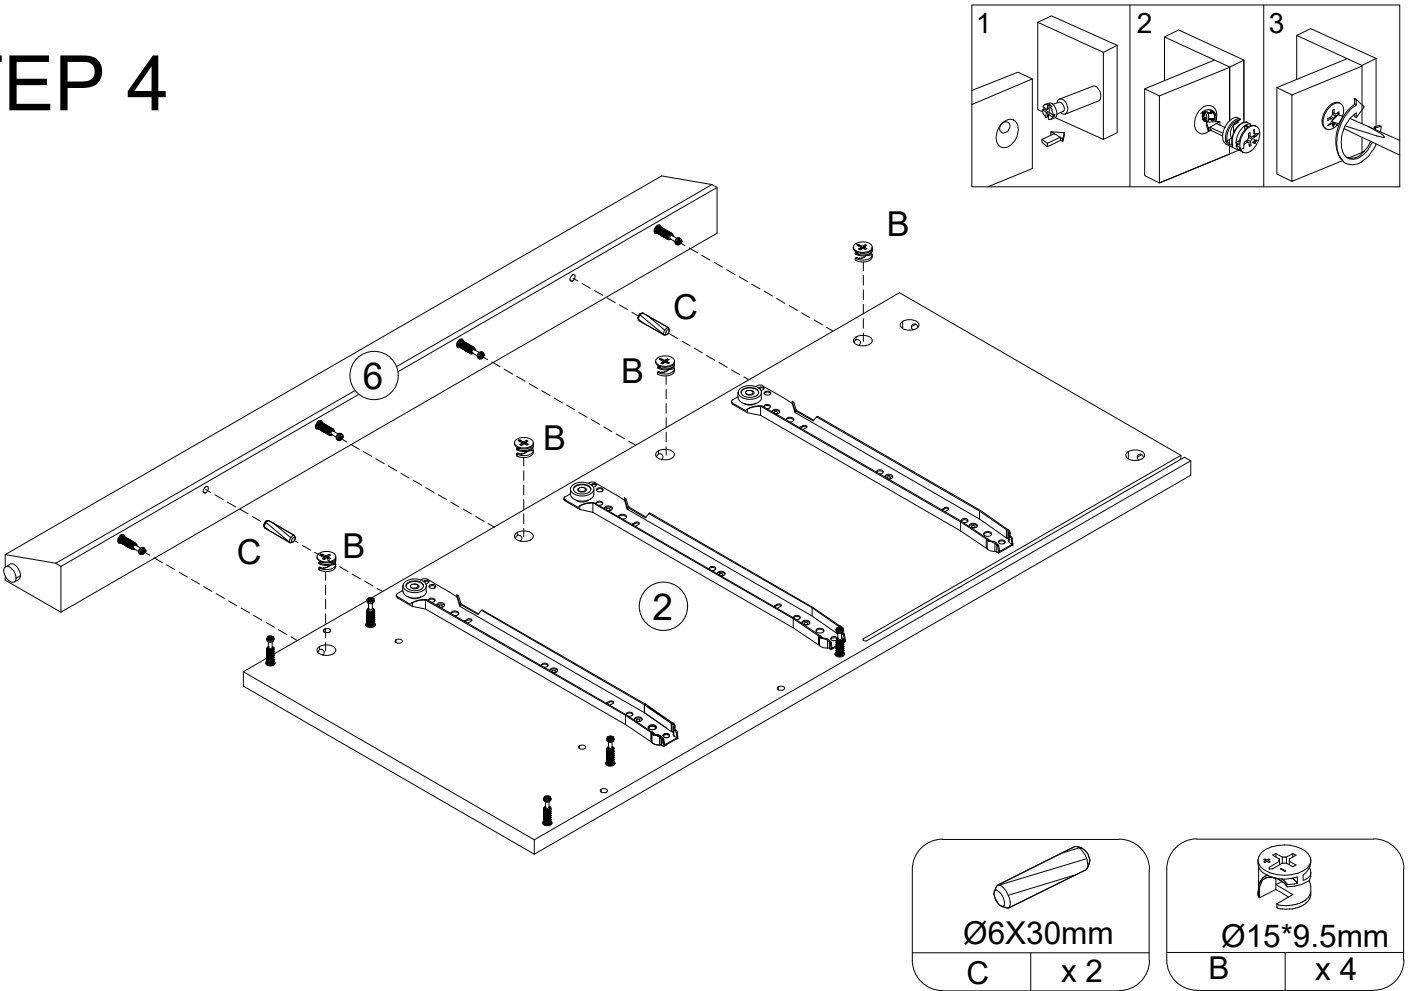

 
STEP 5

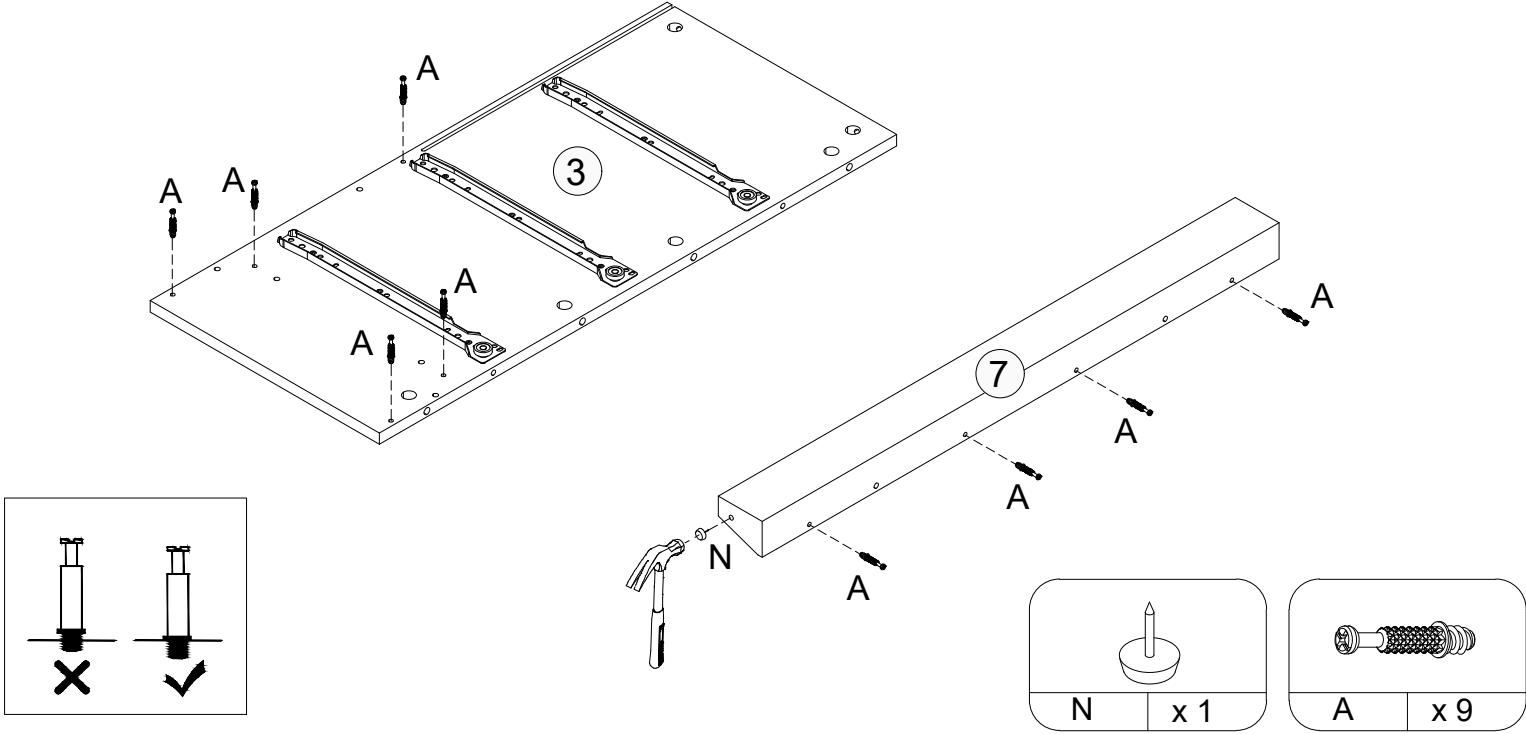

 
STEP 6

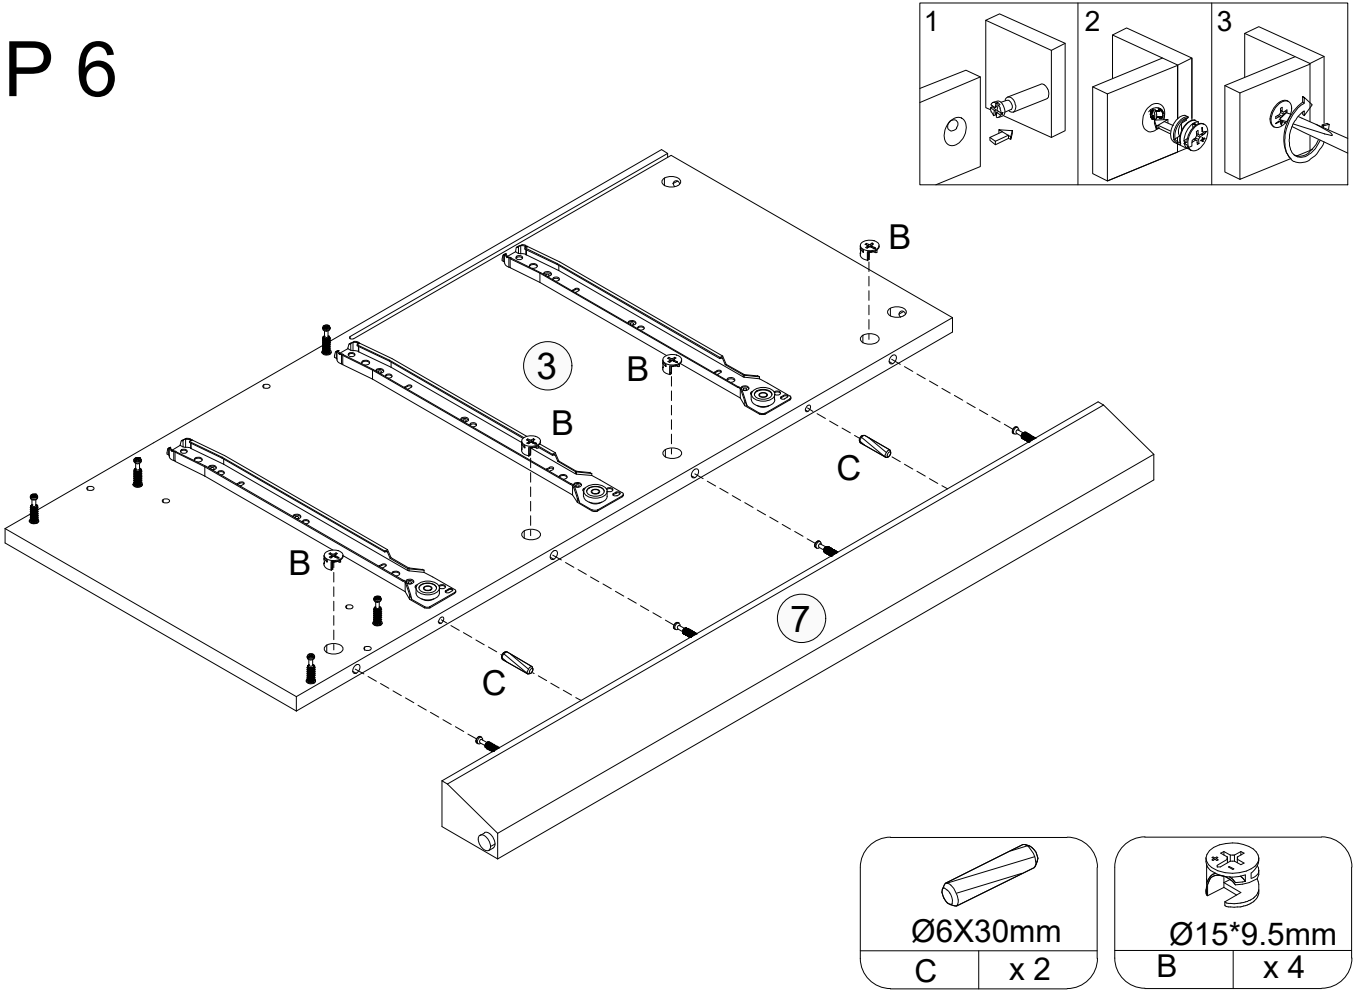

 
STEP 7

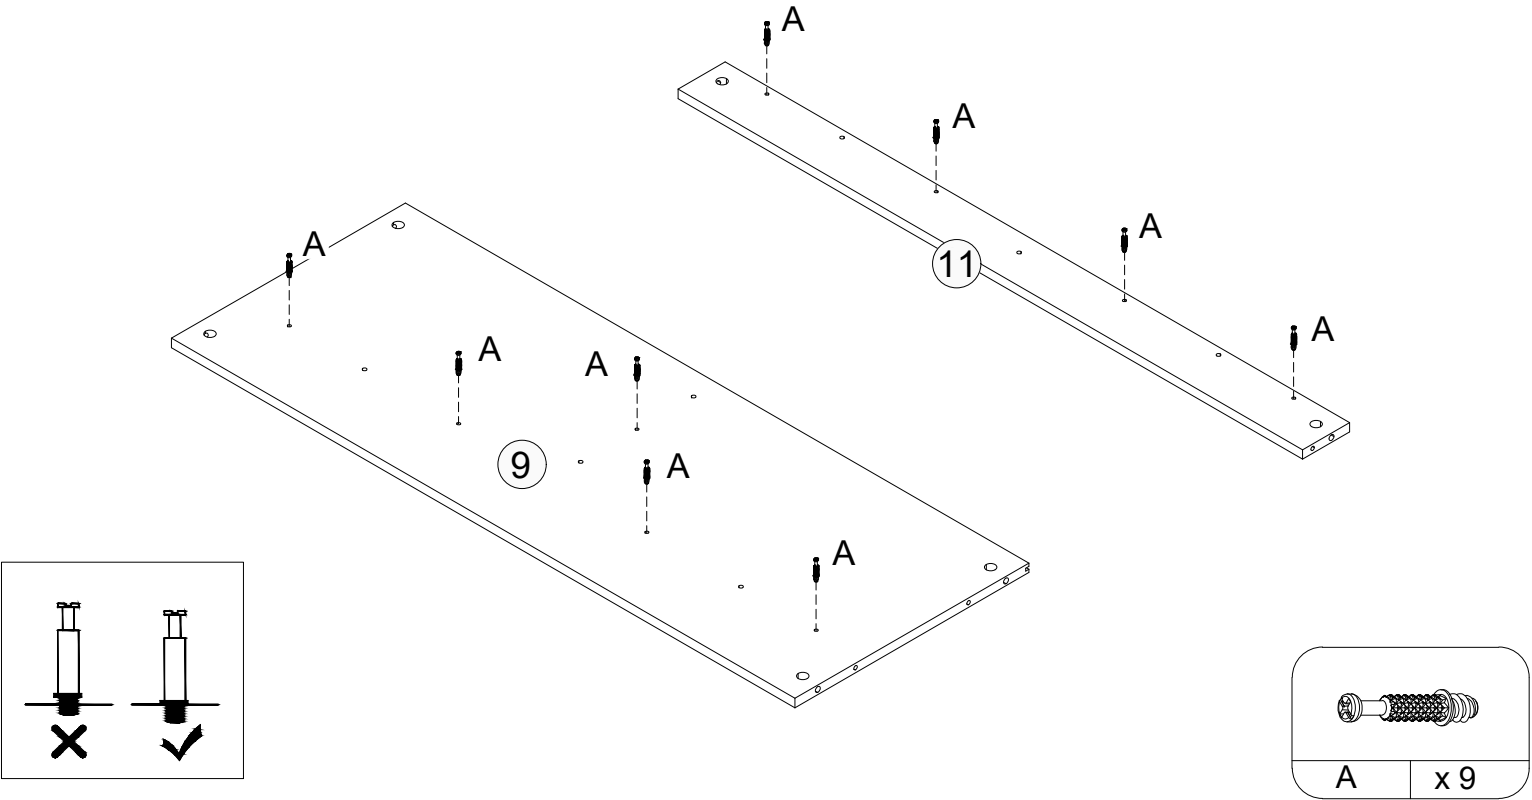

 
STEP 8

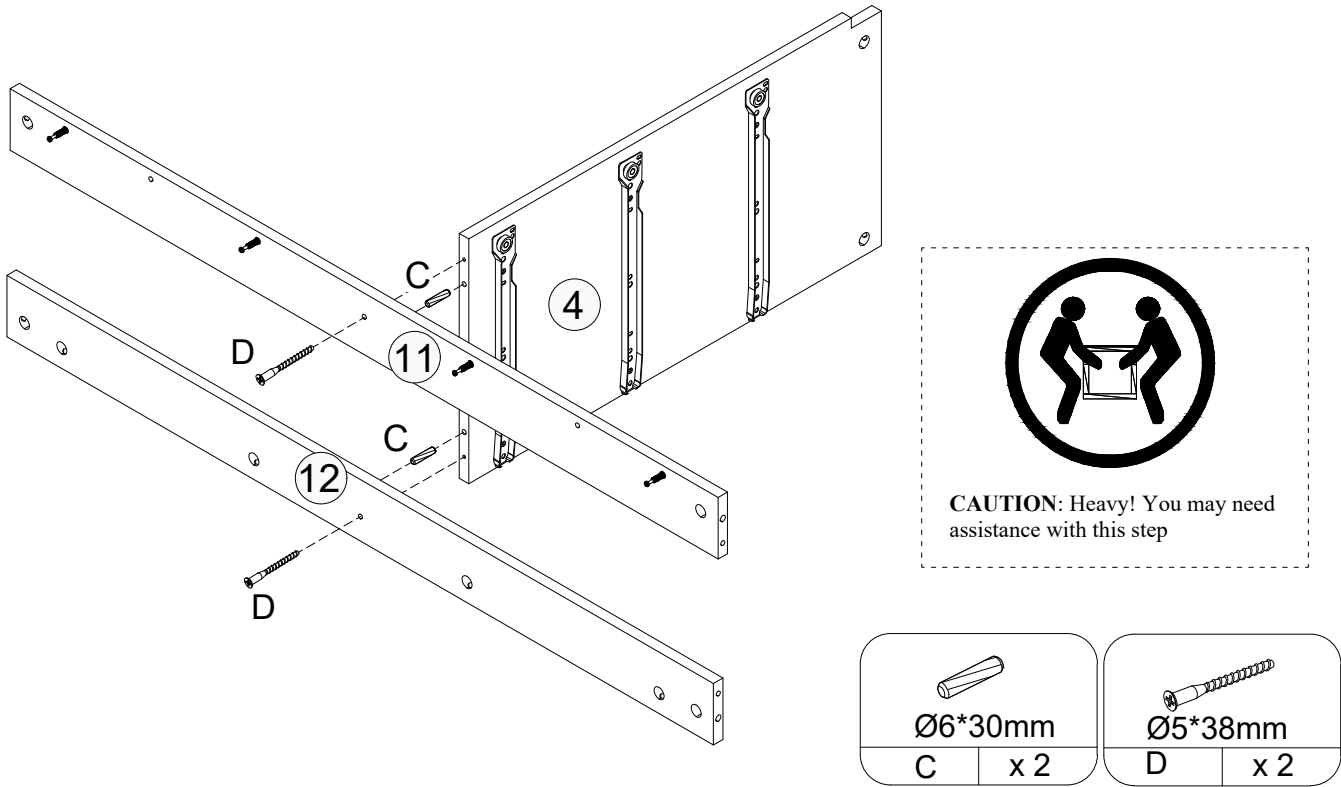


 STEP 9

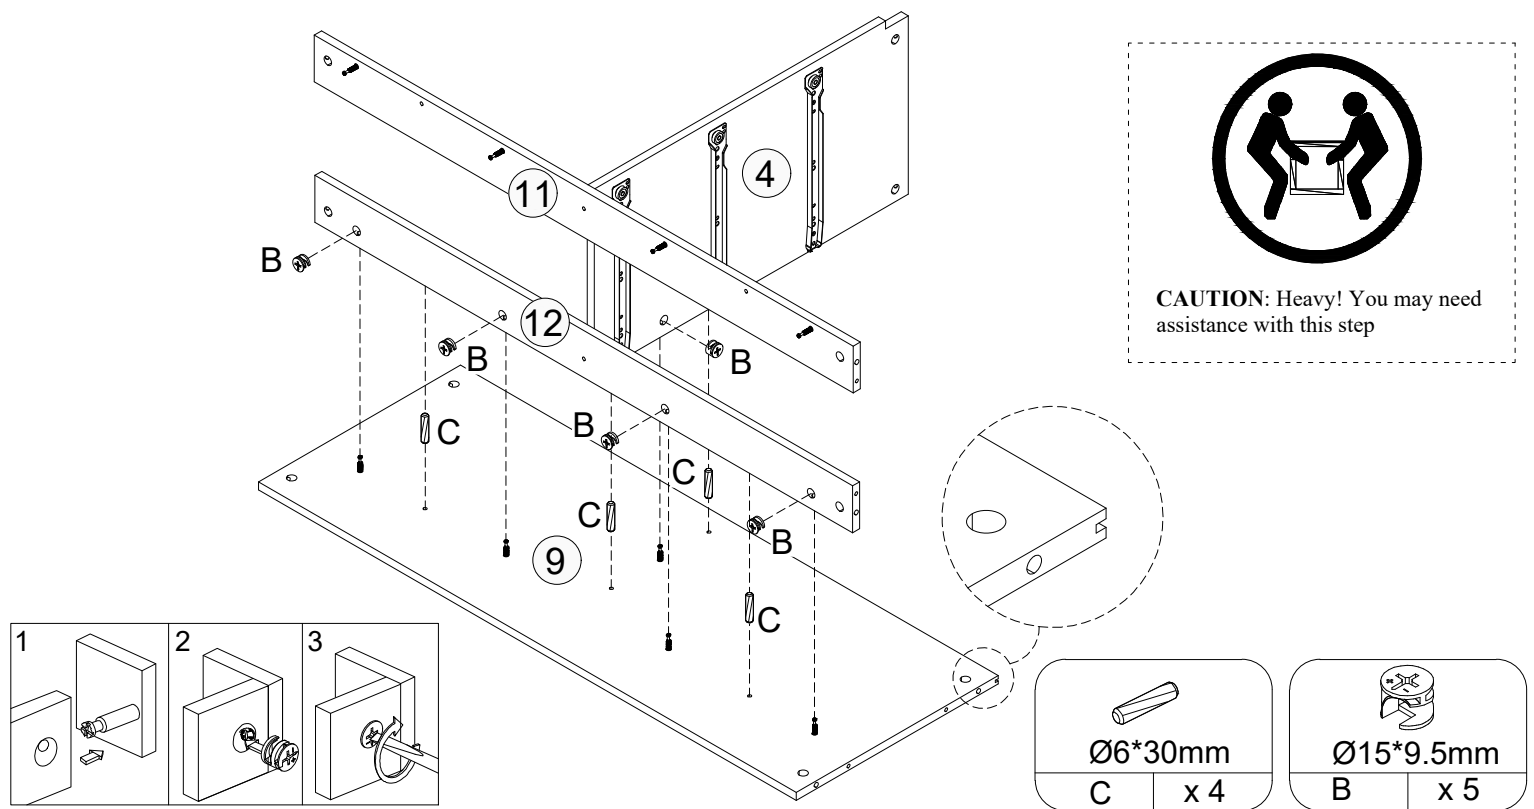

  STEP 10

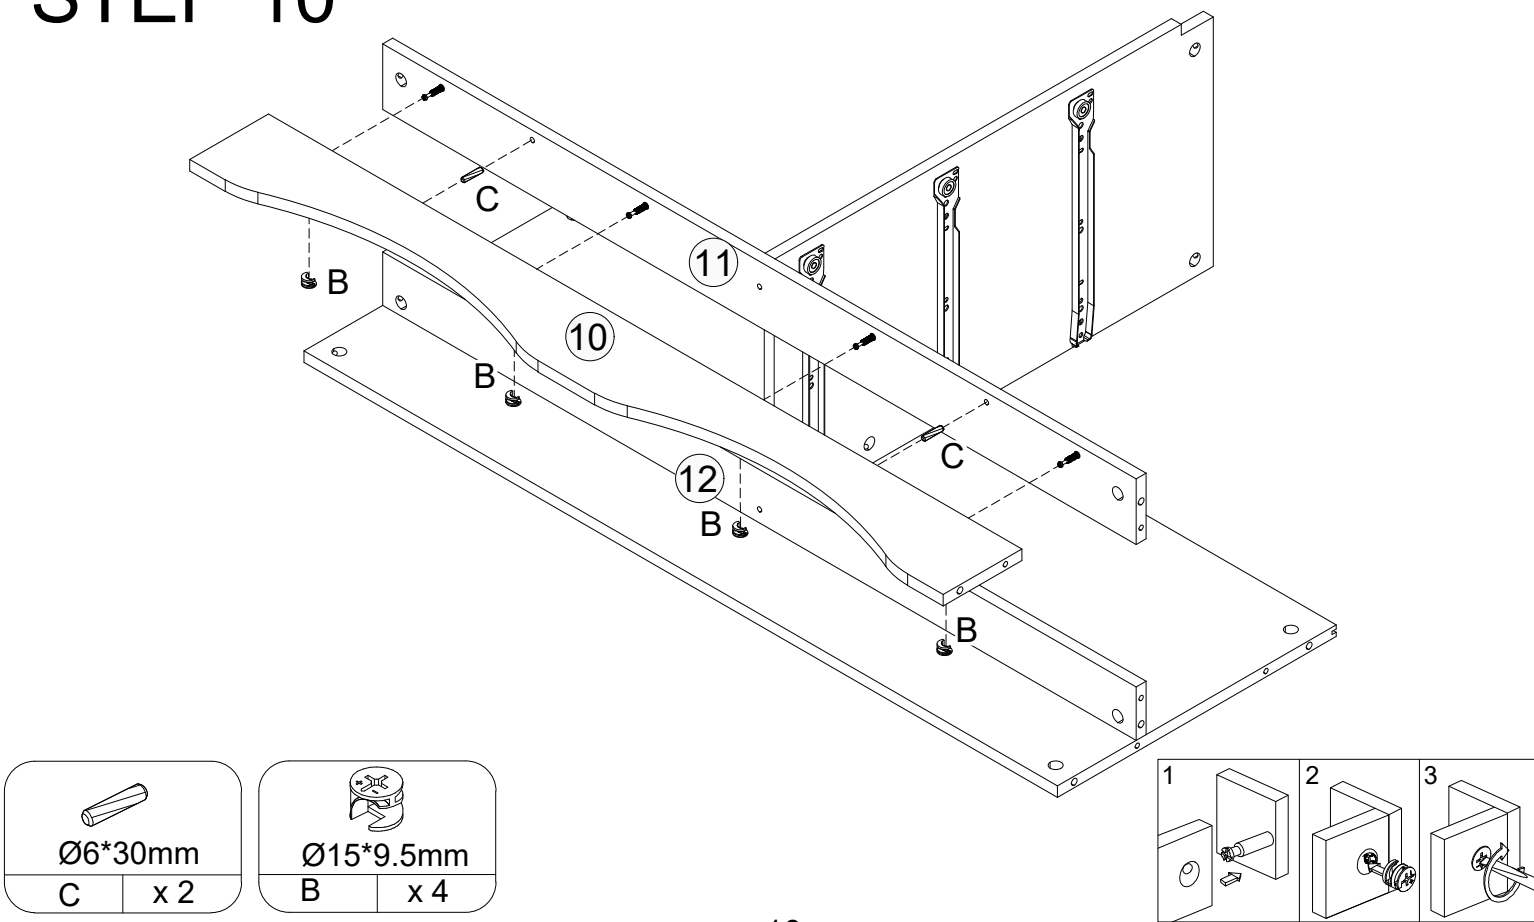

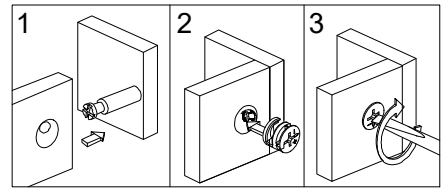

Ø6*30mm


C	x 5
---	-----



Ø15*9.5mm

B	x 5
---	-----

 STEP12

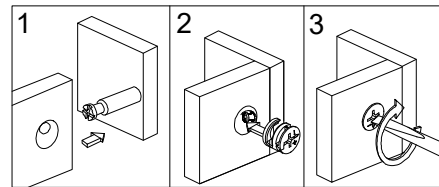

Ø6*30mm


C	x 5
---	-----




Ø15*9.5mm

B	x 5
---	-----

 
STEP 13

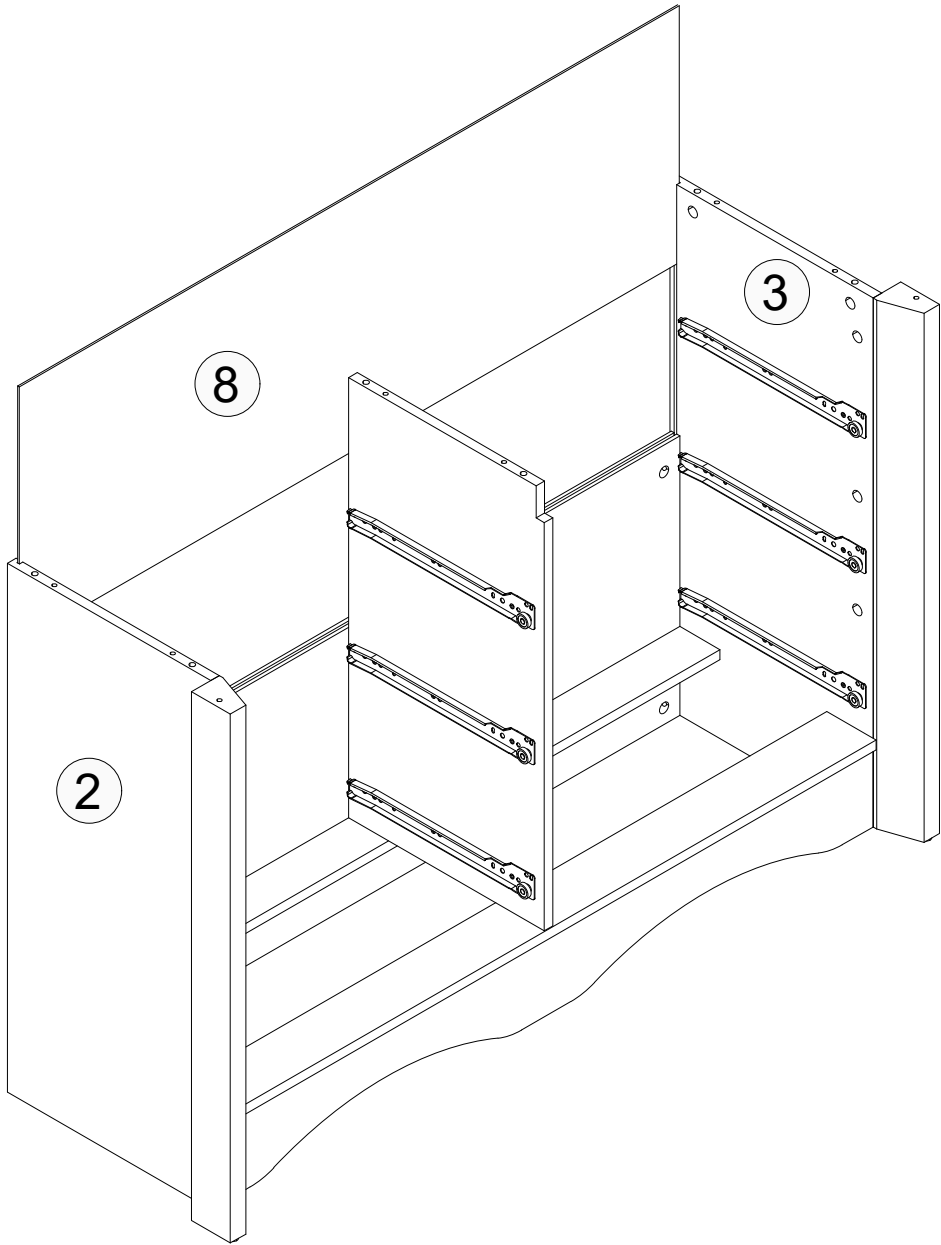


 
STEP 14

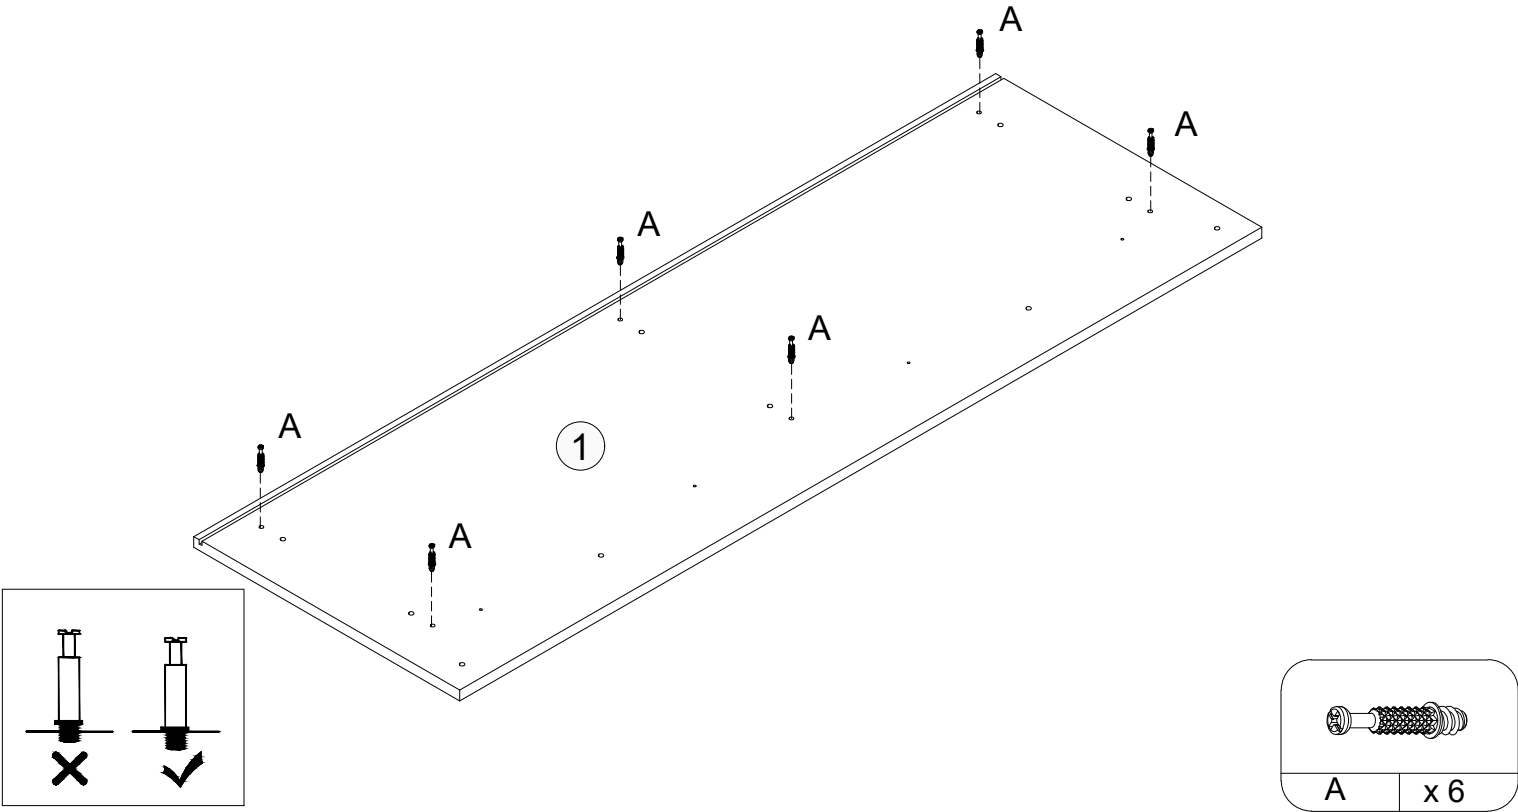



 
STEP 15

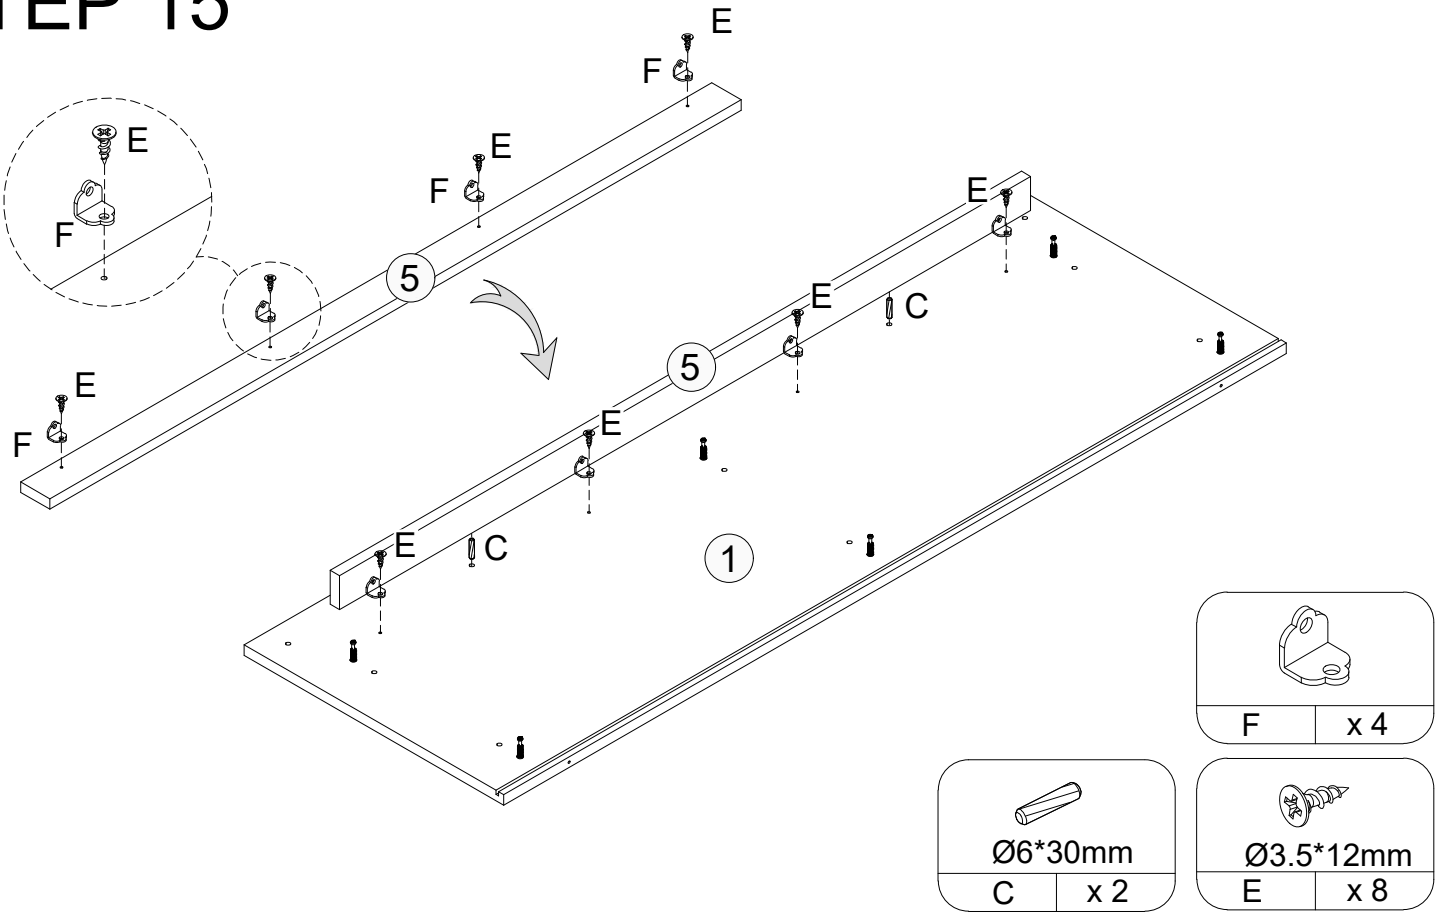


 
 
STEP 16

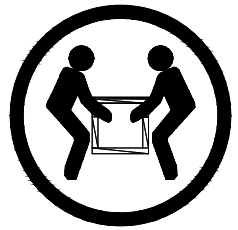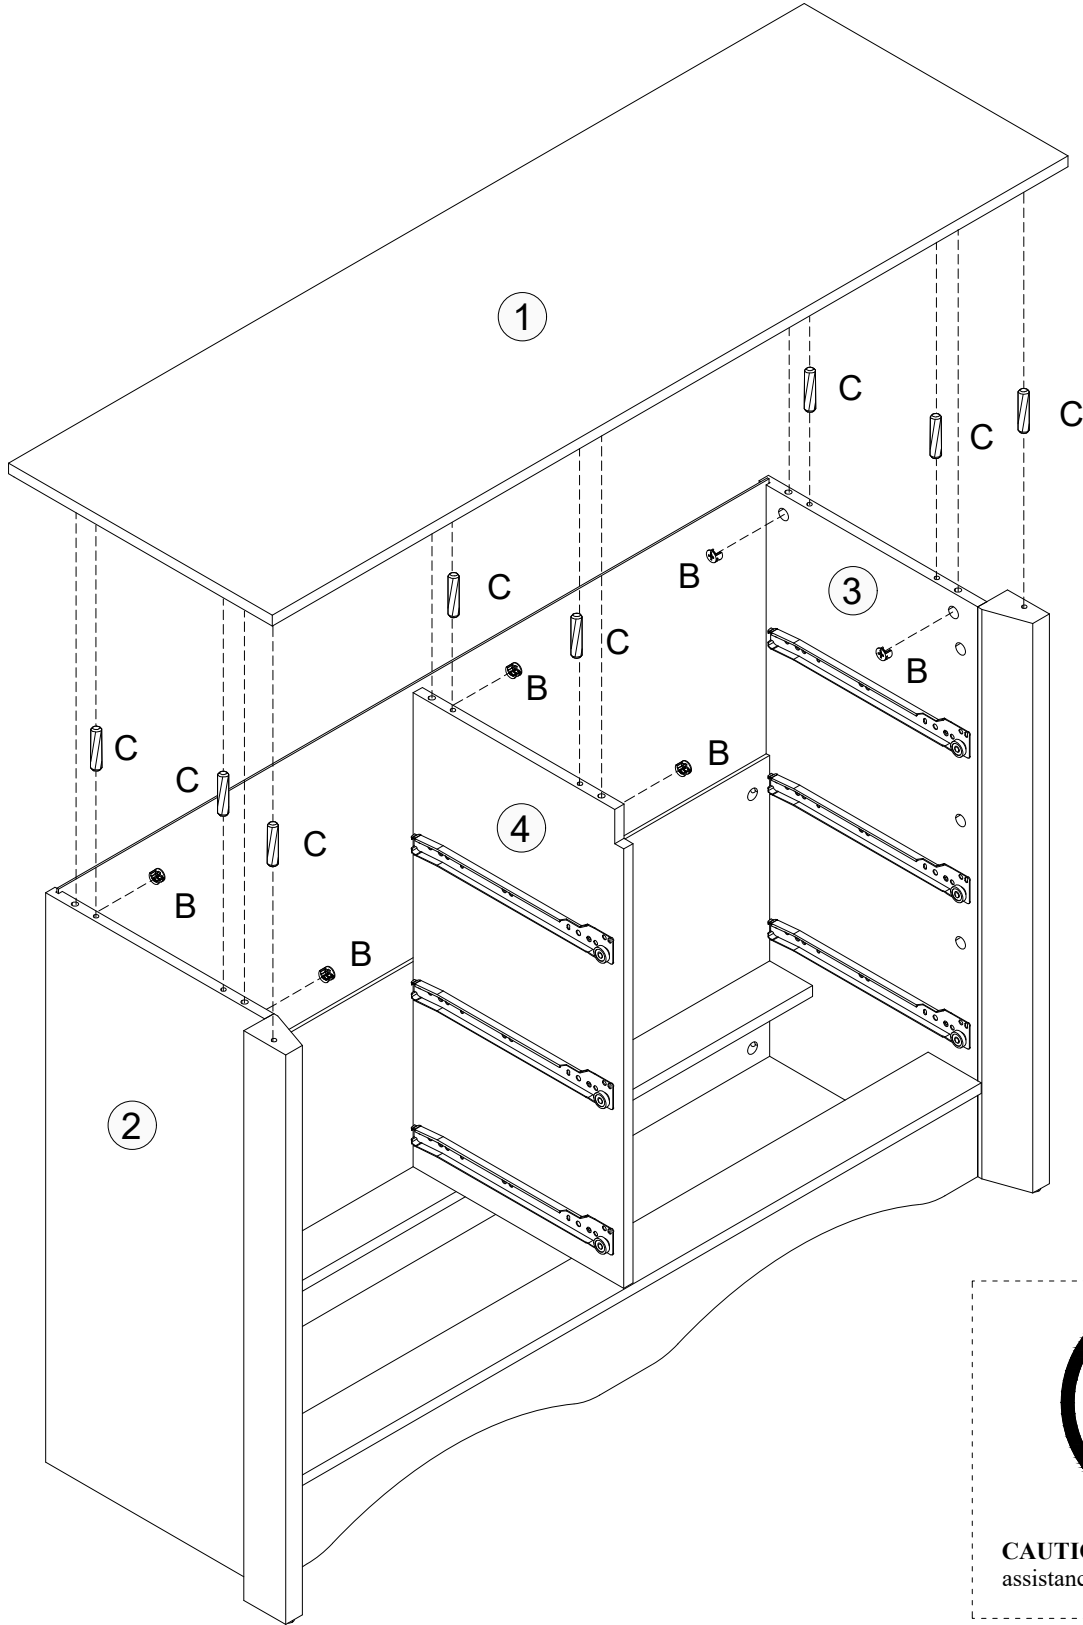

 
 
 
CAUTION: Heavy! You may need assistance with this step

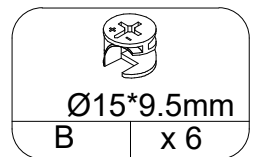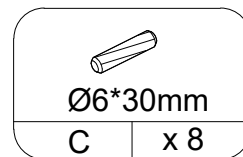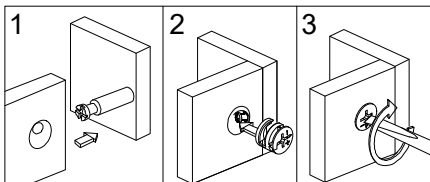

   
STEP 17

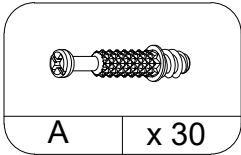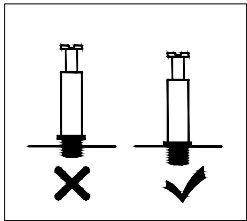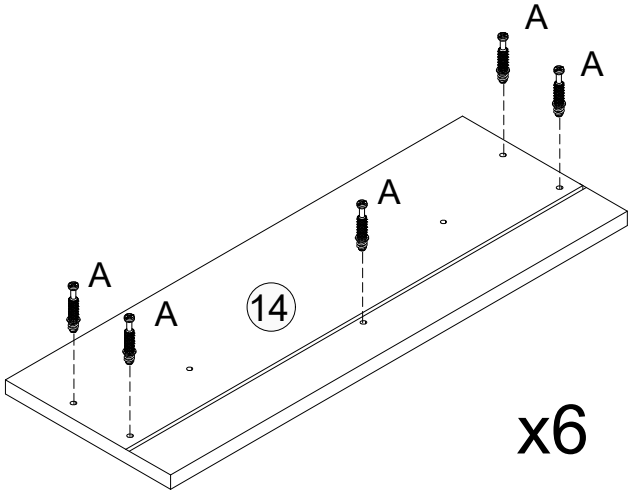

   
STEP 18

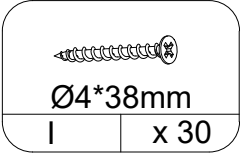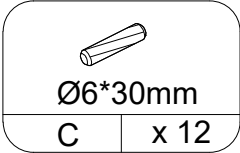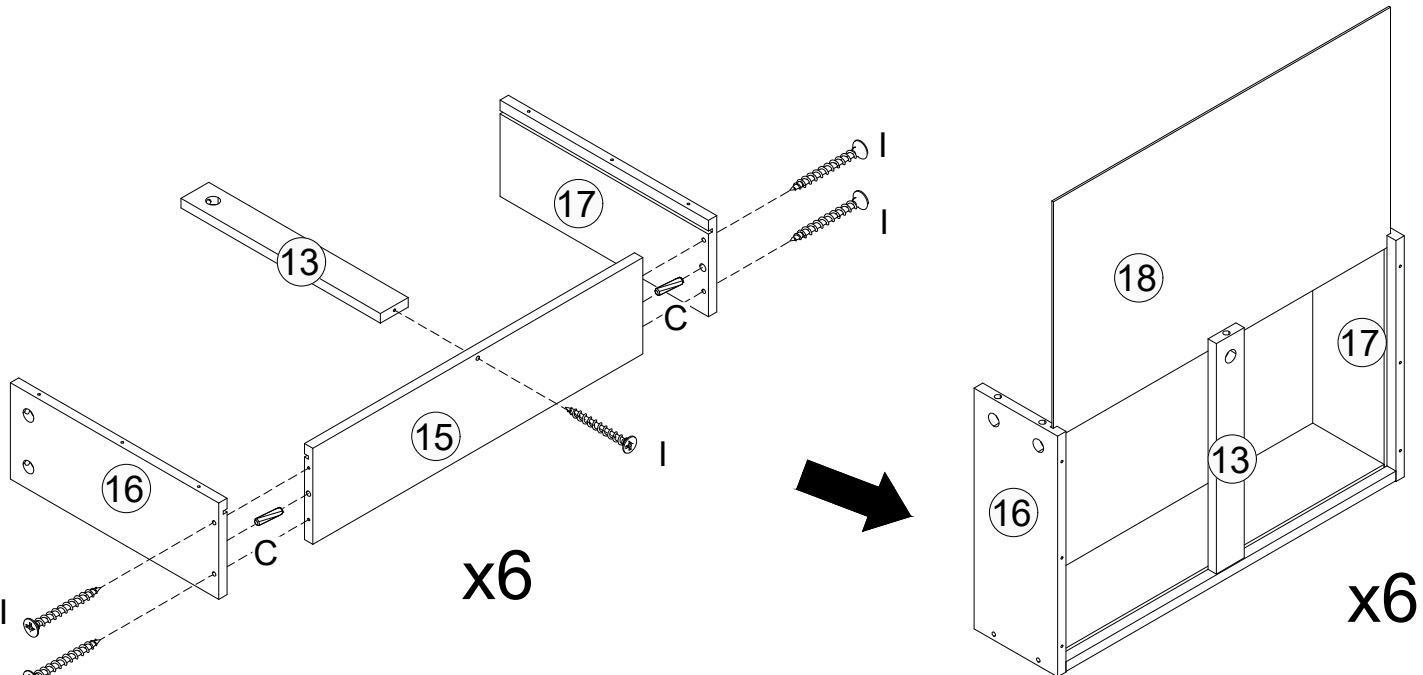



 
STEP 19

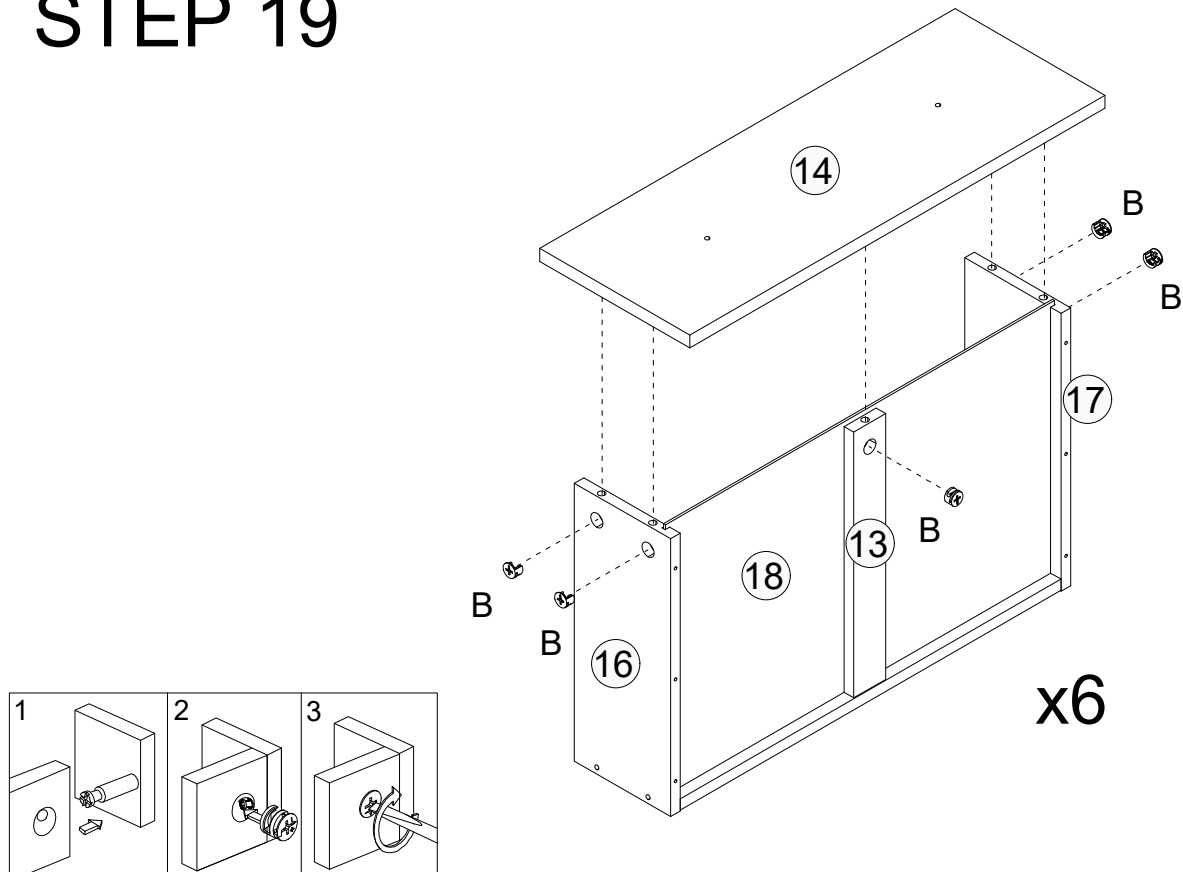

 
STEP 20

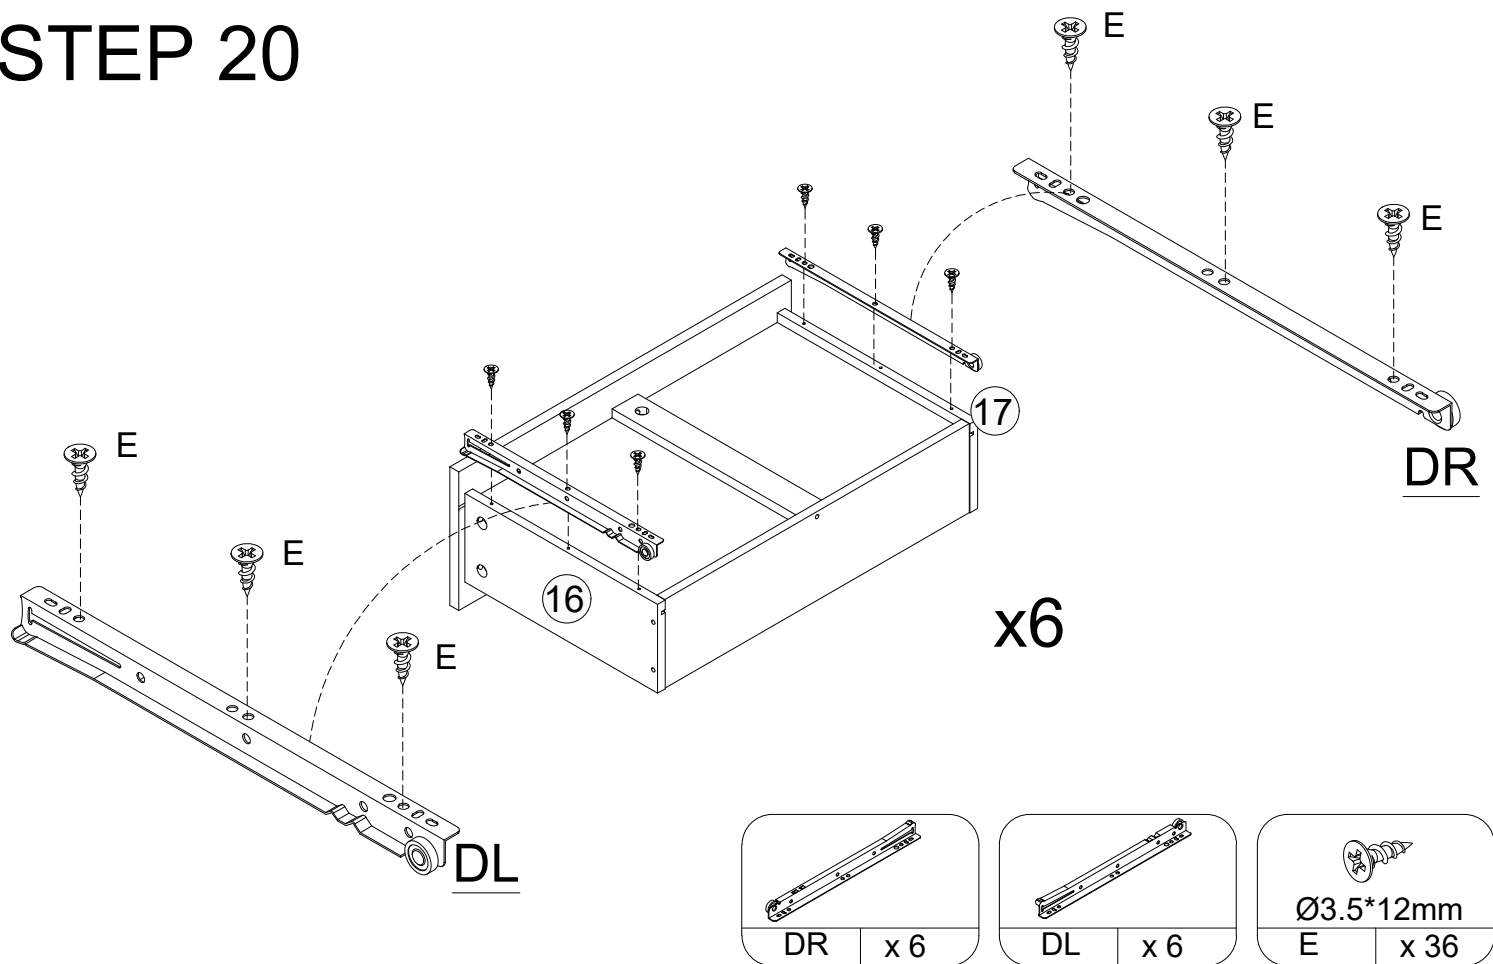

   
STEP 21

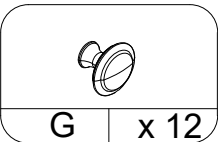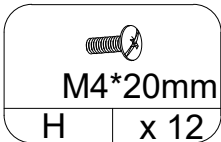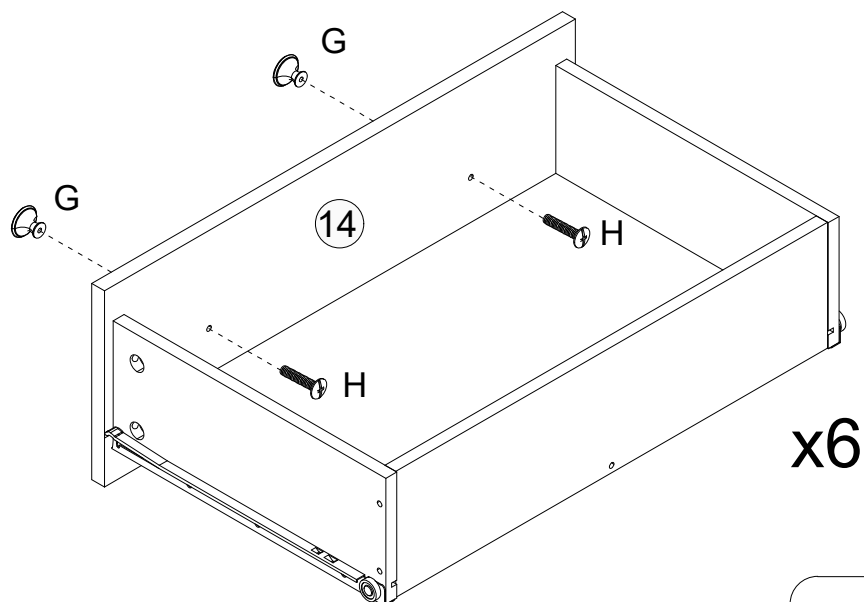

 STEP 22

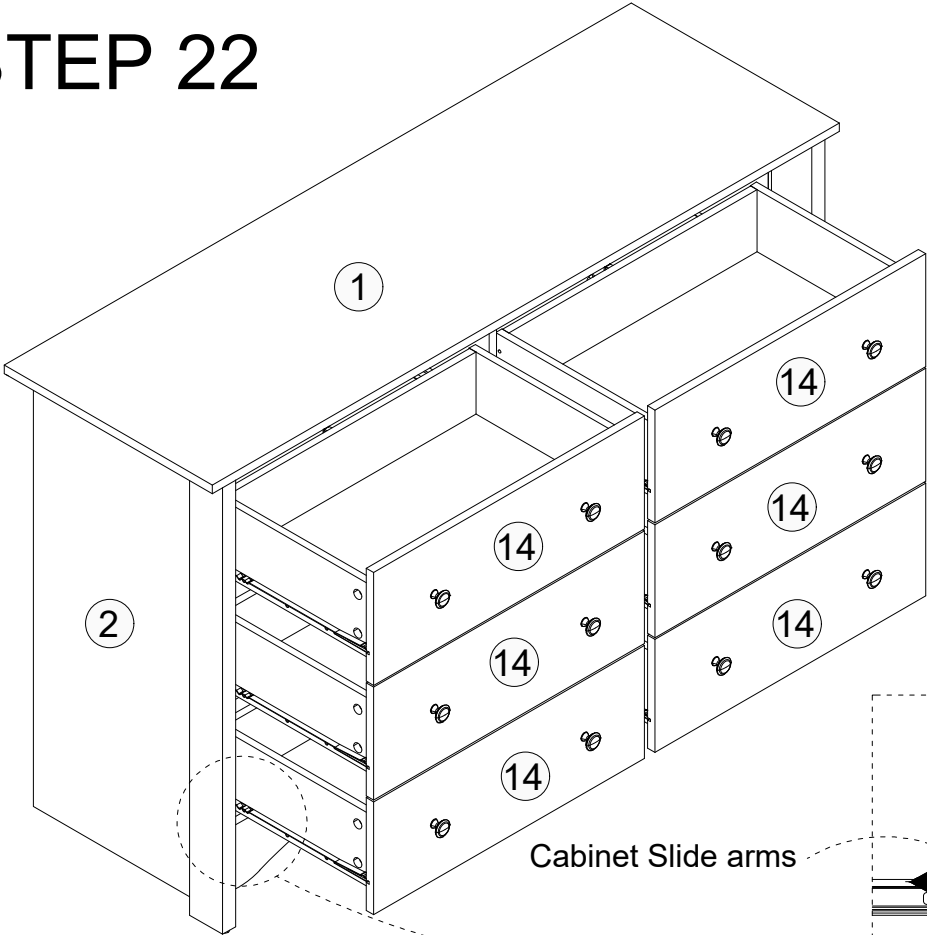


Cabinet Slide arms

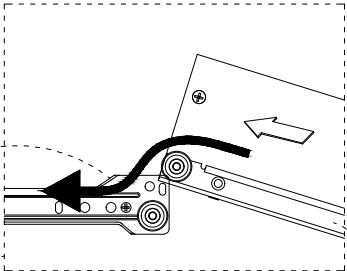 


Drawer Slide brackets


 
STEP 23

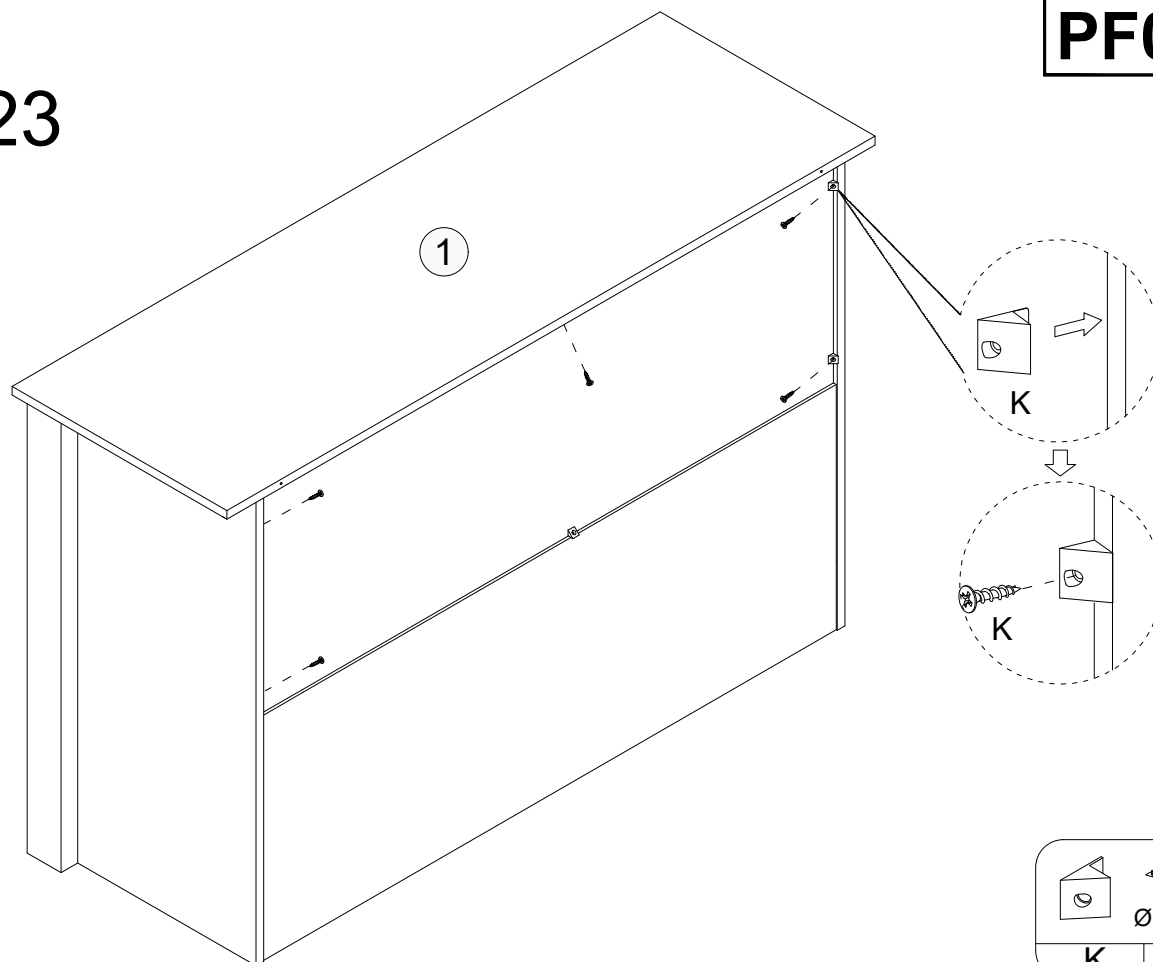

 STEP 24

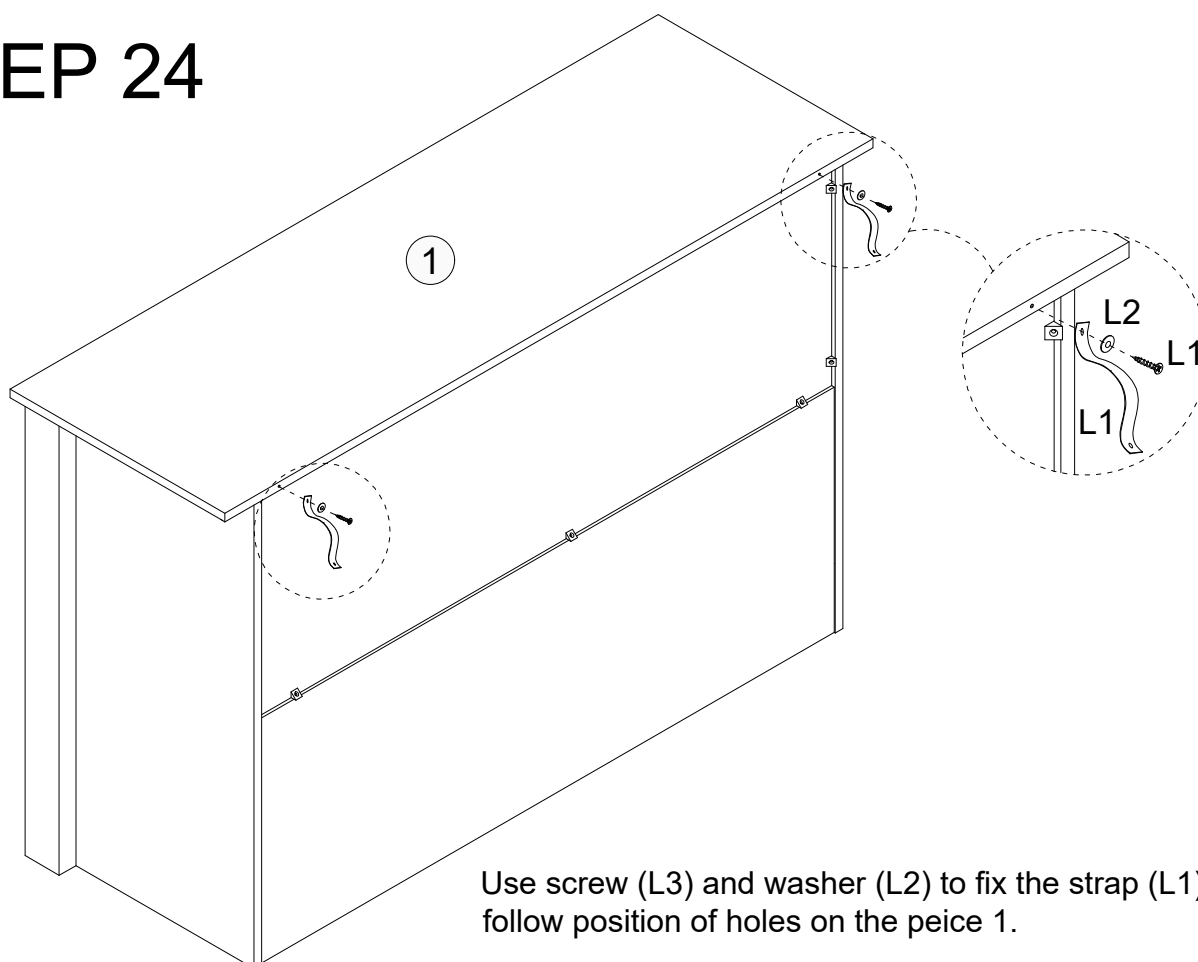

  STEP 25

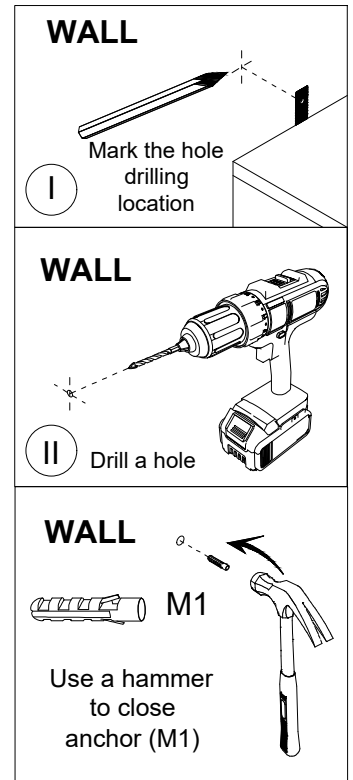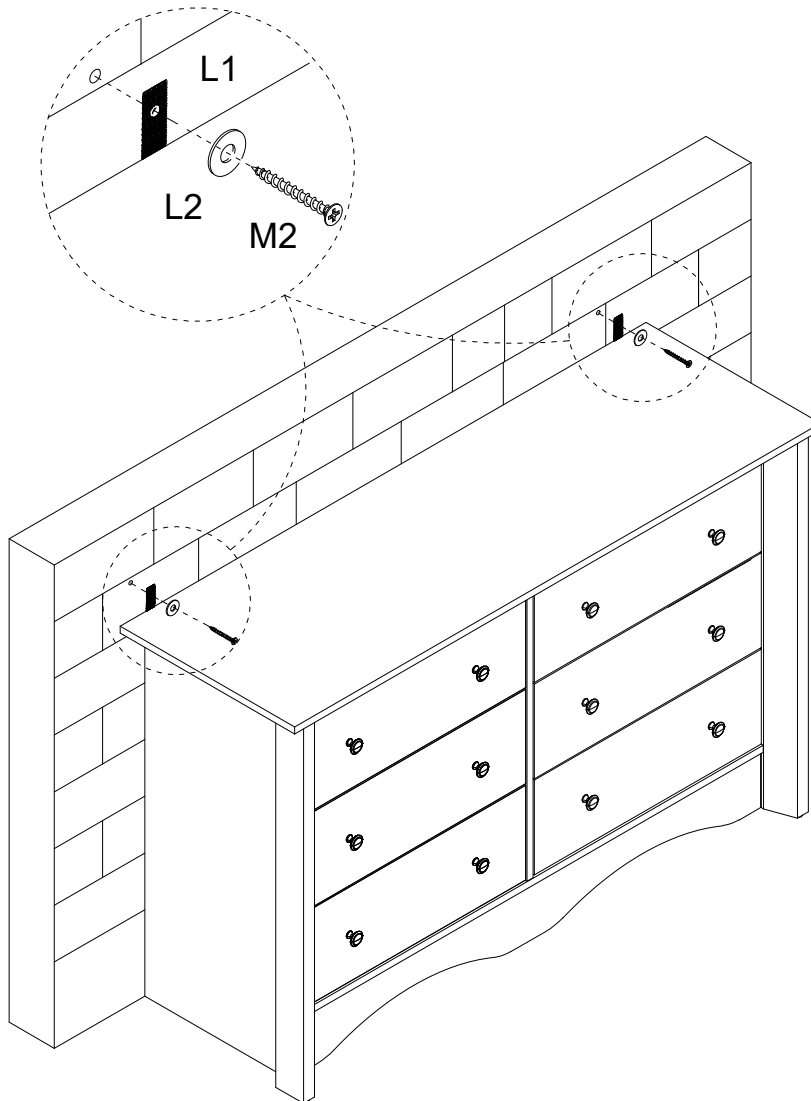

Step1: determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.

Step 2: drill the hole and then fixed the anchor (M1) on the wall.

Step 3: use screw (M2) to fix the strap (L1), (L2) on the wall .

M1 x2
M2 x2
L2 x2

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning