



Instruction Manual

HWGB141

Canopy Frame × 1pcs

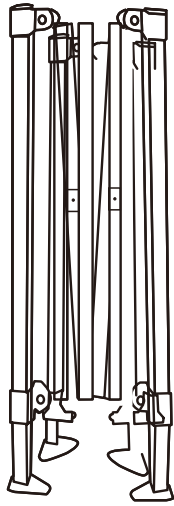

Canopy Top × 1pcs

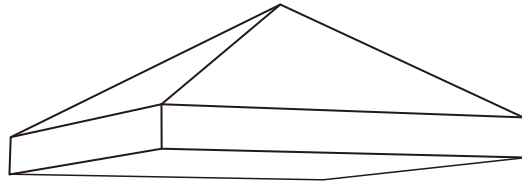

Wheeled bag × 1pcs




Sidewall × 4 pcs




Sandbag × 4 pcs




Tent Stake × 8 pcs

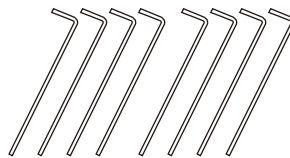


Rope × 4 pcs

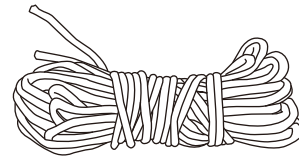


Assembly

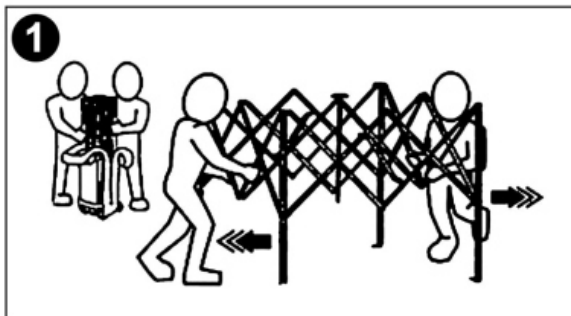


After unpacking the carry bag, place the gazebo frame in the center of the desired sheltered area. Stand on opposite sides, grip the outer legs, lift them off the ground, and extend them carefully, being mindful not to pinch your fingers.

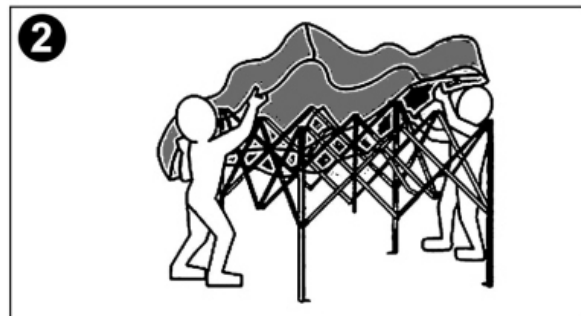


Partially extend the frame and position the fabric top over the framework.

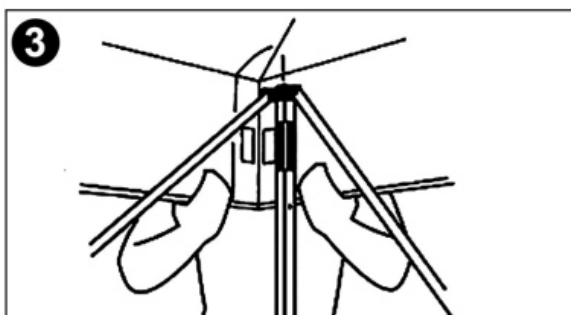


Attach the fabric top to each hook and loop corner.

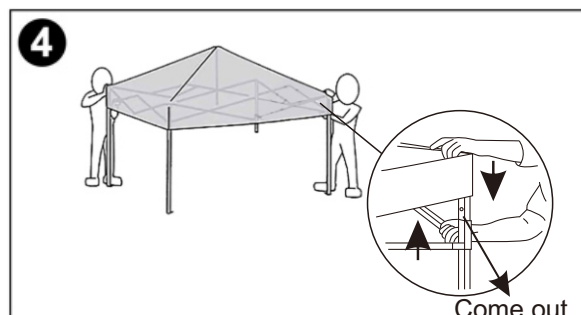


Fully extend the frame. Slide the leg sockets over the buttons so that they rest on top of the controller. Repeat this step for each leg in the upright or extended position.

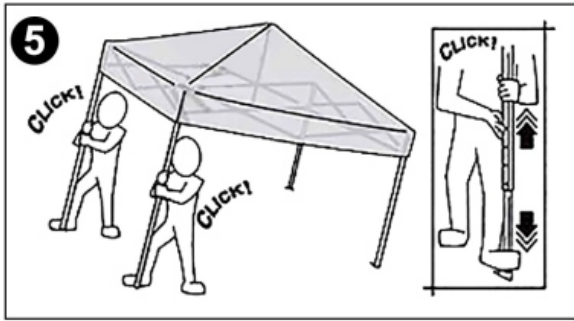


Lift each leg and slide the lower leg extension until it snaps into place.

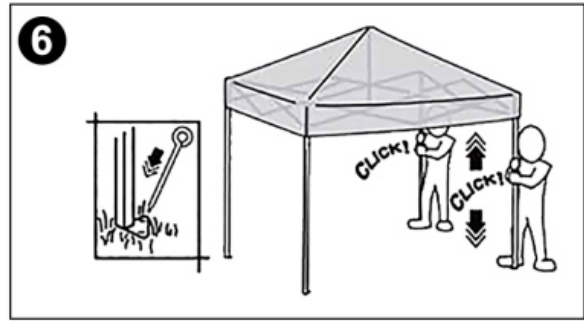

For height or leveling adjustment, press the leg latching buttons and slide the lower leg extensions as needed, ensuring they latch into any of the three adjustment holes. Insert the four ground spikes through the holes in the bottom legs to secure them to the ground.

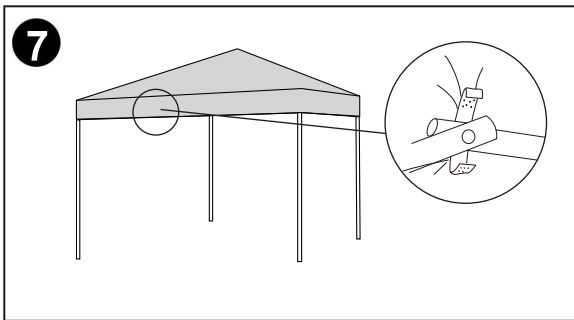


Fix Velcro stickers as shown.

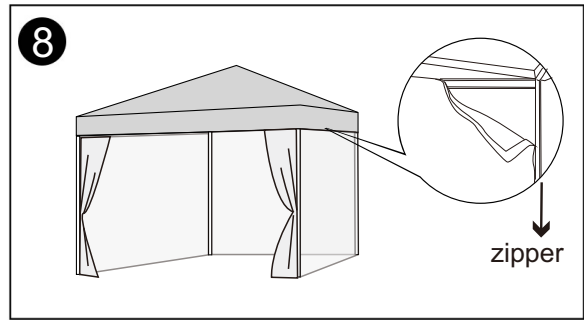


Attach 4 pcs side tarpaulin using Velcro.


Disassembly

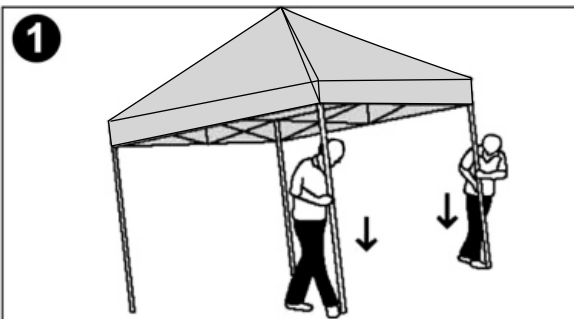

Please remove all the side tarpaulins and lower the height of the tent by depressing the leg latching buttons.

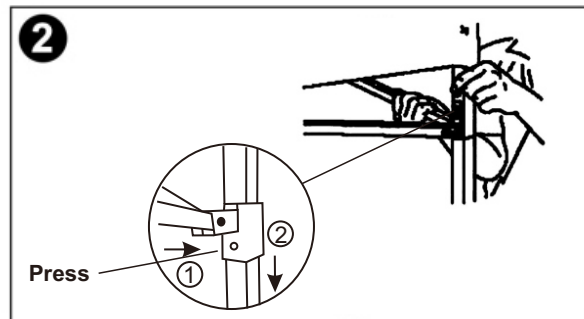

Release the auto slider at each top corner by pressing the snap button. Repeat this step for all four corners.

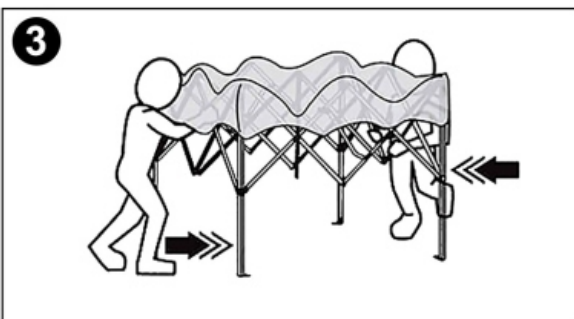

When you are ready to pack away the tent, remember to remove the hook, as shown in the picture, to facilitate smooth folding.