 


INSTRUCTION MANUAL

FS-005-30T

 
FS-005-40T

FS-005-50T

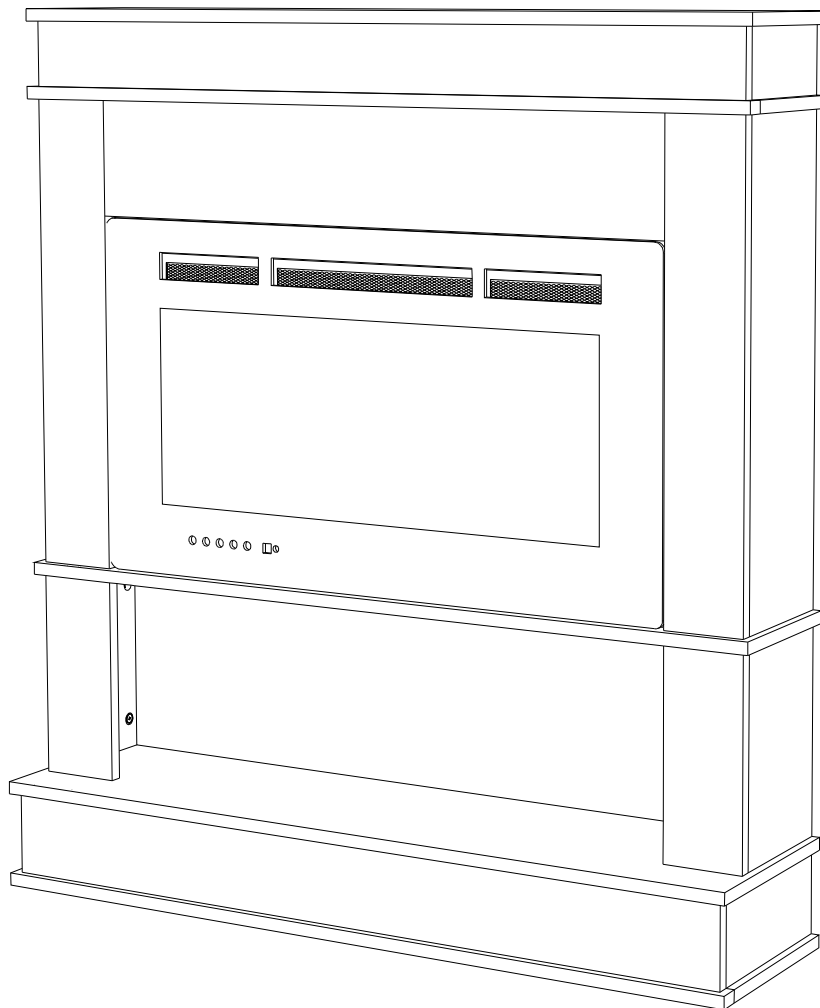

GENERAL ASSEMBLY GUIDELINES

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product.

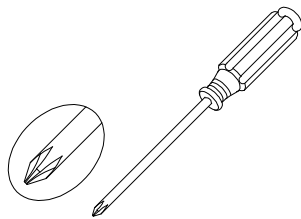


DO NOT RETURN!

Please contact our customer service team for help first.

Email: mjy941218@hotmail.com

 PARTS LIST



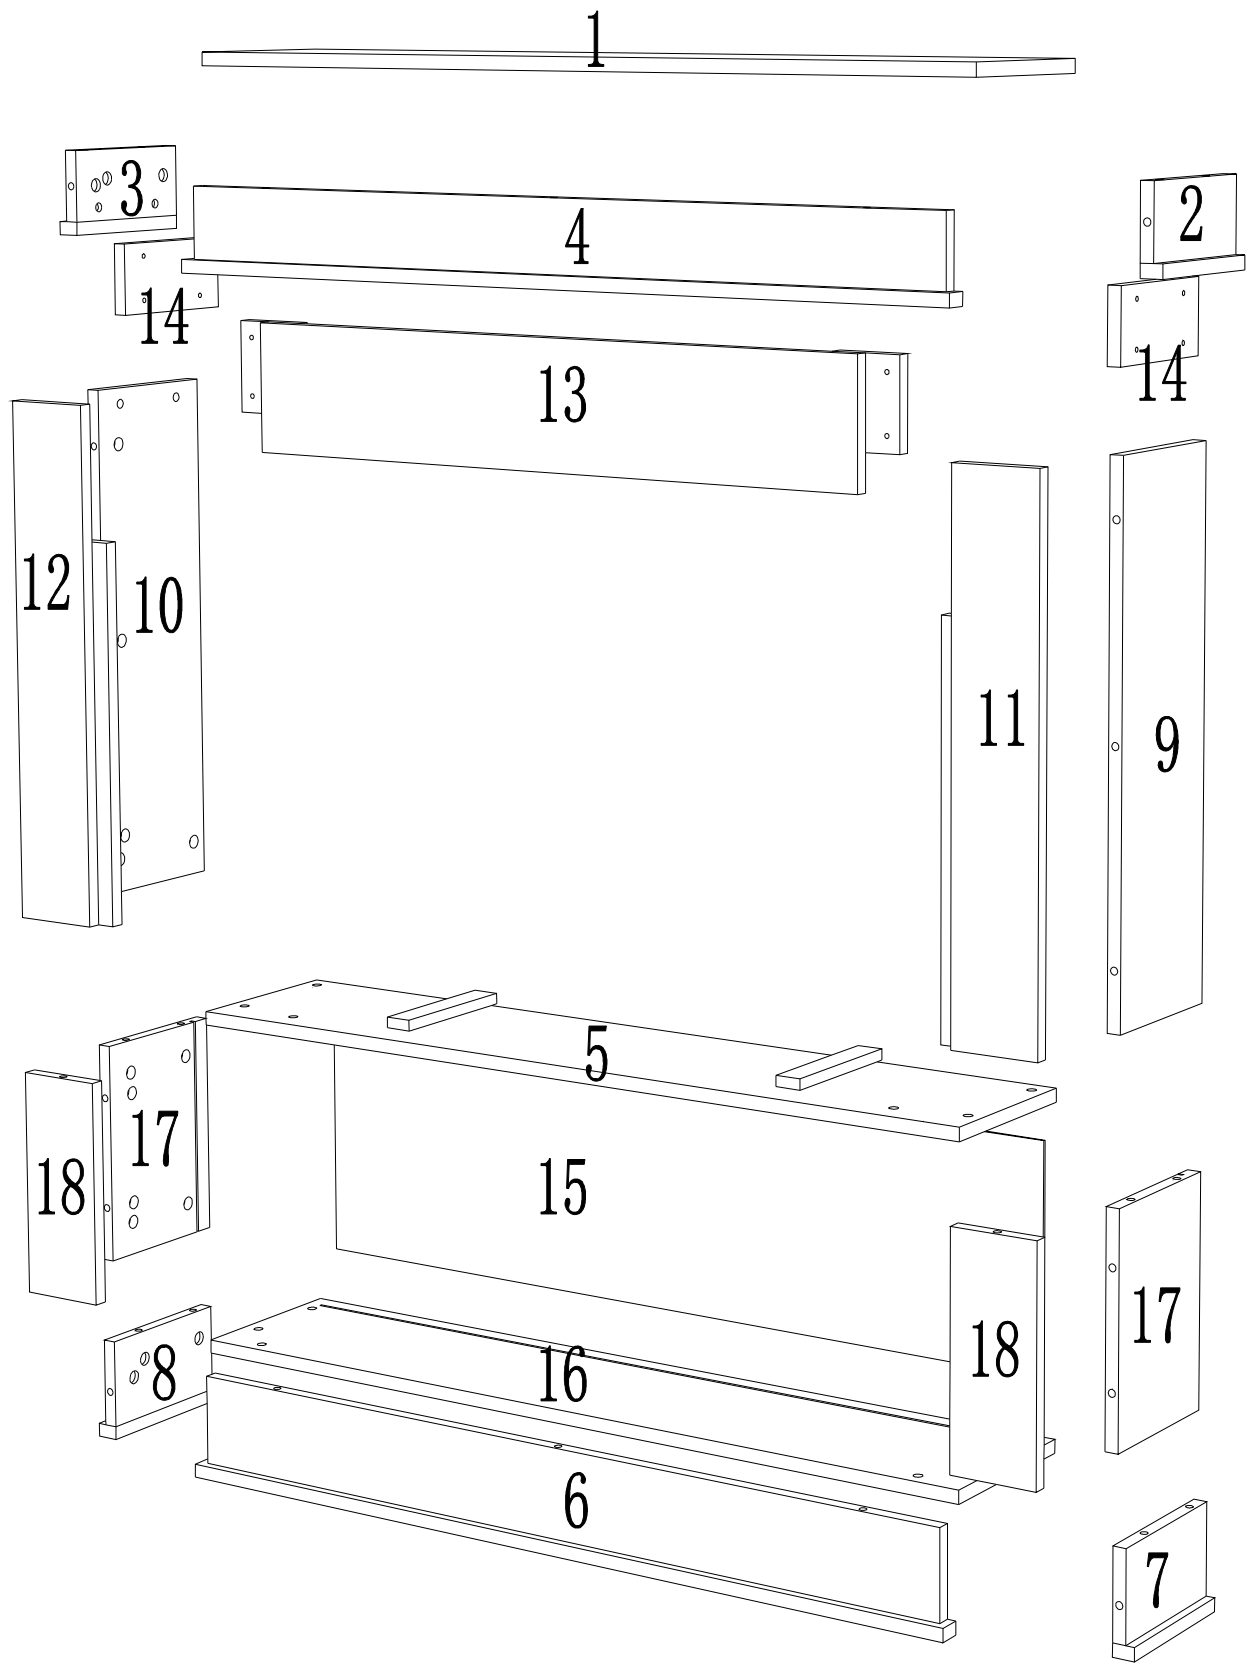


ACCESSORIES LIST

A			CAM LOCK	48 PCS
B			CAM LOCK	48 PCS
C		Ø6*25	BOLT	14 PCS
D			SHIM	14 PCS
E		Ø4*12	SCREW	4 PCS

*The hardware quantities listed above are required for proper assembly,
Some extra hardware may also have been included.*

   ANTI-TIP KIT

PART	IMAGE	DESCRIPTION		QTY
AA			MOUNTING BRACKET	2 PCS
AB			Anchor	2 PCS
AC			Nylon strap	1 PCS
AD		Ø4*15	Flat head screw	2 PCS
AE		Ø4*30	Flat head screw	2 PCS

*The hardware quantities listed above are required for proper assembly,
Some extra hardware may also have been included.*

Fig 1

A  ×7

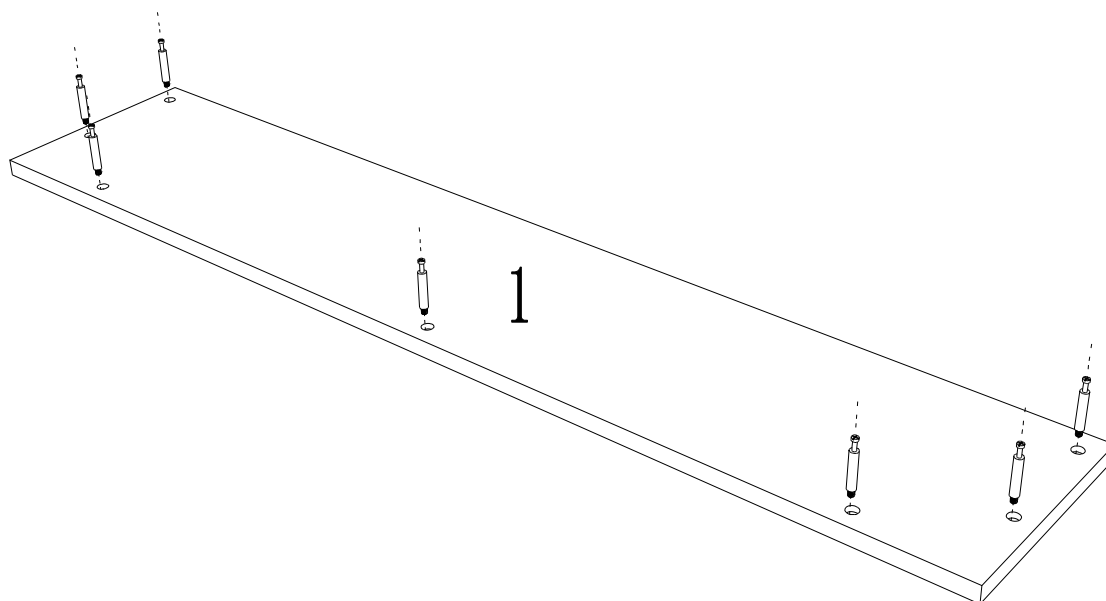 


Fig 2

A  ×2

B  ×2

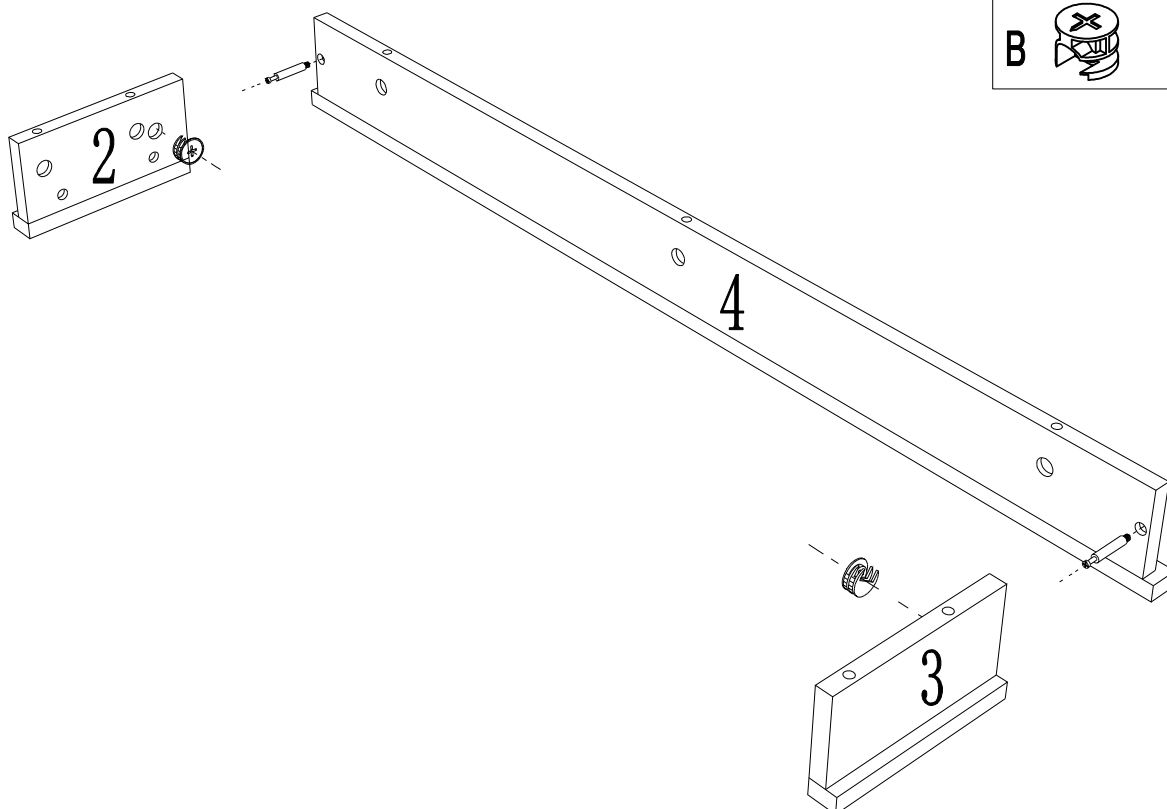 


Fig 3

B



✖7

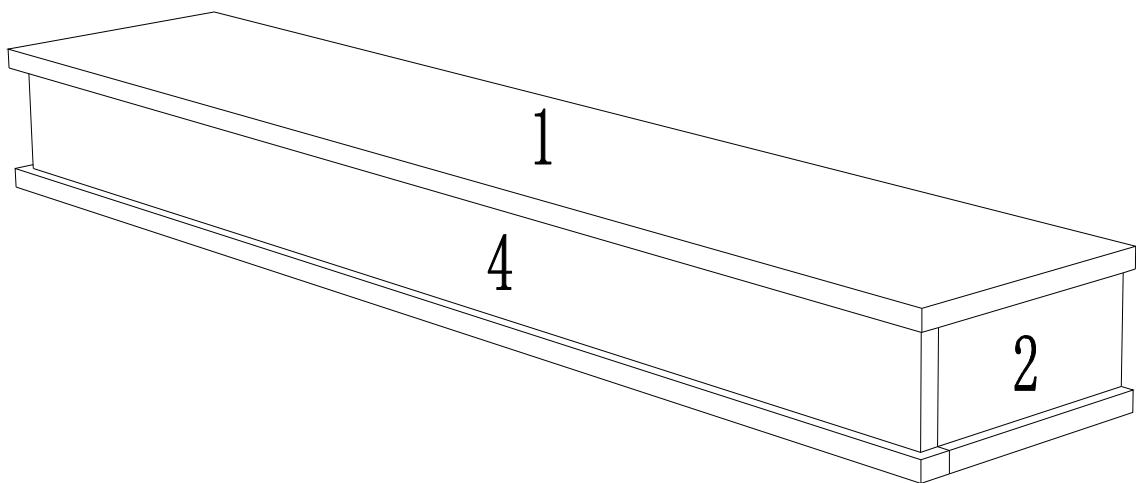 
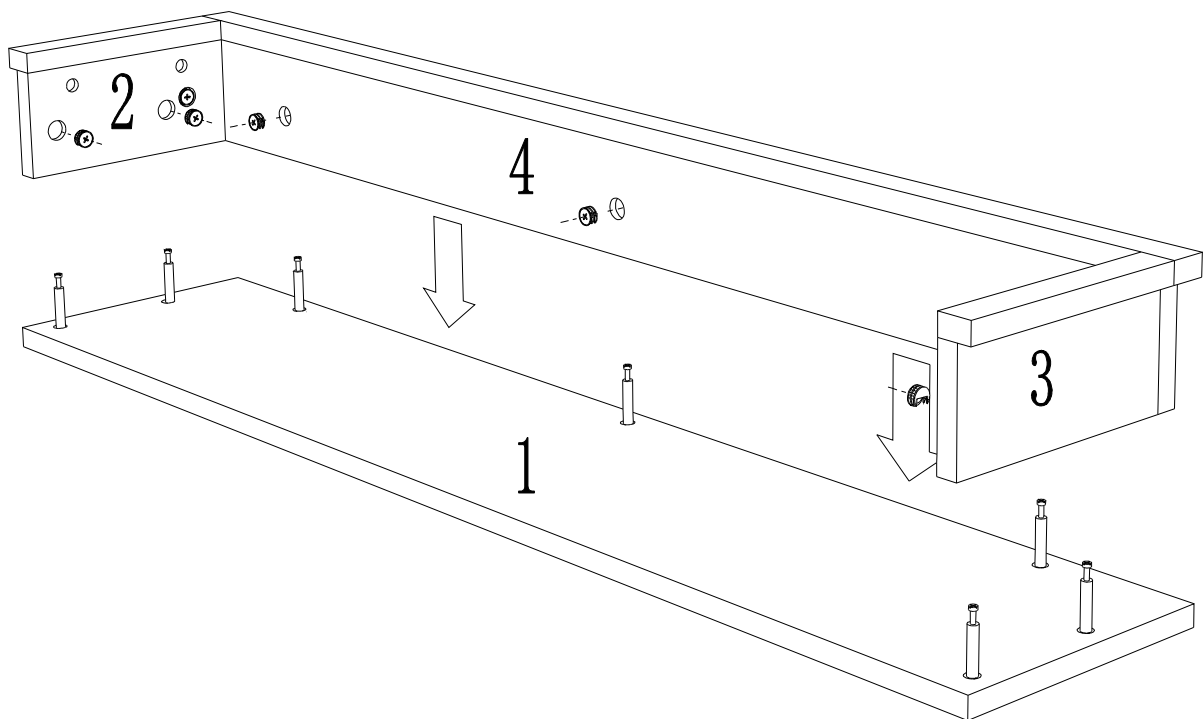 


Fig 4

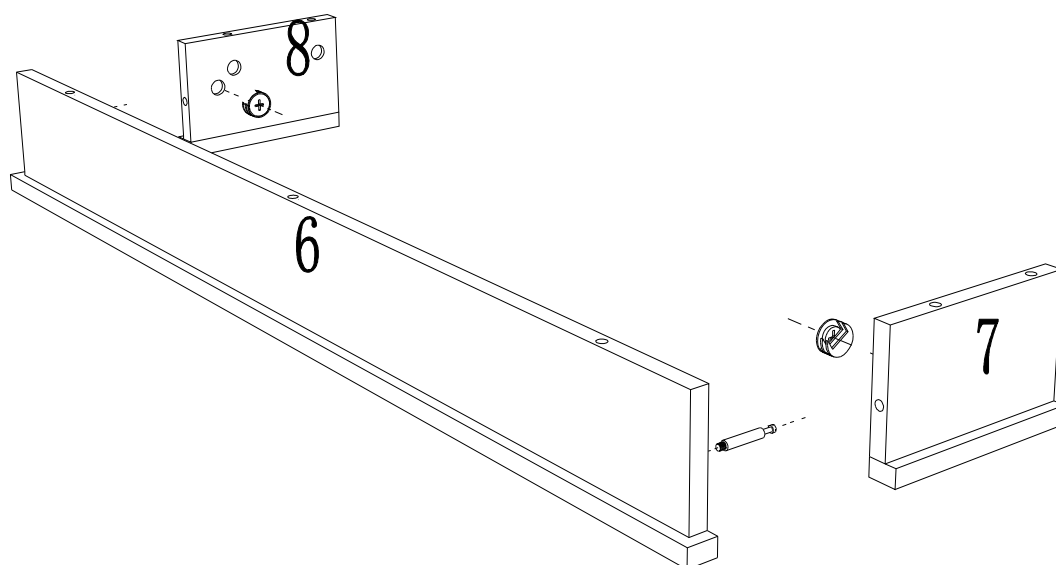 
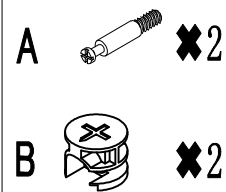 


Fig 5

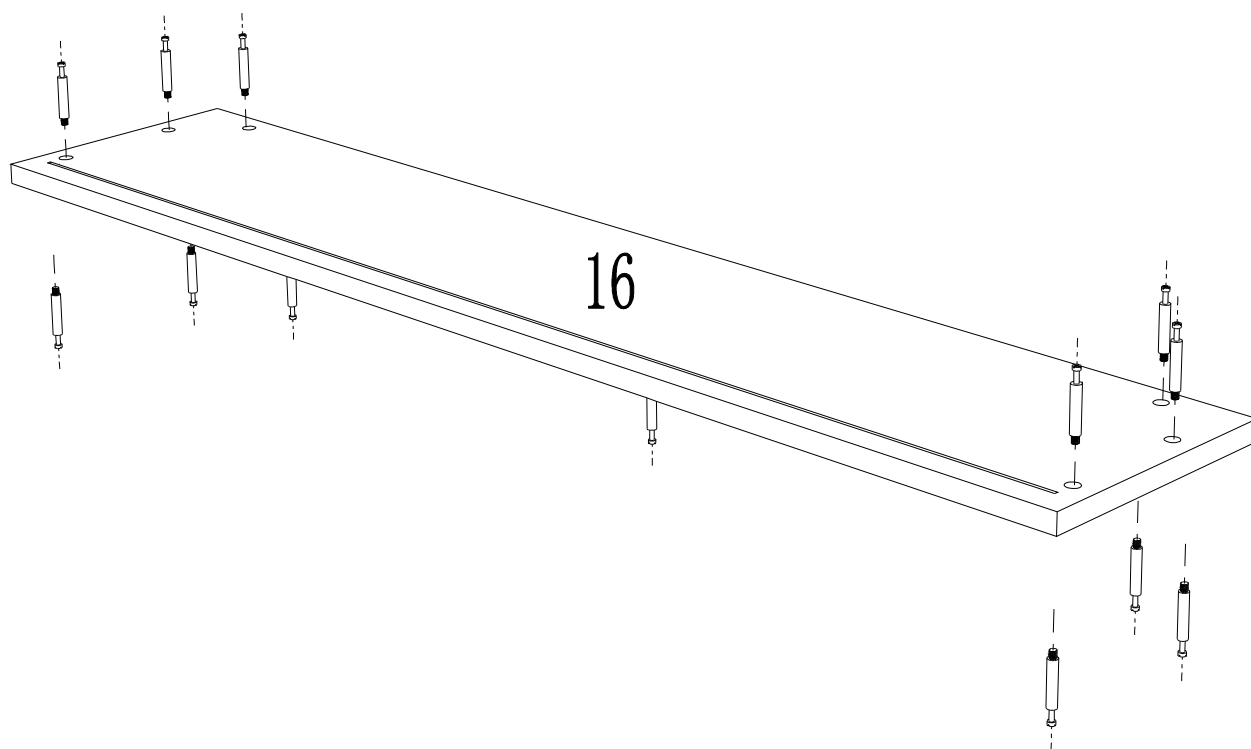 


Fig 6

B   7

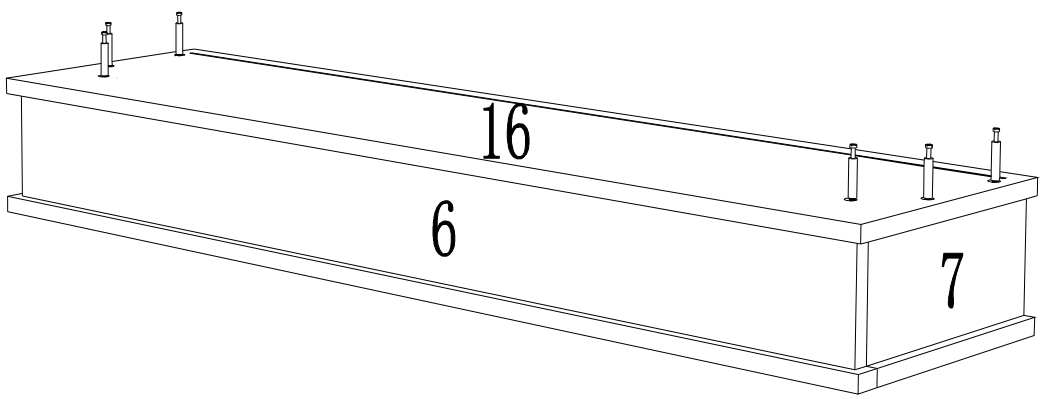 
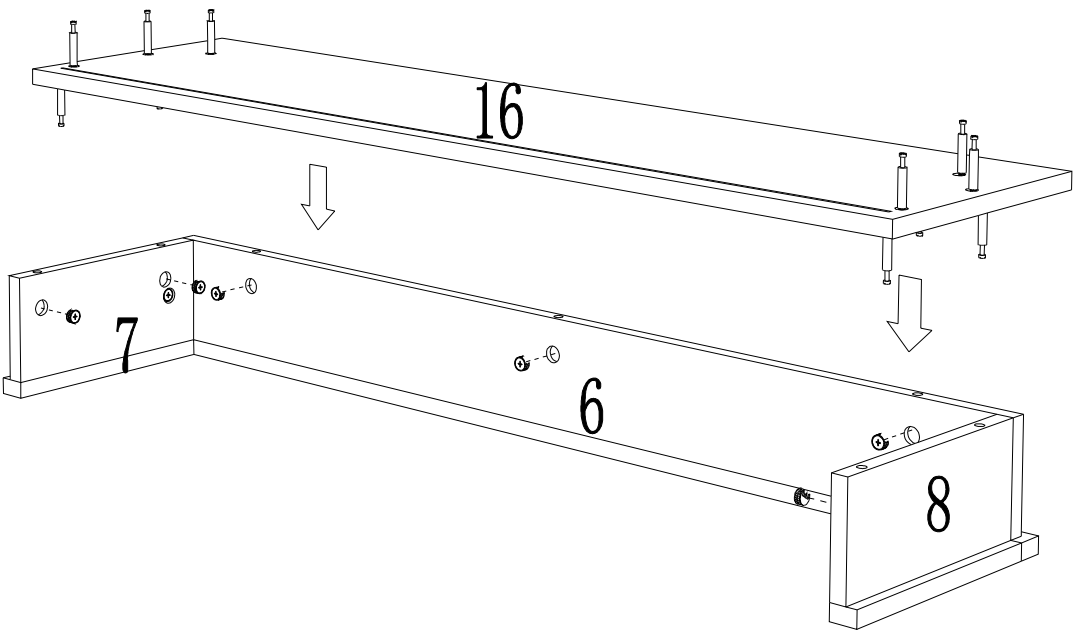 


Fig 7

A  4

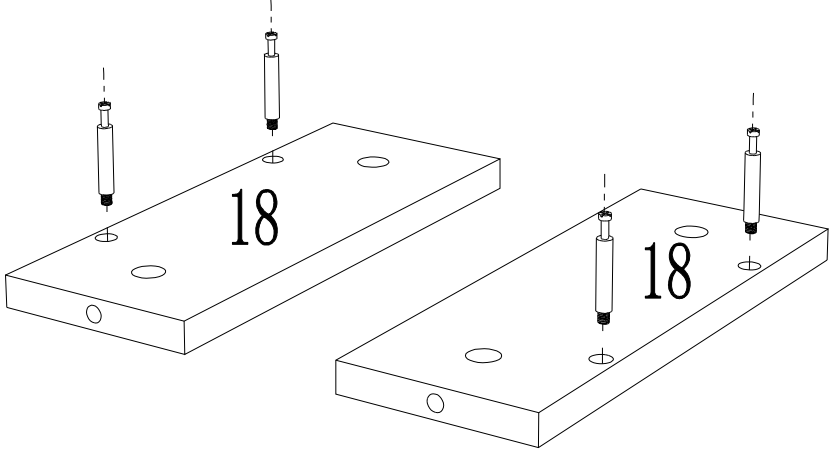 


Fig 8

B  4

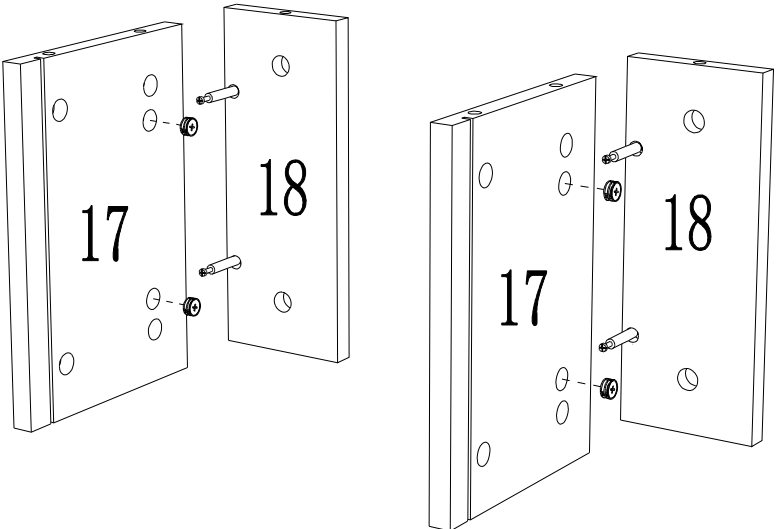 


Fig 9

A  ×12

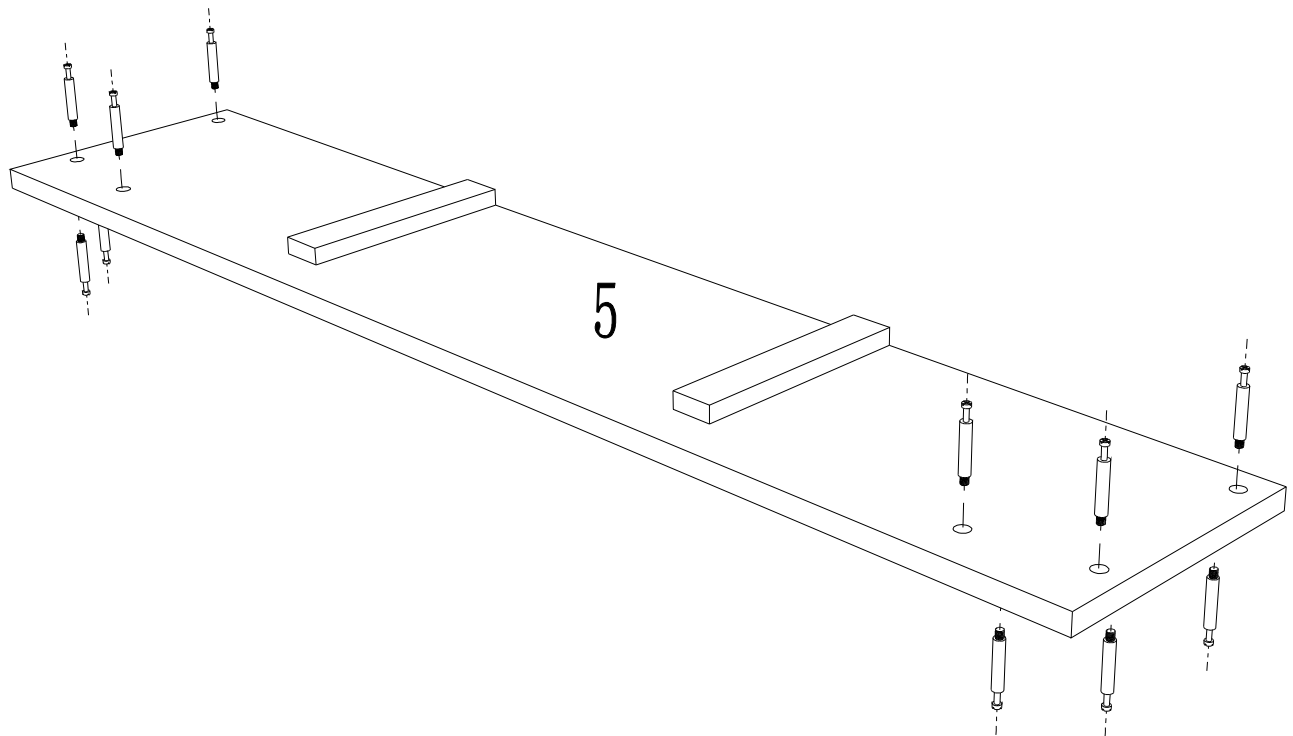 


Fig 10

B  ×4

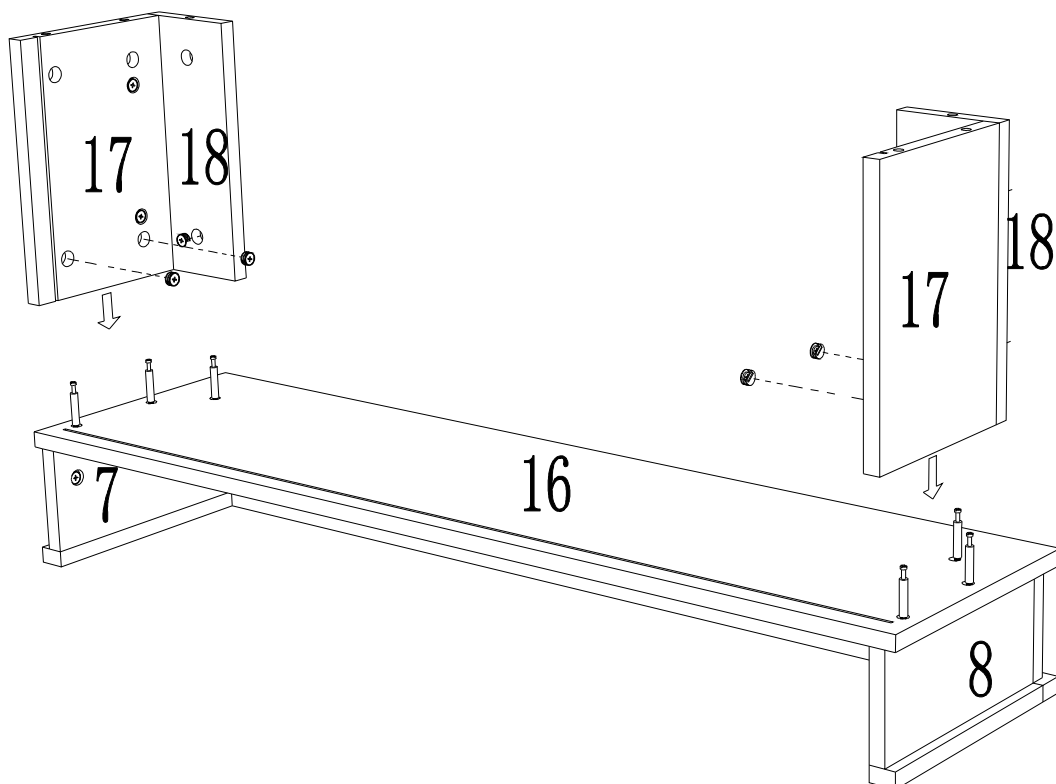 


Fig 11

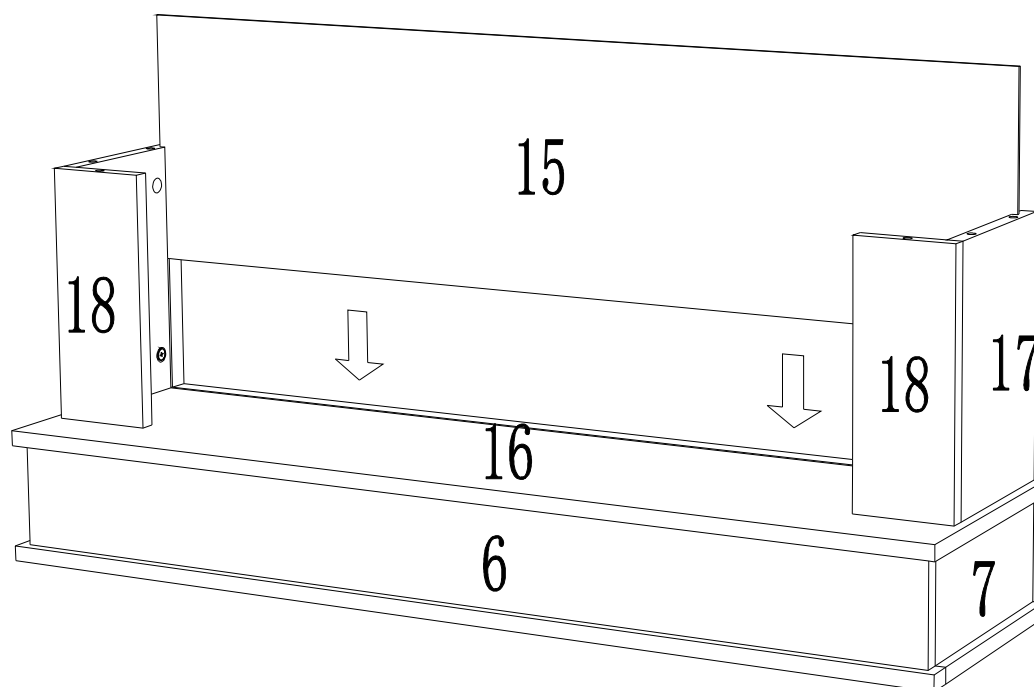 


Fig 12

B  6

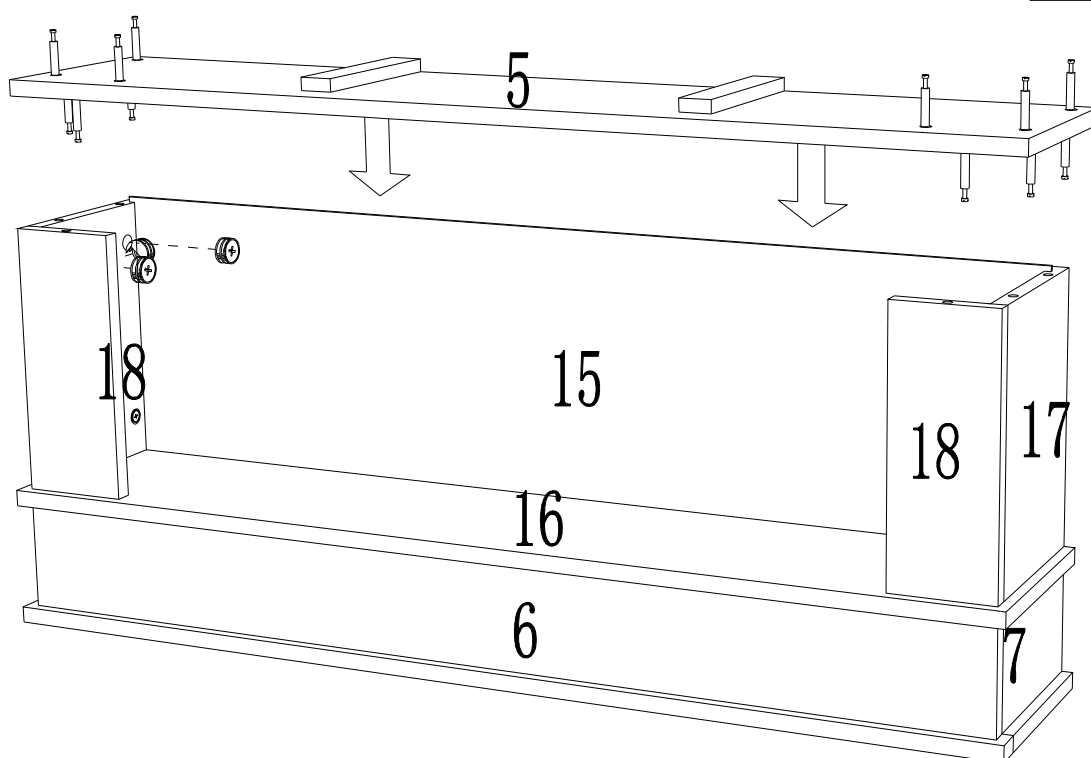 


Fig 13

A  ×6

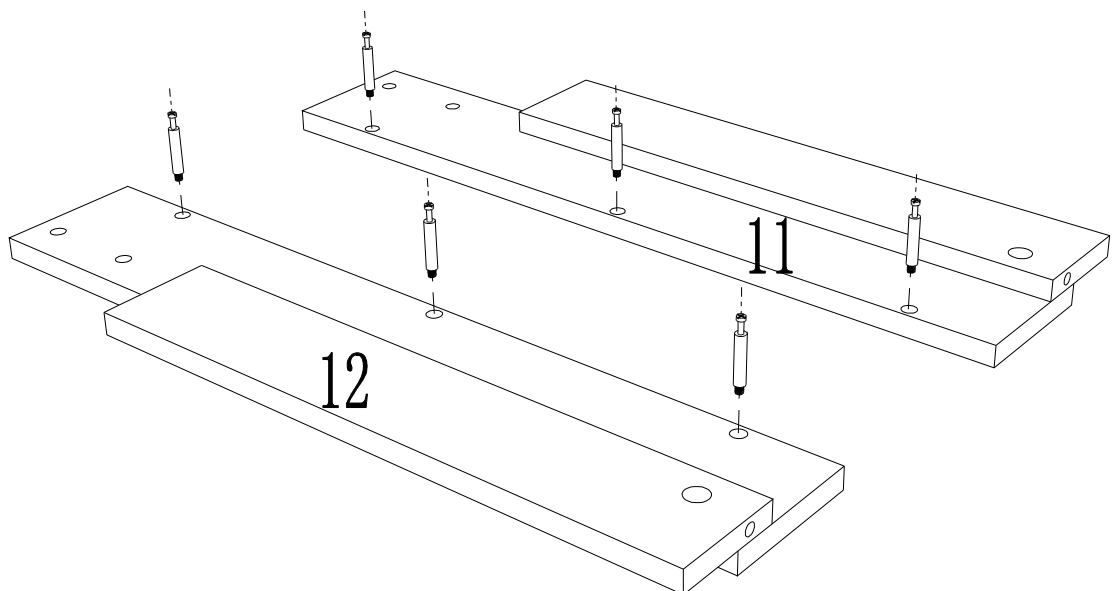 


Fig 14

B  ×6

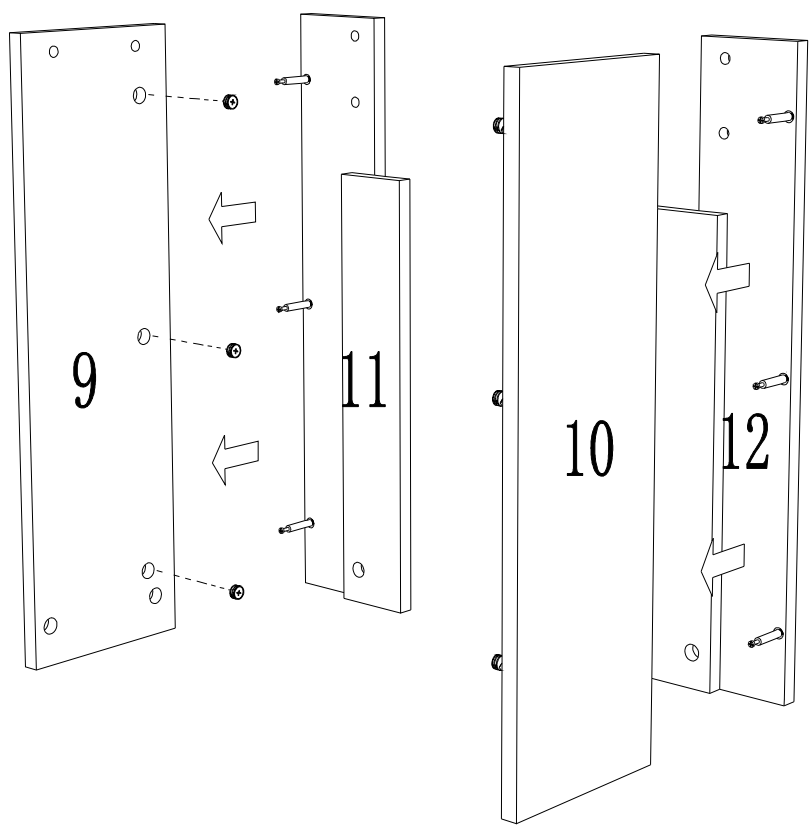 


Fig 15

B  6

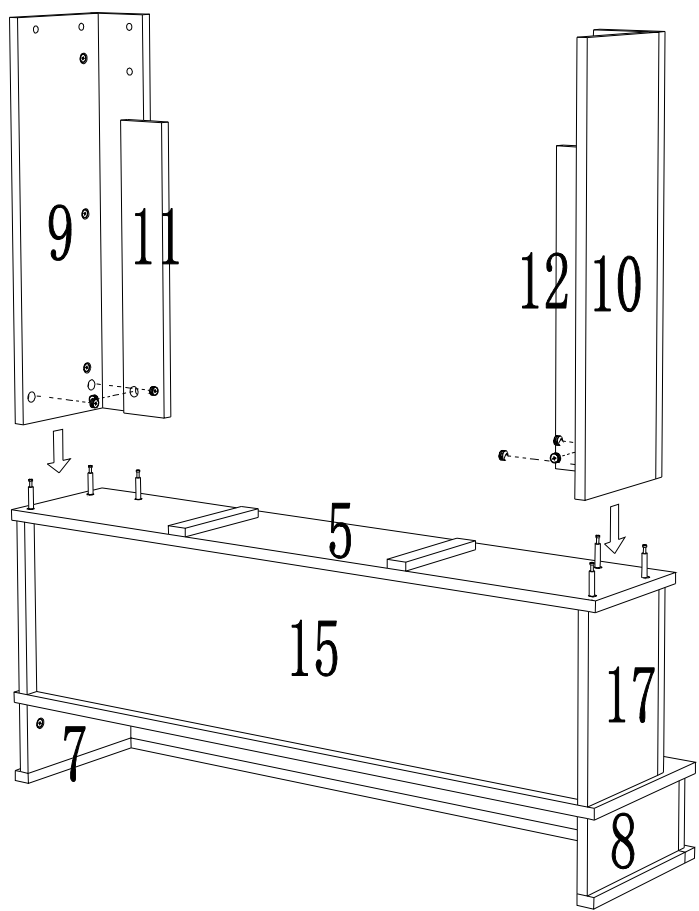 


Fig 16



 
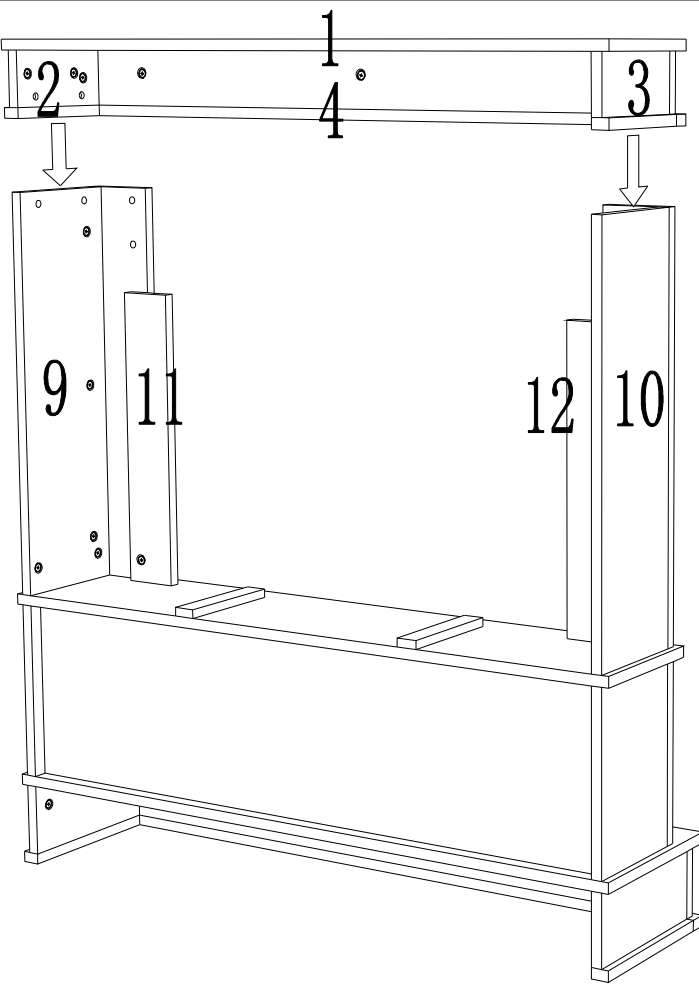 


Fig 17

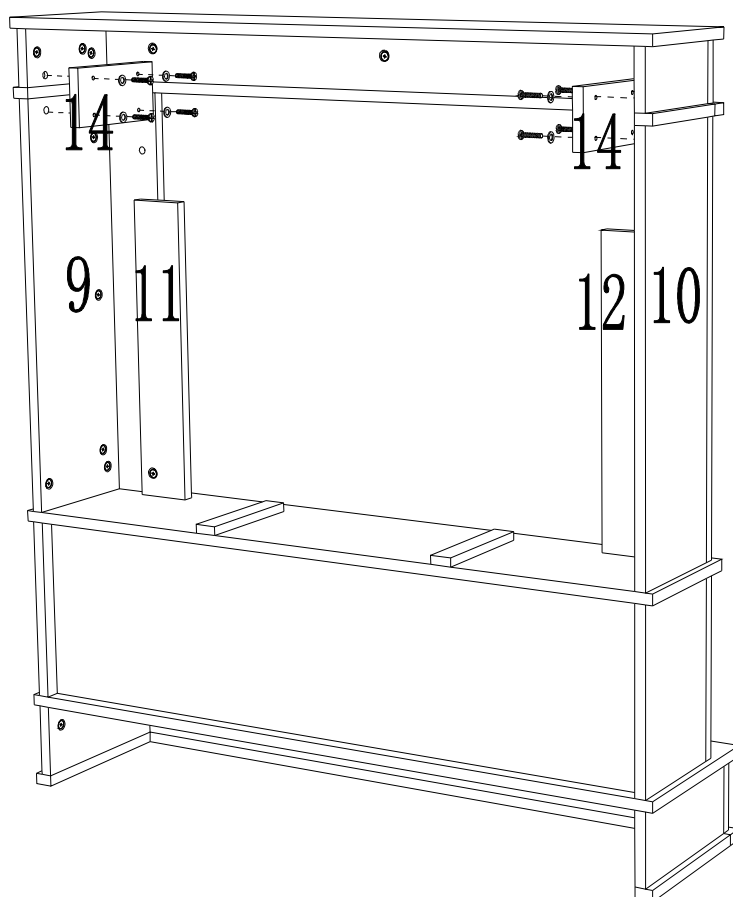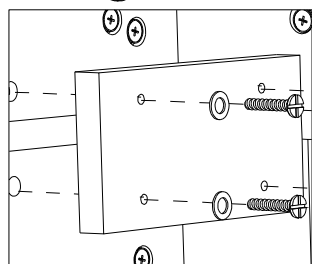 


- | | | |
|---|--|----|
| C | | ✖8 |
| D | | ✖8 |

 Fig 18

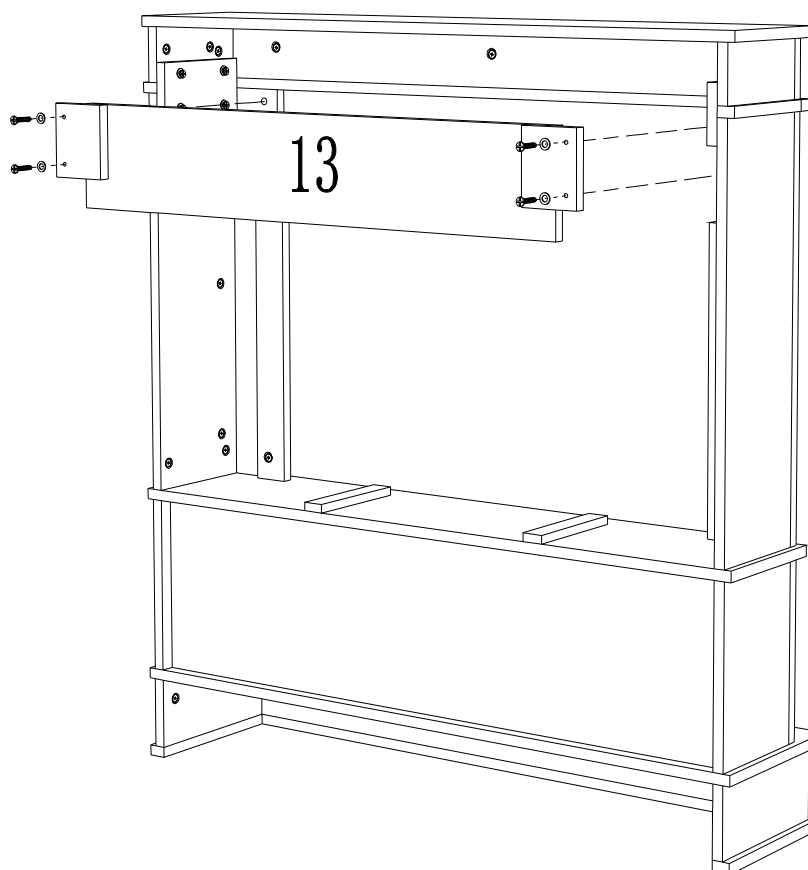

- | | | |
|---|--|----|
| C | | ✖4 |
| D | | ✖4 |

 
Fig 19

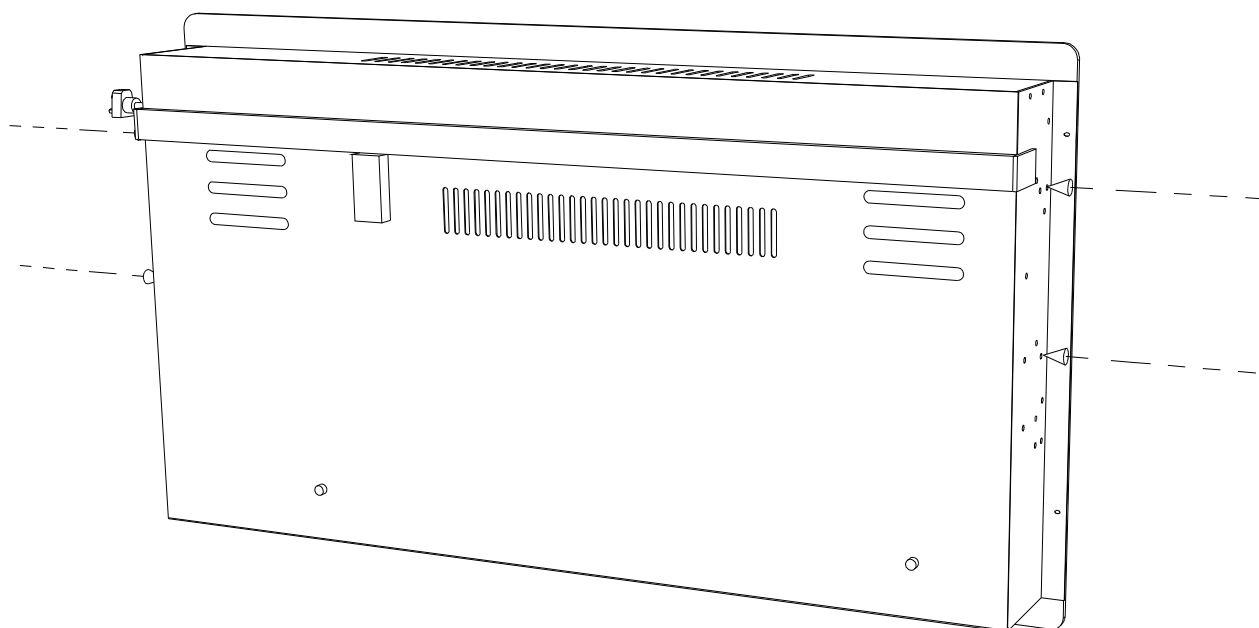

Take off the two screws in both sides of the fireplace

Fig 20

 ✕8

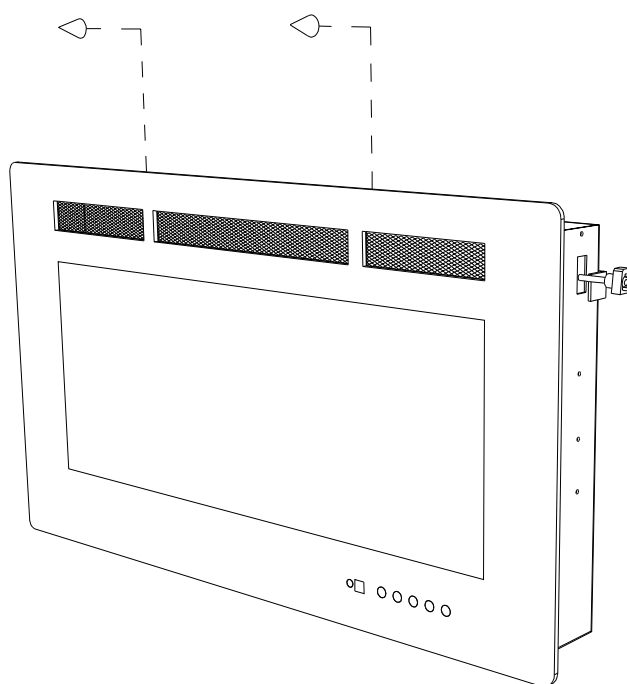

Take off the face of fireplace

Fig 21


 
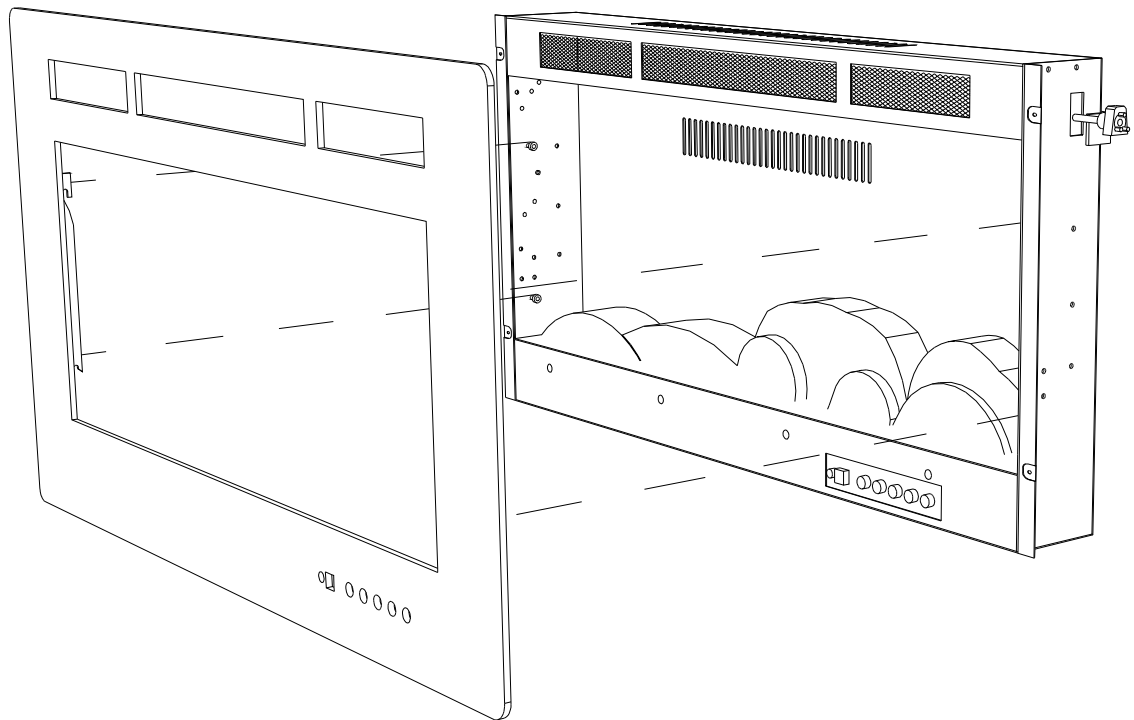 


Fig 22

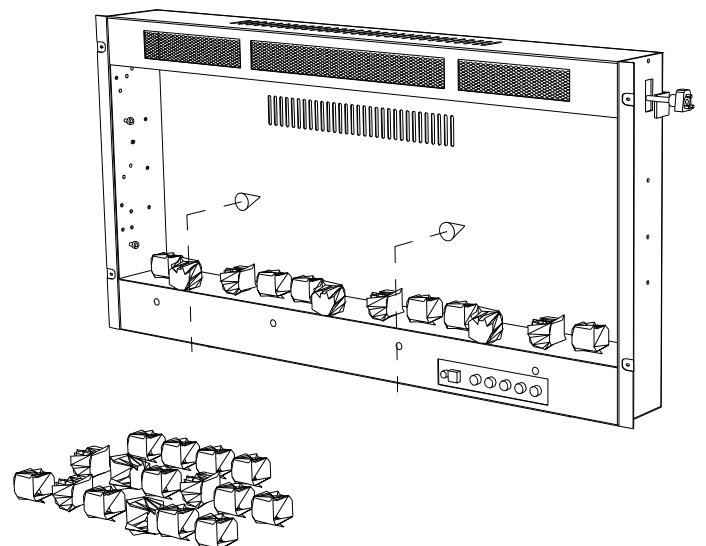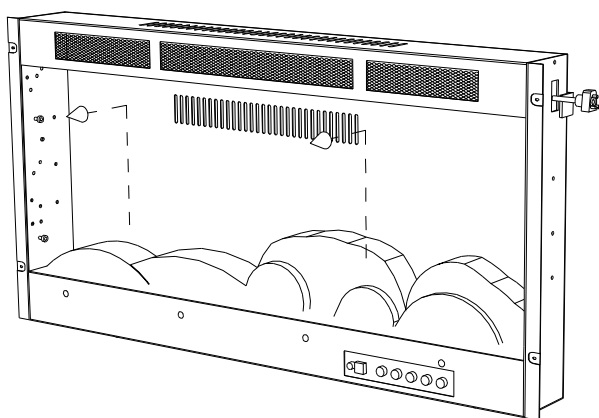 

E  X4


 
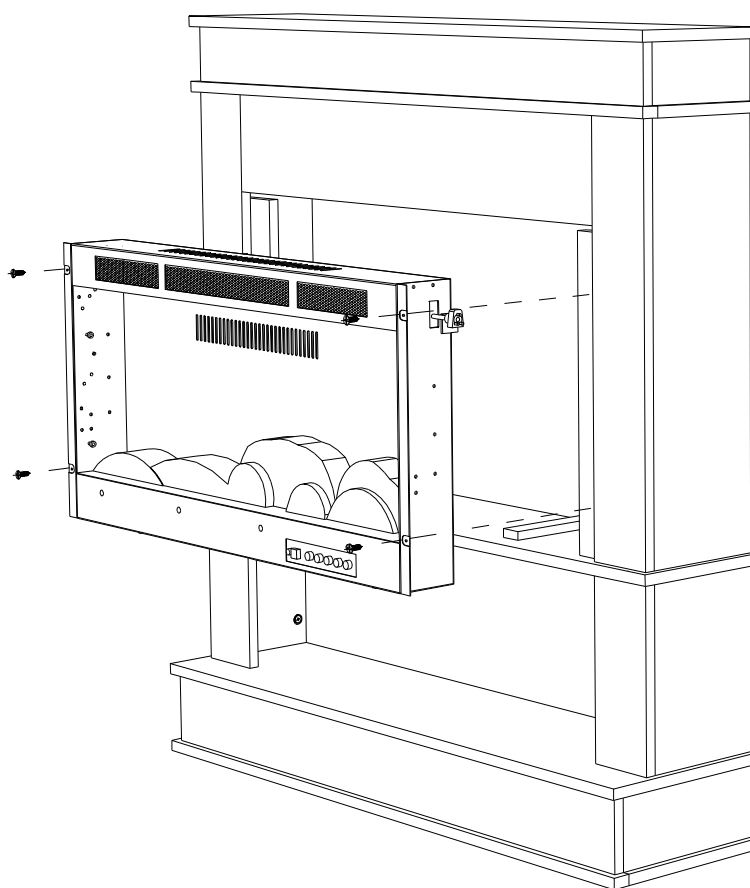 


Fig 24

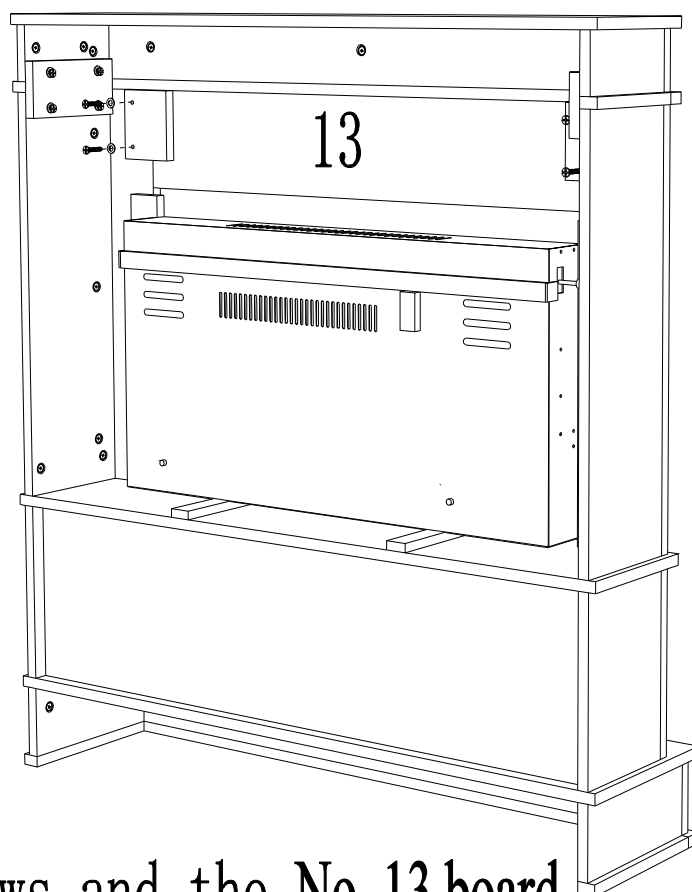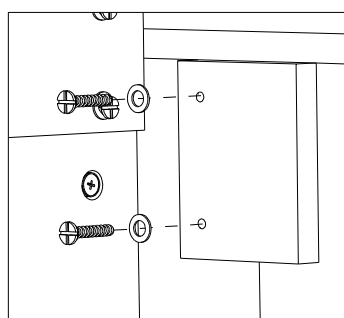 

Take off the screws and the No. 13 board

Fig 23


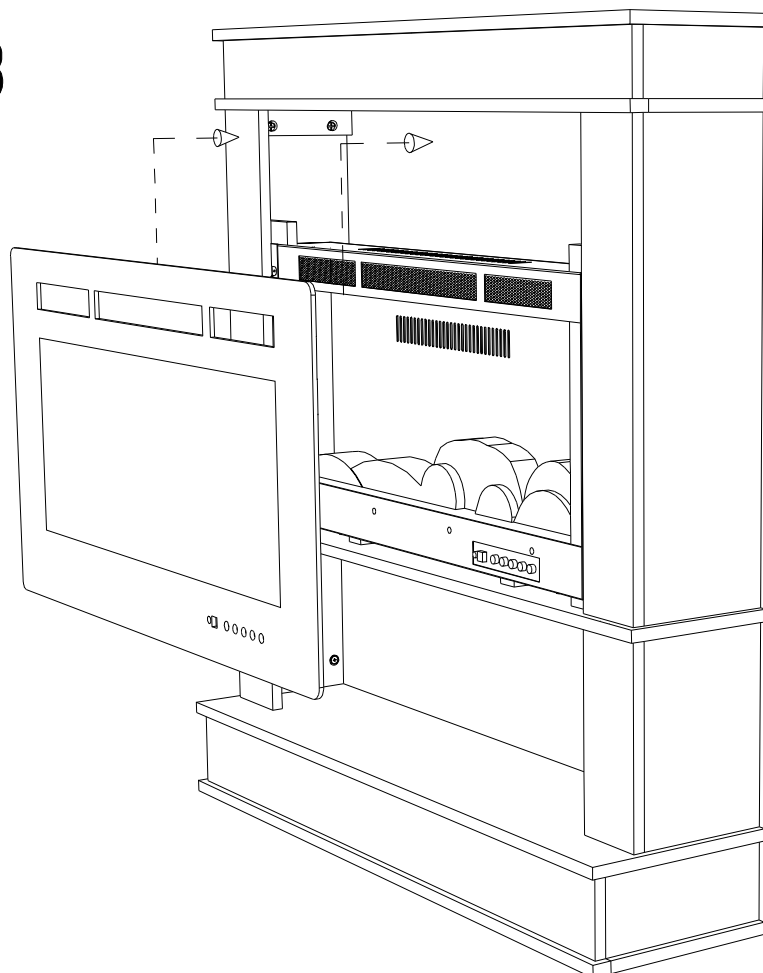 


Fig 24

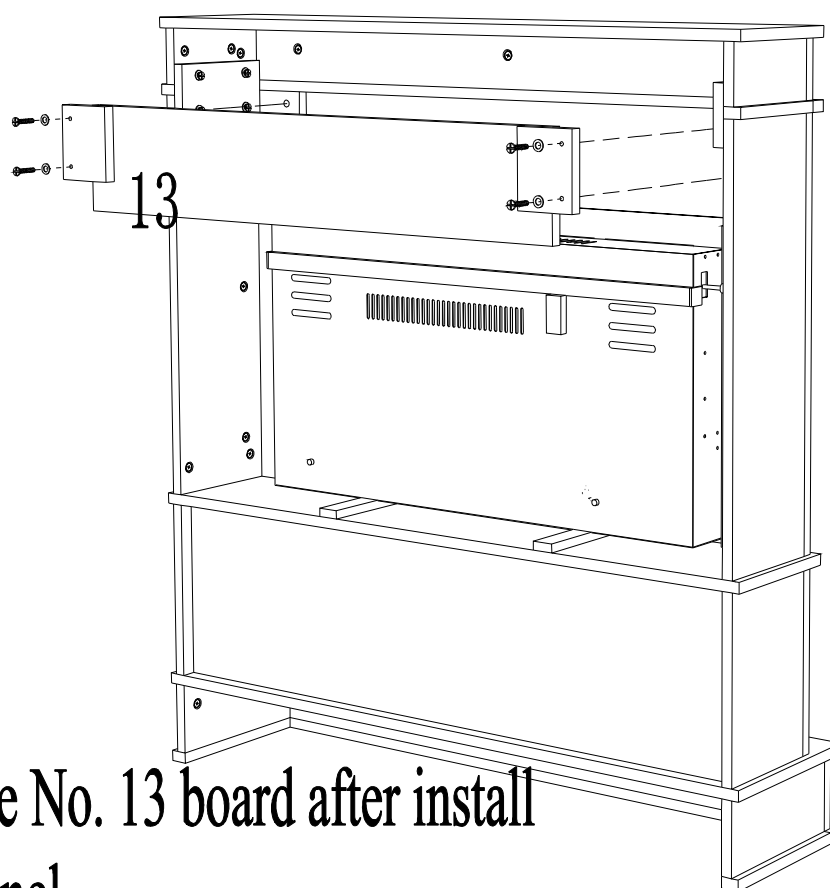 


- | | | |
|---|---|----|
| C |  | ✕4 |
| D |  | ✕4 |

Reinstall the No. 13 board after install
the glass panel

Assembly

 Anchoring the media console

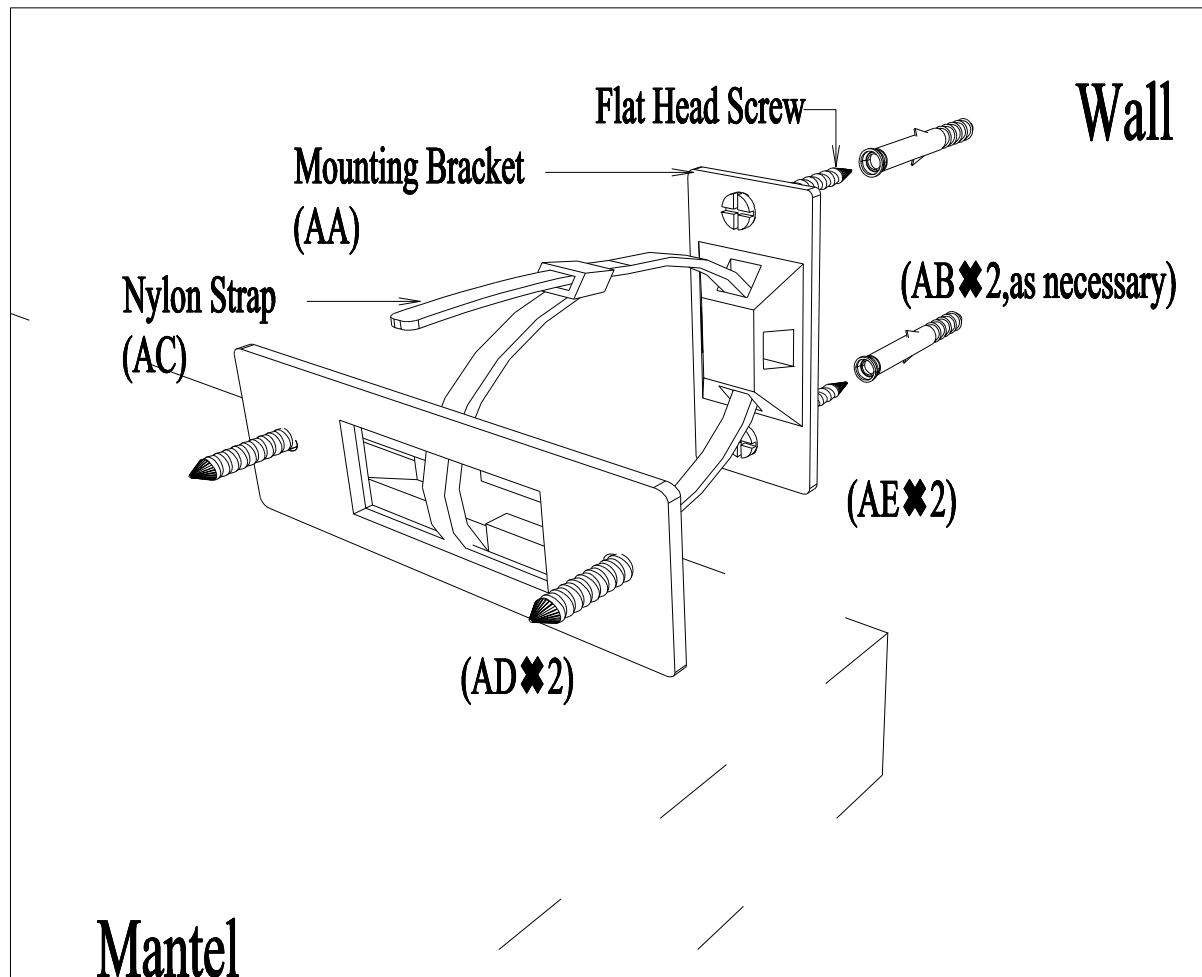

Care and maintenance



Do not use abrasive or chemical cleaners. Discolouring or damage to finish may result.
Clean media console with a non-abrasive cloth. Clean as often as necessary.

NOTE:

Excessive sun exposure may cause discolouring or fading of media console finish.