 



140 mm

INSTRUCTION MANUAL

16"RECHARGEABLE STAND FAN

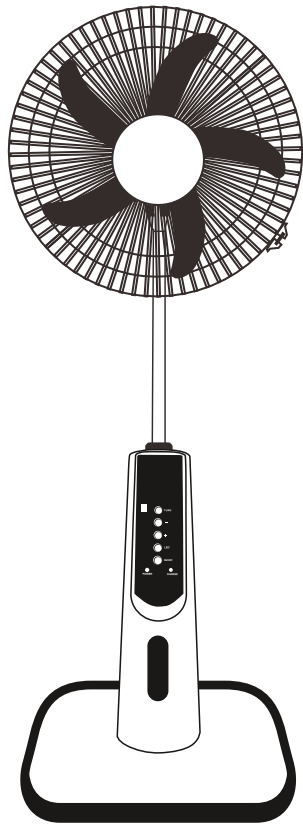

 1. Speed gear display
2. Fan blade rotation control switch
3. Stepless speed switch
4. LED switch

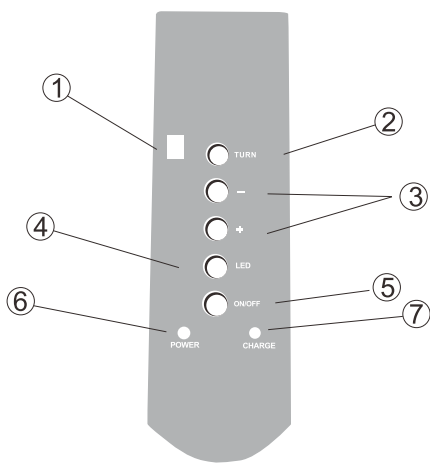


5. ON/OFF switch
6. Red LED charging indicator
7. Green LED operating indicator
8. Remote control

Thank you for using our product, please read the instruction manual carefully before initial use.

Please read these instructions before first use:

 - 1.Handle
- 2.Back cover
- 3.Fixed ring of grill
- 4.Fan blade
- 5.Fixed knob of blade
- 6.Big fixed ring
- 7.Front cover
- 8.Protecting cover

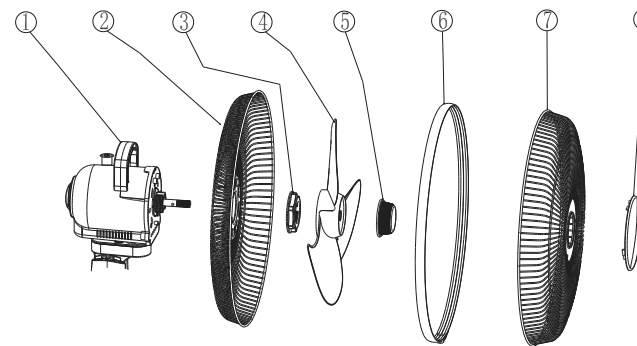

ATTENTION

 
- 1.Please read this instruction before first use.
- 2.Please ensure that the voltage indicated on the appliance corresponds with the mains voltage.
- 3.When the led gets dim, please recharge the product.
- 4.Charge at least once in every 3 months for 10hours even when the appliance is not in use.
- 5.Please keep the fan switch in OFF status when not in use.
- 6.Suitable operating ambient humidity level is 0℃~40℃.
- 7.Avoid using in water or moist.

HOW TO OPERATE

- 1.Make sure the power supply is consistent with the rating of product.
- 2.Connect the power supply, the charge indicator turn on, then the fan can be work.

FUNCTION

TURN : Control the blade to stop or turn
- : Fan speed decrease
+ : Fan speed increase
LED: Turn on or turn off LED light
NO/OFF: Turn on or turn off the fan



HOW TO CHANGE THE BATTERY

 
- 1.Loosen the fixing screw on the battery cover.
- 2.Take out the battery cover.
- 3.Pull out the battery terminal and take out old battery.
- 4.Put inside the new battery, and connect.
- 5.Put the cover and tighten the screw.

TECHNICAL DATA

- 1.Power source:110-240V 50/60Hz
- 2.Battery: 6.4V 5AH battery
- 3.Light source: 6 pcs Powerful SMD for light
- 4.Blade:16 inch
5. Charge time:10-12 hours
- 6.Duration:3-20 hours

- WARNING :**
1. The product should not be abandoned in life waste. The battery especially should be recycled after abandoning, as it is environmentally harmful.
 2. If the supply cord of the fan is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
 3. This appliance is not intended for use by person(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for the safety.
 4. Children should be supervised to ensure that they do not play with the appliance.

- 1.Place the chassis in the way shown in the figure. The main body is in the direction shown in the figure. To the right is to assemble and lock, to the left is to loosen and disassemble

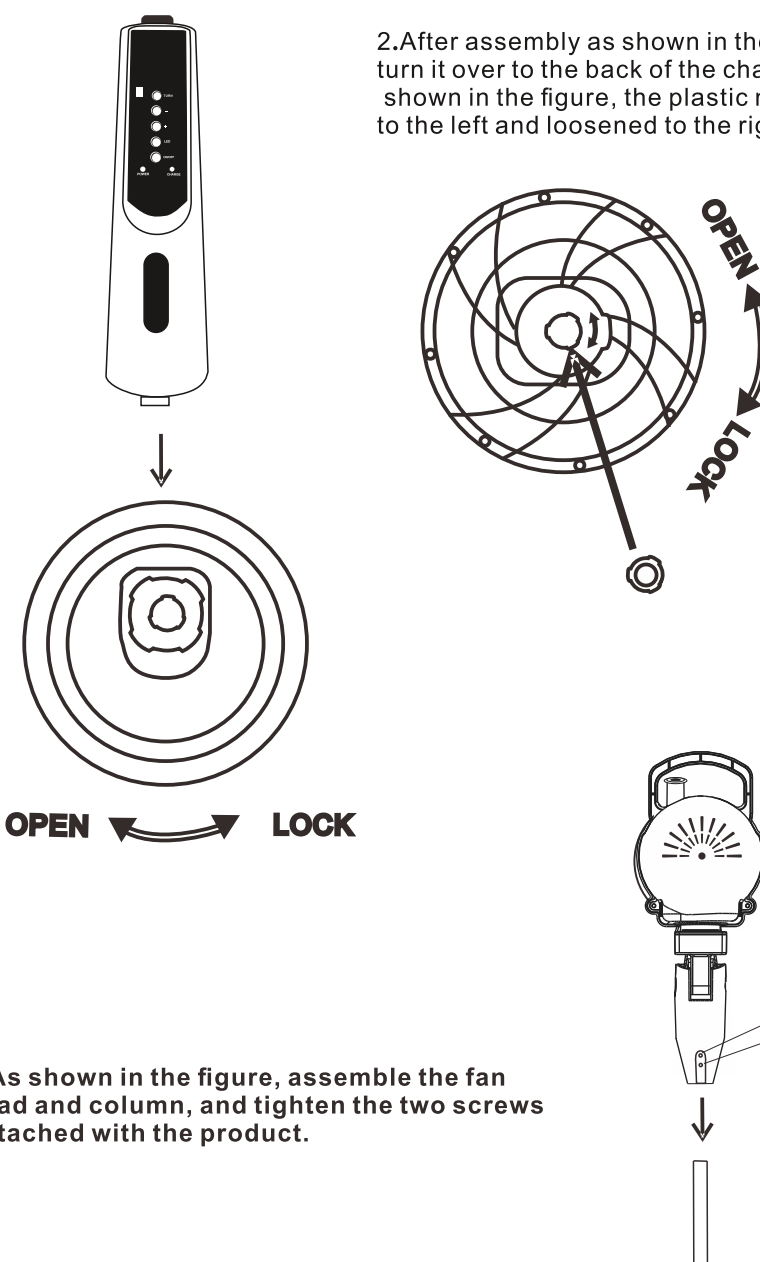

- 2.After assembly as shown in the left figure, turn it over to the back of the chassis, as shown in the figure, the plastic nut is locked to the left and loosened to the right.

- 3.As shown in the figure, assemble the fan head and column, and tighten the two screws attached with the product.