




Russell Hobbs

Operating Manual

Tidy Tub Vacuum

RHTV2001


ASSEMBLY & POWERING ON

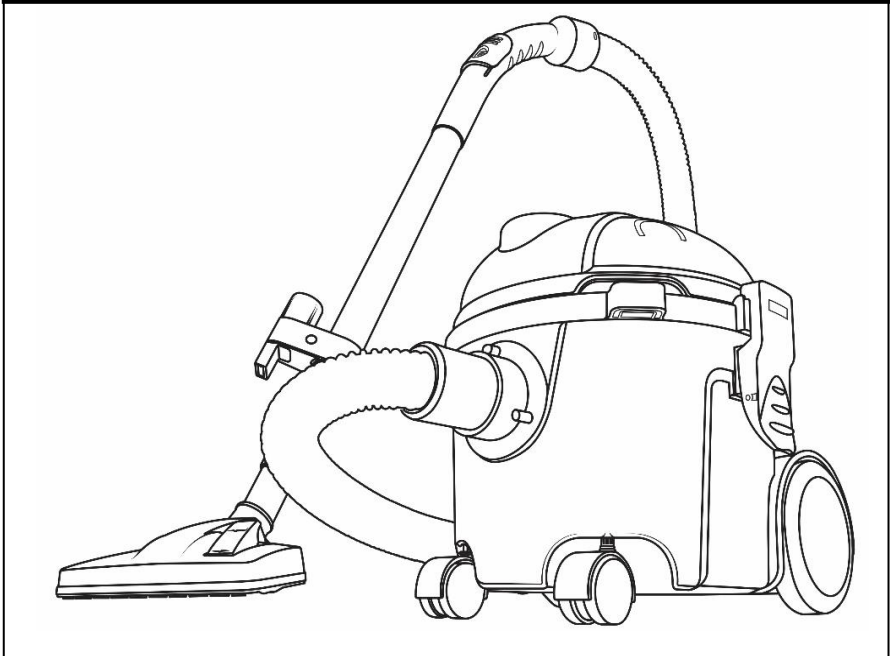


1 month

WASH FILTER
Wash the filter with cold water at least once a month

SURFACE COMPATIBILITY

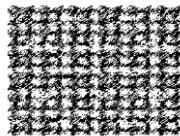

Carpet

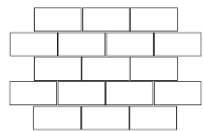

Hard Floors

GUARANTEE

At Russell Hobbs, we take all our customer feedback seriously.

Feel free to contact our Customer Services Team who will be more than happy to assist you.

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.
- This does not affect your statutory rights.

Region	Contact	Website
UK & Northern Ireland	0345 209 7461	mda.russellhobbs.com
Ireland	1 800 938982	ie.mda.russellhobbs.com
Rest of Europe	europe@productcaregroup.com	de.mda.russellhobbs.com fr.mda.russellhobbs.com es.mda.russellhobbs.com it.mda.russellhobbs.com nl.mda.russellhobbs.com

Note your serial number below for future reference



Image for illustration purposes only




IMPORTANT SAFETY INSTRUCTIONS

- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to electrical parts.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Do not use with damaged cord or plug. Do not run the vacuum cleaner over any cables, or its own power cable. As this will result in damaging the cable.
- This product is intended for household use only. Do not use outdoors.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.
- Do not direct at people, animals, electrical outlets, or equipment containing electrical components.
- Do not use this appliance to pick up water or any other liquids, combustible substances or hot/burning objects.
- Unplug from outlet when not in use, and before putting on and taking off parts, and before cleaning. Do not leave unattended whilst plugged in.

IMPORTANT SAFETY INSTRUCTIONS

- Do not use appliance if it has been dropped, damaged, left outdoors or dropped into water. Do not operate this appliance for anything other than its intended use.
- Keep the appliance and adapter away from water; do not allow it to get wet.
- If unit is wet, do not plug unit into wall socket or turn unit on. Do not immerse in water or other liquids for cleaning. Do not handle the appliance with wet hands.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, or expose cord to heated surfaces.
- The use of accessory attachments not recommended by the manufacturer may cause fire, electric shock or injury. Only use the accessories supplied by the manufacturer.
- Only use the appliance when fully assembled.
- Never place your fingers or other objects into any part of the appliance. Be aware that loose clothing or hair may become trapped in the cleaner if improperly used.
- Caution: Exhaust air discharged from the sides of the appliance may extinguish a gas fire, pilot light, or disturb ashes in an open fire. Always avoid directing the appliance toward naked flames. Before use, ensure that all of the air vents are clear and there is no restriction of air flow.
- ENSURE you turn the unit off at the very minimum every 15 minutes (for 1 minute) to let the motor cool down - failure to do so may cause motor failure. DO NOT use this unit for more than 4 hours (including rest breaks) on any given day.

PRODUCT OVERVIEW


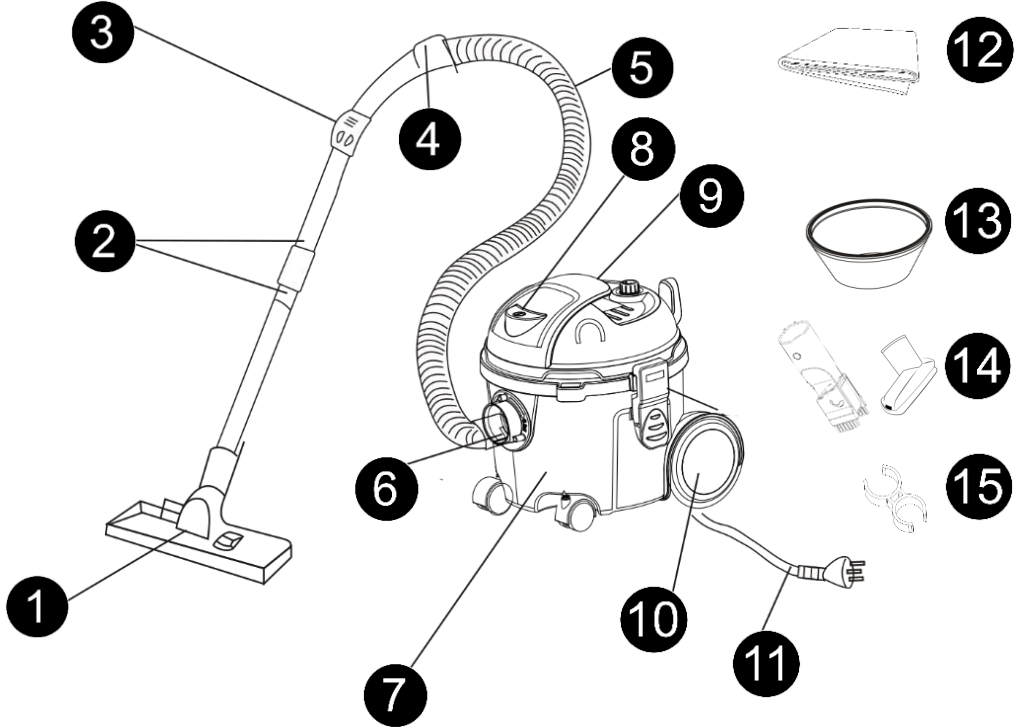


1. Floorhead
2. Metal Extension
3. Air Vent
4. Handle
5. Hose
6. Hose Inlet
7. Vacuum Body
8. On/Off Switch
9. Carry Handle

10. Wheels
11. Power Cord
12. Dust Bag
13. Cloth Filter
14. Upholstery & Crevice Tools
15. Accessory Holder


FIRST TIME USE

Release the locking block to open the up housing; take out the accessories. A dust bag will already be installed in the appliance.

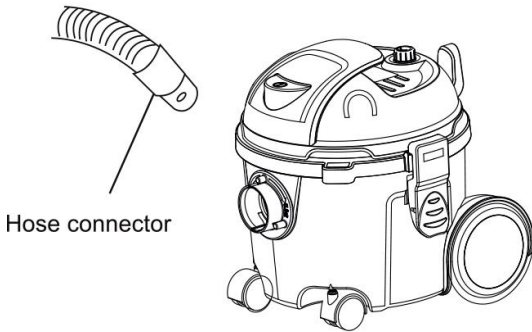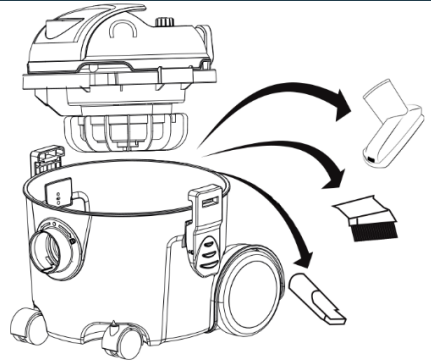

Insert the hose connector into the swivel of the Vacuum Cleaner, as shown in the diagram below.



Insert the handle into the extension tube with a twisting force. Then insert the floorhead or other accessory into the extension tube with a twisting force.

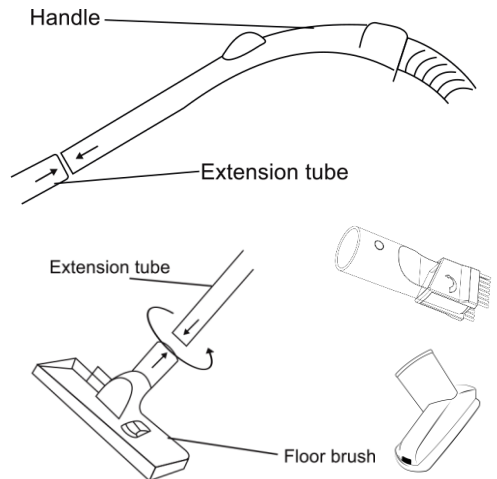

USAGE INSTRUCTIONS

Insert the plug into the socket and ensure that the appliance is switched on at the wall.

Press the switch button highlighted in the diagram to turn the vacuum cleaner on and off.

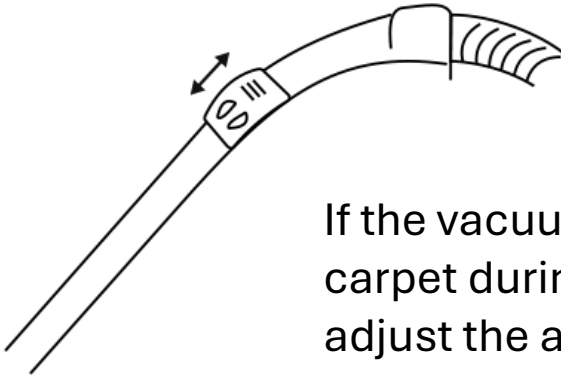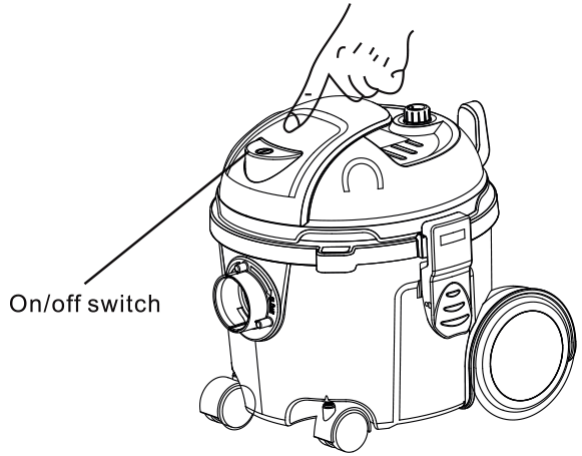


If the vacuum is 'sticking' to the carpet during use, you can adjust the airflow by pushing the sliding block up and down as shown in the diagram below.

CARE & MAINTENANCE

Cleaning the filter and cloth filter bag


- The frequency that the filters should be cleaned will depend on appliance usage. For maximum efficiency the filters should be cleaned every time the dust bag is changed.
- Switch off the cleaner and unplug the appliance from the socket.
- To clean the filter, release the locking block to open the housing and remove the lid of the vacuum.
- Turn the lid upside down, as shown in the diagram, and twist the locking knob clockwise to remove the filters.
- Gently tap the filters inside a dustbin to remove most of the dust.
- Wash the filters in cool water, rinsing under running water until the water runs clear.
- Allow the filter to air dry fully. Using a damp or wet filter will reduce the suction and damage the motor.

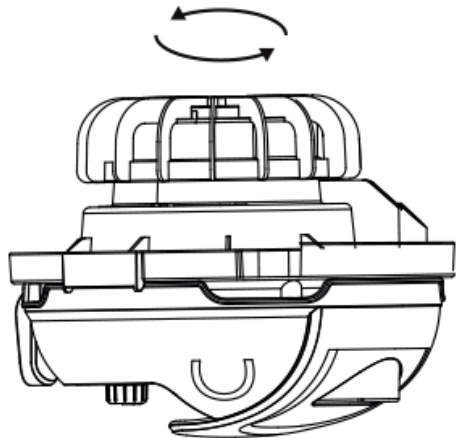



EMPTYING THE DUST BAG

When the dust bag is full or when the suction power is reduced, it is time to empty the dust bag.

- Switch off the vacuum cleaner and unplug the appliance at the socket.
- Release the locking block to open up the housing, remove the lid from the main body as shown in the diagram.
- Remove the dust bag from the suction port. Position the dust bag over a bin and empty out the dust bag, as seen below:

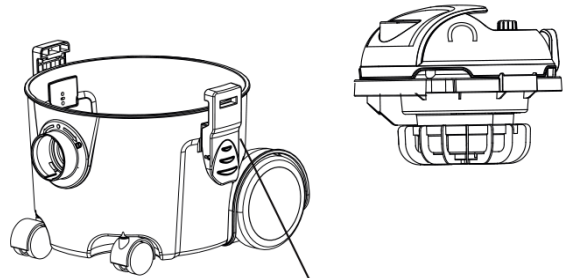


Locking block

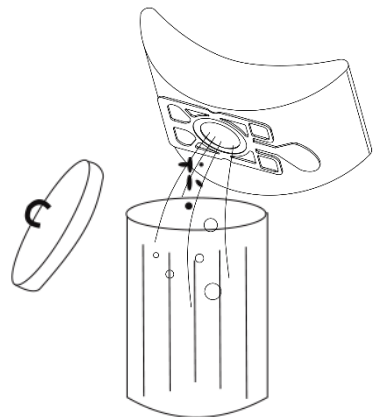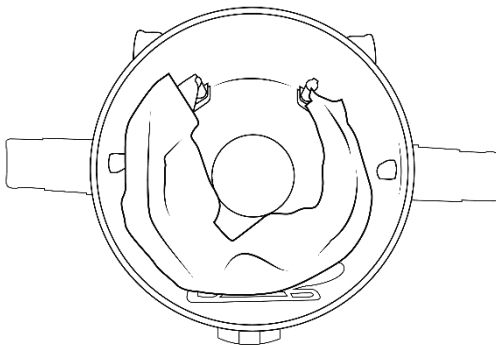


EMPTYING THE DUST BAG

- To replace the dust bag, ensure it is not folded, and align the seal ring of the dust bag with the suction port, as shown below. Then proceed to fit the seal ring to the suction port.

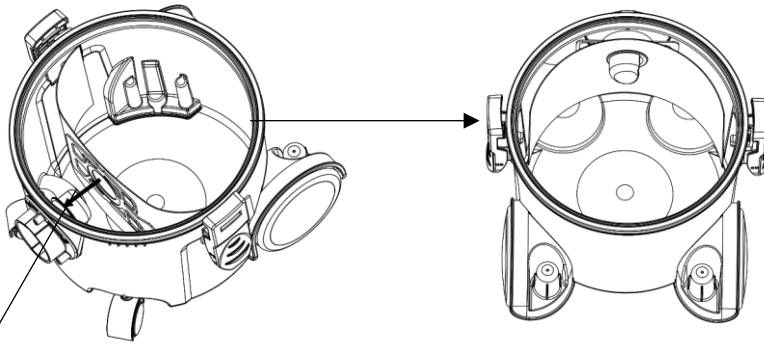

Seal Ring

- Once the dust bag has been emptied and replaced, place the top of the vacuum back on the body, and fasten the locking block.

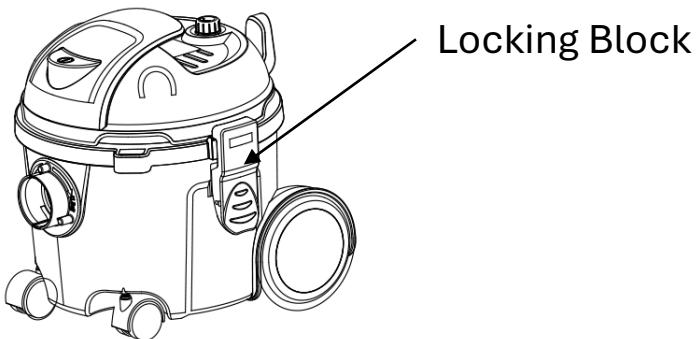

PROBLEM SOLVING

The vacuum cleaner doesn't switch on	<ul style="list-style-type: none">• Check the vacuum is plugged in• Check the socket is switched on• Check another appliance in the socket• Check for any obvious signs of damage to cord or plug• If recently used, allow to cool for 1 hour then try again
The suction is decreasing and dirt is not adequately being picked up	<ul style="list-style-type: none">• Check if the dust canister is full; if so, empty it• Clean the filters following the instructions in this manual• Check there are no blockages in the hose, and clear any obstructions
Vacuum cleaner is over heating	<ul style="list-style-type: none">• Check the filters are clean
Dust is coming out of the vacuum	<ul style="list-style-type: none">• The dust canister has not been fitted correctly. Refit the canister following the instructions in this manual.
The air exhausted from the vacuum smells	<ul style="list-style-type: none">• Clean the filters, hose, and dust container following the instructions in this manual
The vacuum cleaner has cut out	<ul style="list-style-type: none">• Allow the vacuum to cool for 1 hour. Clean all filters and dust containers before trying to use again.

ENERGY CONSUMPTION

Product information for power consumption and maximum time to reach applicable low power mode

Off mode	Power Consumption (Off Mode)	0.0W
	Setting and the maximum time need to reach the applicable low power condition	At once after the switch is turned off
Standby mode	Power Consumption (Standby)	Not applicable
	Setting and the maximum time needed to reach the applicable low power condition	The appliance does not incorporate a standby mode

NOTES

NOTES

NOTES



Russell Hobbs

Made by Product Care Trading Limited under license from Spectrum Brands (UK) Limited. Product Care Trading Ltd, Unit 1, Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom

Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland. Russell Hobbs is the registered trademark of Spectrum Brands (UK) Ltd.

UK
CA



The 'wheellie bin' symbol is known as the 'Crossed-out wheellie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit www.sedex.org.uk for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.

Revision 2.1