

Assembly Guide


C – Frame Hanging Chair Stand

Model # 4750BR

Maximum
Weight
Capacity
275 Lbs.

PARTS LIST

- A – Two (2) Base Pieces
- B – One (1) Upper Upright
- C – One (1) Lower Upright
- D – Two (2) Long Bolts
- E – Two (2) Short Bolts
- F – Four (4) Washers
- G – One (1) Allen Wrench
- H – Two (2) Nuts
- I – One (1) Nut Wrench
- J – One (1) Carabiner Hook

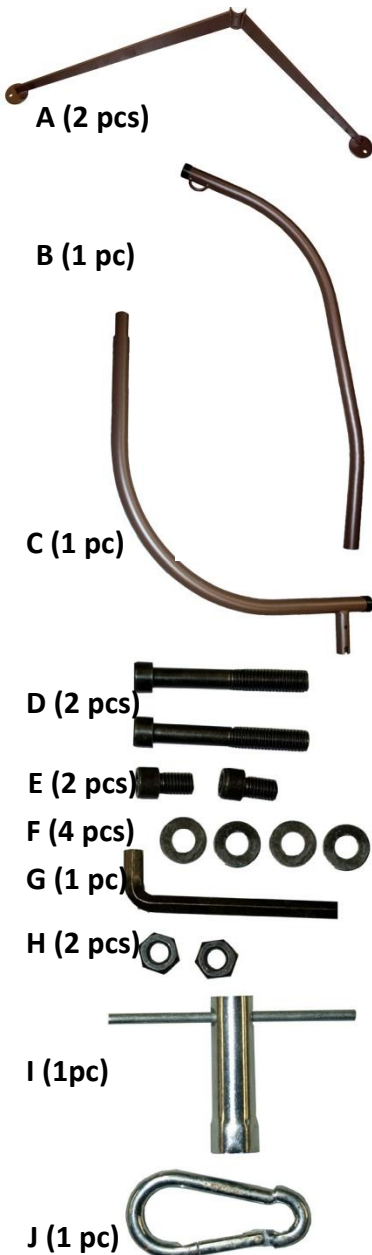

ASSEMBLY INSTRUCTIONS

1. Place the two base pieces (Parts A) on a level surface as shown in Exhibit 1.
2. Locate a long bolt (Part D). Place a washer (Part F) on the bolt. Insert Long bolt with washer through the bottom hole of the base pieces as shown in Exhibit 2. Place another washer (Part F) and a Nut (Part H) on the bolt. Finger tighten only.
3. Locate Lower Upright piece (Part C) and insert into base assembly as shown in Exhibit 3. Notch in lower end of base insert should go over bolt. (Be sure the plastic end cap of lower upright is facing towards the shorter legs, as in Exhibit 4). Locate the second long bolt (Part D) and washer (Part F) and insert into upper hole of base assembly. Use another washer (Part F) and Nut (Part H). Now tighten both bolts in the base assembly using the Allen Wrench (Part G) and the Nut Wrench (Part I)
4. Locate the Upper Upright piece (Part B) and place onto the top of the Lower Upright piece so that holes are aligned as in Exhibit 5.
5. Locate the two shorter bolts (Parts E), and with the holes of the upper and lower upright pieces aligned, insert the bolts into the two holes. Tighten securely with the Allen Wrench (Part G)
6. Locate the Carabiner Hook (Part J). Clip onto the rung at the top of the stand, as in Exhibit 7.
7. Assembled hanging chair frame. Exhibit 8.

CAUTION! ALWAYS USE STAND ON A LEVEL SURFACE. DO NOT SWING, BOUNCE OR JUMP WHEN USING THIS PRODUCT. SERIOUS INJURY CAN RESULT FROM IMPROPER USE.

The C-Frame stand and net chair have a maximum weight capacity of 275 lbs. Never exceed maximum weight capacity of the stand, or hanging chair being used. Inspect hooks and hardware before use to assure all connections are tight and secure. If the functionality of any hardware has been compromised in any way, do not use this product as doing so could result in serious injury. Before each use, make sure base is secure and located on a flat level surface. Inspect overall condition before using this product. Children should never use this product without adult supervision.

Care Instructions: For maximum life on this product, it is recommended that the unit be taken out of the elements during extreme weather conditions. Clean stand with a mild soap and warm water. Dry with cloth.

Call or email for questions or missing parts. (800) 295-6758

Email: customerservice@algomanet.com

