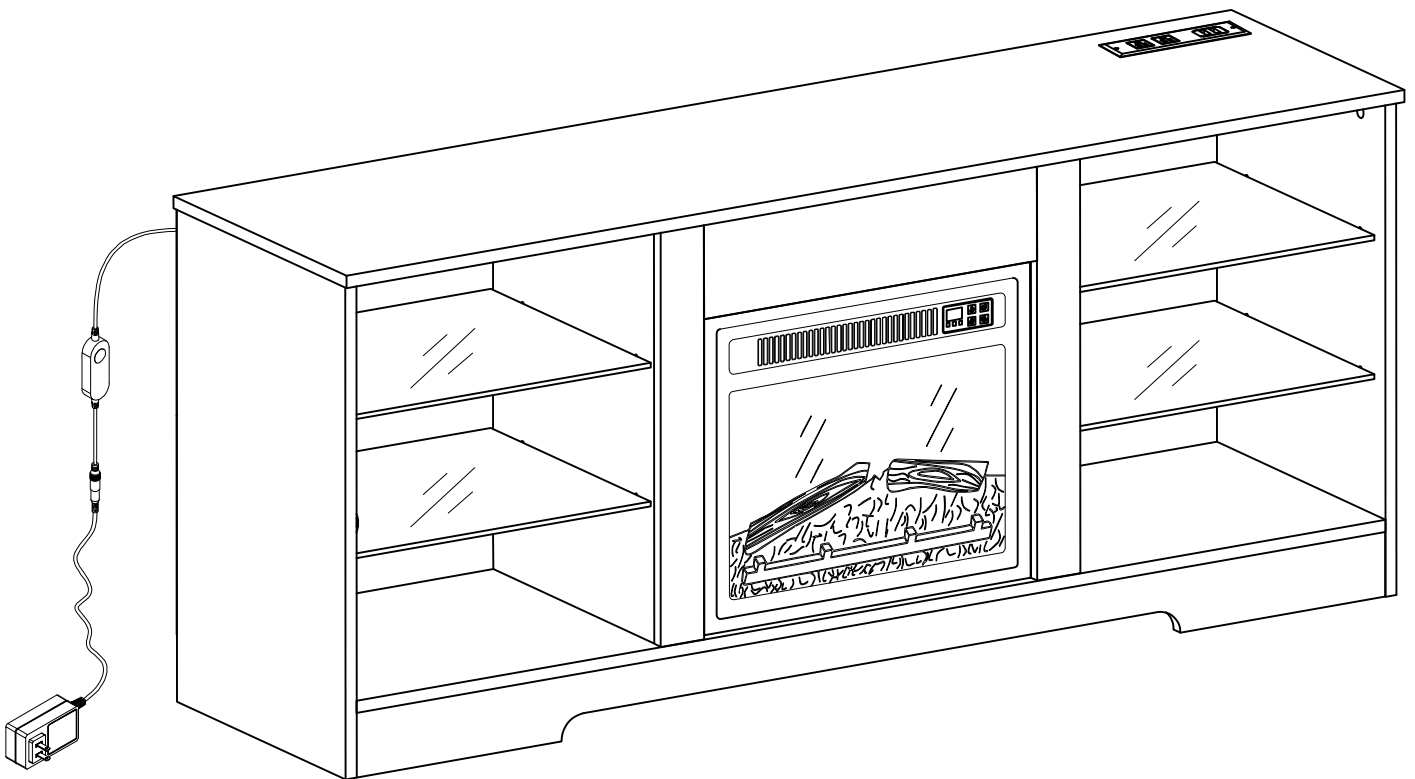 
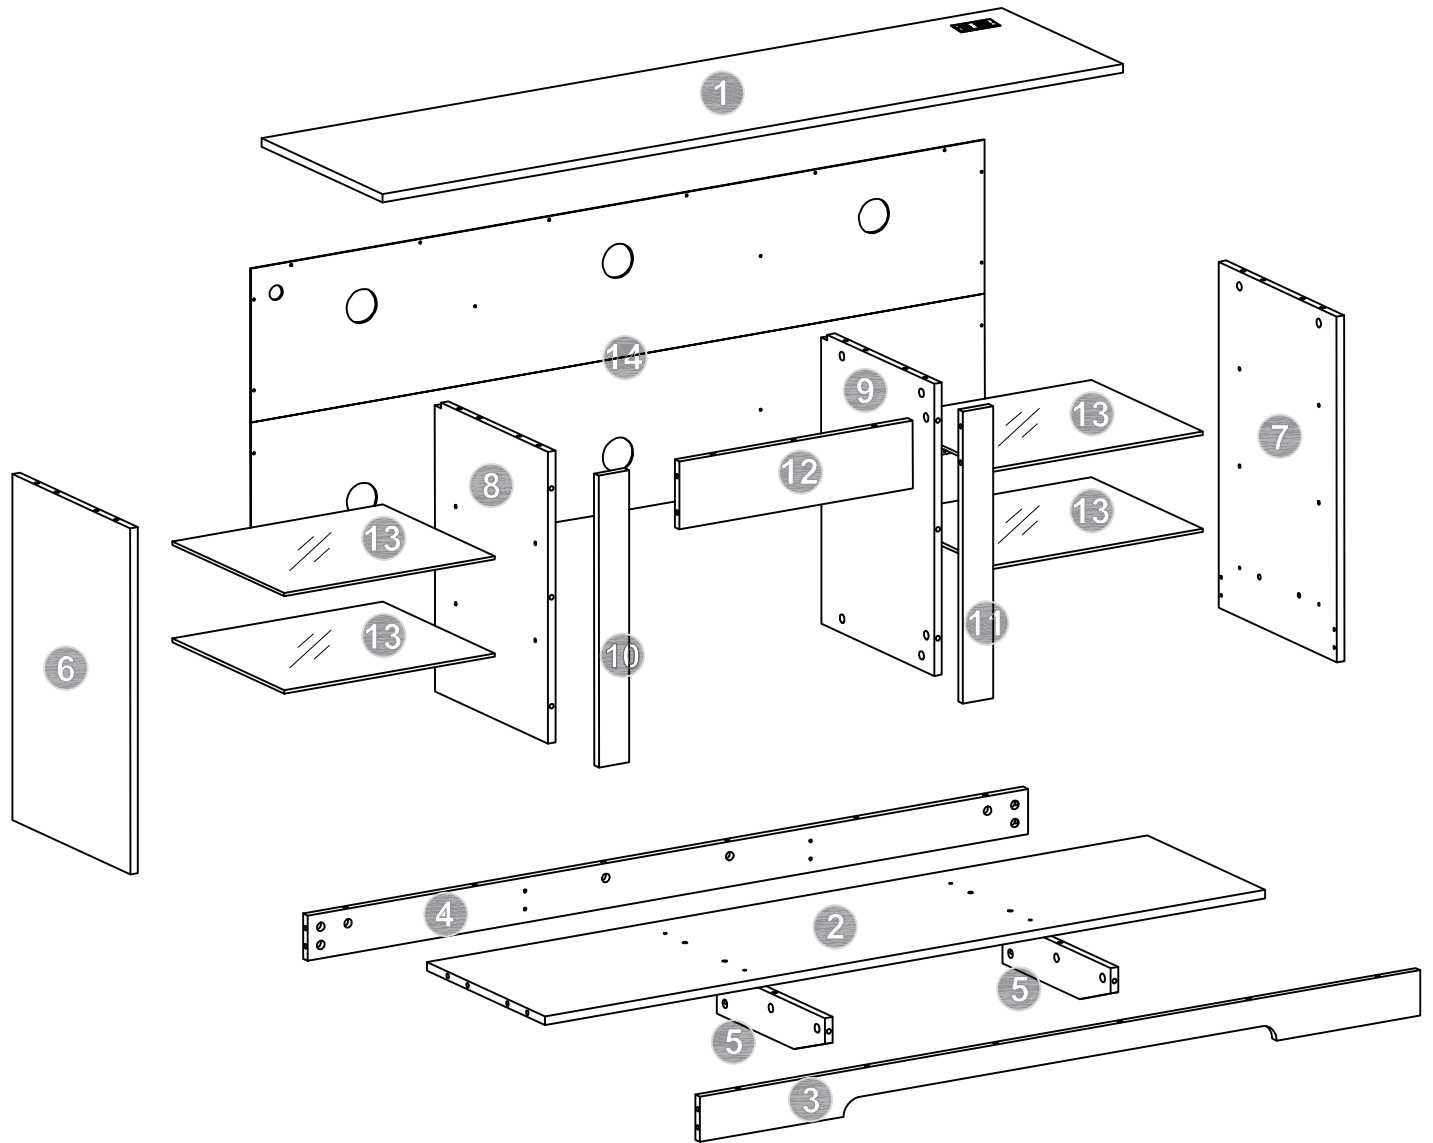 


Lighted TV Stand w/Fireplace

 
 
 
 
 
 
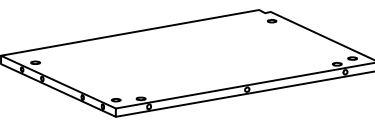 
 
 
 
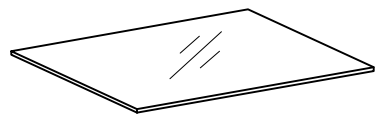 
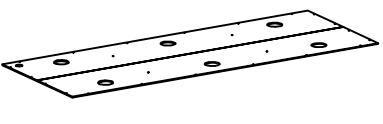 
Assembly Instructions












PACKAGE INCLUDE













PART IDENTIFICATION

 1 1x	 2 1x	 3 1x	 4 1x
 5 2x	 6 1x	 7 1x	 8 1x
 9 1x	 10 1x	 11 1x	 12 1x
 13 4x	 14 1x		

         PART IDENTIFICATION

 1 1x	 2 1x	 3 1x	 4 1x
 5 2x	 6 1x	 7 1x	 8 1x
 9 1x	 10 1x	 11 1x	 12 1x
 13 4x	 14 1x		

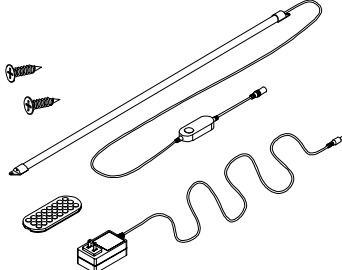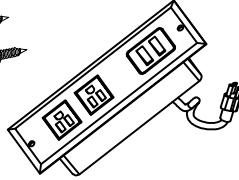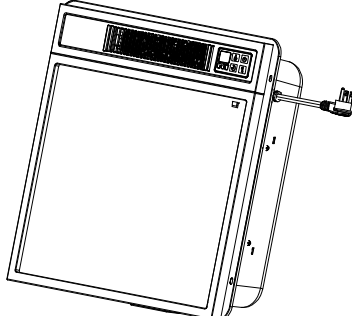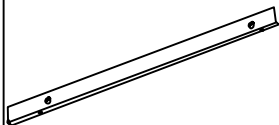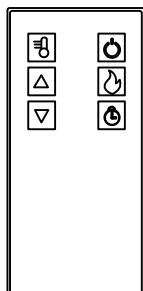          
PACKAGE CONTENT

PACKAGE CONTENT				
	Ø15x11MM 	Ø8x30MM 	Ø8x40MM 	
A 46x+1	B 46x+1	C 23x+1	D 4x+1	
	Ø3x14MM 		Ø3.5X12MM 	
E 16x	F 24x+1	G 1x	K	
				
Fireplace Unit	Top Trim	Side Trim	Screw	Remote Control
W 1x	X 1x	Y 2x	Z 12x	H 1x

— 3 —

STEP 2

	
A 10X	C 4X

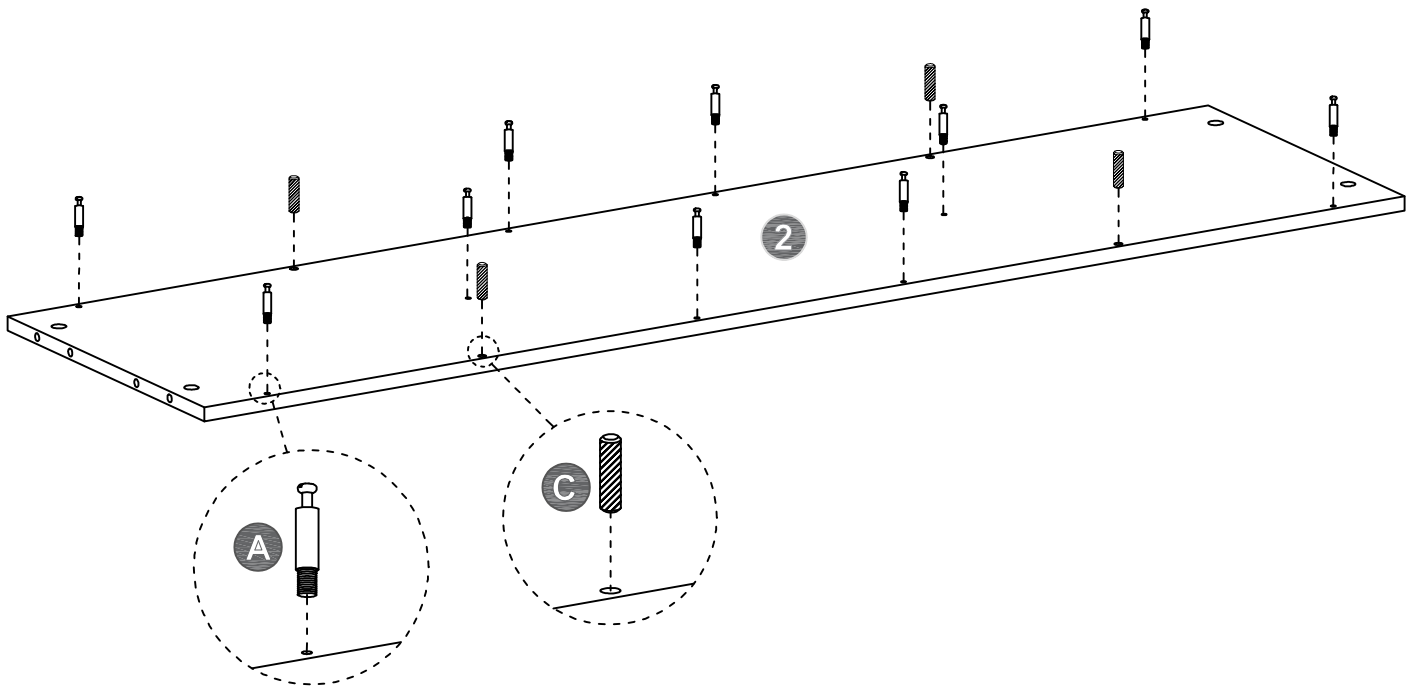 


STEP 3



B

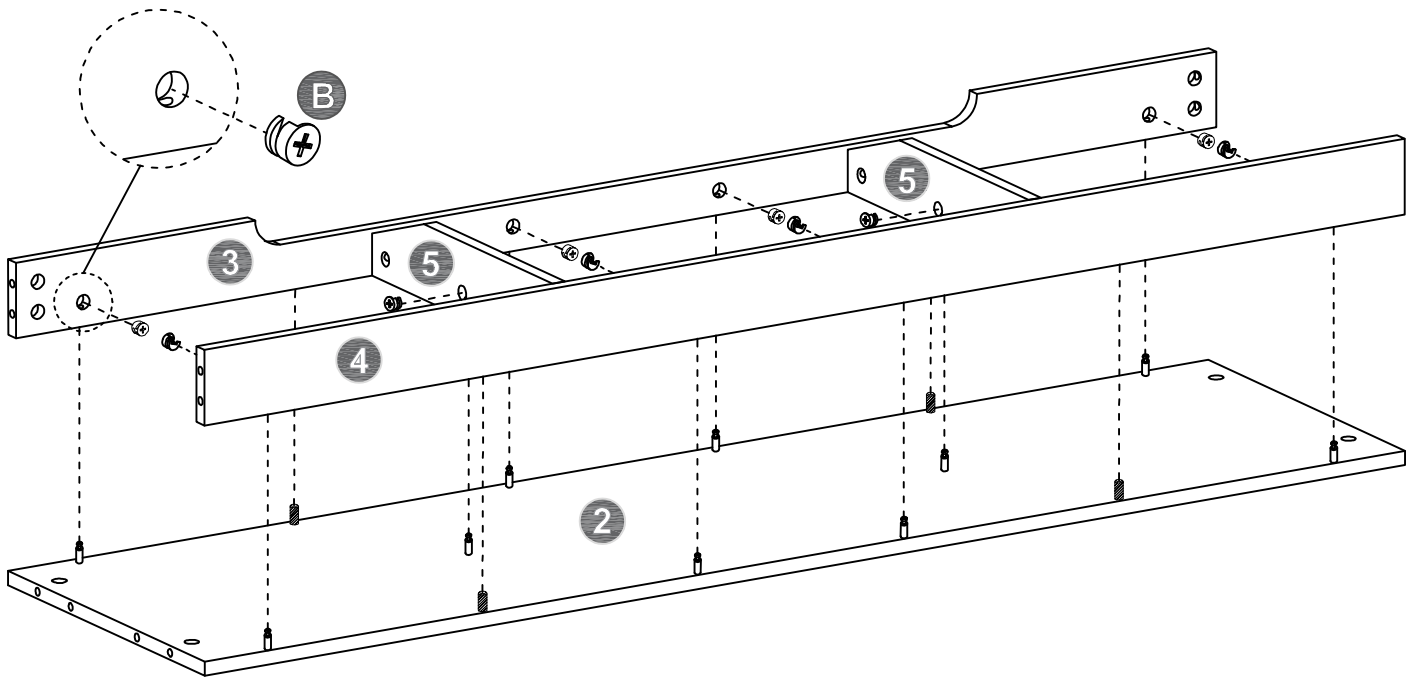 10X






STEP 4




A

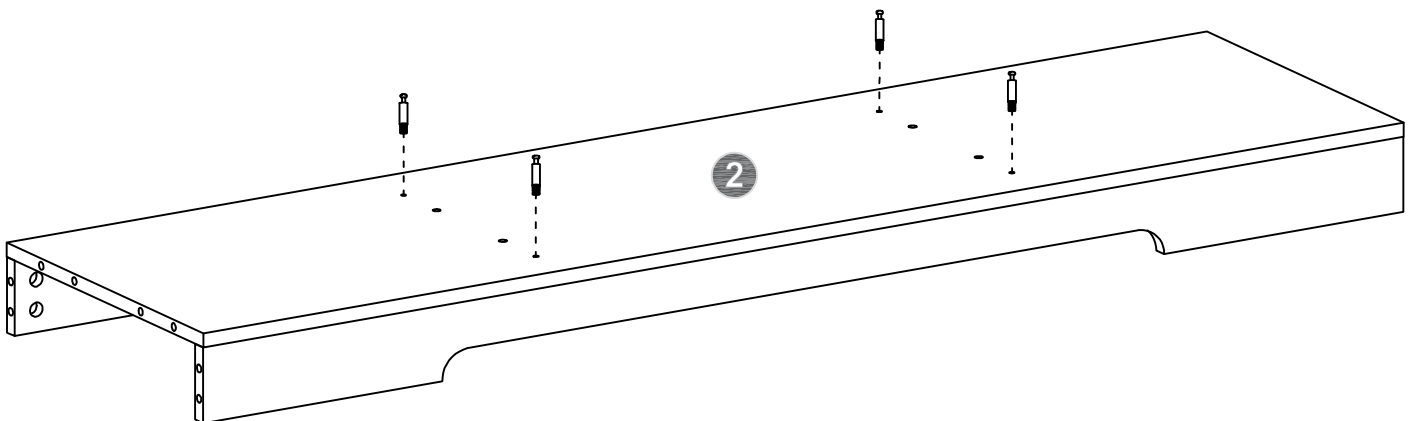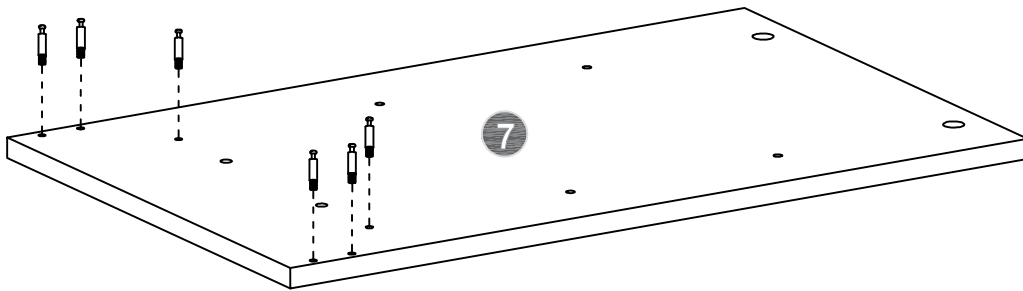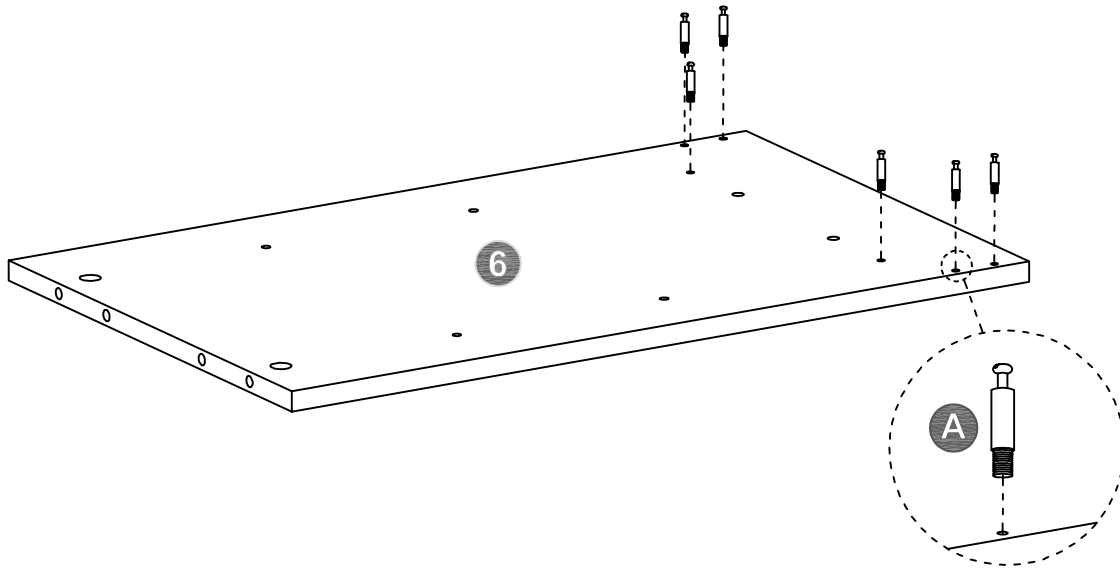   16X









STEP 5

	
B 12X	C 4X

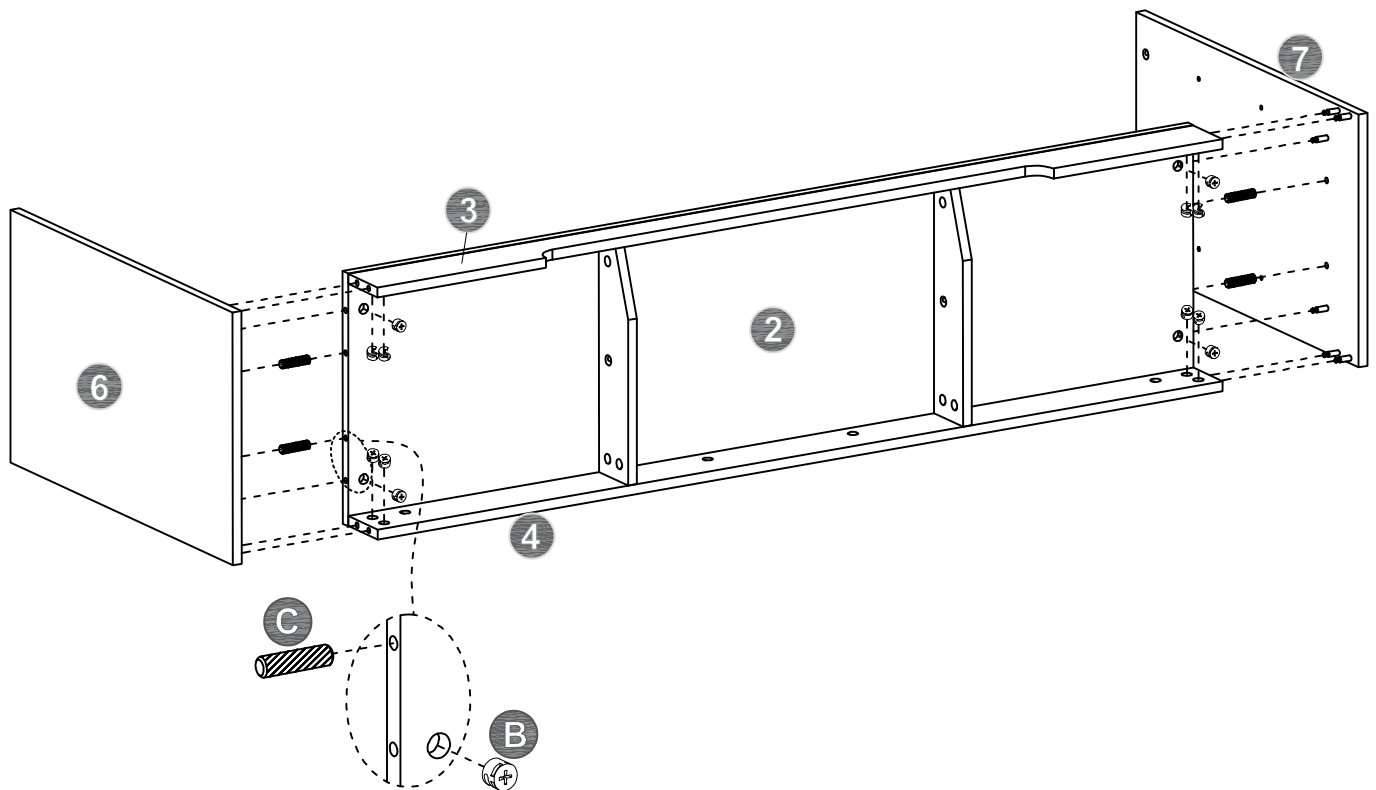 


 STEP 6

		
A 4X	B 4X	C 2X

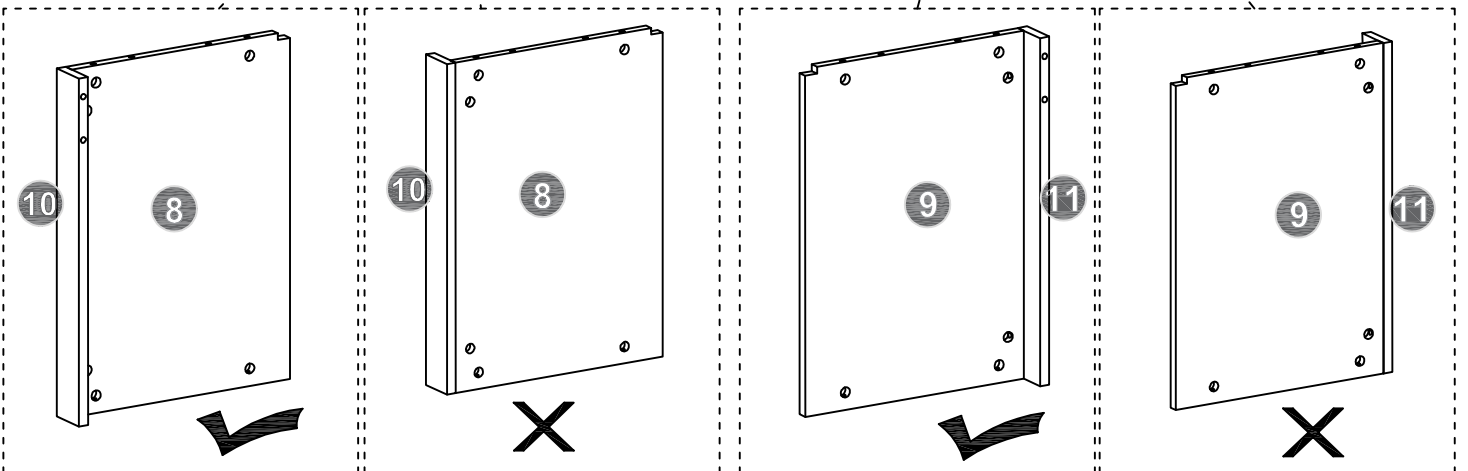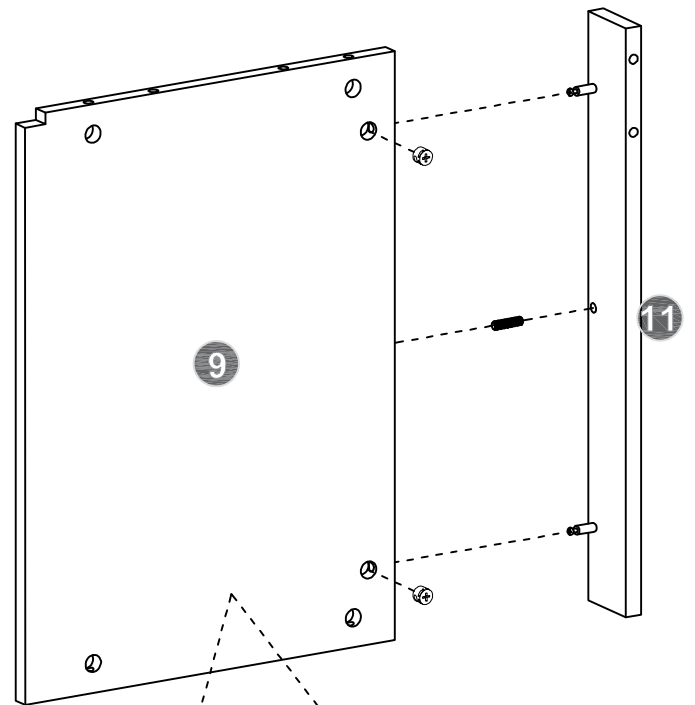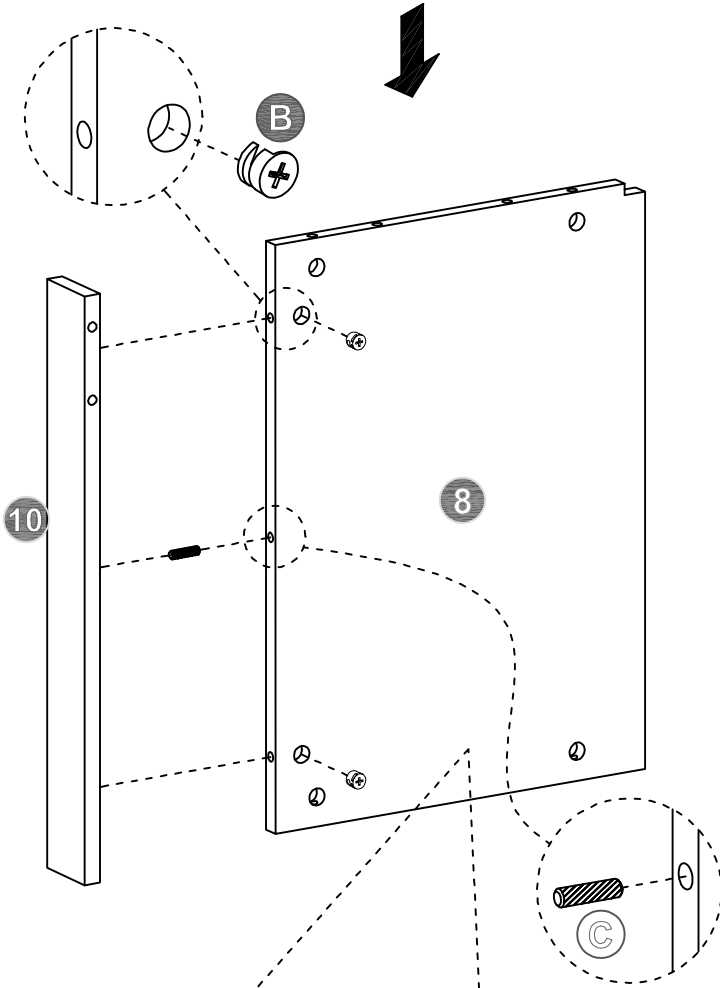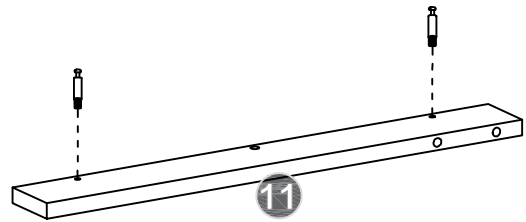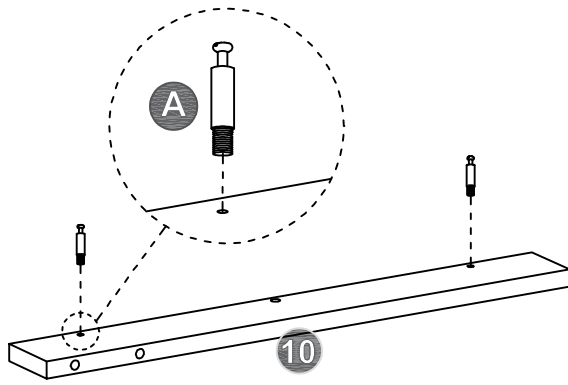     


 STEP 7




D

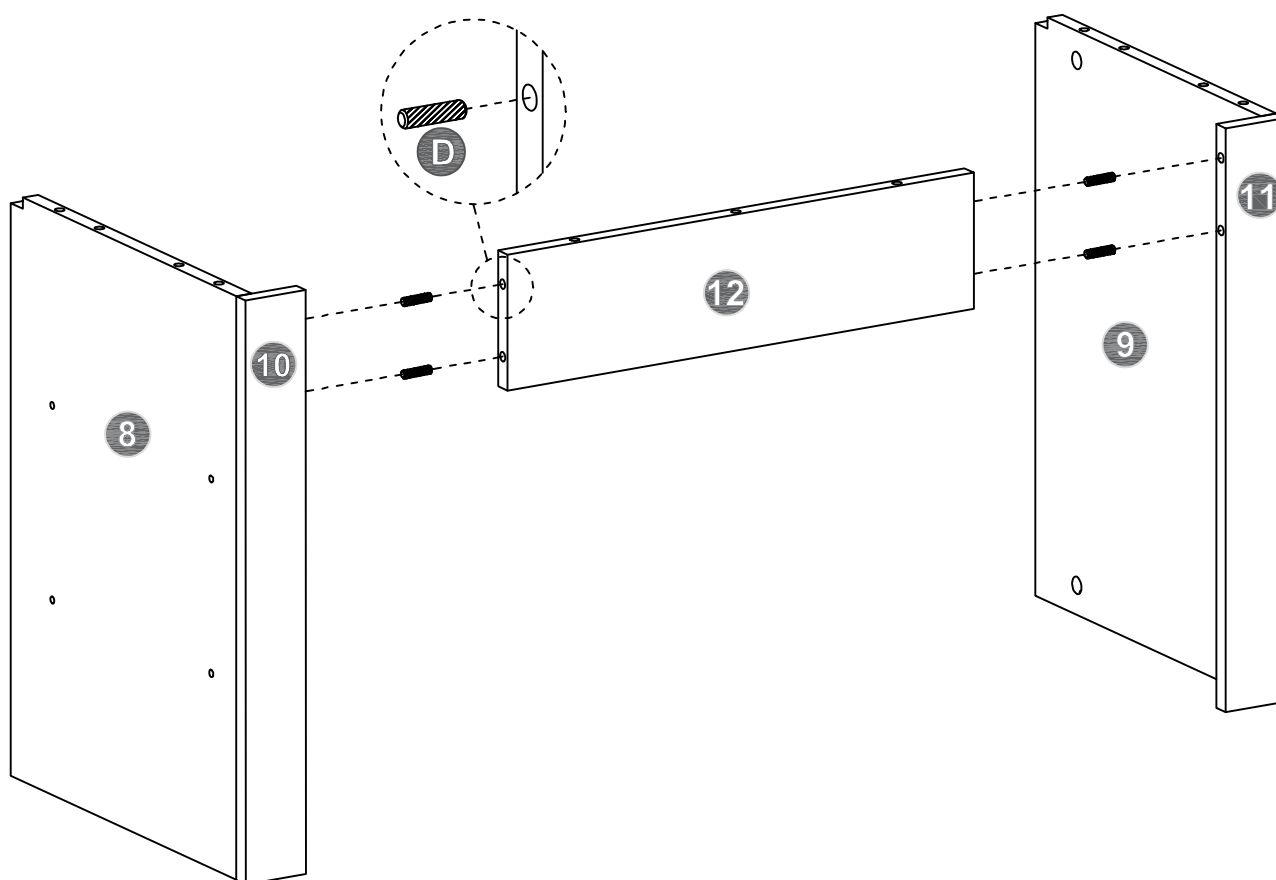 4X






STEP 8


	
B 4X	C 4X

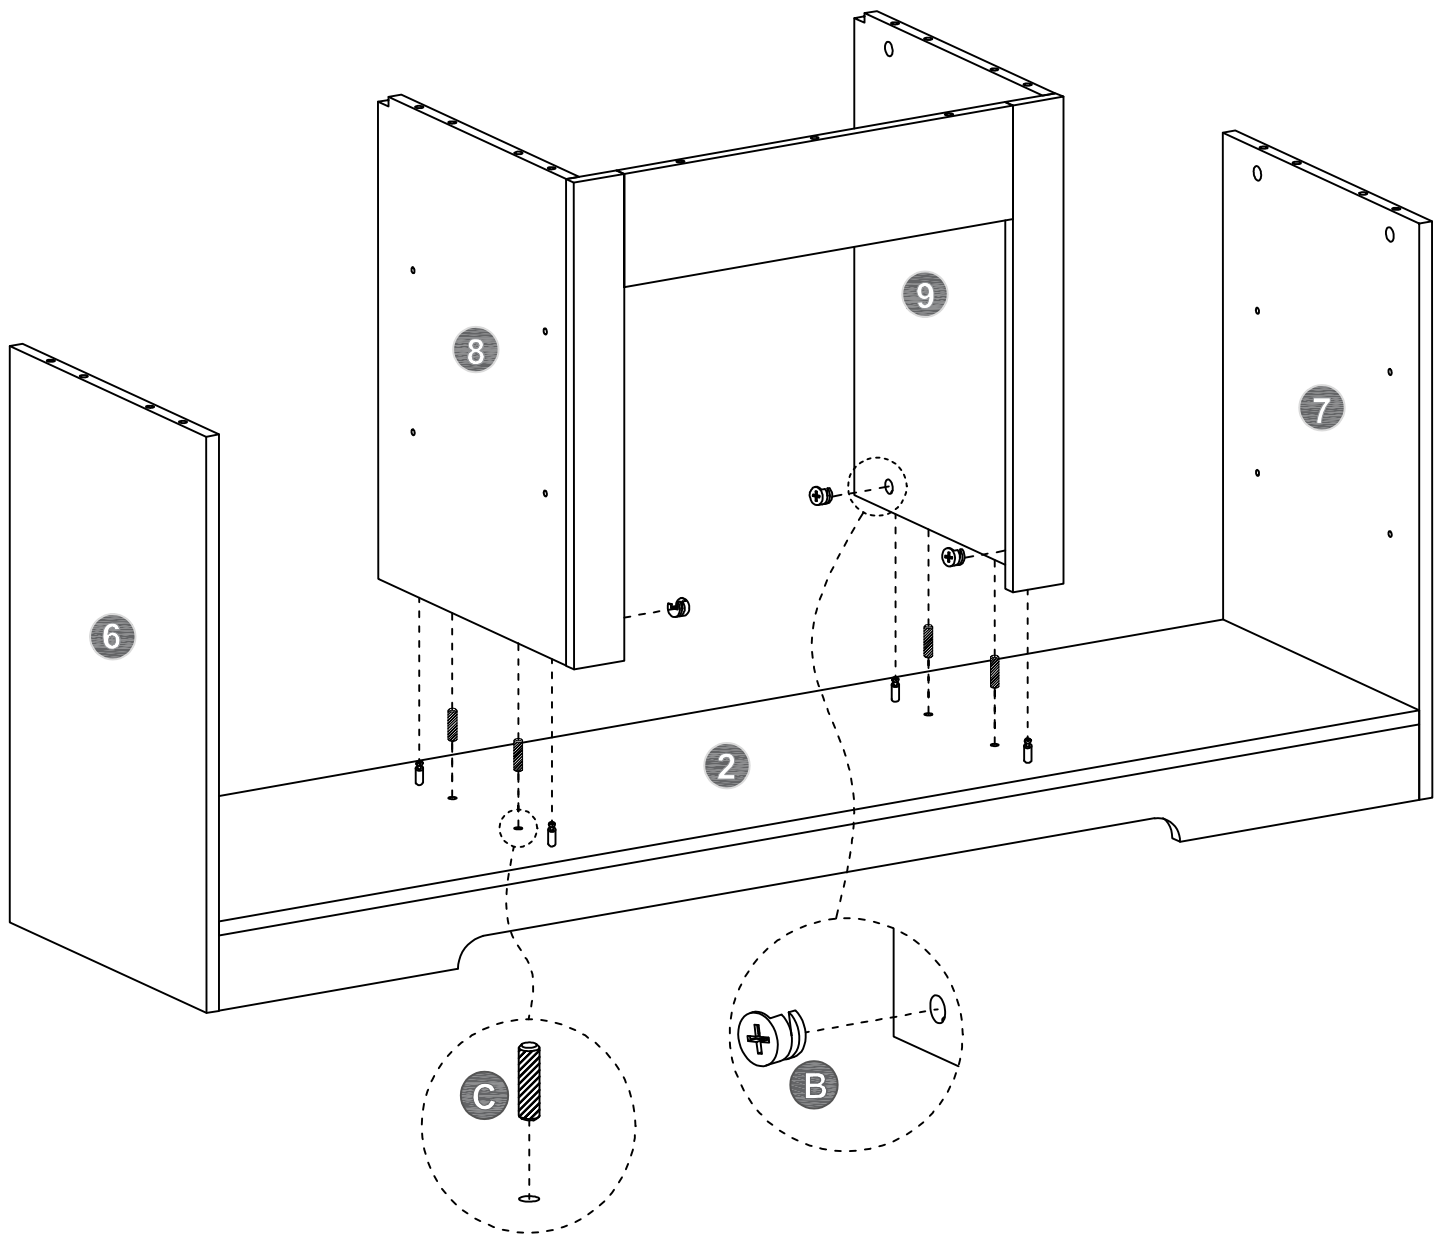 

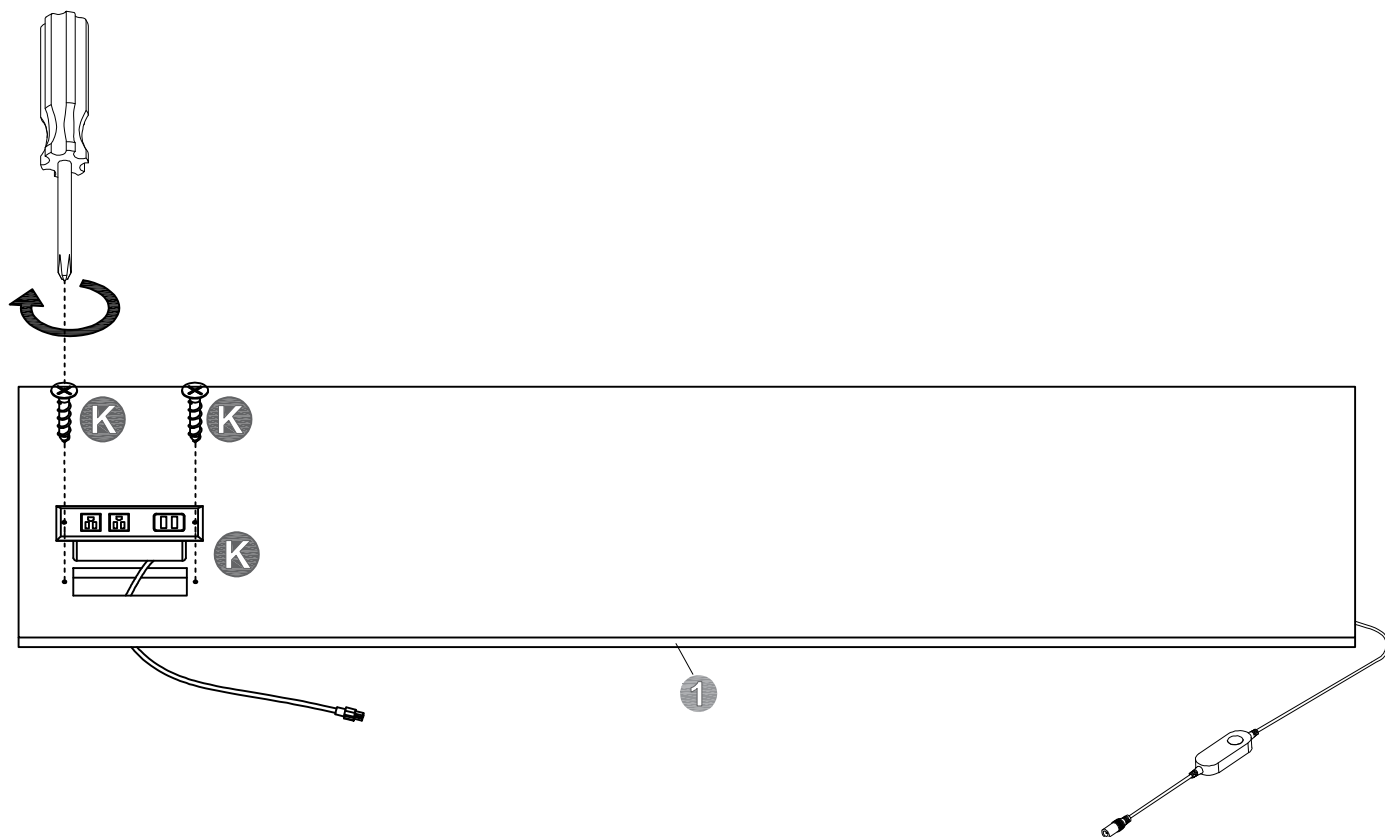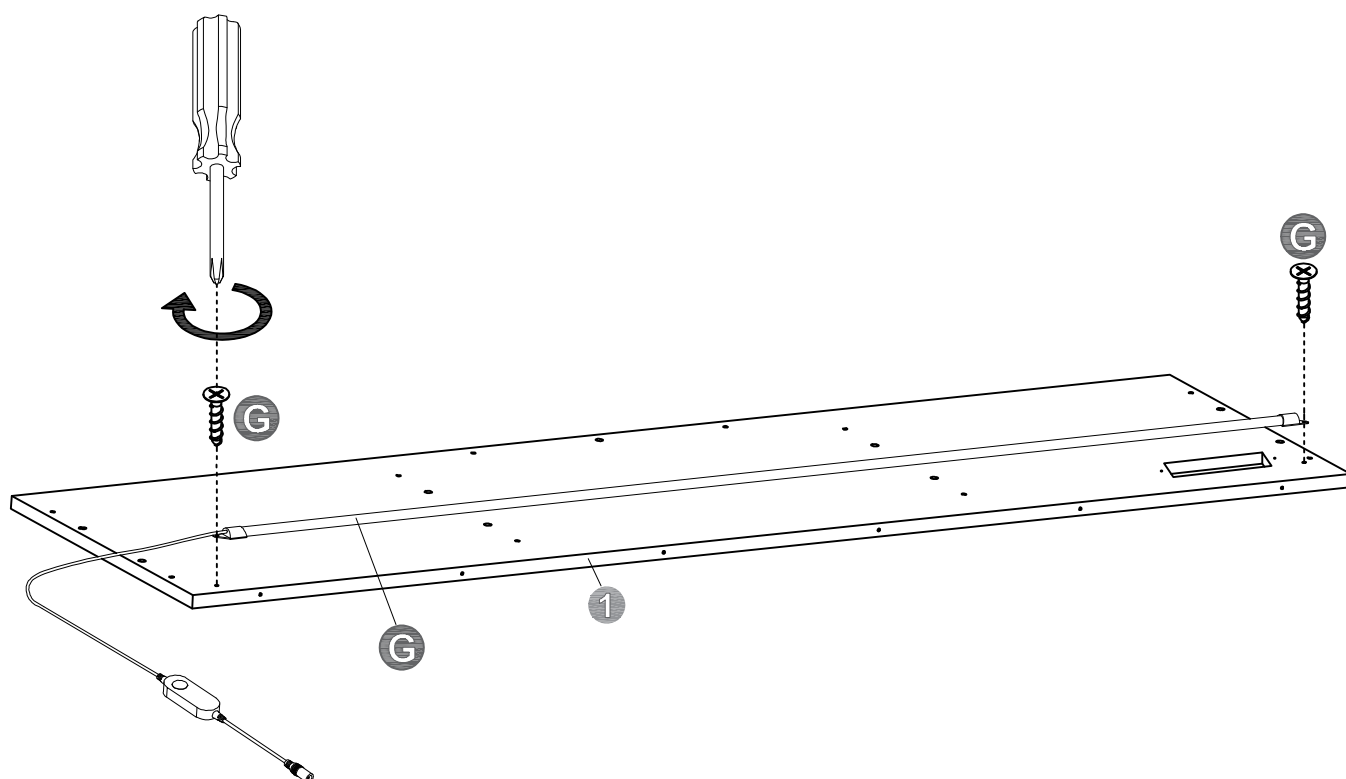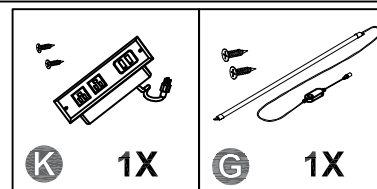   
STEP 9



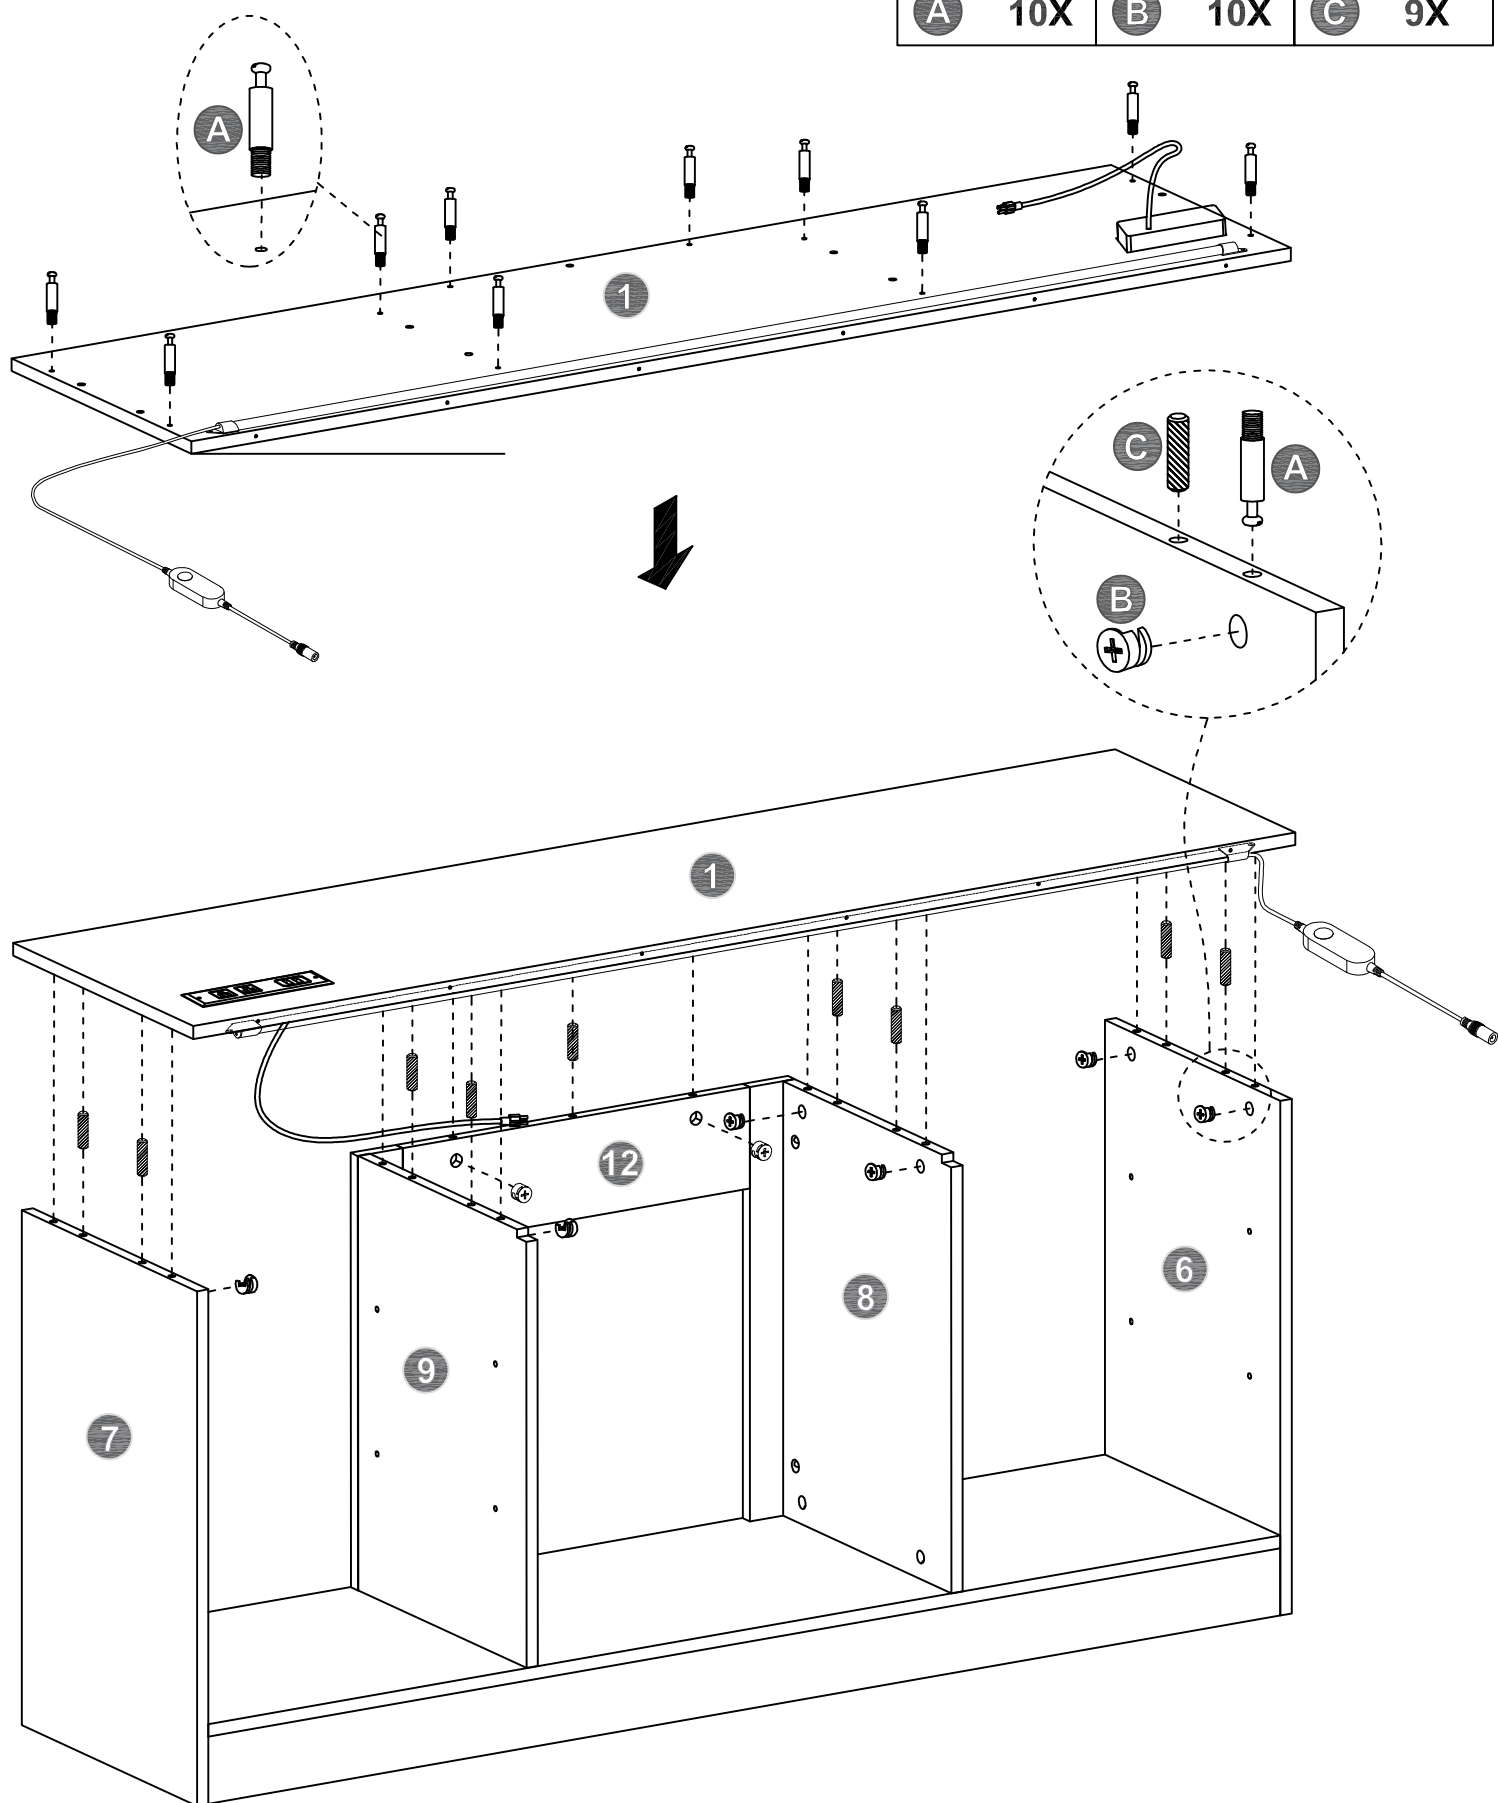 
STEP 10



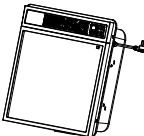 STEP 11



				
(W) 1X	(X) 1X	(Y) 2X	(Z) 12X	(H) 1X


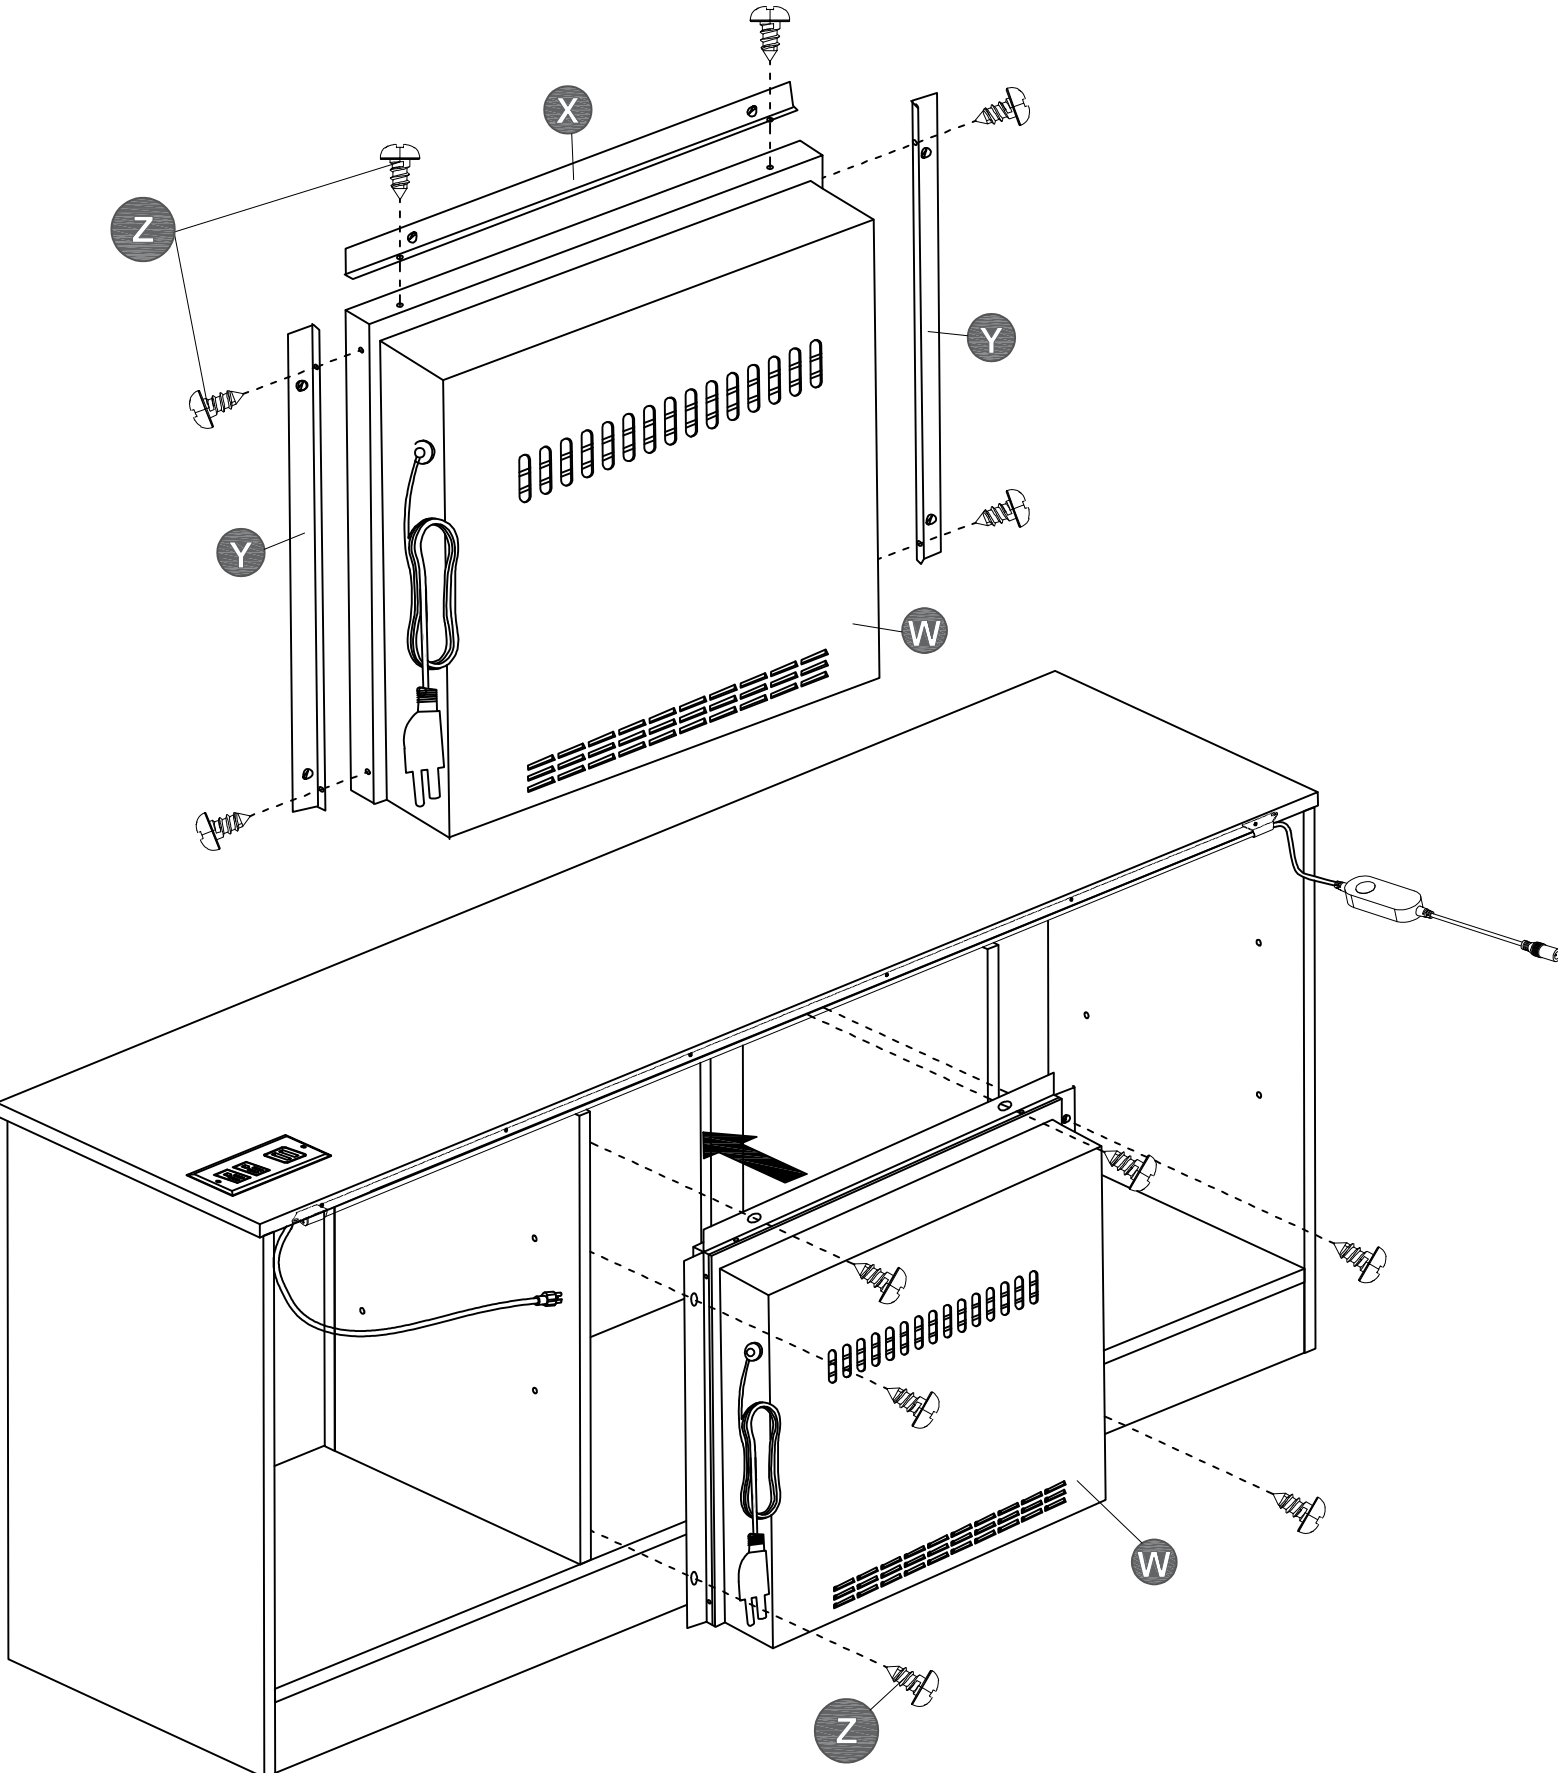 
NOTE: Make sure two side trims are installed correctly.




NOTE: Do not attempt to install the unit from the front of the mantel. It will not fit.

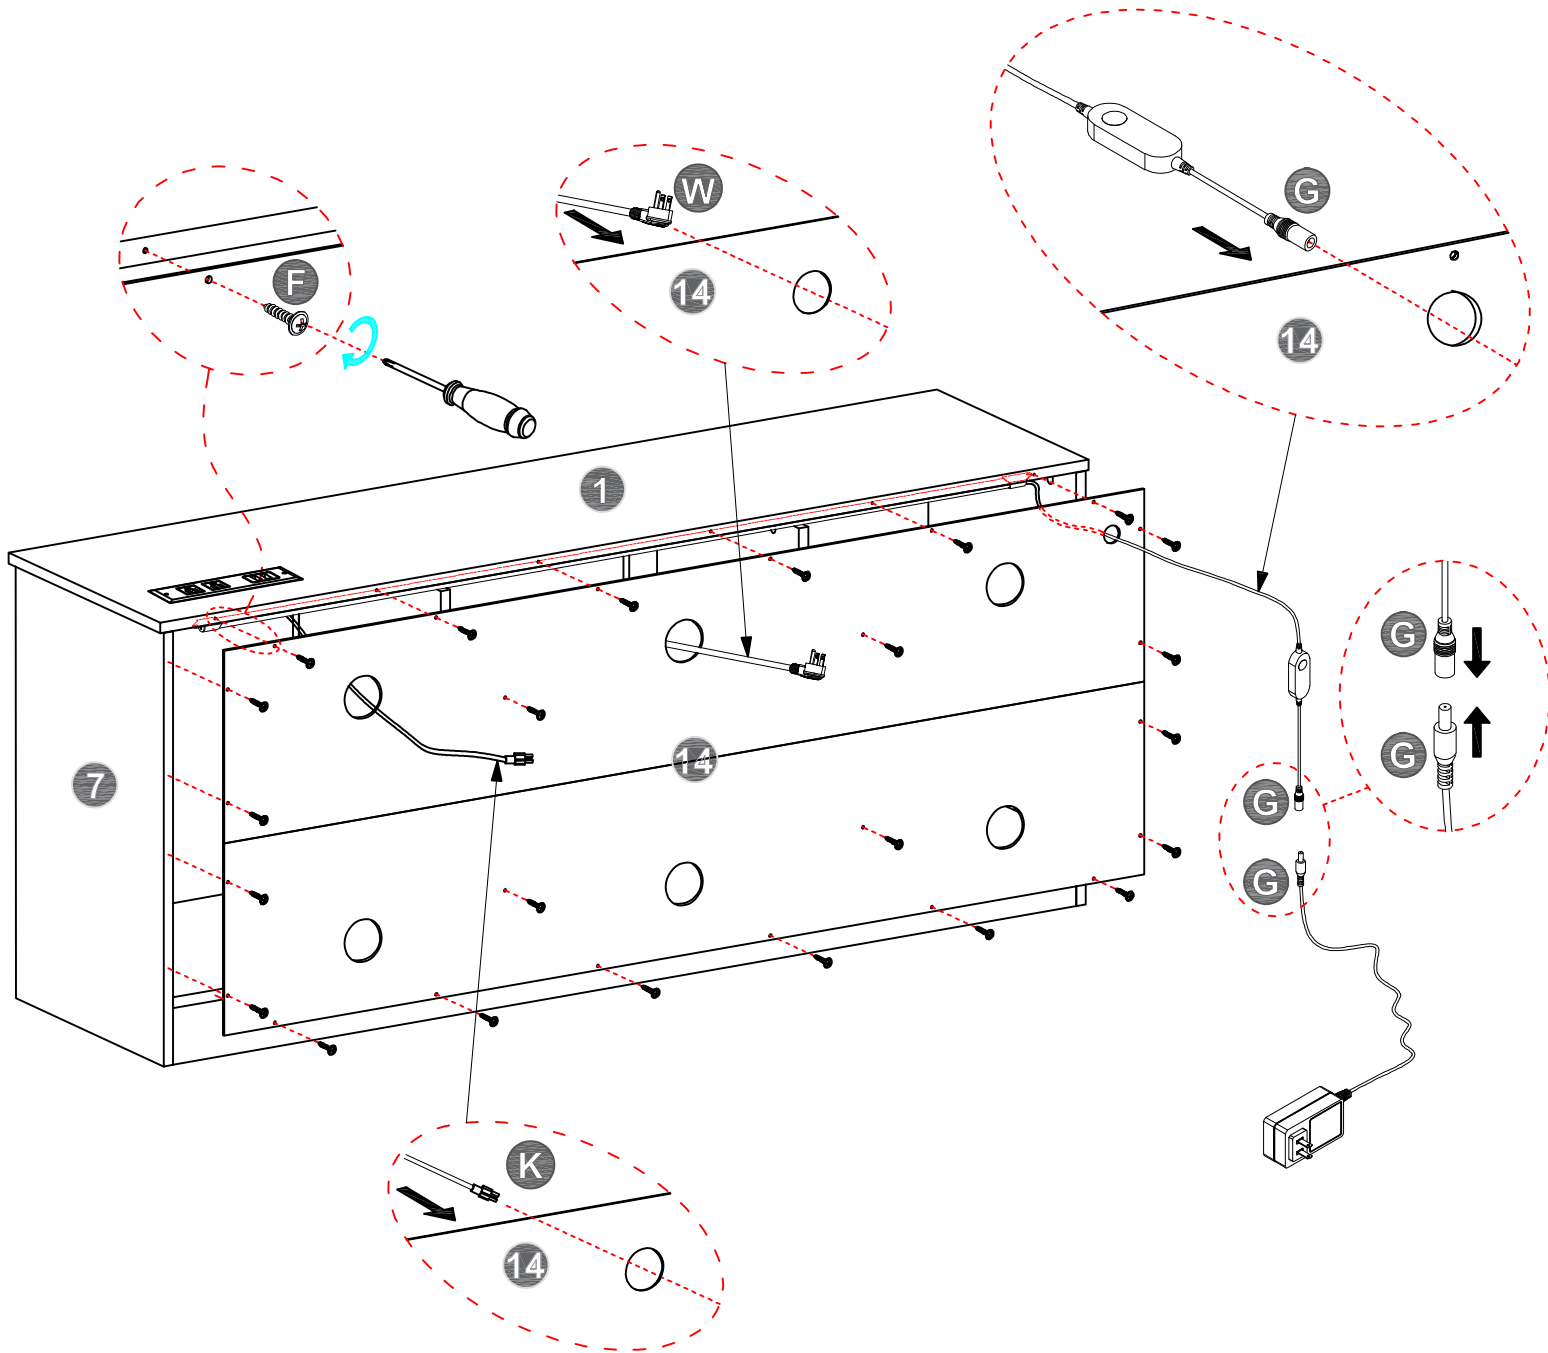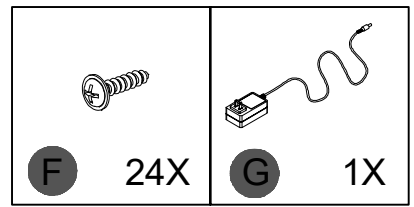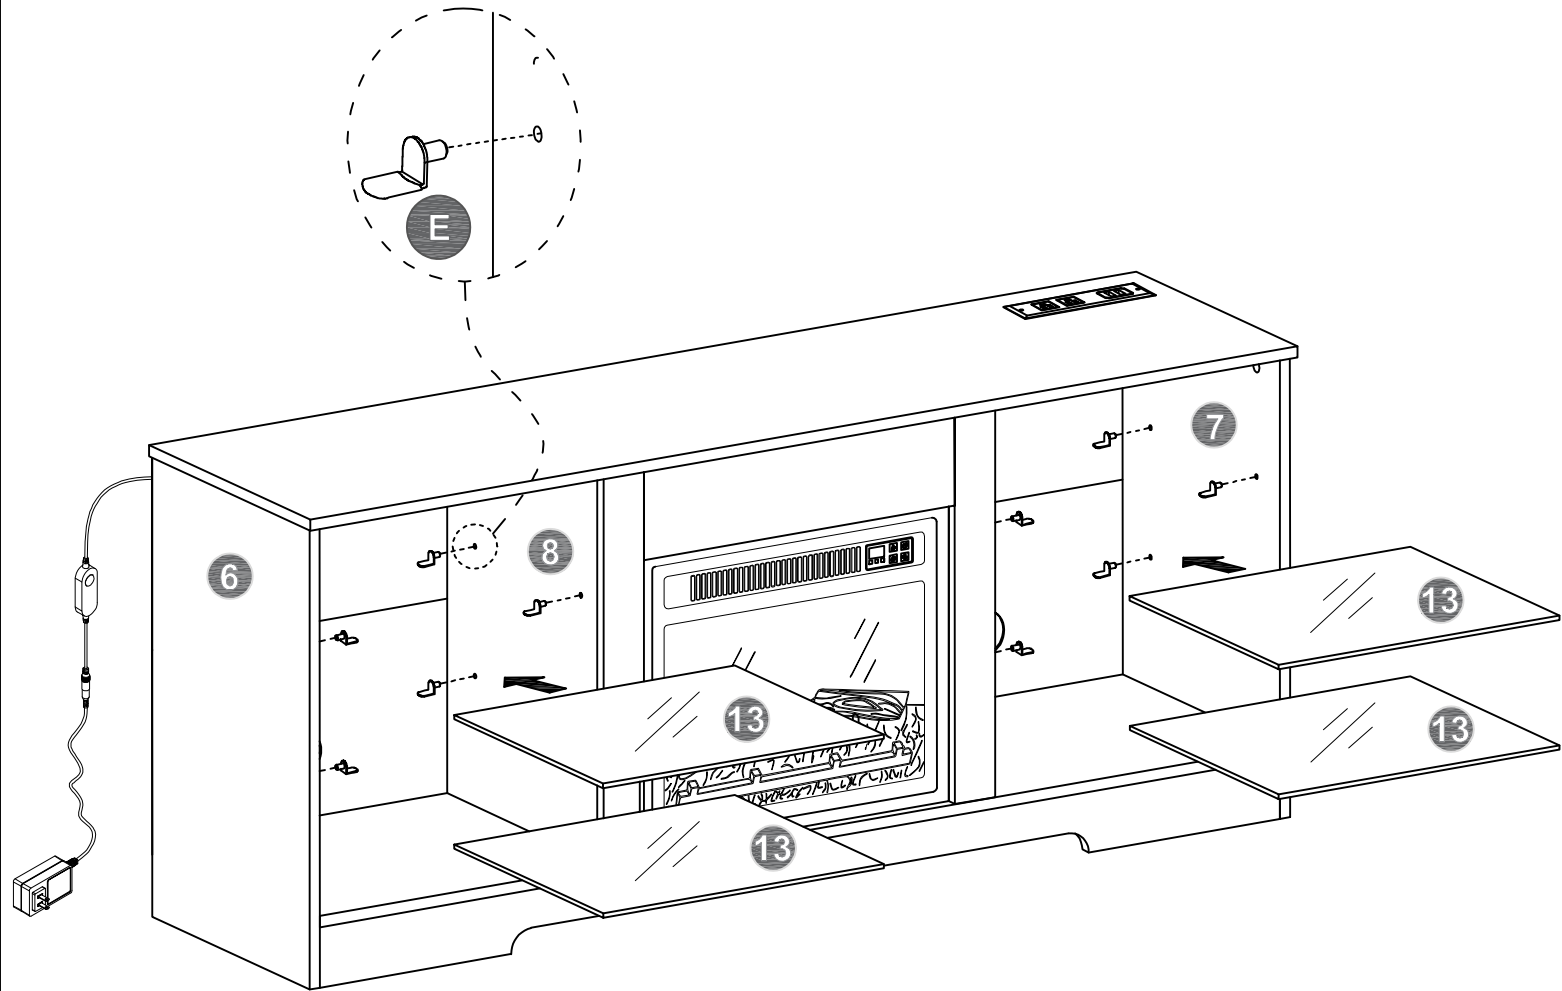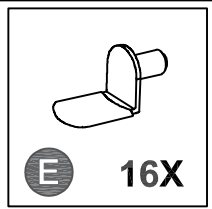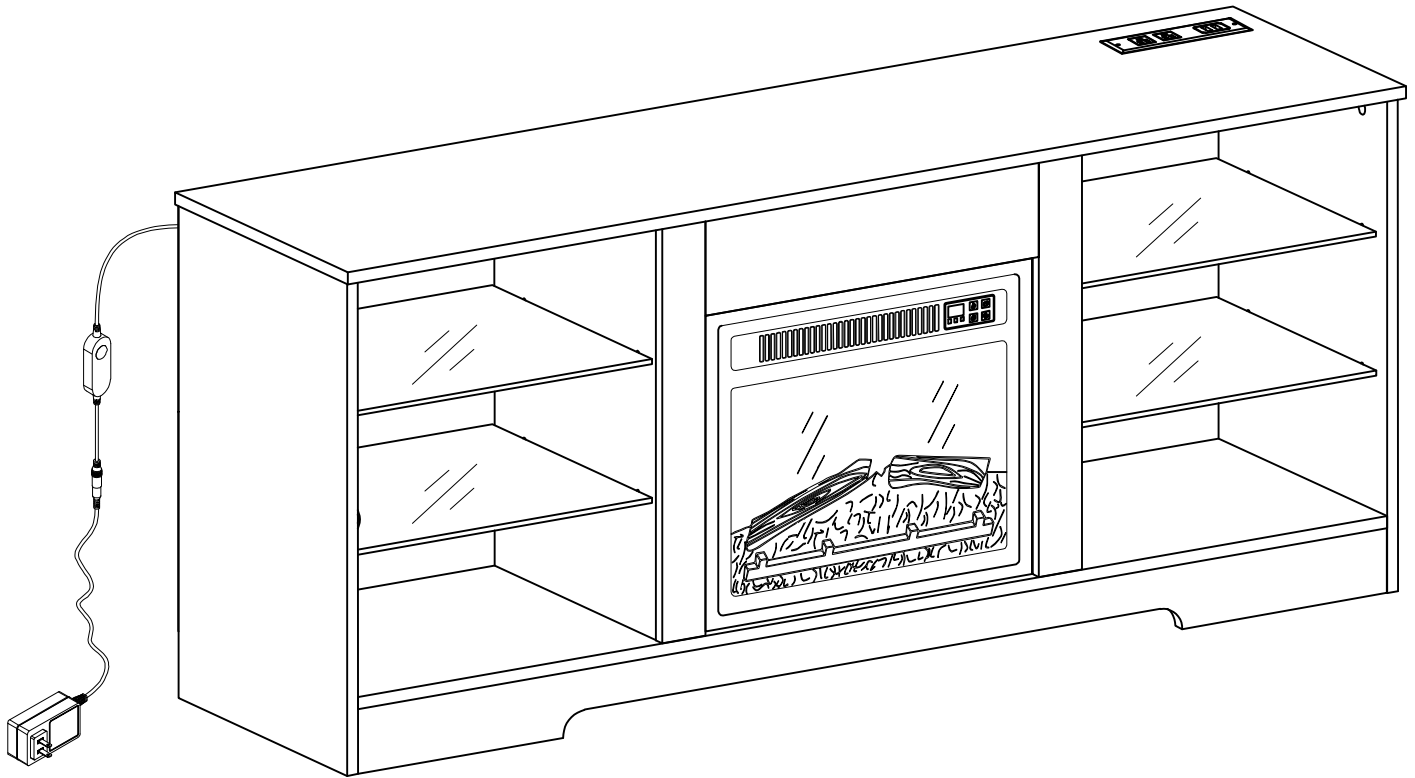     STEP 12







Congratulations on doing it.