

Owner Manual



MAINTENANCE AND WARNINGS

Thank You For Choosing Our Furniture.

Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product.

NOTE :

This brochure contains IMPORTANT safety info. Please read and keep it for future reference.



Weight Limitation
200 LBS



Installation:
30 minutes.



Two Person



Before You Start

Please follow the steps below:



Unbox the package and check if all parts and accessories are complete.



If you find something missing, stop assembly and contact your supplier immediately.



Please do not completely tighten all the hardware until the entire assembly is completed! Be sure to tighten all the hardware once the assembly completed.



NOTE: Should be assembled on soft surface to keep balance.

After-Sales Service

- If you encounter any issues or need technical support during use, please contact our after-sales team. We offer long-term maintenance and warranty services.



Warranty



We strive to offer high, quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our compa-ny if they are available.



Are you having difficulty with assembly? Missing parts? Please send email with your order number

 


For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!

Daily Maintenance


- Keep furniture away from heat.
- Do not use cleaning agents containing acids, alkalis, or corrosive substances, as they may damage the surface. It is recommended to use neutral cleaning agents or specialized furniture cleaners.
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, for residential use only.

Exploded Diagram

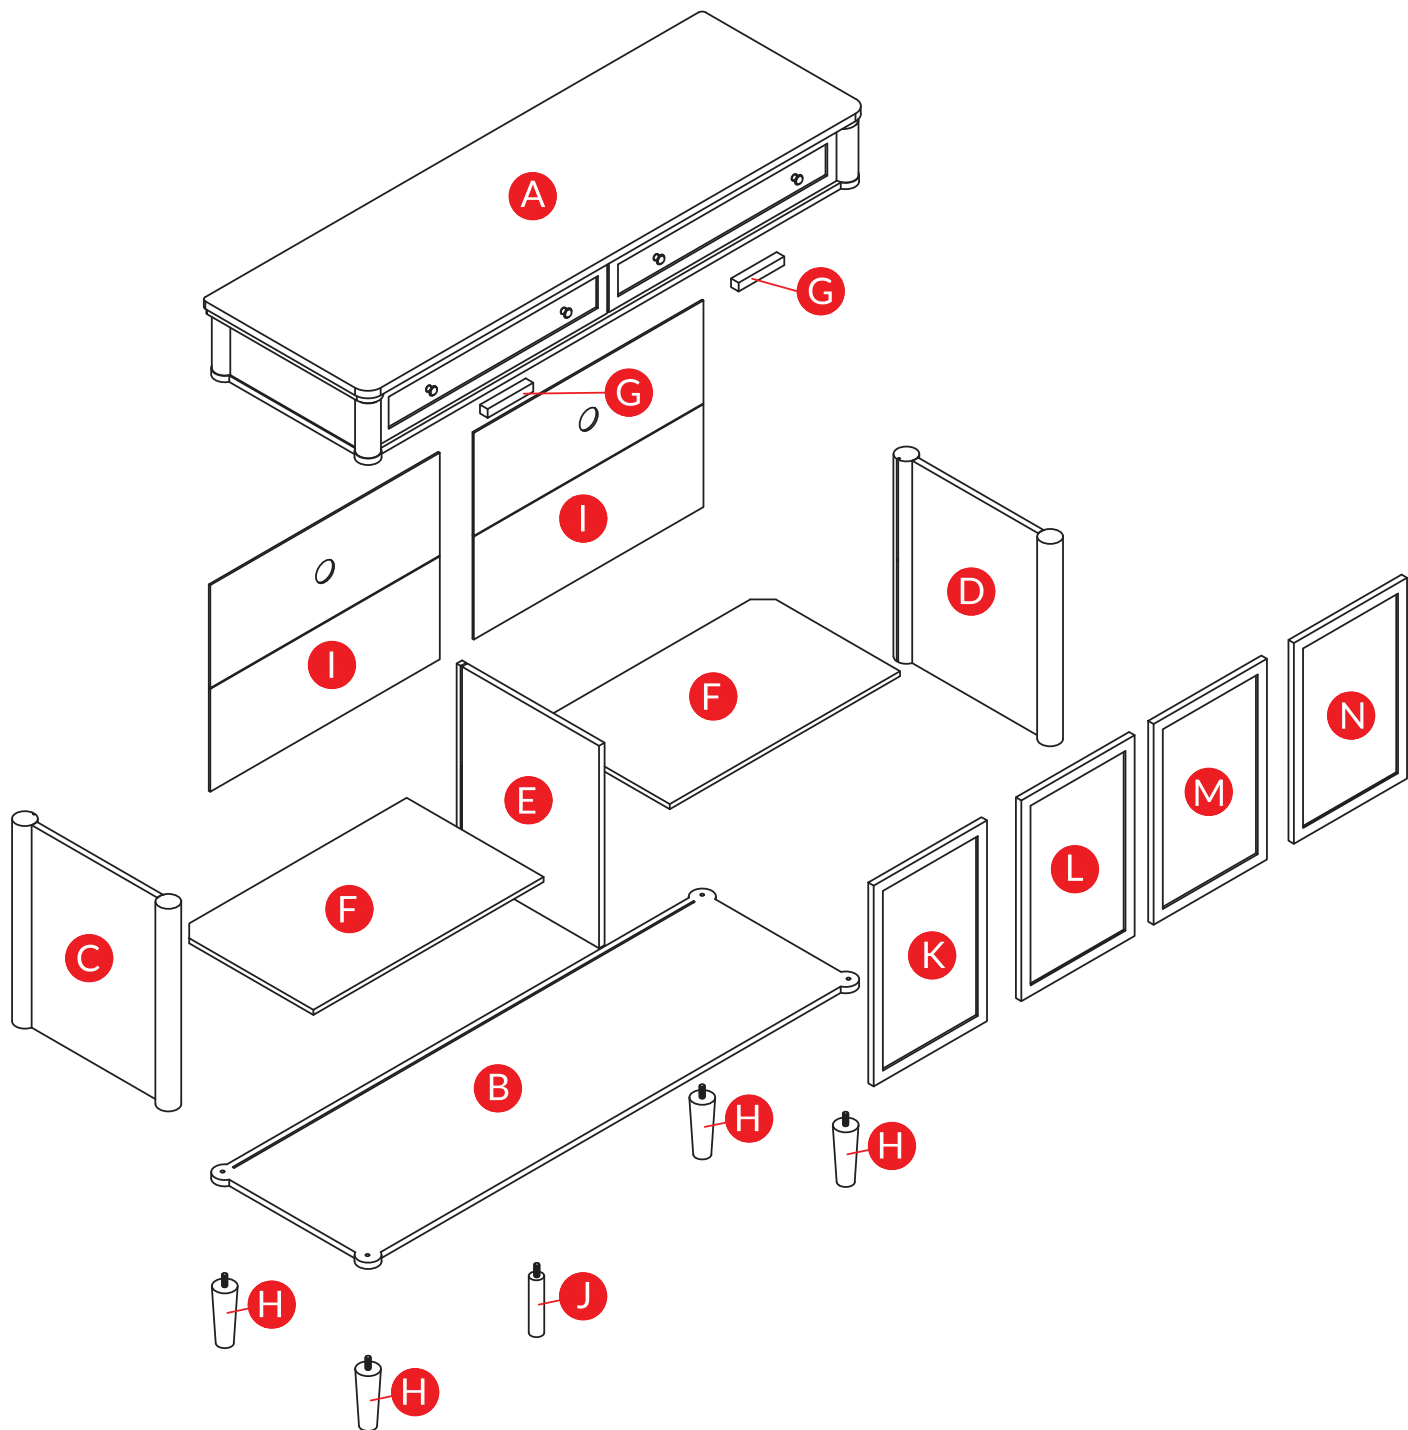


Parts List

 A ×1

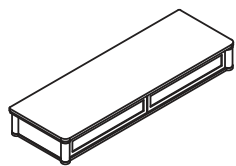


Top panel

 B ×1

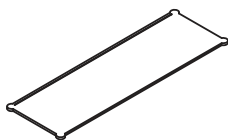


Bottom panel

 C ×1



Side panel

 D ×1




Side panel

E ×1



Middle panel

 F ×2



Clapboard

G ×2



 
Wood block

H ×4



Foot

I ×2




Back panel

J ×1




Middle Foot

 K ×1




Door

 L ×1




Door

 M ×1



Door

 
N ×1



Door

Hardware List

 1 ×10+1




Bolt D6 x 35mm

2 ×10+1



Lock clasp D15 x 11mm

 3 ×8+1




Wooden locator D8 x 30mm

4 ×4



Handle
Screw D4 x 25mm

 6 ×1




Screwdriver

7 ×5



Adjust foot

 8 ×2

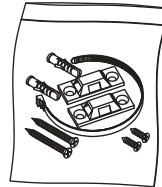


Anti-toppling

9 ×8



Laminate bracket

 10 ×4



Hinge

11 ×16+1



 
Screw D3 x 14mm

12 ×48+2



Screw D4 x 14mm

13 ×4



Hinge

14 ×4+1




Screw D4 x 20mm

Assembly Instructions

Step 1

Insert (1) into the panel (A), and attach part (G) to the top panel(A) use the screw (14), as picture show.component (G)together.


1	 x 10	D6 x 35mm
14	 x 4	D4 x 20mm
6	 x 1	Screwdriver

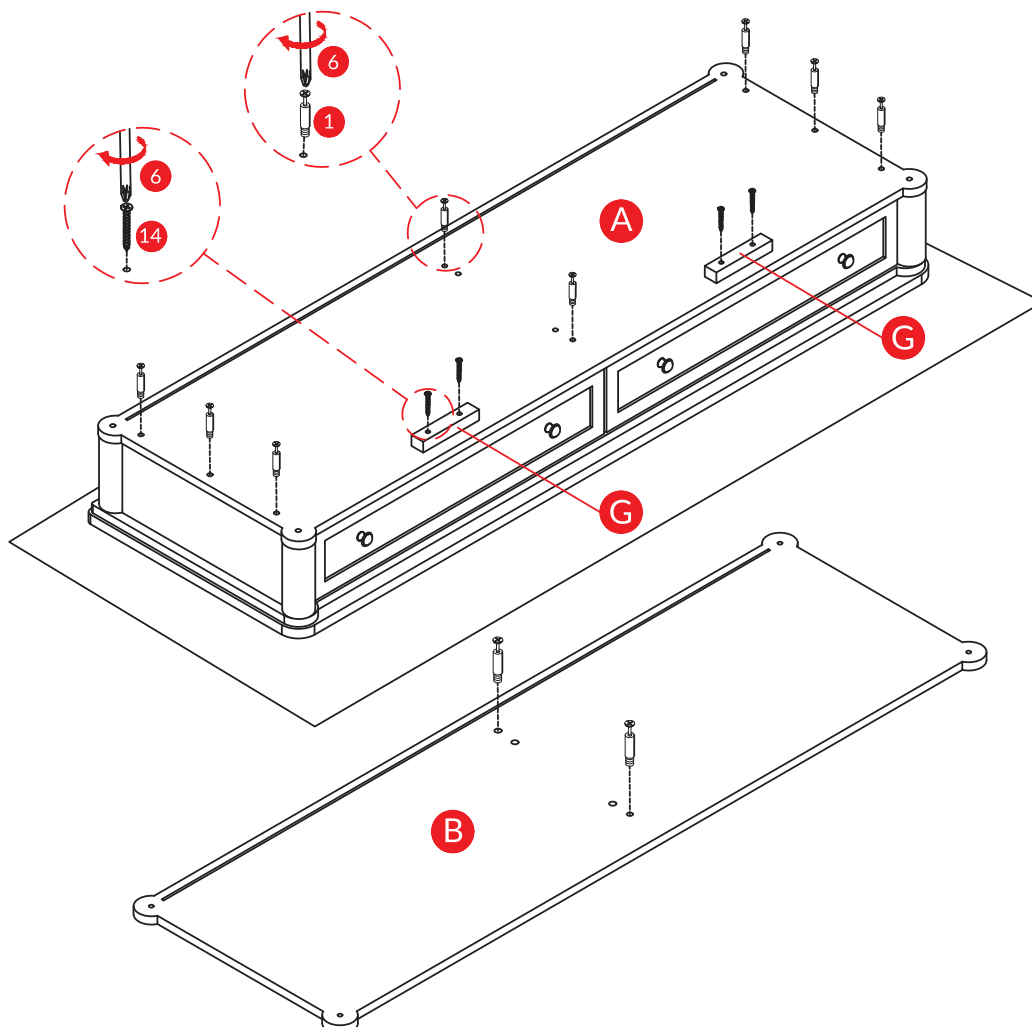 

Step 2


Attach part (C/D/E) to the top panel(A) as picture show.

2		x 8	D15 x 11mm
3		x 8	D8 x 30mm
6		x 1	Screwdriver

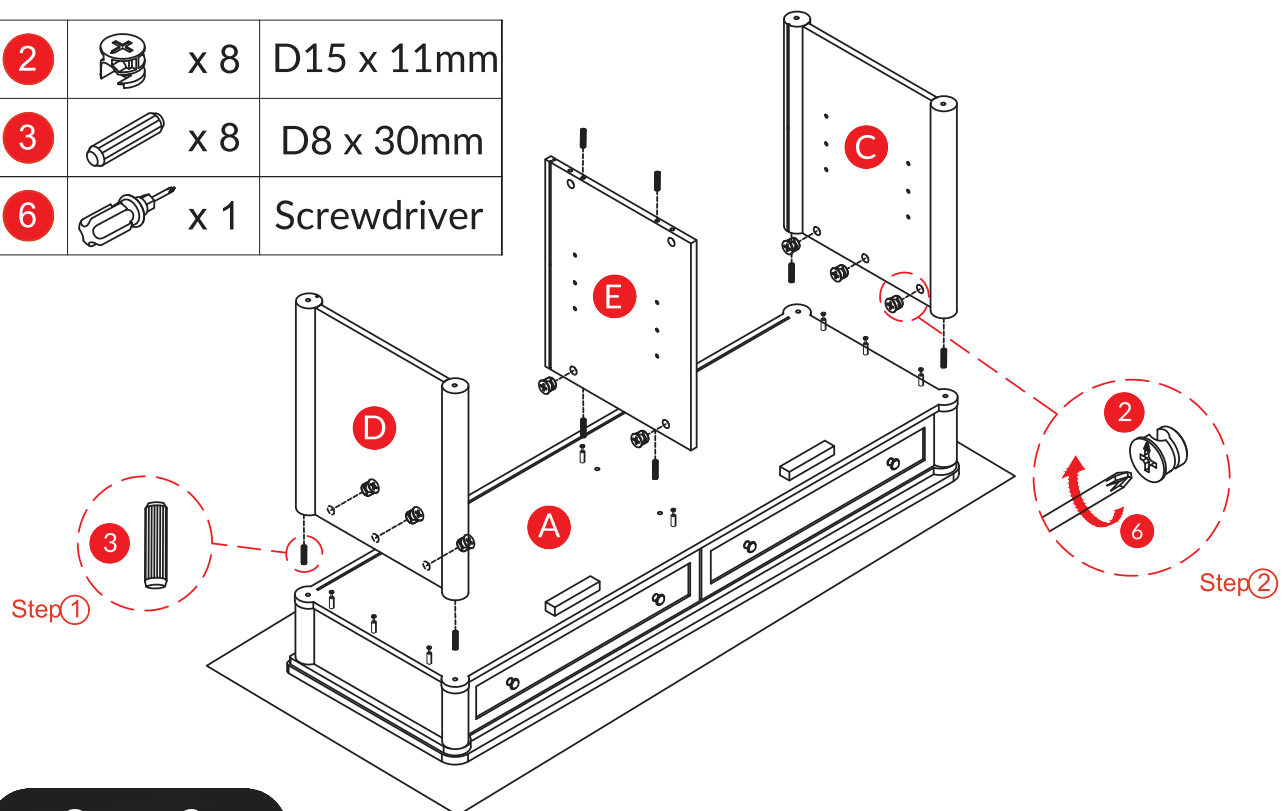 

Step 3

 
Insert back panel(I) into the side panel (C/D/E) , as picture show.

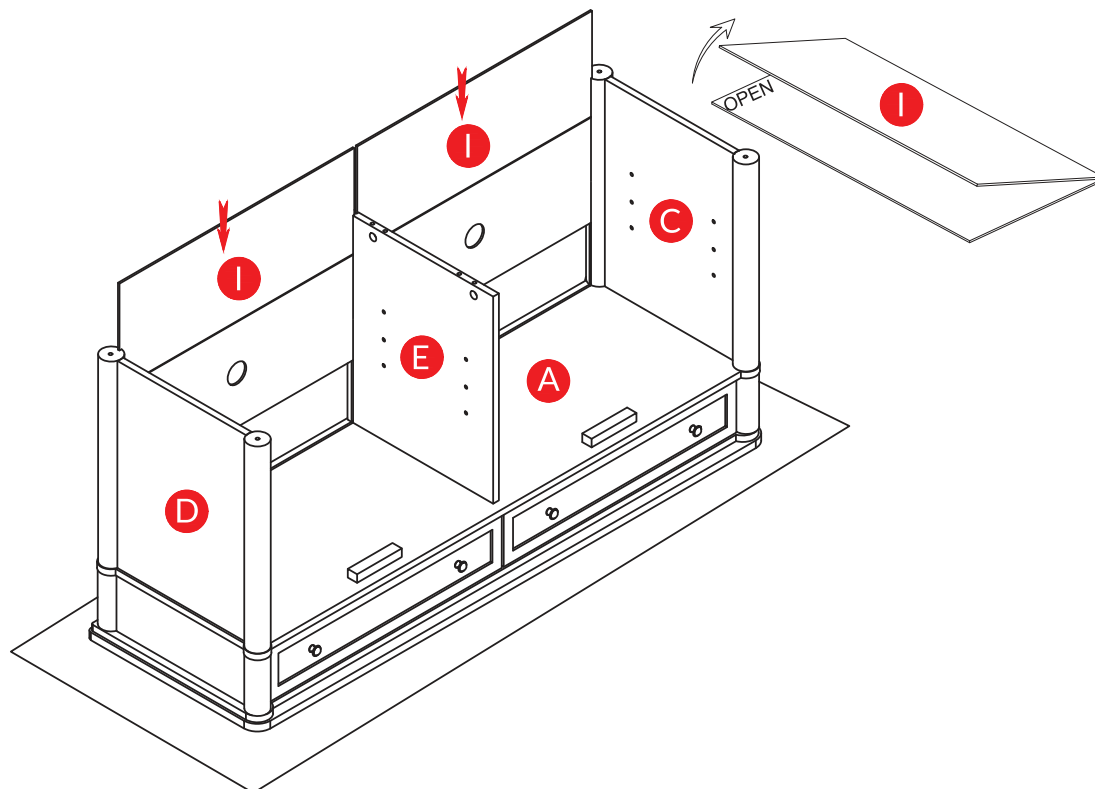

Step 4

Attach foot (H) and middle foot (J) to the panel(B) as picture show.


7	 x 5	Adjust foot
---	---	-------------

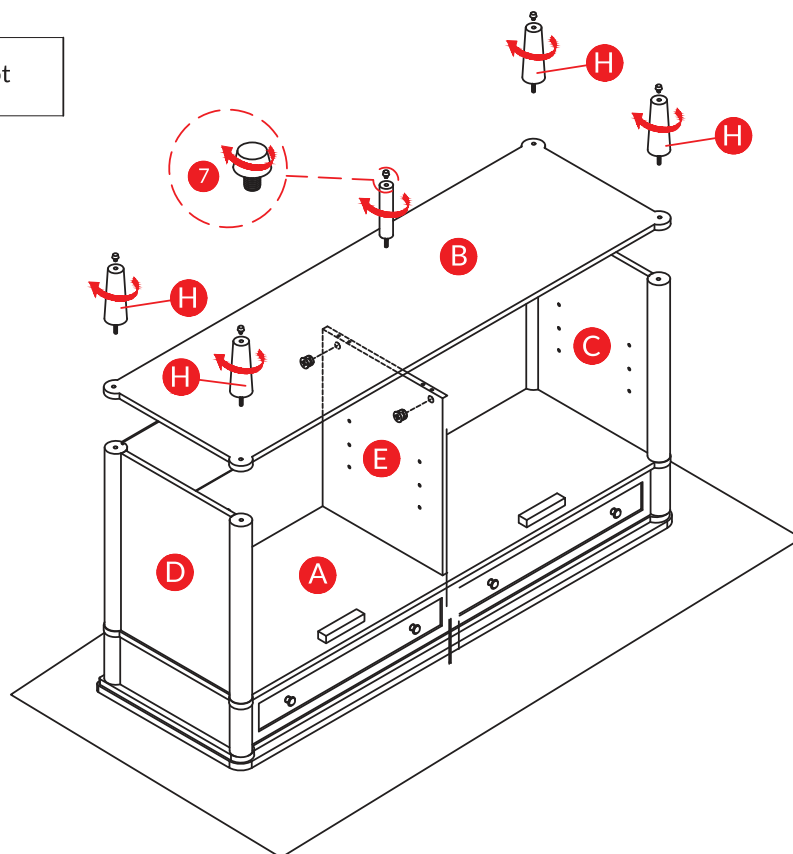 

Step 5




Use screw to attach part (11) to back (I) .

11	  x 16	Ø3x14mm
----	--	---------

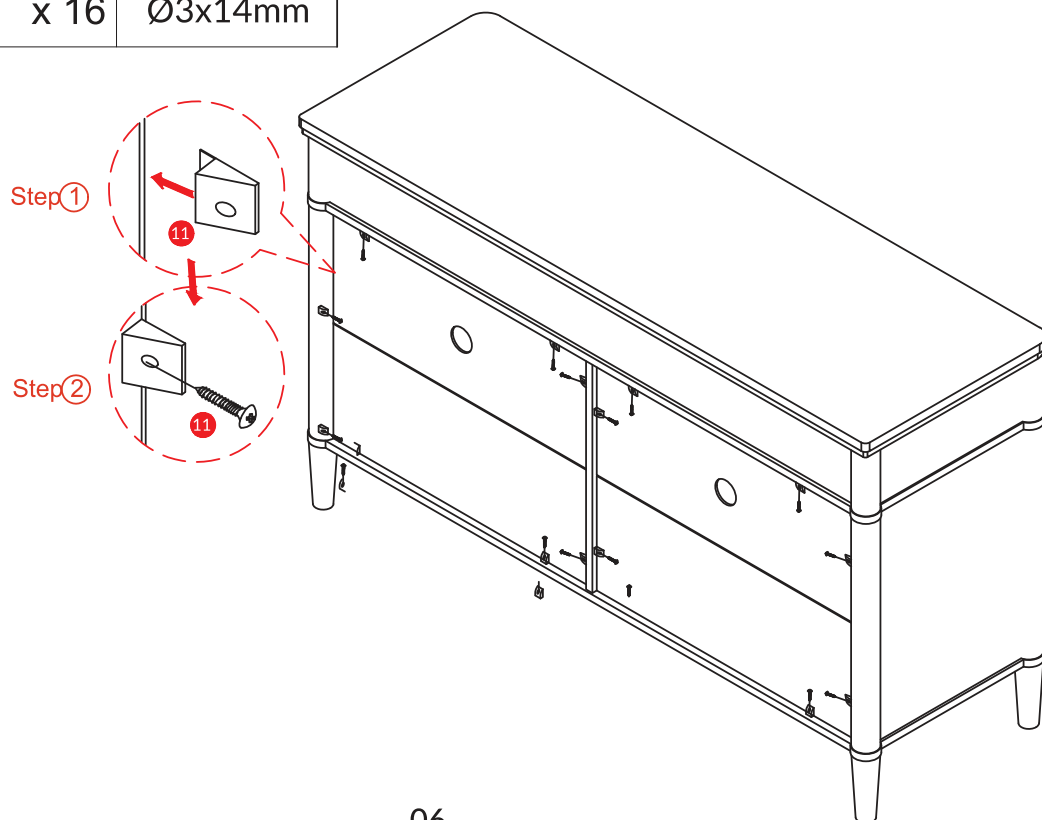 


Step 6

   Use (9) into the corresponding hole of panel (C/D/E) make sure all holes aligned as picture show.

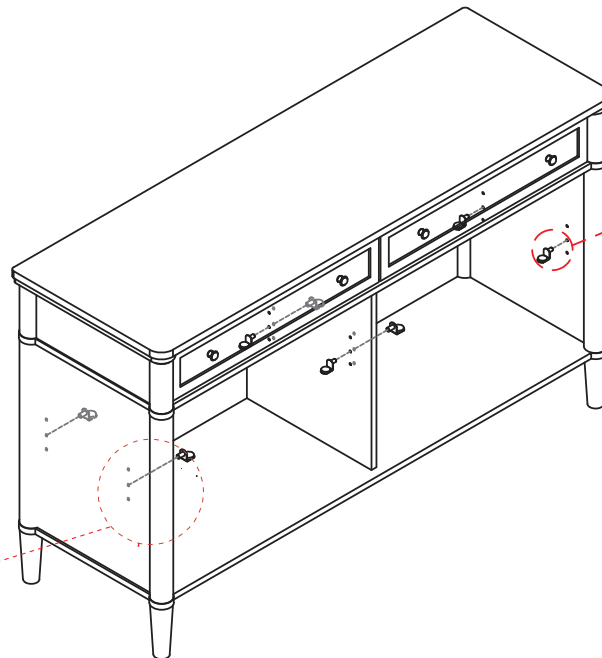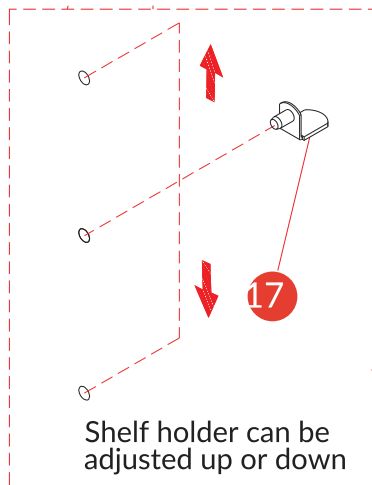


Step 7

 
NOT PROVIDED

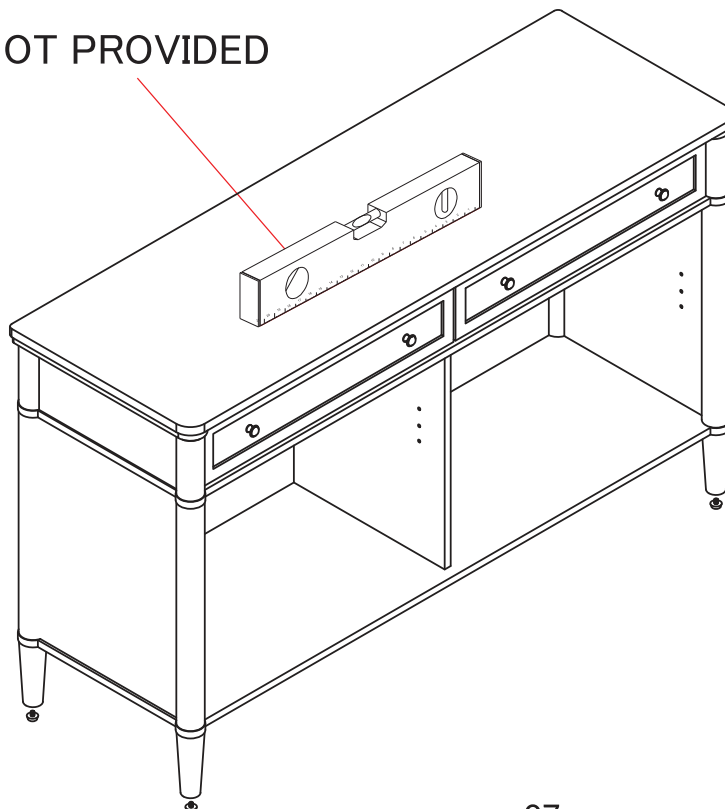

 Attention:
Before the next step, adjust the feet of the locker to keep it level.

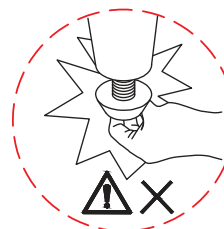


Step ①

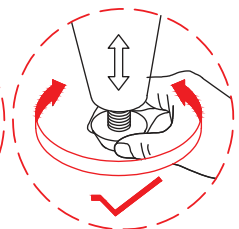 

Step ②

Step 8

 
Attach panel(F) to panel(C/E/D),as picture show.

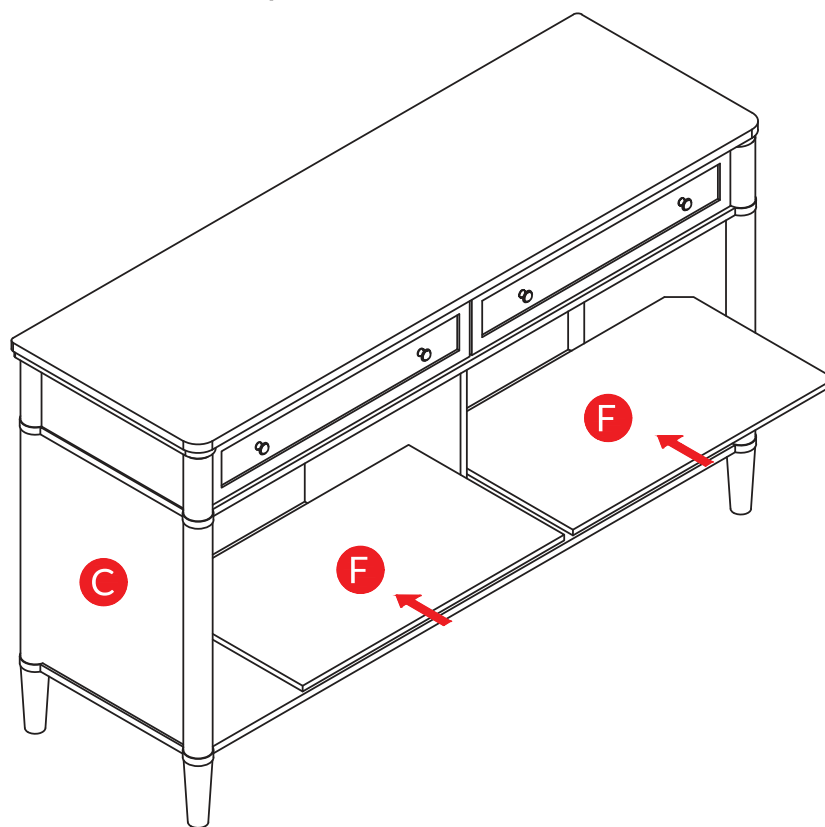

Step 9

Install hinges (13) use screw (12) and handles (4) use Screwdriver (6) on the door panel (K), as picture show.


4		x 1	D4 x 25mm
6		x 1	Screwdriver
12		x 4	D4 x 14mm
13			x 2

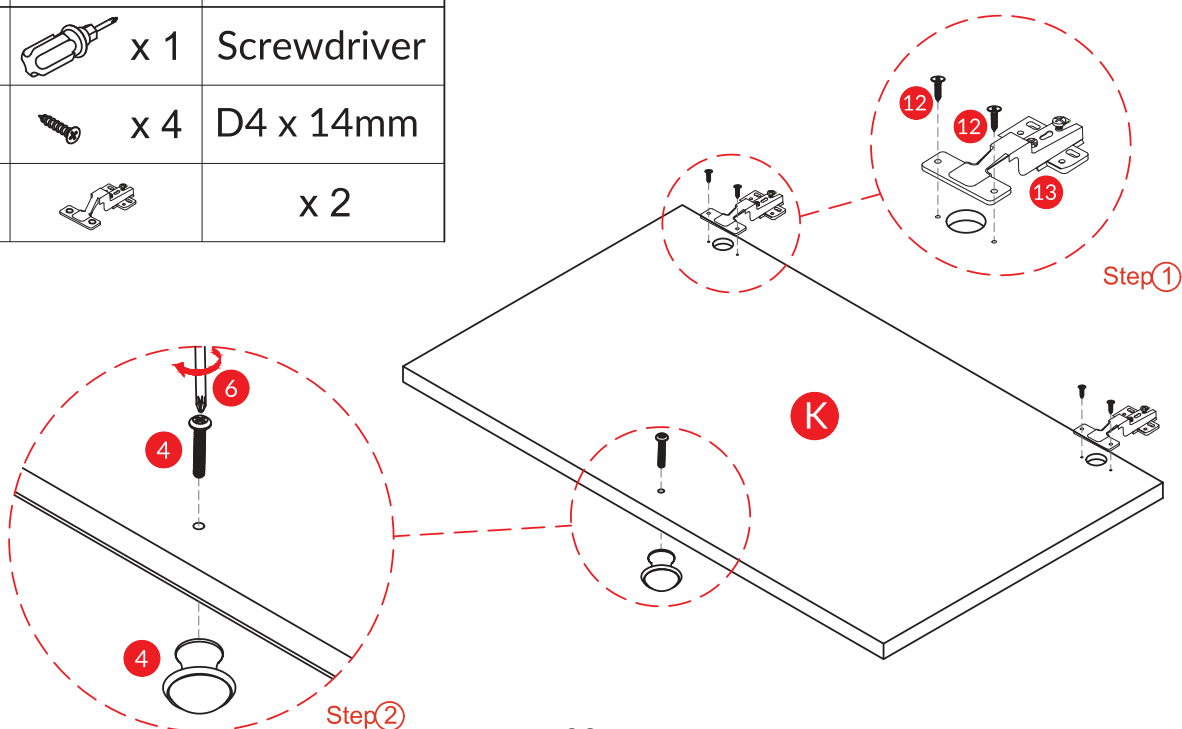 

Step 10

Install hinges (10) use screw (12) and handles (4) use Screwdriver (6) on the doorpanel (L), as picture show.


4		x 1	D4 x 25mm
6		x 1	Screwdriver
12		x 4	D4 x 14mm
10			x 2

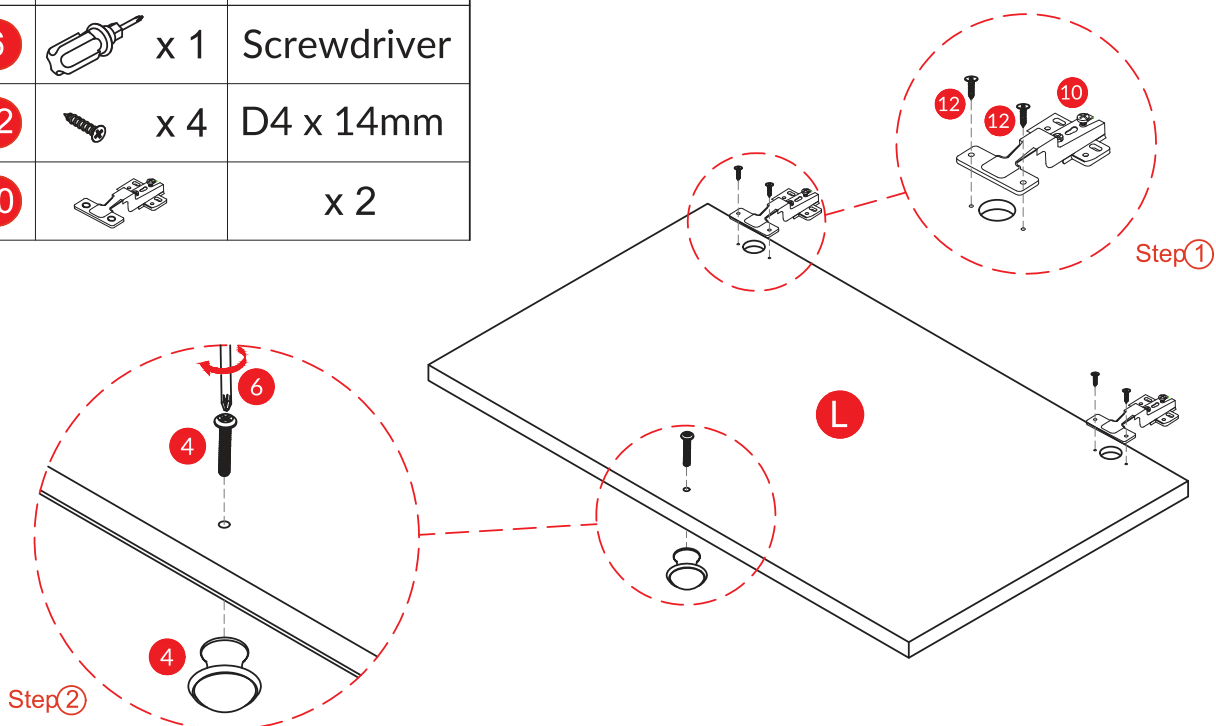 

Step 11

Install hinges (13) use screw (12) and handles (4) use Screwdriver (6) on the doorpanel (N), as picture show.


4		x 1	D4 x 25mm
6		x 1	Screwdriver
12		x 4	D4 x 14mm
13			x 2

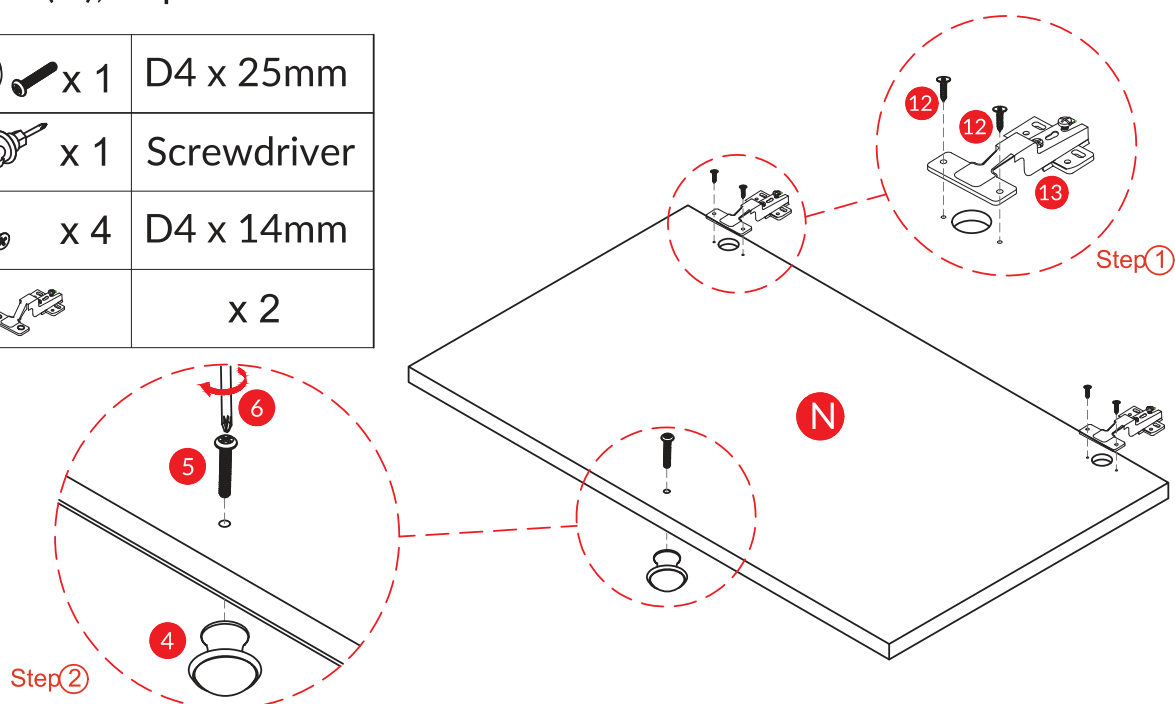 

Step 12

Install hinges (10) use screw (12) and handles (4) use Screwdriver (6) on the doorpanel (M), as picture show.


4	 x 1	D4 x 25mm
6	 x 1	Screwdriver
12	 x 4	D4 x 14mm
10		x 2

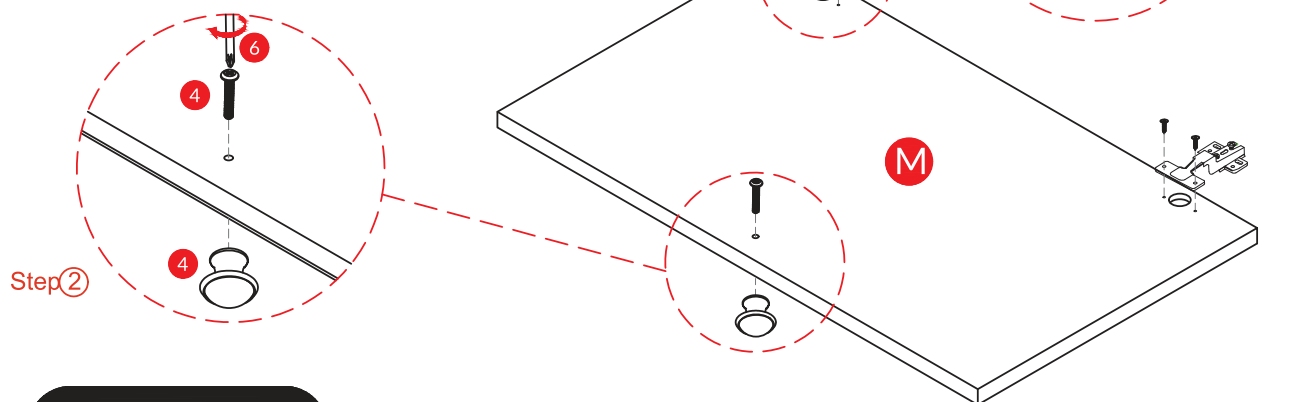 

Step 13

Attach door(K/N) to Side panel(C/D).


6	 x 1	Screwdriver
12	 x 16	D4 x 14mm

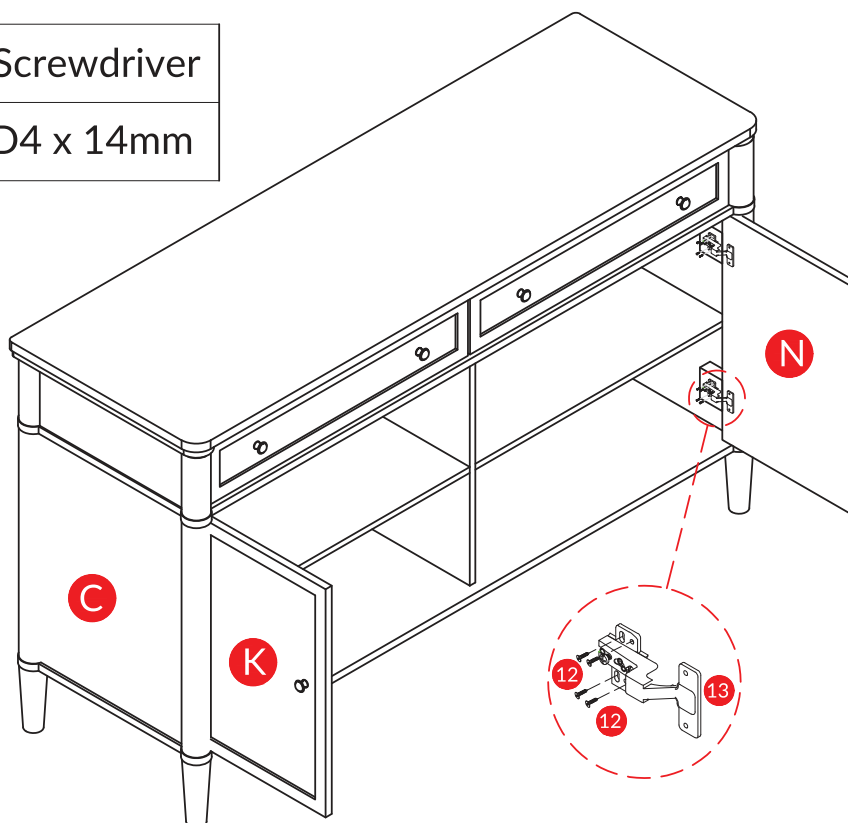 

Step 14

Attach door(L) to Side panel(C/D).


6		x 1	Screwdriver
12		x 8	D4 x 14mm

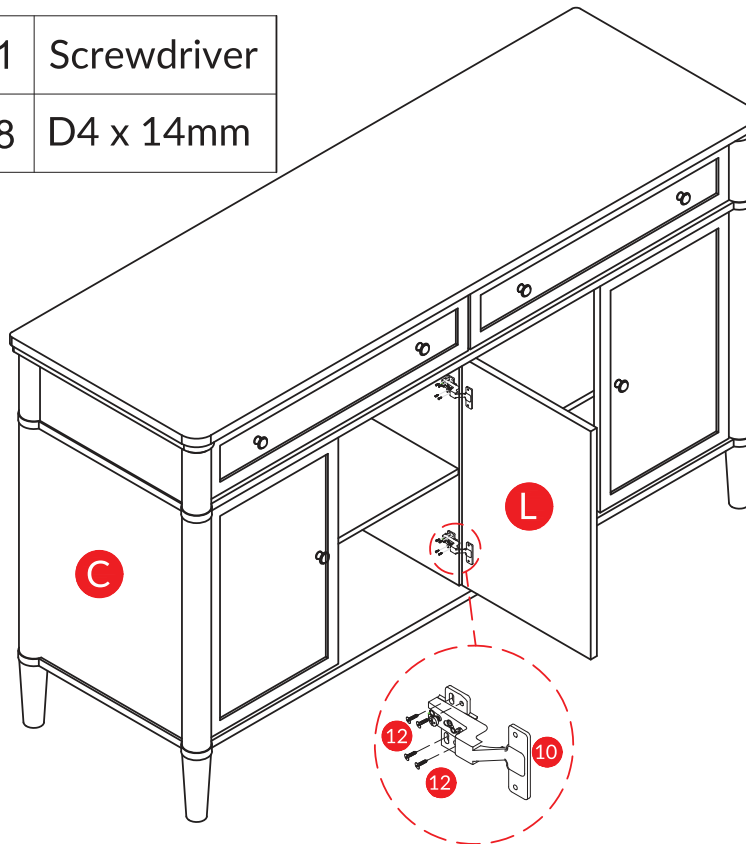 

Step 15


Attach door(M) to Side panel(C/D).

6		x 1	Screwdriver
12		x 8	D4 x 14mm

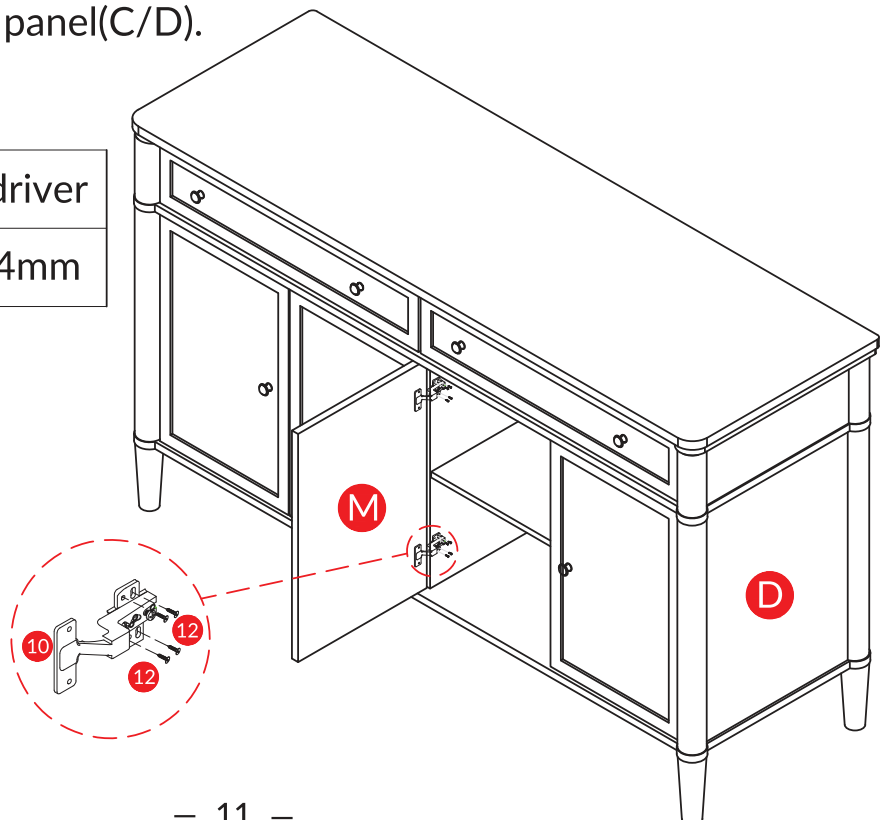 


Door Hinge Adjustment Instructions

 
Concealed hinges are three-way adjustable.

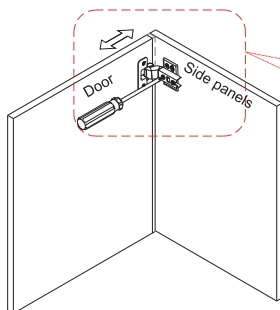


Horizontal by screw adjustment!

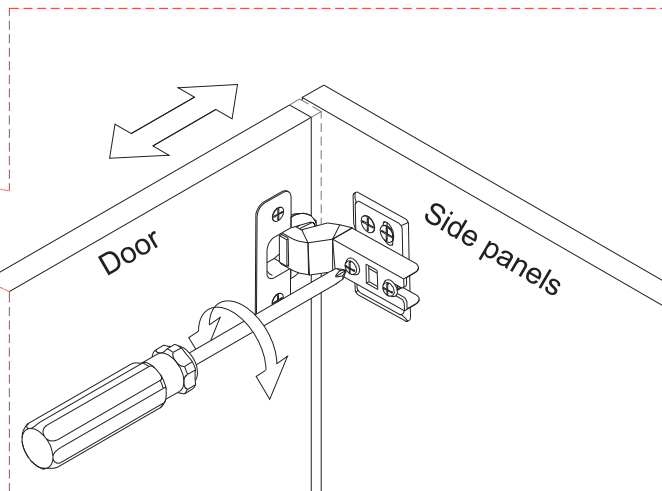 

 
Concealed hinges are three-way adjustable.

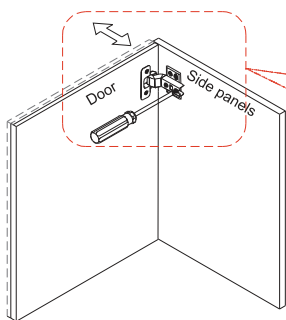

 
In-and-out by loosening the hinge arm mounting screw or via cam adjustment!

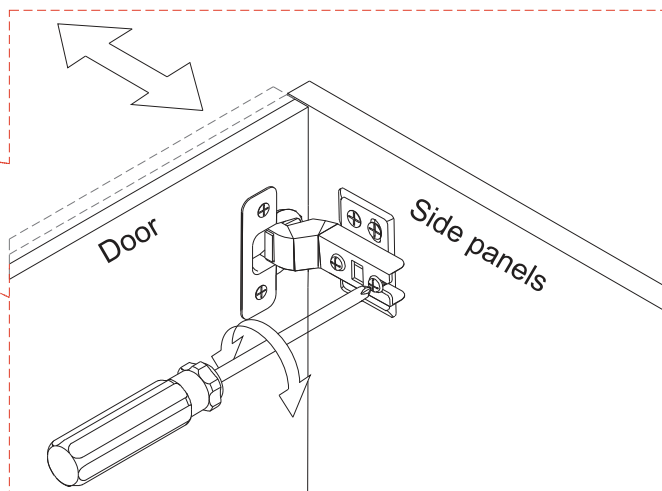

 Concealed hinges are three-way adjustable.

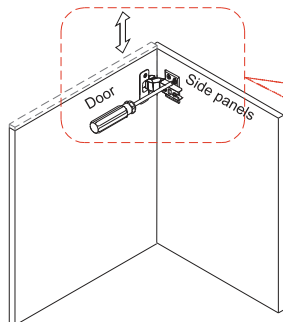

 
Vertical via slots in the mounting plate or via cam adjustment!

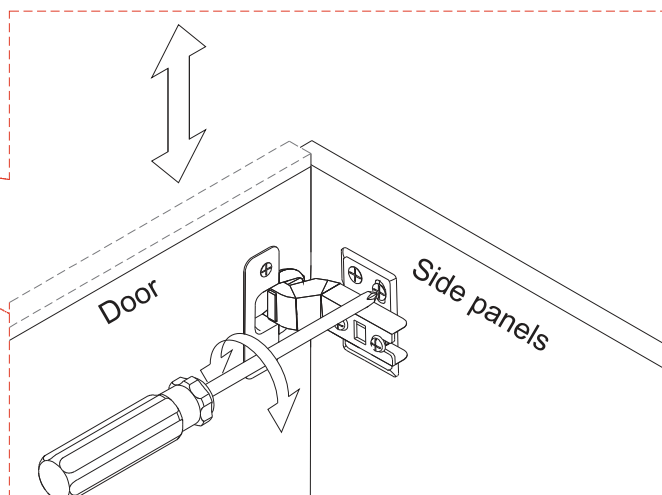

Step 16

Use screw to attach part (8) to back (A), tight screw with screwdriver (6).



8	x 2	8-1	x 2	8-2	x 4	6	x 1
				 Ø3x15mm			

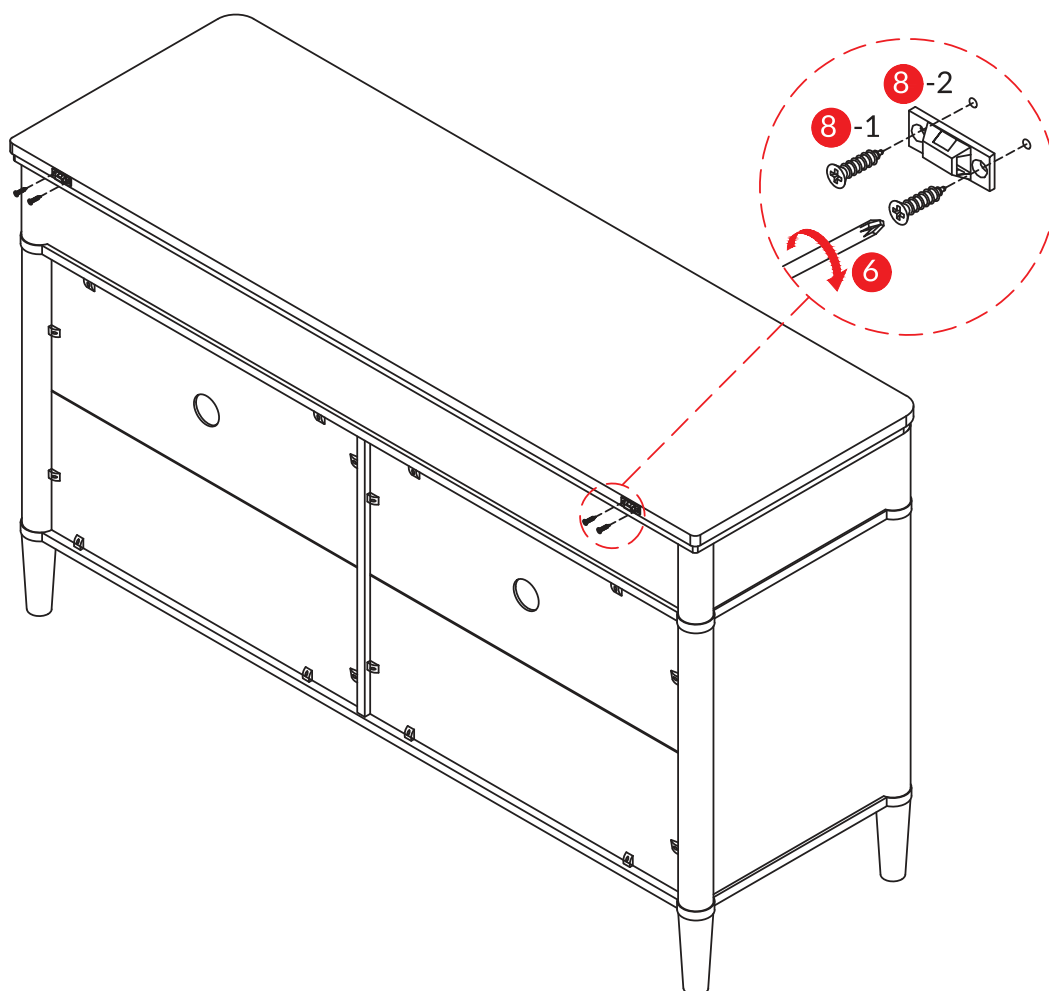 


Step 17

Install Anti-tip device (8) to the wall in this step as picture show.


8	x 2	8-1	x 2	8-3	x 4	8-4	x 4	6	x 1
									
						Ø4x40mm			

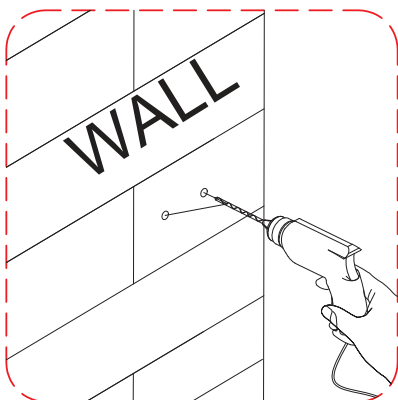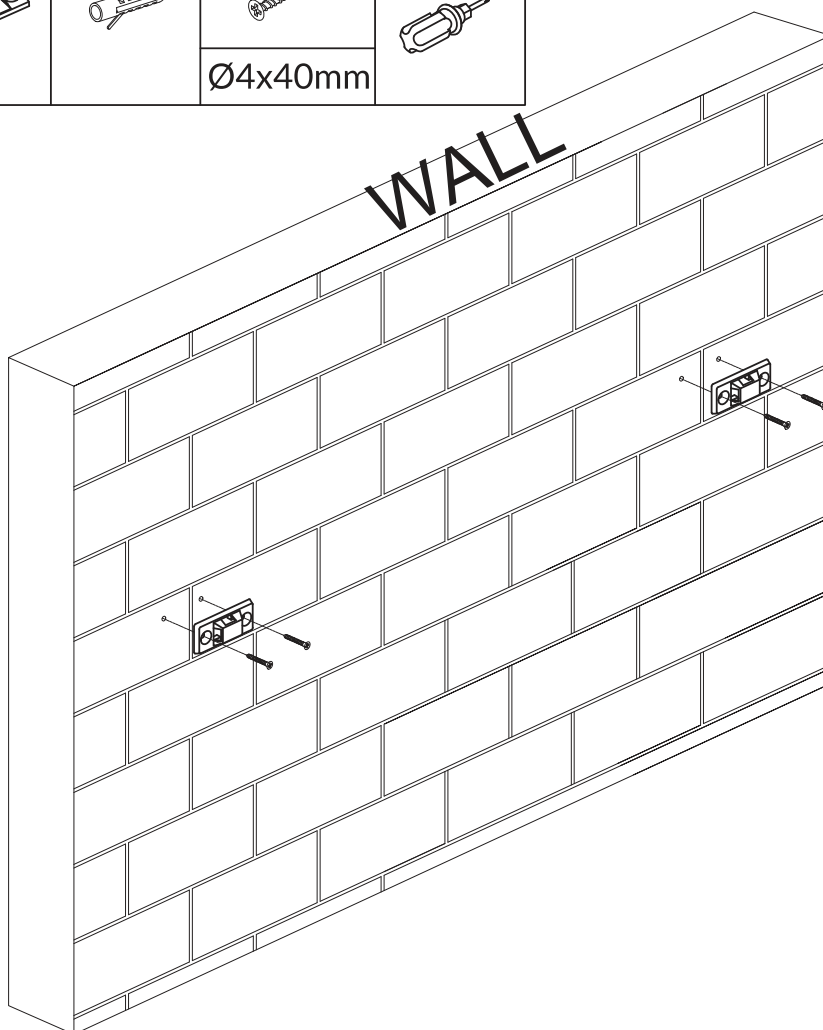  

 1. Drill a hole in the wall with an electric drill.

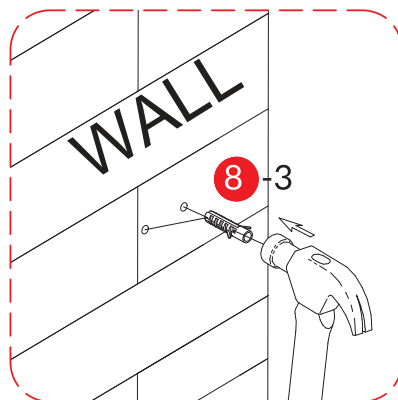

 2. Tap the plastic wall anchor into the hole with a hammer.

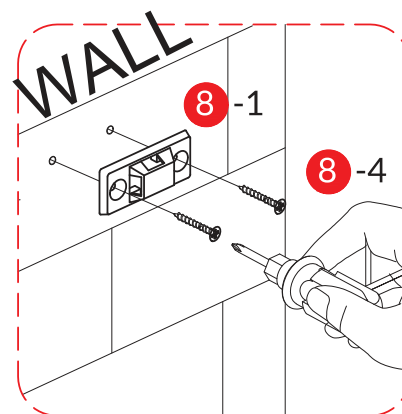

3. Secure the Anti-tip device to the wall with screws

Step 18

⚠ WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: -ALWAYS install anti-tip device provided. -NEVER put a TV on this product. -NEVER allow children to stand, climb or hang on any drawers, doors, or shelves. -NEVER open more than one drawer at a time. -Place heaviest items in the lowest drawers.
	<i>This is a permanent label. Do not remove!</i>

